


# SHAKER DRESSER & STOOL

## ASSEMBLY INSTRUCTIONS

Thank you for purchasing the SHAKER DRESSER & STOOL. Please read the instructions carefully to ensure safe operation of the product.

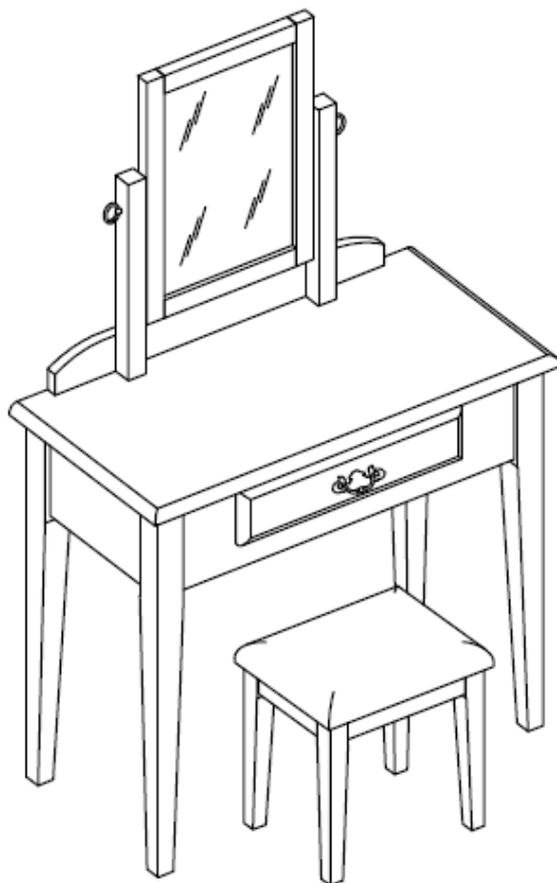

**W710 x D405 x H1285 mm/BLACK,WHITE**

---

**PLEASE READ** this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

**CAUTION:** There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

---

### Tools Required



1 Person Build

Batch No.: WMI 14930

Page 1 of 6

# SHAKER DRESSER & STOOL

## ASSEMBLY INSTRUCTIONS

**IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

### **INFORMATION**

- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly
- Tools not included.

### **WARNINGS**

- This product should only be used on firm, level ground.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.
- Do not use power tools to construct this product.
- Do not tighten screws until fully assembled.
- Do not over tighten screws or bolts.
- Do not use this product if parts are missing, damaged or worn.
- Do not sit or stand on the dresser.
- If a glass component is chipped or broken, stop using the product and consult the manufacturer or supplier
- Do not lean on the vertical mirror surface.
- Do not strike the glass with hard or pointed items.

### **CARE INFORMATION**

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.
- When cleaning glass panels or mirrors use a damp cloth with washing up liquid or soft soap if necessary; do not use washing powders or any other substances containing abrasives since these substances scratch glass.

# SHAKER DRESSER & STOOL



## ASSEMBLY INSTRUCTIONS

### Parts and Fittings Checklist

Please check the pack contents before assembling this product. If any components are missing, please contact your retailer.

The fittings pack contains small items that should be kept away from small children.


### Parts (Dresser)

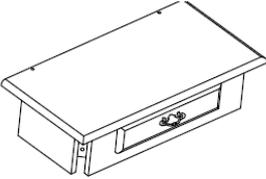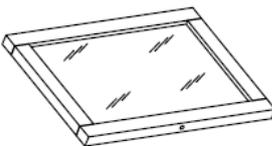1  DRESSER TOP – 1 piece	2  DRESSER LEG – 4 pieces	3  MIRROR – 1 piece	4  BASE MIRROR SUPPORT – 1 piece
5  MIRROR SUPPORT – 2 pieces			

### Fittings (Dresser)


Code	Item		Quantity
A.	Mirror Bolt (Size: 5/16" x 45MM)		2
B.	Large Bolt (Size: 1/4" x 50MM)		10
C.	Barrel Nut (Size: 1/4" x 13MM)		2
D.	Small Washer (Size: 1/4" x 13MM)		6
E.	Large Washer (Size: 1/4" x 19MM)		8
F.	Small Bolt (Size: M4 x 25MM)		4
G.	Allen Key (4MM)		1


### General Hints & Tips

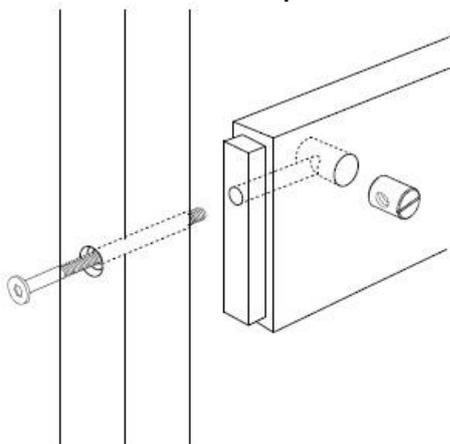

The barrel nut must be inline with the bolt. After insertion the bolt will thread through the nut to secure.

# SHAKER DRESSER & STOOL ASSEMBLY INSTRUCTIONS

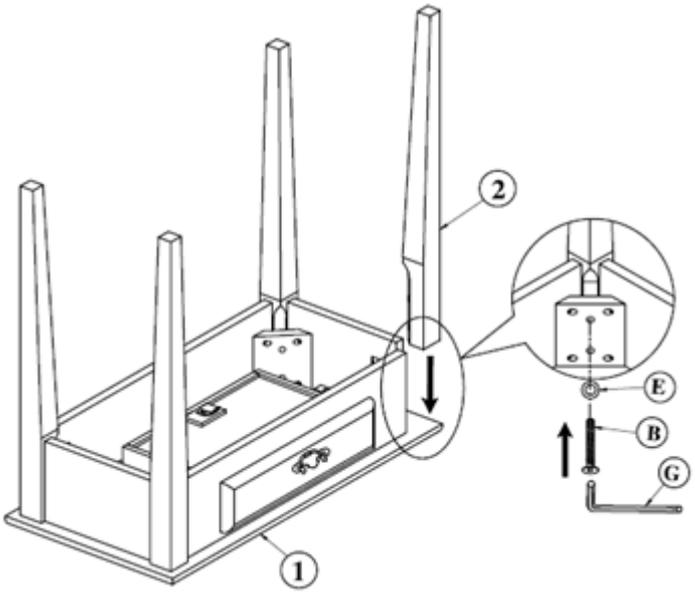STEP 1	
	<p><b>PARTS REQUIRED</b></p> <ul style="list-style-type: none"><li>1. Dresser Top x 1</li><li>2. Dresser Leg x 4</li><li>B. Large Bolt x 8</li><li>E. Large Washer x 8</li><li>G. Allen Key x 1</li></ul>

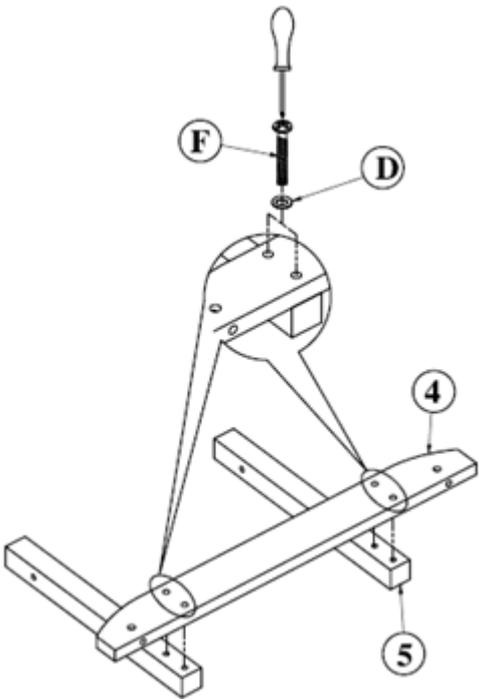STEP 2	
	<p><b>PARTS REQUIRED</b></p> <ul style="list-style-type: none"><li>4. Base Mirror Support x 1</li><li>5. Mirror Support x 2</li><li>D. Small Washer x 4</li><li>F. Small Bolt x 4</li></ul>

# SHAKER DRESSER & STOOL ASSEMBLY INSTRUCTIONS

## STEP 3



### PARTS REQUIRED

B. Large Bolt x  
2


C. Barrel Nut x  
2

D. Small  
Washer x 2

G. Allen Key x 1

Ensure the barrel nut is lined up with the bolt when fitting.

## STEP 4

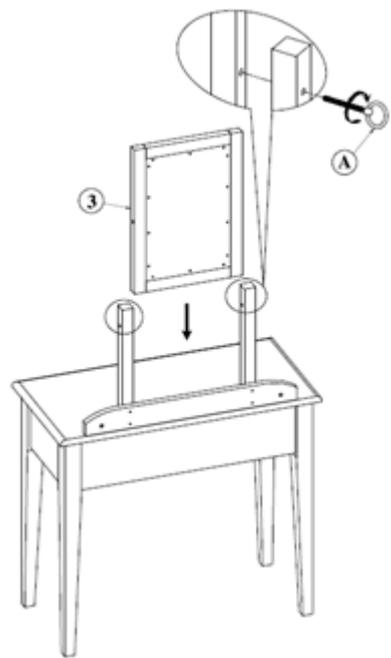


### PARTS REQUIRED

3. Mirror x 1

A. Mirror Bolt x  
2

# SHAKER DRESSER & STOOL ASSEMBLY INSTRUCTIONS


## Parts (Stool)

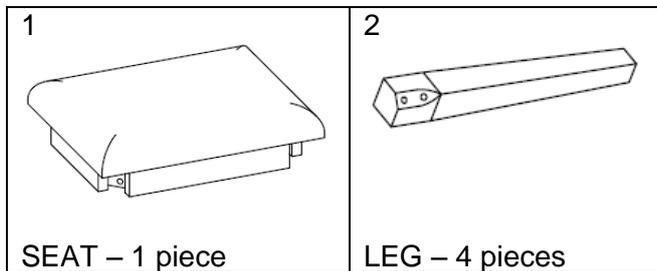

## Fittings (Stool)

Code	Item		Quantity
A.	Bolt (Size: 1/4" x 50MM)		8
B.	Washer (Size: 1/4" x 19MM)		8
C.	Allen Key (4MM)		1

STEP 1

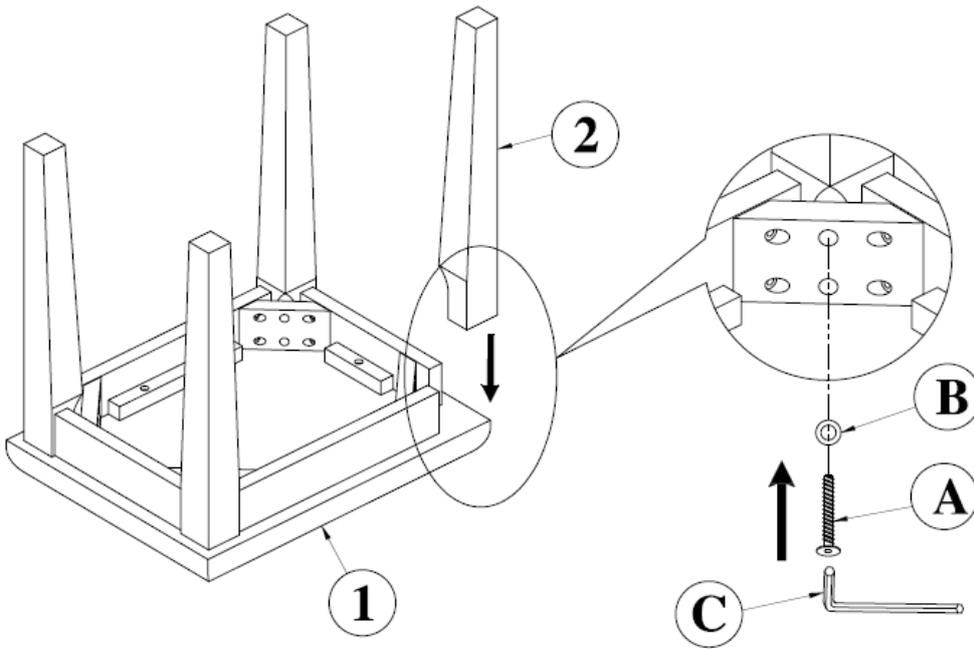

**PARTS REQUIRED**

- 1. Seat x 1
- 2. Leg x 4
- A. Bolt x 8
- B. Washer x 8
- C. Allen Key x 1