


BLOC CORNER TV UNIT ASSEMBLY INSTRUCTIONS

Thank you for purchasing the Bloc Corner TV Unit.

Please read the instructions carefully to ensure safe operation of this product.

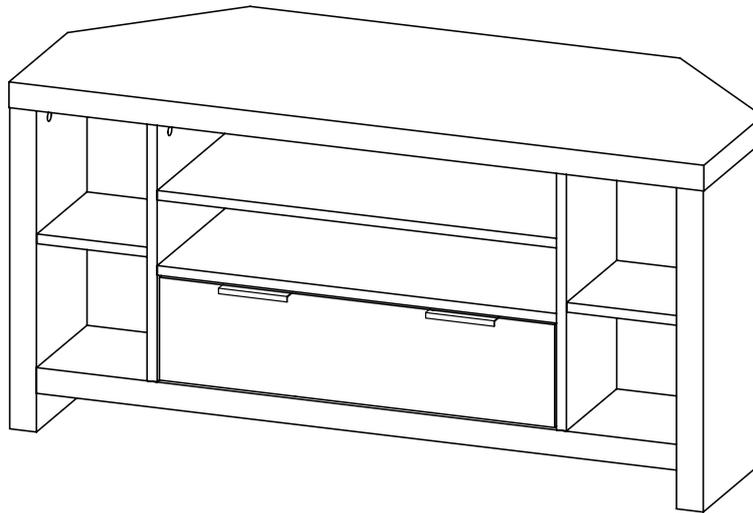

Size: 104 x 43 x 55 cm (WDH)

Colour: Concrete




Finish: Melamine

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking.

Tools Required

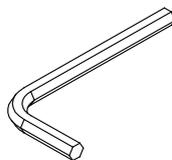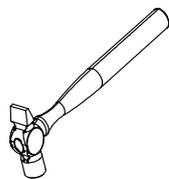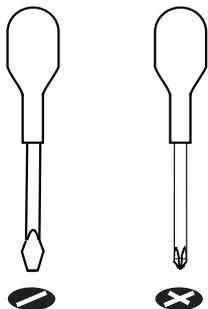

1.5 Hour
Set Up

BLOC CORNER TV UNIT ASSEMBLY INSTRUCTIONS

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

- This product is designed to hold 20Kg in total, spread evenly over the whole of the unit.
- Do not exceed this weight.
- We recommend that this unit is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent them from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly
- Tools not included unless specified in parts list.

WARNINGS

- This product should only be used on a firm and level floor.
- Keep small parts out of reach of children.
- Make sure the base remain in contact with the floor.
- DO NOT use power tools to construct this product.
- DO NOT tighten screws until parts are assembled or as advised in this guide.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT sit or stand on the product.

CARE INFORMATION


- To clean, wipe with a damp cloth.
- Never use scourers, abrasives or chemical cleaners.
- Do not use solvent based cleaners or detergents as they can bleach or damage the product.

BLOC CORNER TV UNIT ASSEMBLY INSTRUCTIONS

Parts and Fittings Checklist

Please check the pack contents before assembling the product. If any components are missing, please contact your retailer.

The fittings pack contains small items that should be kept away from children.

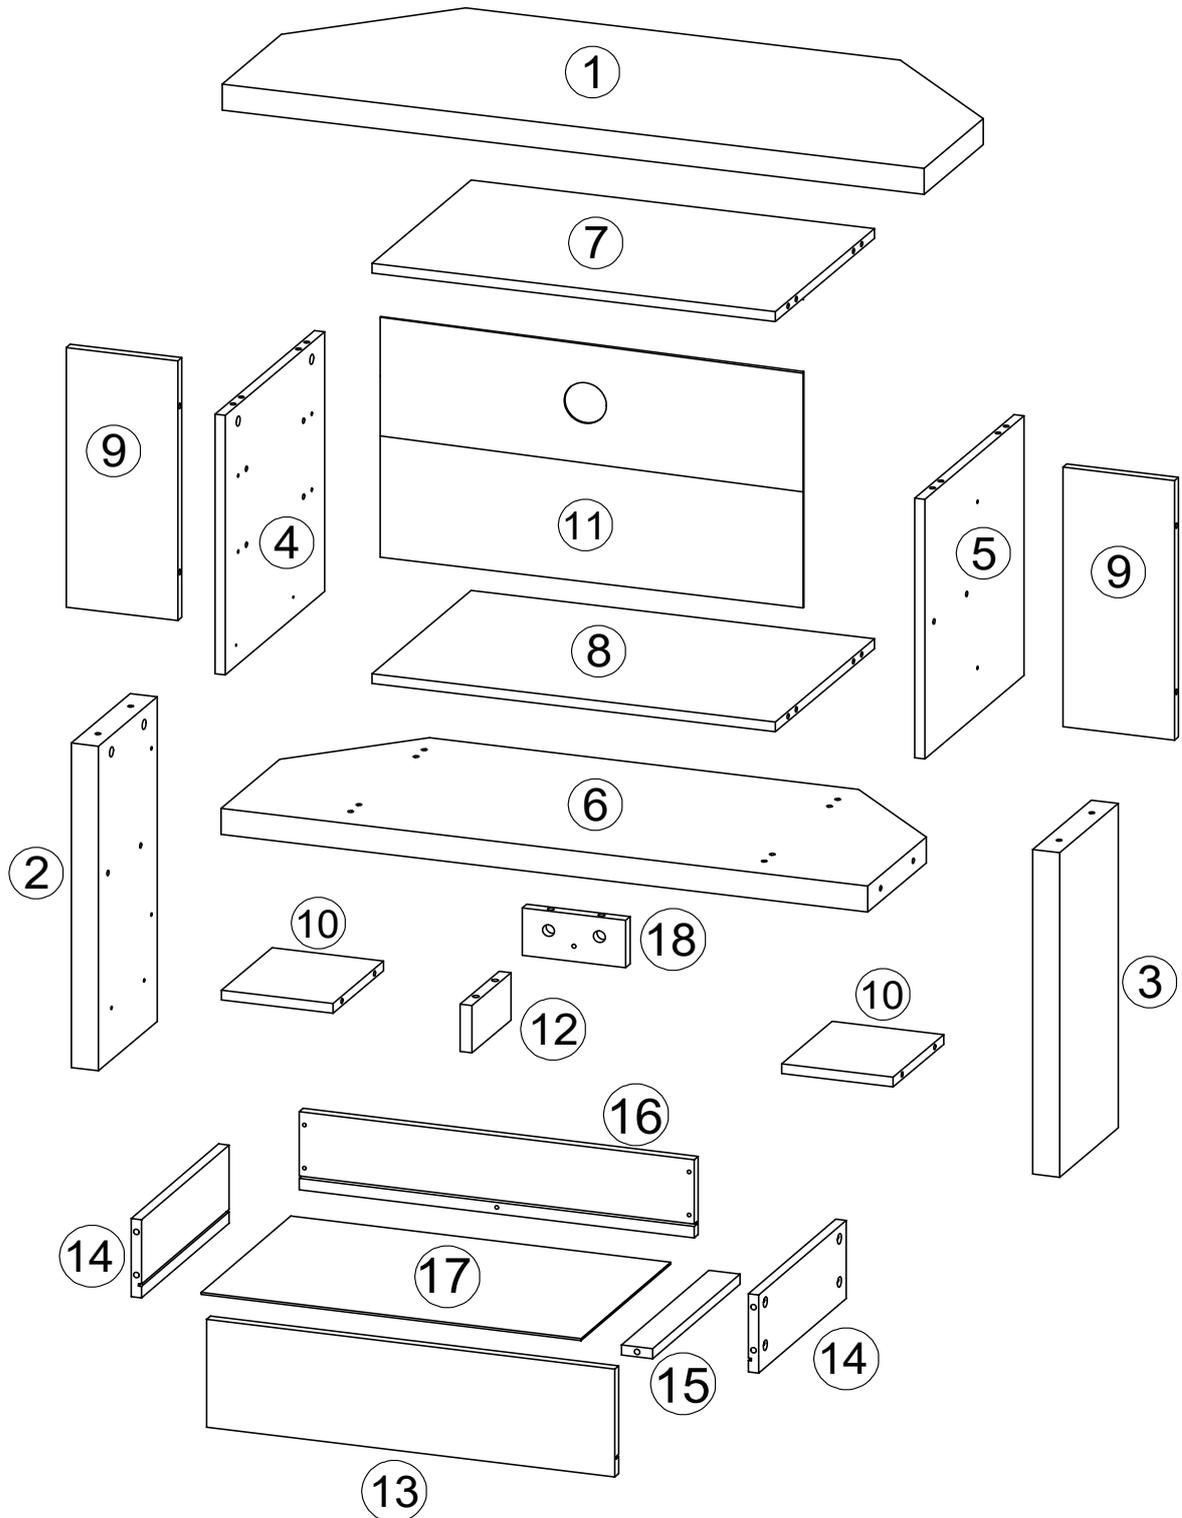


BLOC CORNER TV UNIT ASSEMBLY INSTRUCTIONS

All parts are packed in one carton

1	2	3
Description: Top Panel Qty: 1 Size: 1035 x 430 x 50 mm Carton No: 1/1	Description: LH Side Panel Qty: 1 Size: 500 x 230 x 38 mm Carton No: 1/1	Description: RH Side Panel Qty: 1 Size: 500 x 230 x 38 mm Carton No: 1/1
4	5	6
Description: LH Divider Panel Qty: 1 Size: 400 x 389 x 15 mm Carton No: 1/1	Description: RH Divider Panel Qty: 1 Size: 400 x 389 x 15 mm Carton No: 1/1	Description: Base Panel Qty: 1 Size: 957 x 390 x 38 mm Carton No: 1/1
7	8	9
Description: Upper Fixed Shelf Qty: 1 Size: 597 x 368 x 15 mm Carton No: 1/1	Description: Lower Fixed Shelf Qty: 1 Size: 597 x 388 x 15 mm Carton No: 1/1	Description: Rear Divider Panel Qty: 2 Size: 400 x 165 x 15 mm Carton No: 1/1
10	11	12
Description: Side Fixed Shelf Qty: 2 Size: 198 x 165 x 15 mm Carton No: 1/1	Description: Back Panel Qty: 1 Size: 625 x 436 x 3 mm Carton No: 1/1	Description: Front Base Support Qty: 1 Size: 130 x 62 x 15 mm Carton No: 1/1
13	14	15
Description: Drawer Front Qty: 1 Size: 591 x 160 x 15 mm Carton No: 1/1	Description: Drawer Side Qty: 2 Size: 335 x 116 x 15 mm Carton No: 1/1	Description: Drawer Base Support Qty: 1 Size: 335 x 45 x 15 mm Carton No: 1/1
16	17	18
Description: Drawer Back Qty: 1 Size: 572 x 116 x 15 mm Carton No: 1/1	Description: Drawer Base Qty: 1 Size: 550 x 343 x 3 mm Carton No: 1/1	Description: Rear Base Support Qty: 1 Size: 130 x 62 x 15 mm Carton No: 1/1


General Hints & Tips

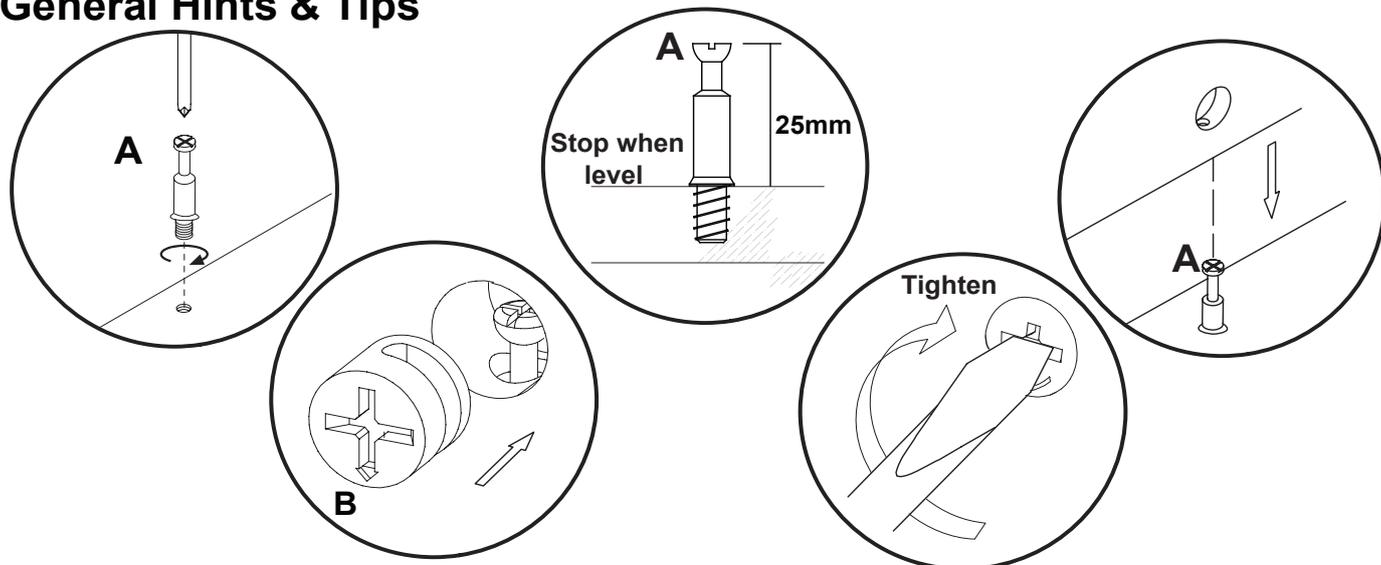

BLOC CORNER TV UNIT ASSEMBLY INSTRUCTIONS


Fittings (to scale)

Code	Item	Quantity
A	Cam Bolt (35mm overall)	42
B	Cam Lock	42
C	Dowel (8 x 30mm)	25
D	Nail for Fitting Back Panel (2 x 12mm)	10
E	Screw for Fitting Runner Back Panel and Handle (3 x 12mm)	20
H	Carcass Screw for Fitting Divider Panel to Base (M7x60mm)	4

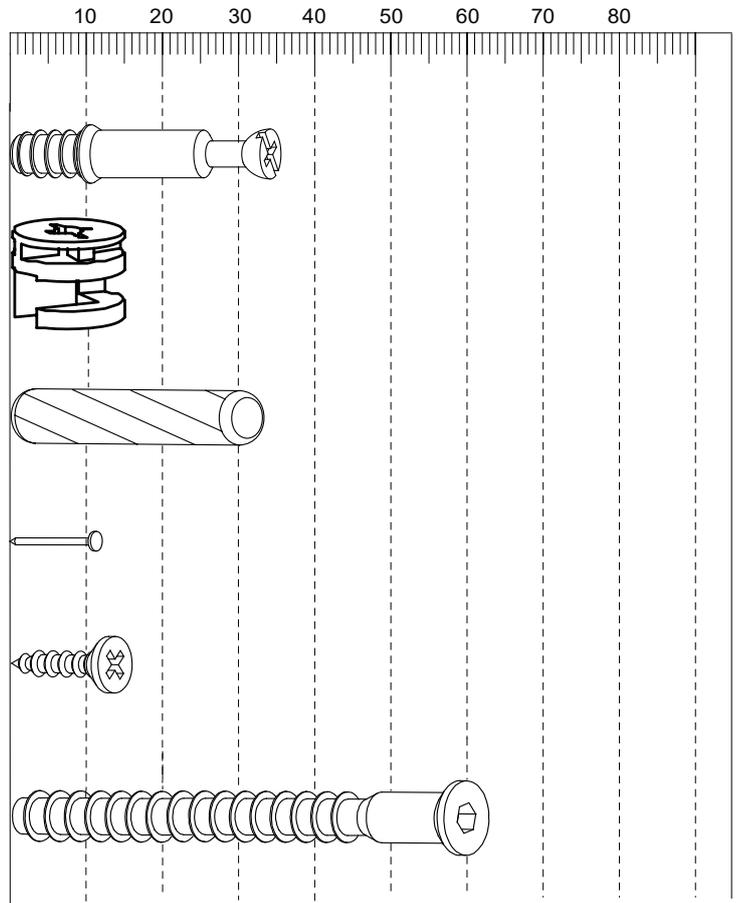

Fittings (not to scale)


Code	Item	Quantity
K	Cam Lock Cover	12
L	Handle	2
M	Allen Key (4mm)	1

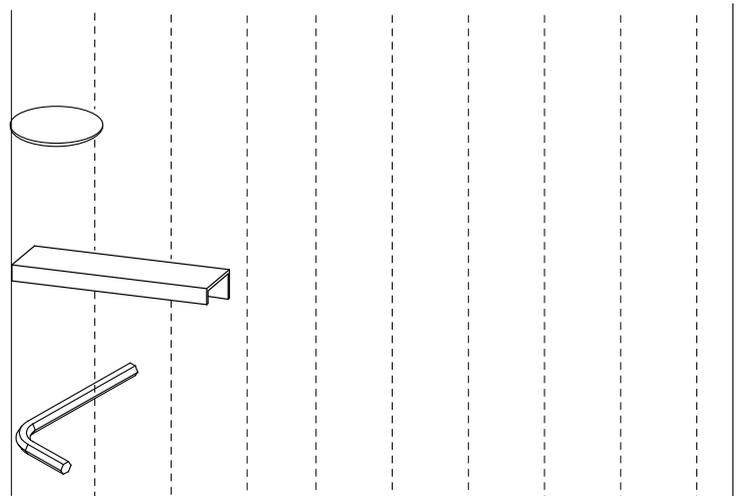

BLOC CORNER TV UNIT ASSEMBLY INSTRUCTIONS

Fittings (not to scale)

Code	Item	Quantity
N	Outer Drawer Runner - Right	1
P	Outer Drawer Runner - Left	1
Q	Inner Drawer Runner - Right	1
R	Inner Drawer Runner - Left	1

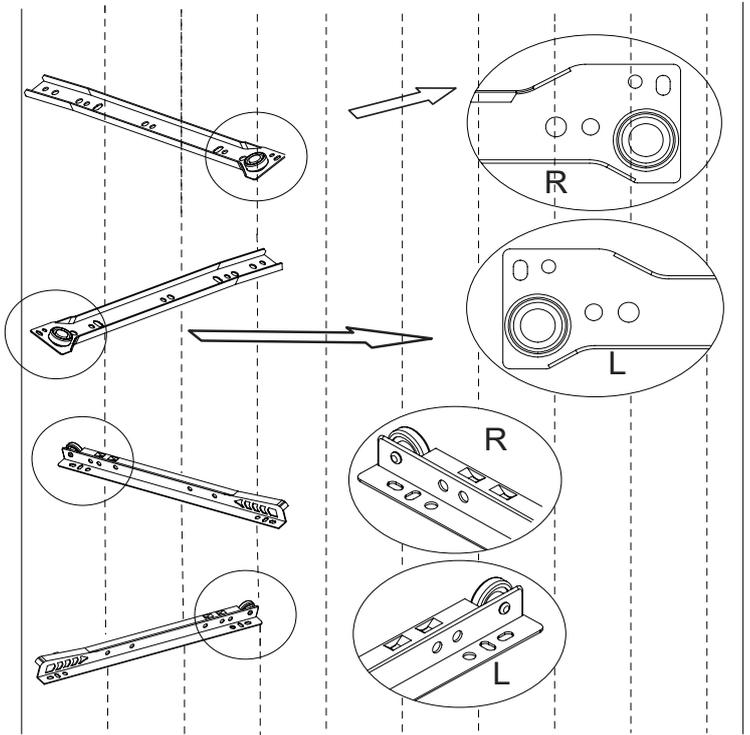

STEP 1

For this step:
Tools required

Fittings required


A x6

E x2

P x1

BLOC CORNER TV UNIT ASSEMBLY INSTRUCTIONS

STEP 2

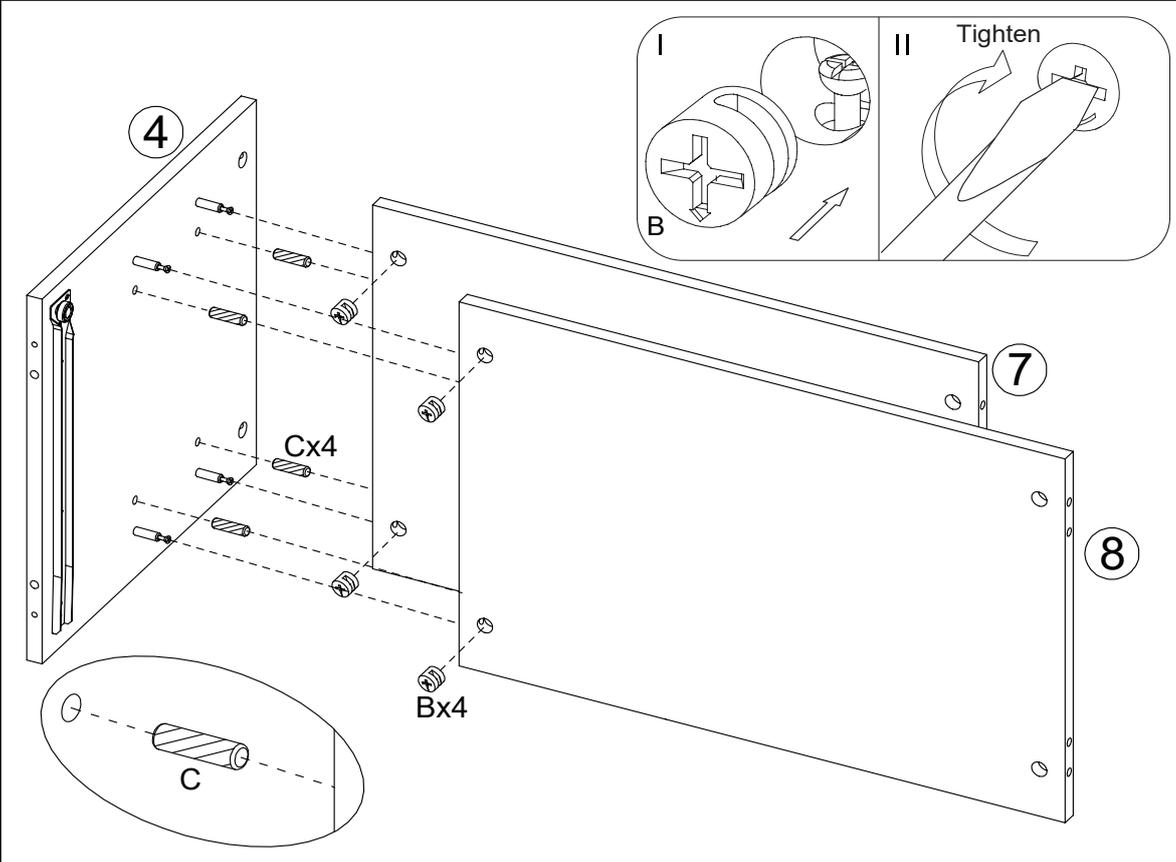


For this step:
Tools required



Fittings required




 B x4




C x4


STEP 3

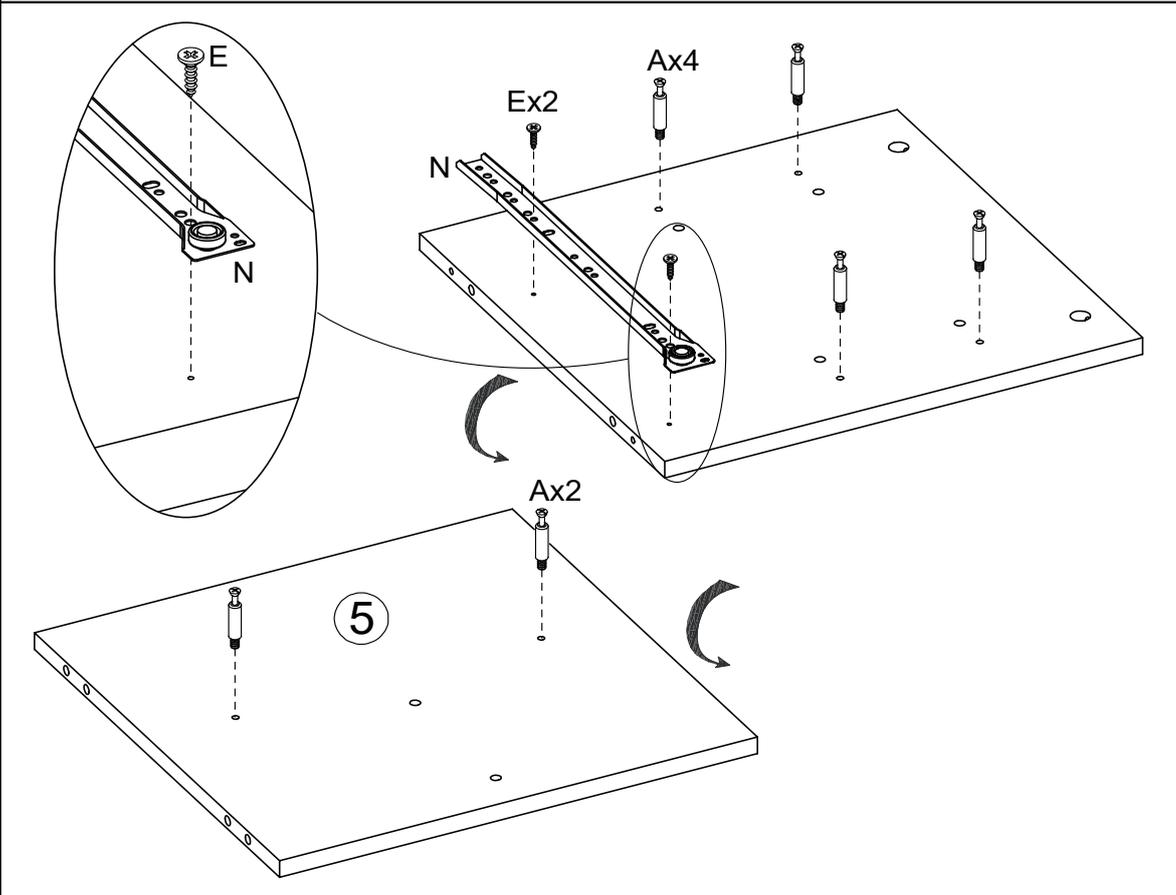

For this step:
Tools required

 


Fittings required

 

A x6



 
E x2



N x1


BLOC CORNER TV UNIT ASSEMBLY INSTRUCTIONS

STEP 4

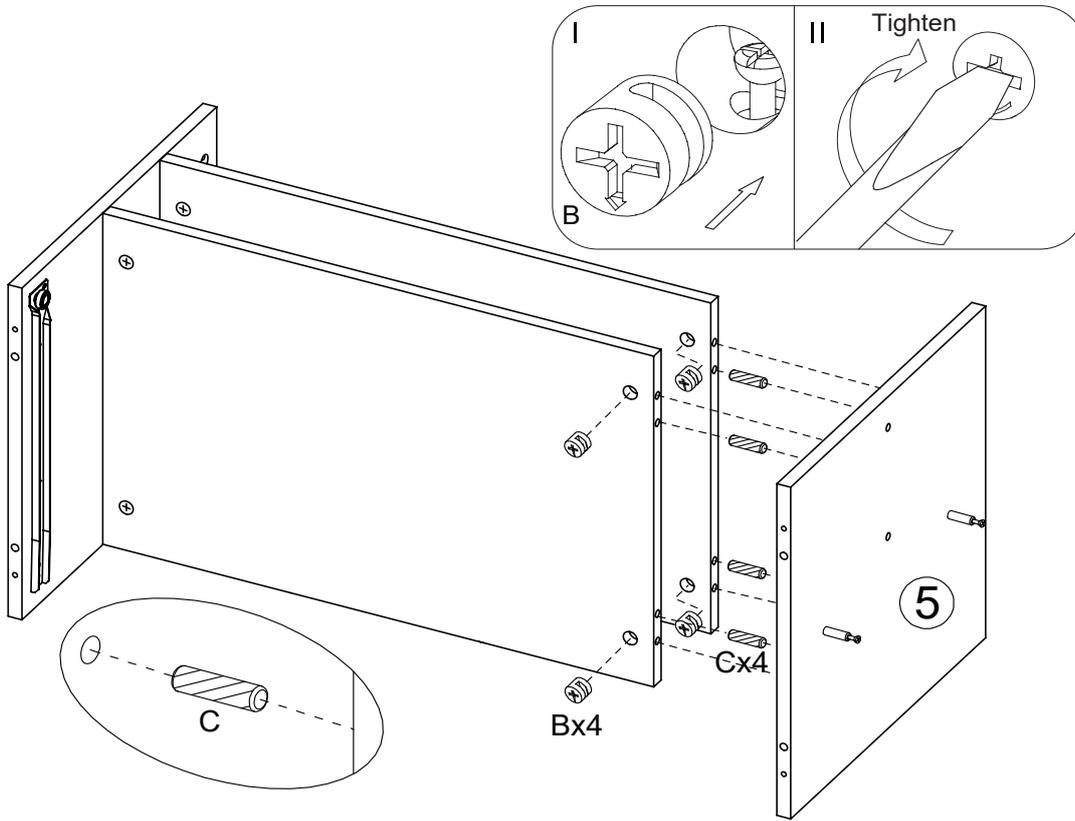

For this step:

 
Tools required



Fittings required




 B x4




C x4

STEP 5

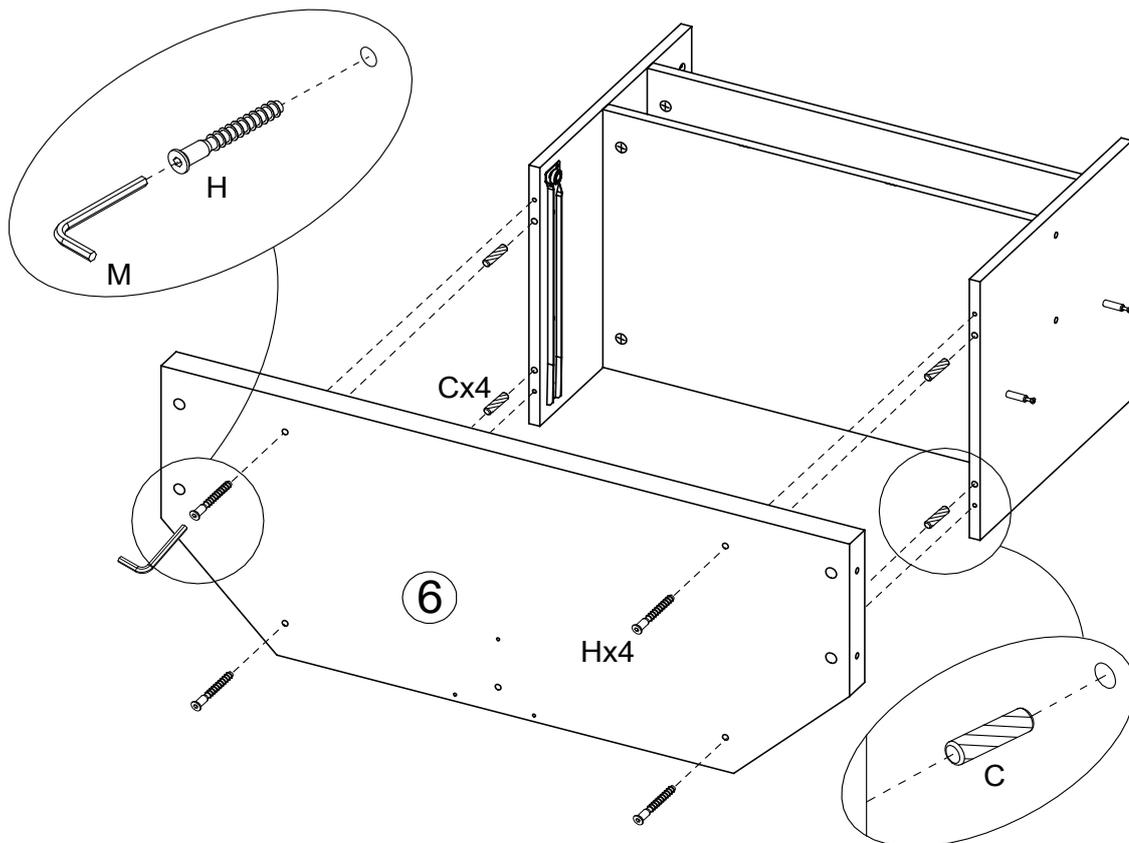


For this step:

Tools required

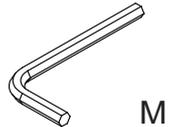

M

 Fittings required




C x4



H x4


BLOC CORNER TV UNIT ASSEMBLY INSTRUCTIONS

STEP 6

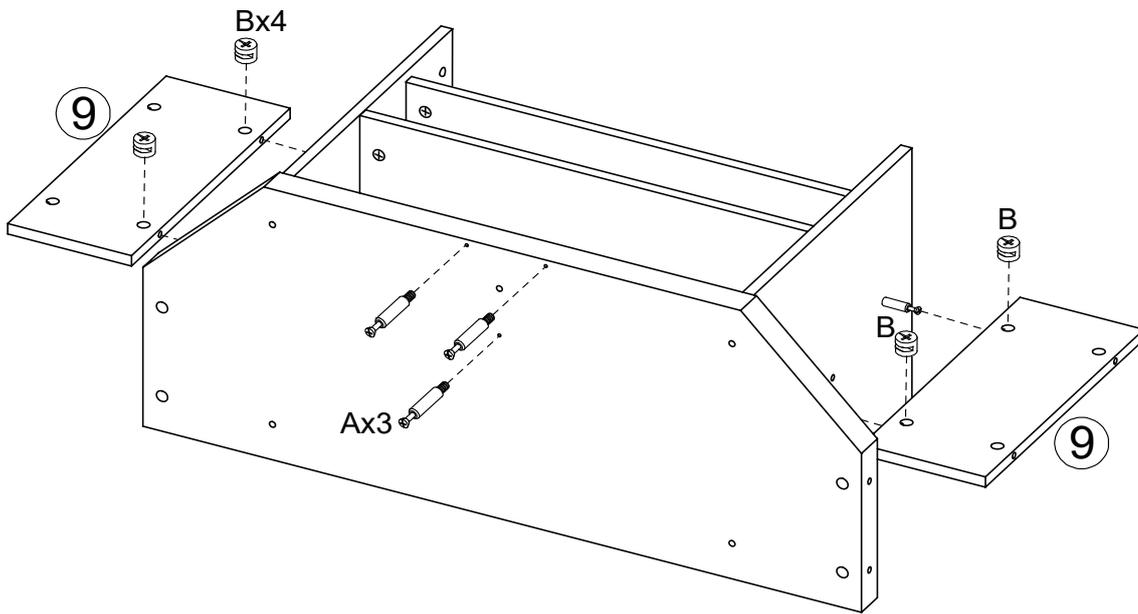


For this step:

Tools required

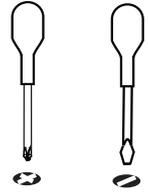

Fittings required

 


A x 3




B x 4

STEP 7

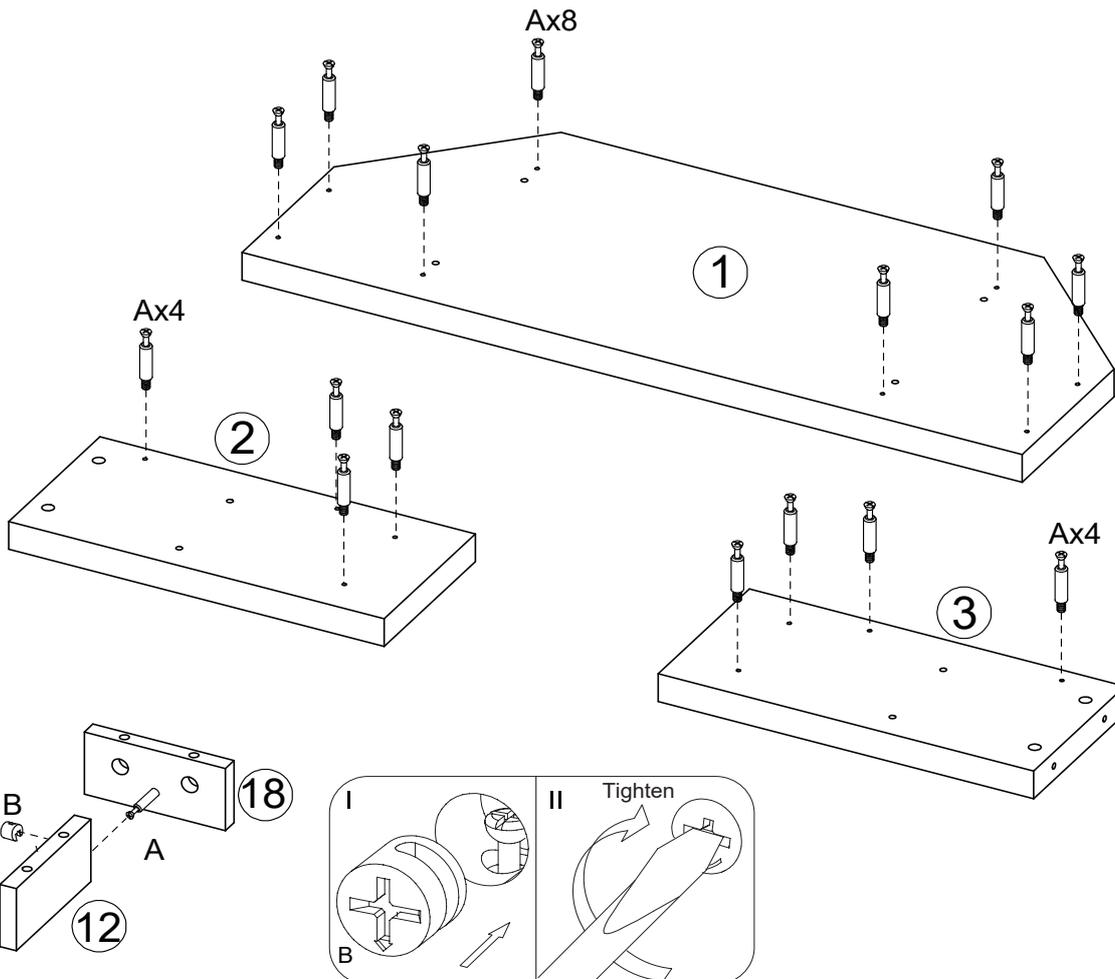


For this step:

Tools required

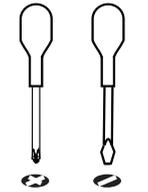

Fittings required

 

A x 17



B x 1

BLOC CORNER TV UNIT ASSEMBLY INSTRUCTIONS

STEP 8

For this step:

 
Tools required




Fittings required



B x4



C x4

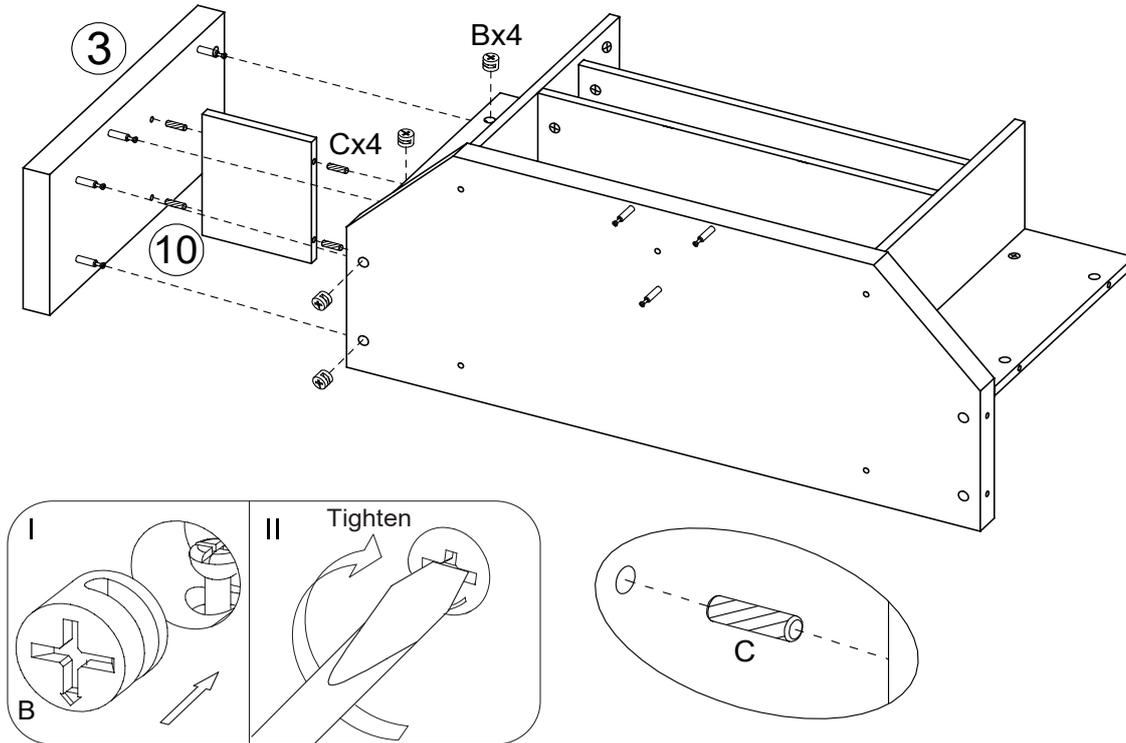

STEP 9

For this step:

 
Tools required




Fittings required



B x7



C x5

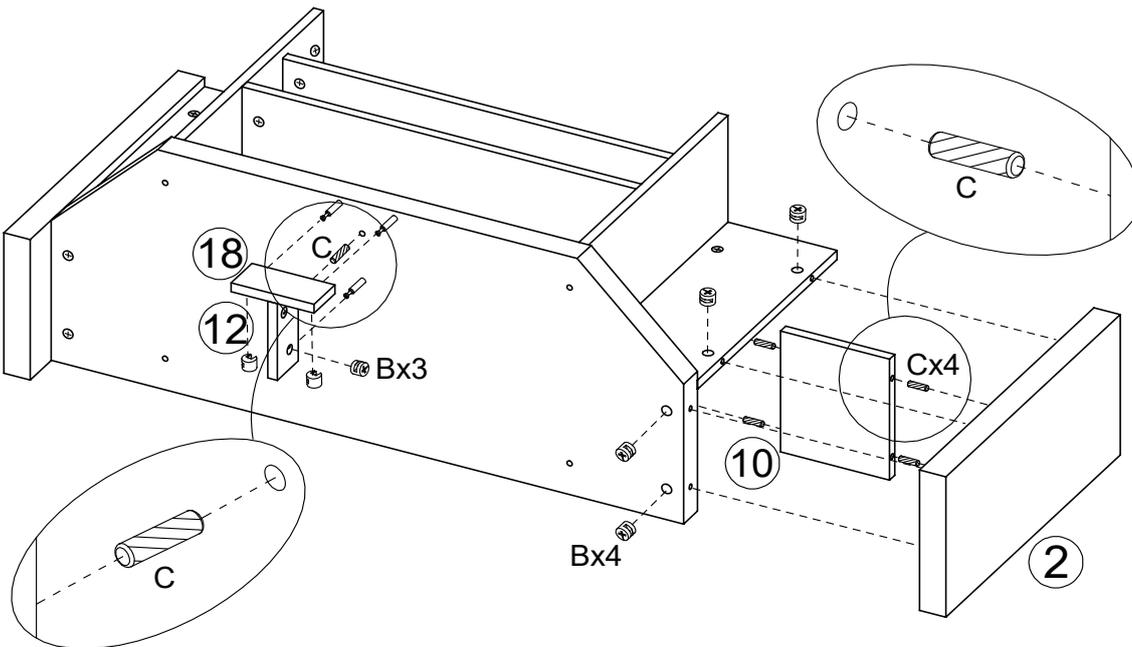


BLOC CORNER TV UNIT ASSEMBLY INSTRUCTIONS

STEP 10

For this step:

 
Tools required



Fittings required




 
B x 8



C x 4




K x 8

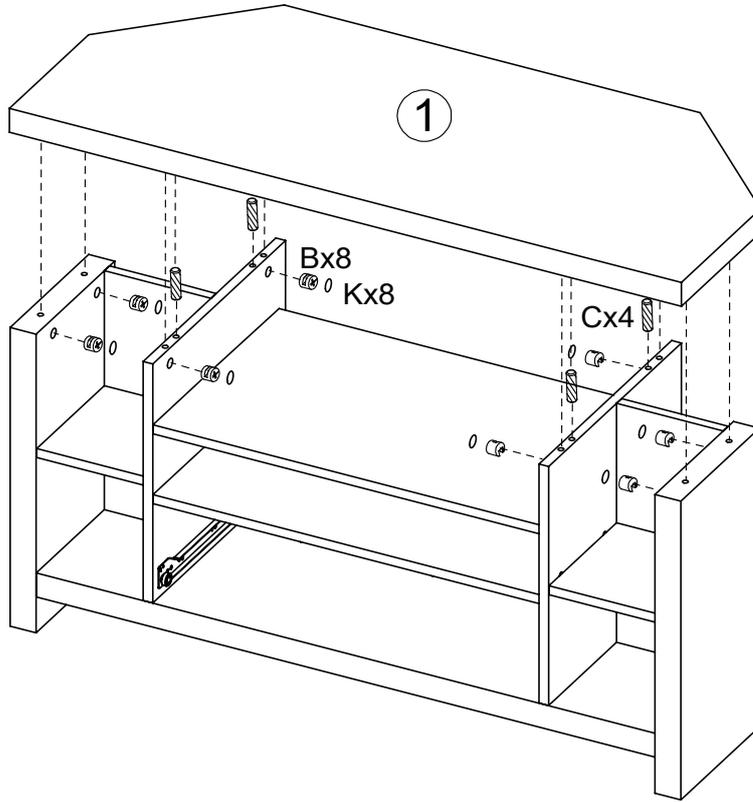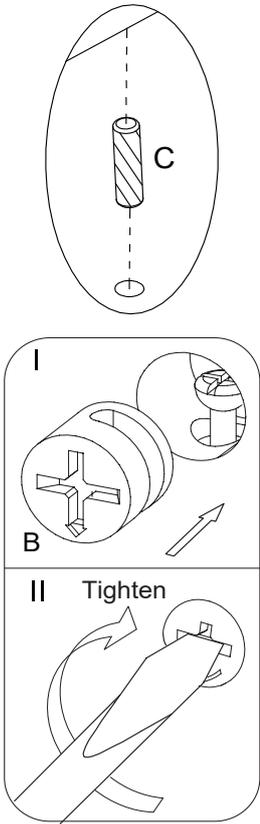


STEP 11

For this step:

Tools required

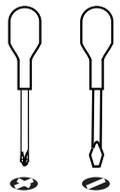


Fittings required

 

A x 10



B x 4






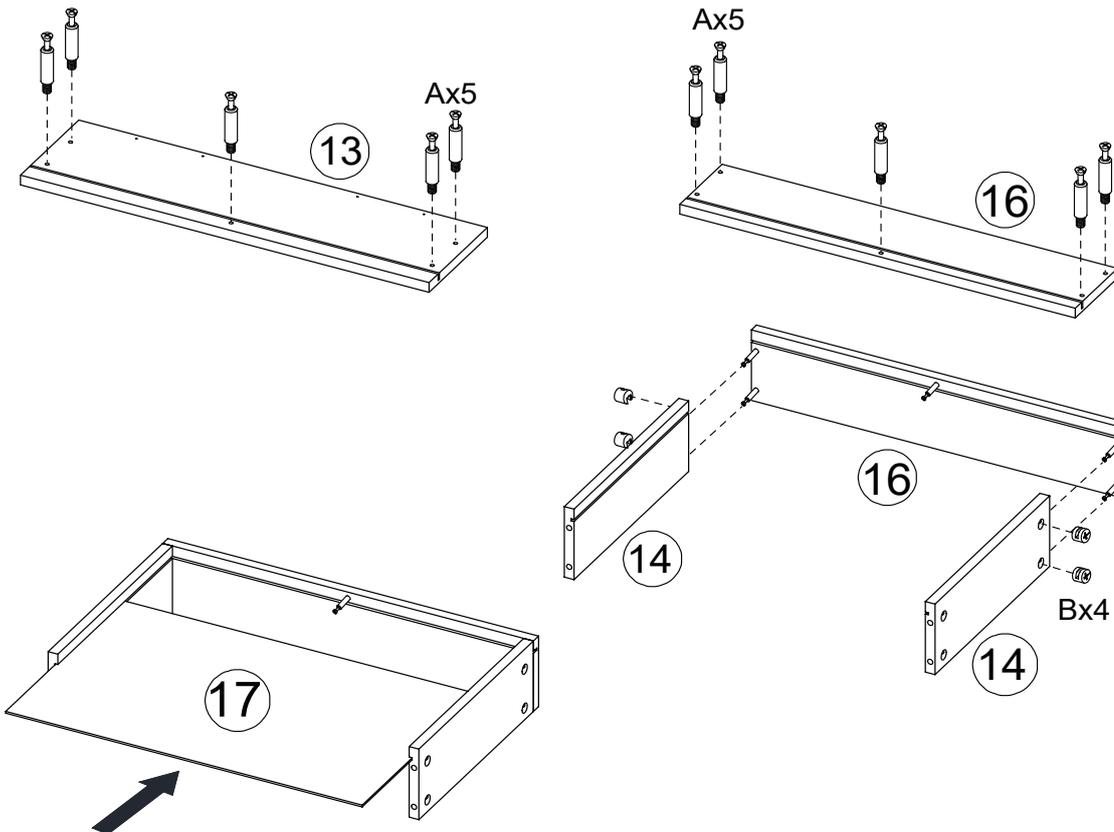


BLOC CORNER TV UNIT ASSEMBLY INSTRUCTIONS

STEP 12

For this step:

 
Tools required

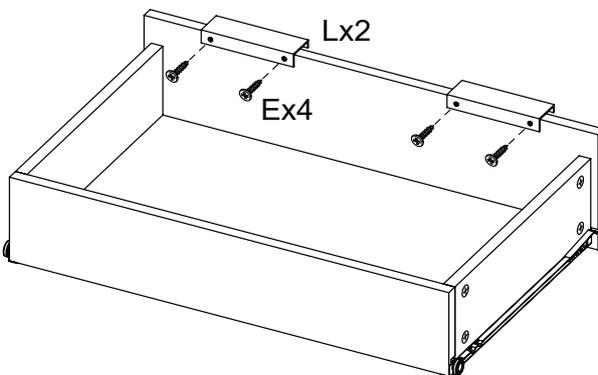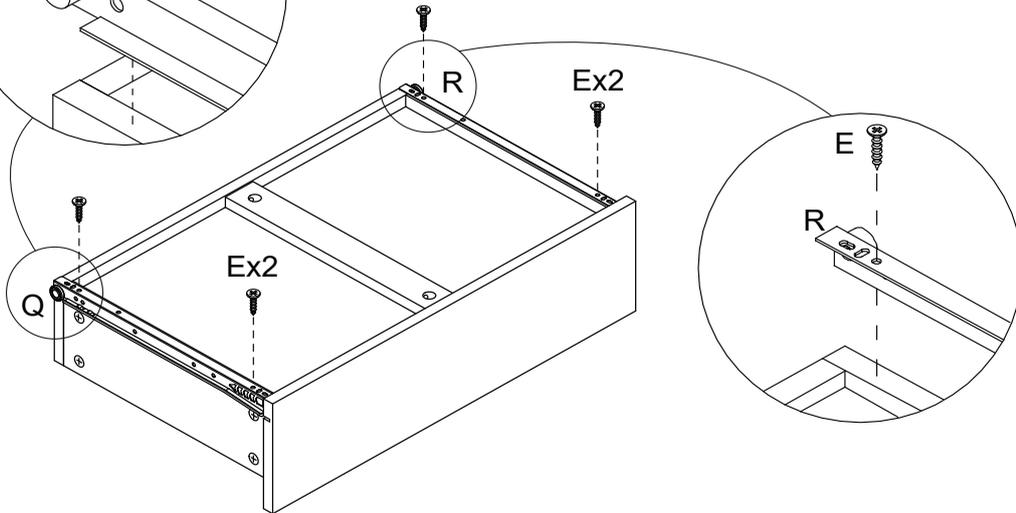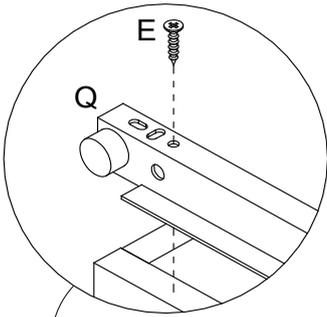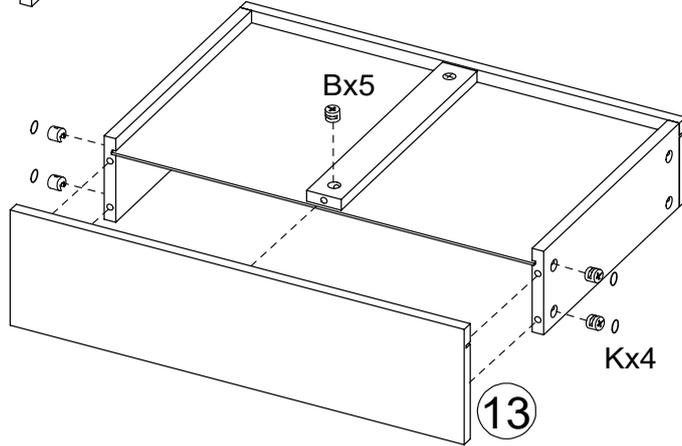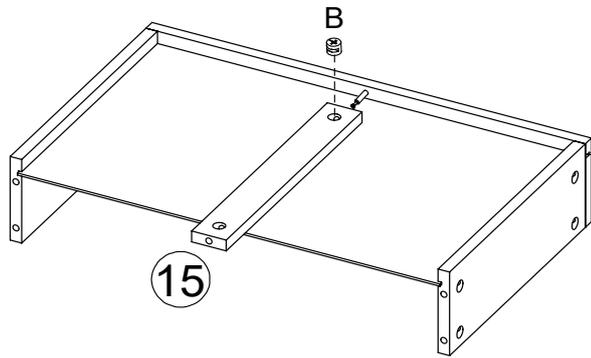


Fittings required



 B x6




E x8

 


K x4



 L x2




Q x1

 

R x1


BLOC CORNER TV UNIT ASSEMBLY INSTRUCTIONS

STEP 13

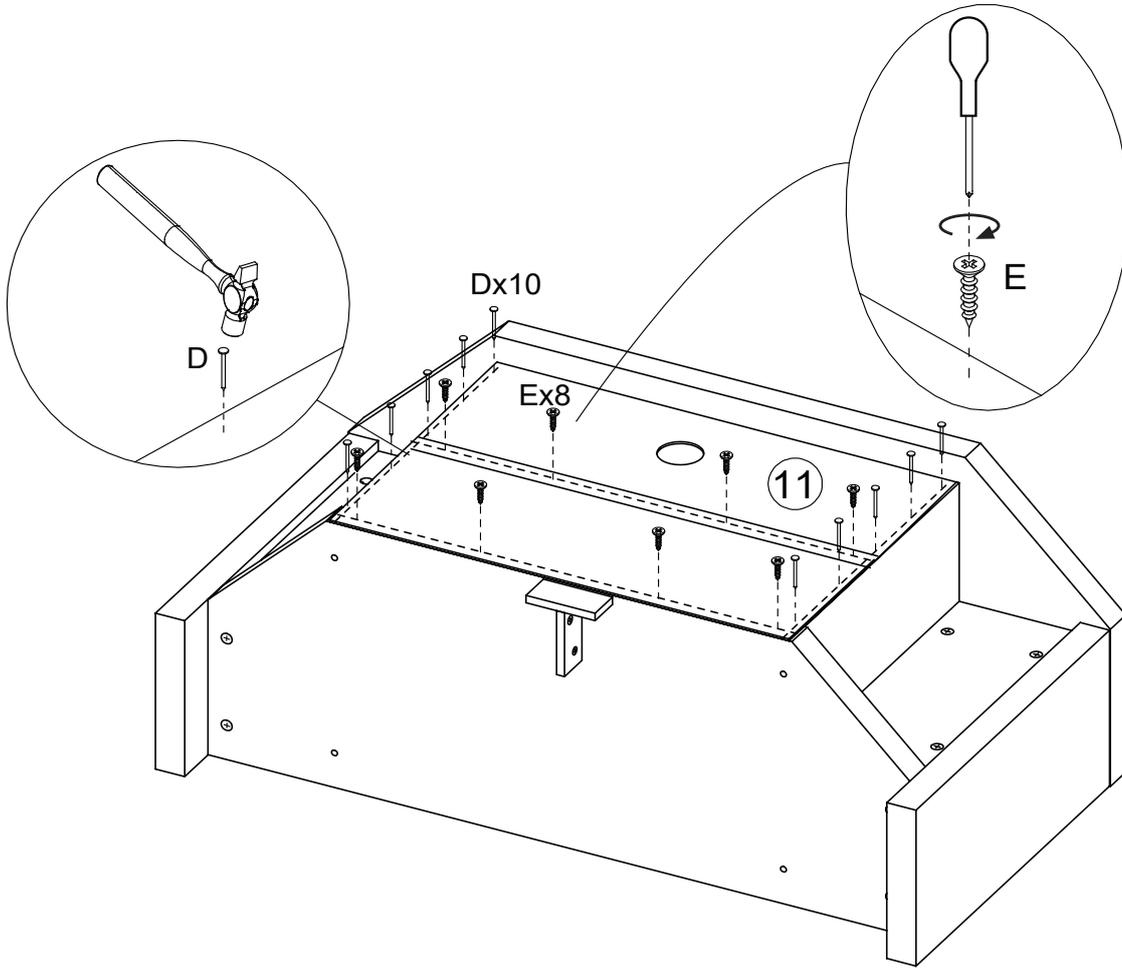


For this step:



Tools required

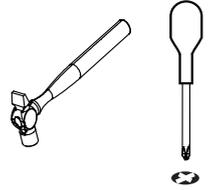

Fittings required

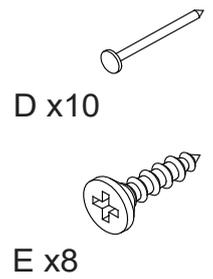

STEP 14

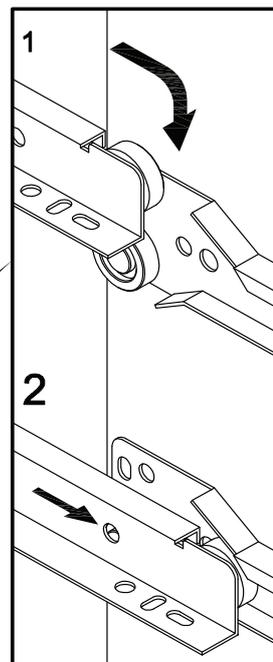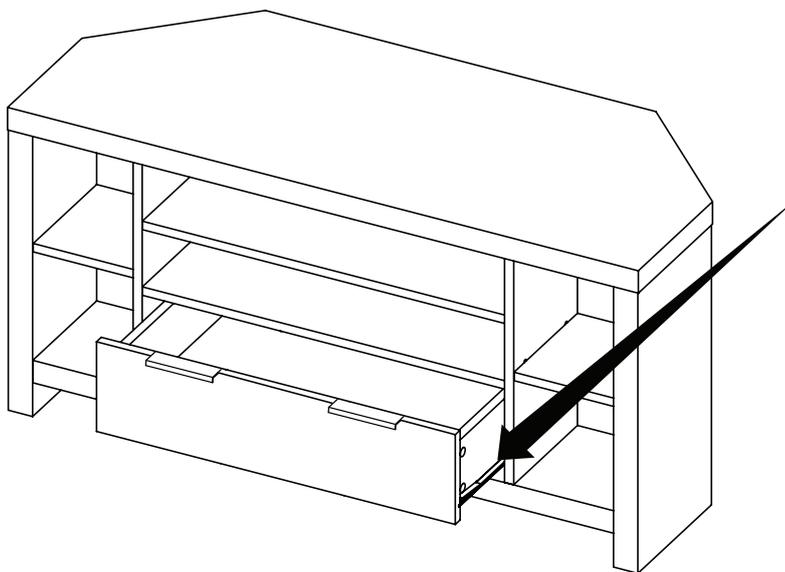

For this step:

Tools required

Fittings required


BLOC CORNER TV UNIT ASSEMBLY INSTRUCTIONS

Assembly Completed

Your Bloc Corner TV Unit is now completely assembled.

Periodically check to ensure that the components are in their proper position, free from damage.

Also, make sure the connectors are tight and secure.

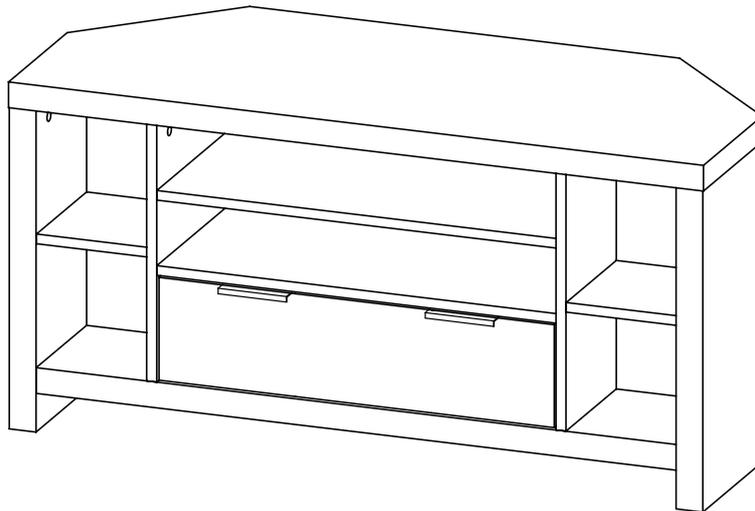

Keep instructions for future reference

