 


1739096UK - White

1739196PCOMUK - Black

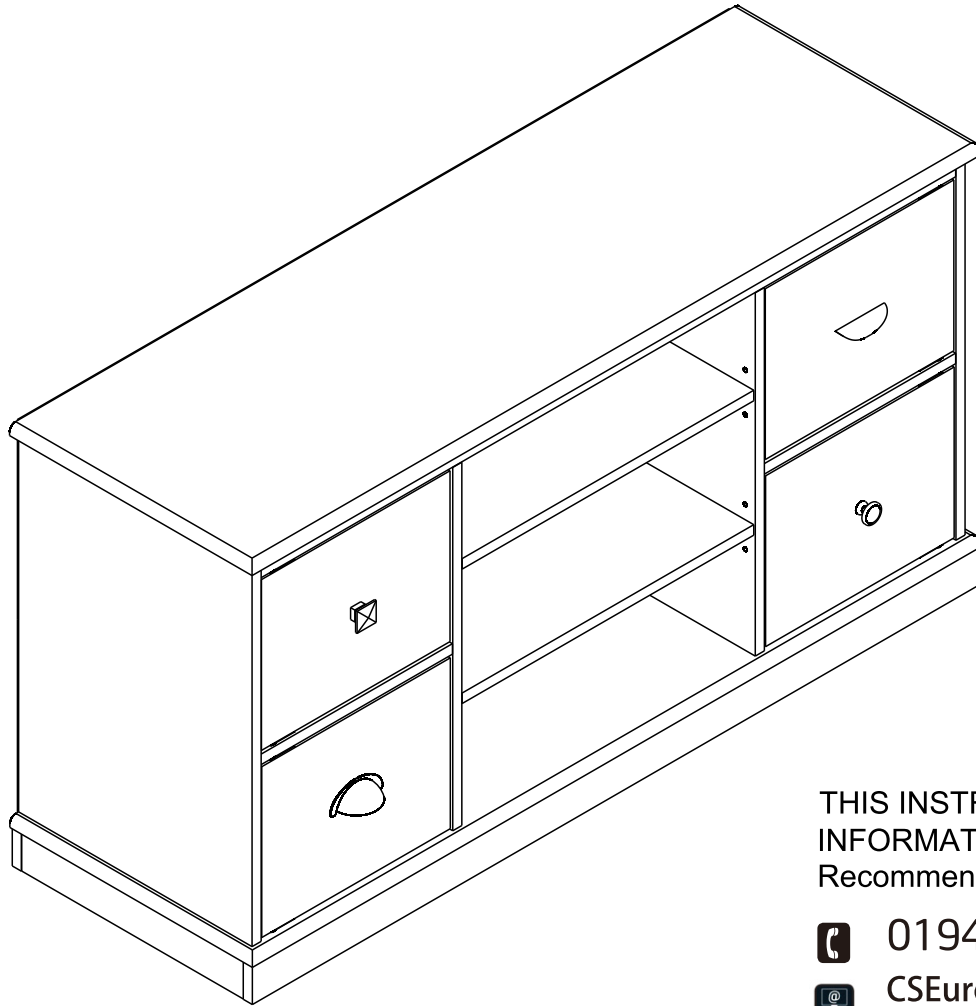

PLACE LABEL
Q16714-SK
HERE

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.
Recommended # of people needed for assembly: 2



01942 524100



CSEurope@dorel.com



 
Dorel Home Furnishings Europe Ltd. Building 4, Imperial Place
Maxwell Road, Borehamwood WD6 1JN, United Kingdom

Before starting


- ❑ Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- ❑ Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
- ❑ Work in spacious area, preferably on a carpet, near the place the unit will be used.
- ❑ Have the following tools close at hand.
- ❑ Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.

HELPFUL HINTS


- Identify, sort and count the parts before attempting assembly.
- Call our toll free number if you need assistance identifying parts.
- Compression dowels are tapped in with a hammer.
- Slides have lips only on the right side.
- Cam locks that are properly fastened on a horizontal board will face toward the center of the unit, on a vertical board the point on the lock will face the bottom.
- Back panels provide stability and support. Use all the nails provided.
- When tapping nails into a board, be sure there are equal margins on all sides to square the unit.
- Units without the back panel installed may collapse.
- Clean the product with your favorite furniture polish and a soft cloth. DO NOT USE harsh chemicals or abrasive cleaners.
- Move your new furniture carefully, with two people lift and carry the unit to it's new location.
- Never push, drag or scoot your furniture (especially on carpet).
- Your furniture can be disassembled and reassembled to move.
- Additional parts are available for a nominal fee.

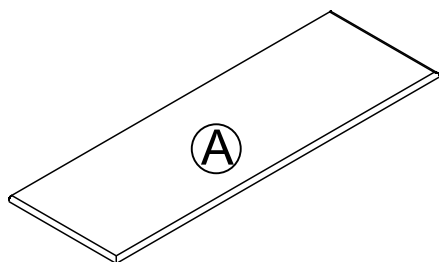


Hutch top shelf

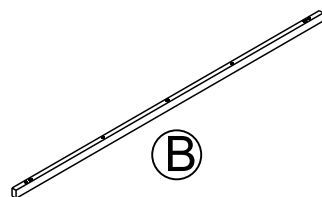 


Shelf apron

 


Left side panel

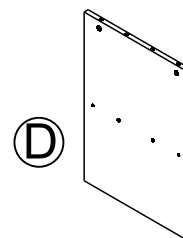 


Right side panel

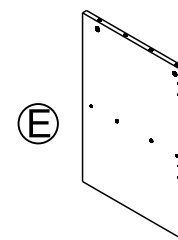 


Left partition

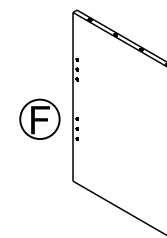 


Right partition

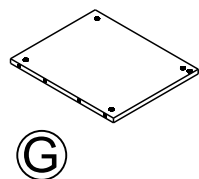 


Left fixed shelf

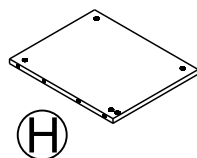 


Right fixed shelf

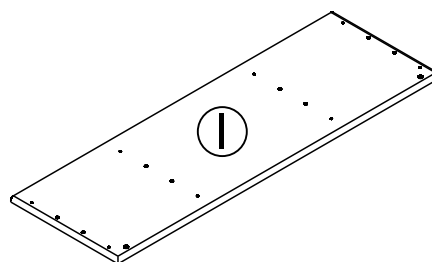 


Bottom shelf

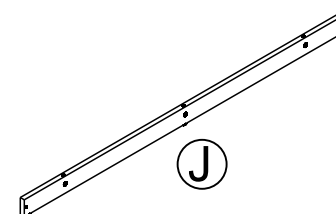 


Front and back base panel (2)

 


Side panel (2)

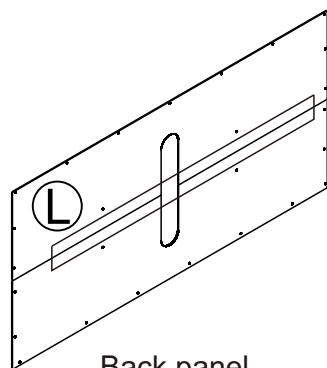 


Back panel

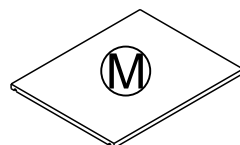 


Center adjustable shelf (2)

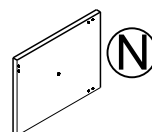 


Upper left door

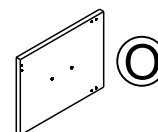 

Lower left door











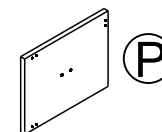 



Upper right door

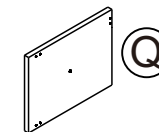 

Lower right door

           PARTS

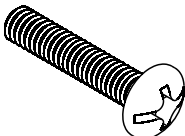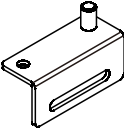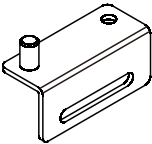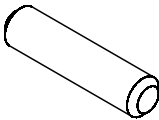
 $\varnothing 6.5 \times 35.3 \text{ mm}$	① x 30	 $\varnothing 11 \times 10.2 \text{ mm}$	② x 30	 $\varnothing 8 \times 30 \text{ mm}$	③ x 27	 $\varnothing 5/32" \times 19 \text{ mm}$	④ x 4	 $\varnothing 5/32" \times 12 \text{ mm}$	⑤ x 2	Cam bolt	Cam lock	Wooden dowel	Screw	Screw
 $\varnothing 4 \times 45 \text{ mm}$	⑥ x 8	 $\varnothing 4 \times 35 \text{ mm}$	⑦ x 4	 $45.8 \times 16 \times 14 \text{ mm}$	⑧ x 4	 	⑨ x 4	 $40 \times 15.5 \times 17.5 \text{ mm}$	⑩ x 4	Screw	Screw	Magic catch	Magic catch plate	Handle
 $40 \times 15.5 \times 17.5 \text{ mm}$	⑪ x 4	 $\varnothing 3 \times 14 \text{ mm}$	⑫ x 34	 $\varnothing 3 \times 12 \text{ mm}$	⑬ x 8	 	⑭ x 8	 	⑮ x 8	Handle	Screw	Screw	Cover cap	Iron dowel

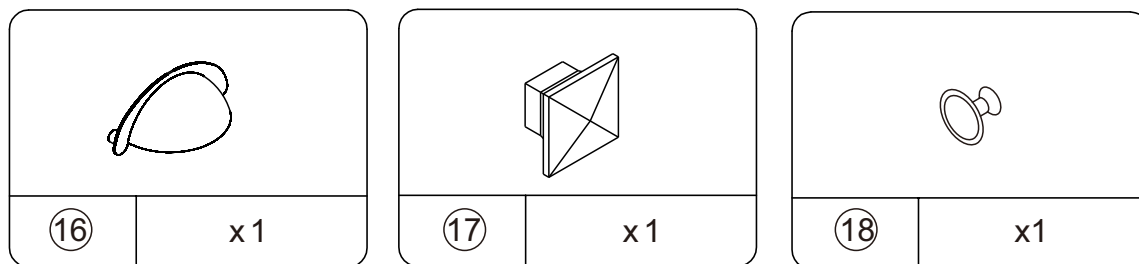 

Pull

Knob

 Knob

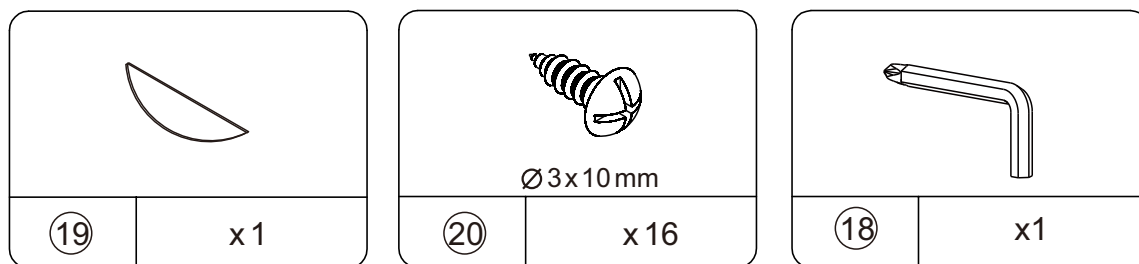


Pull





Screw

Allen key





This illustration shows how the CAM fastener system works.

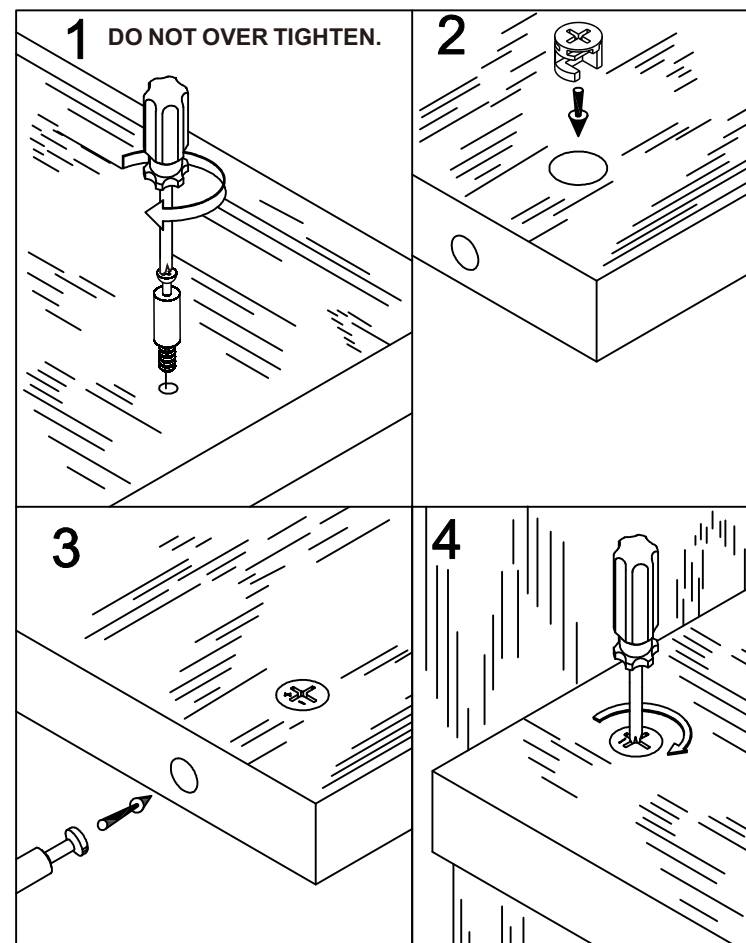 






1

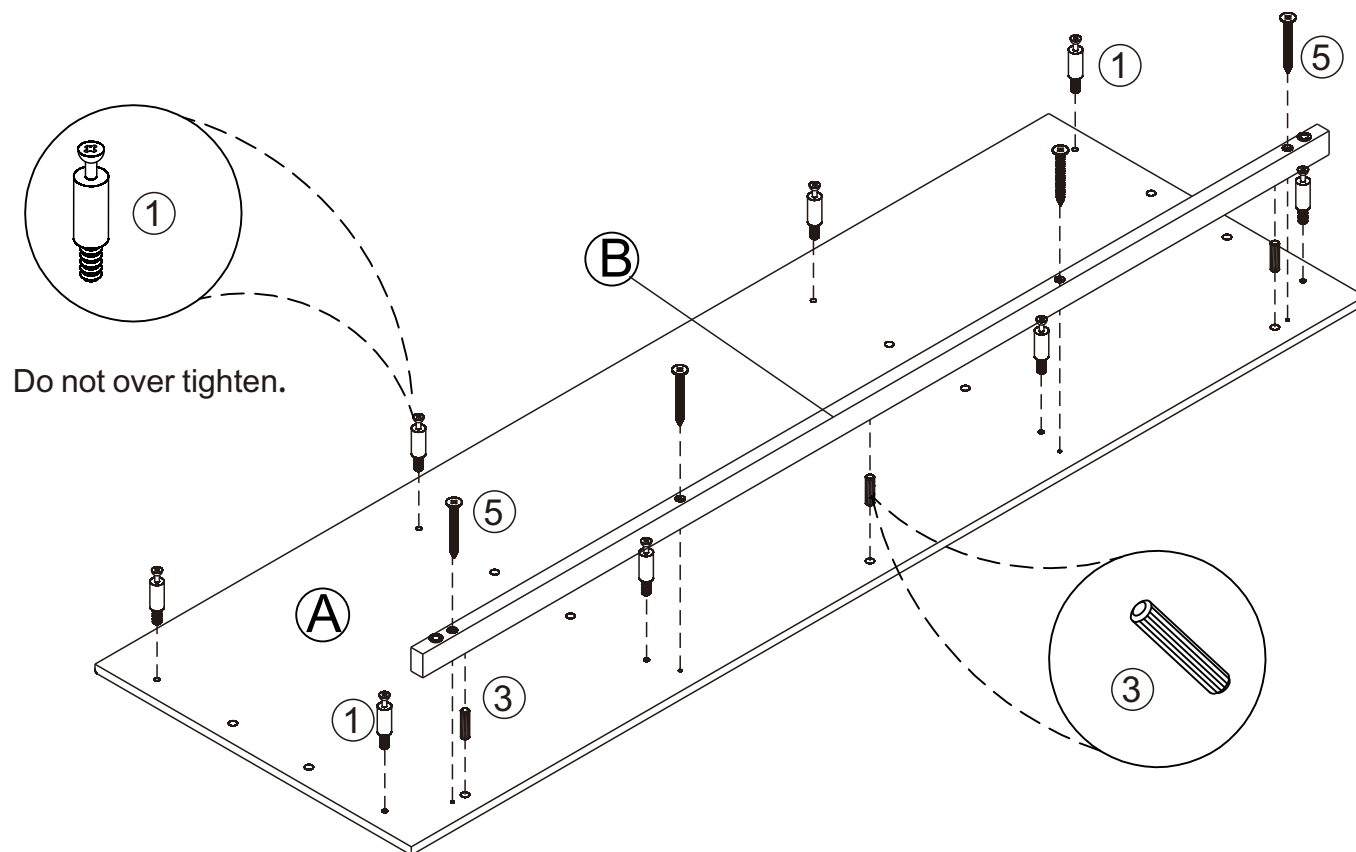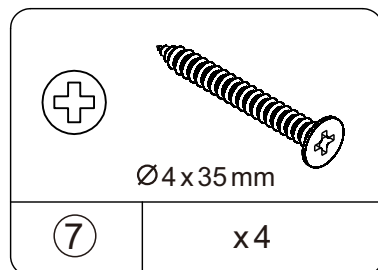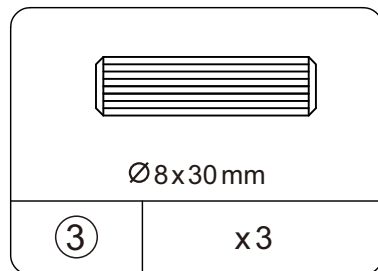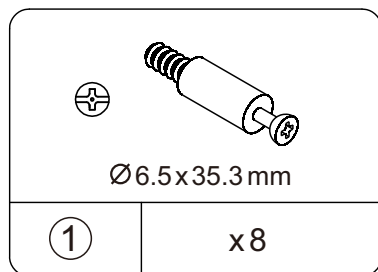    




2

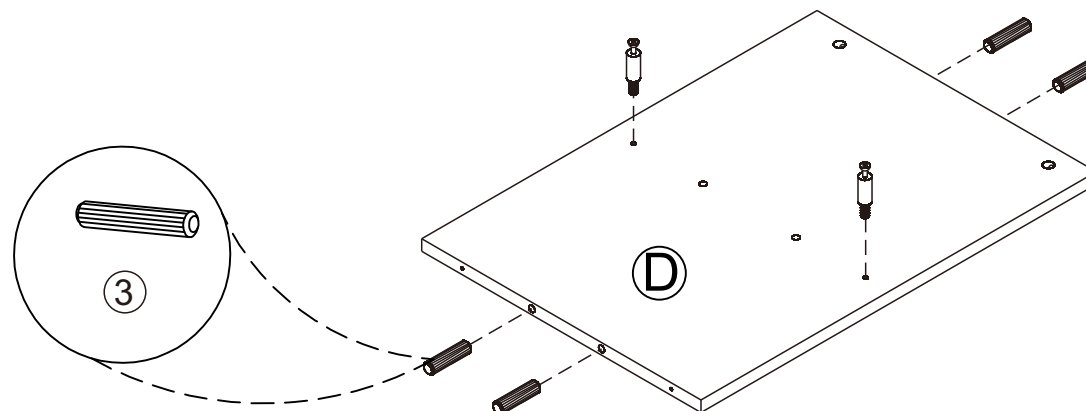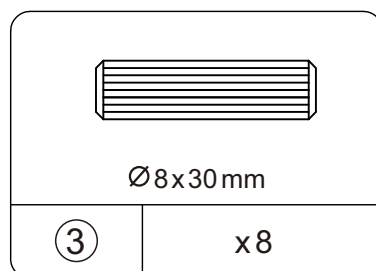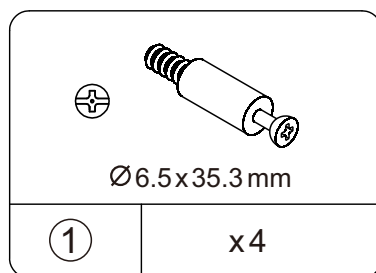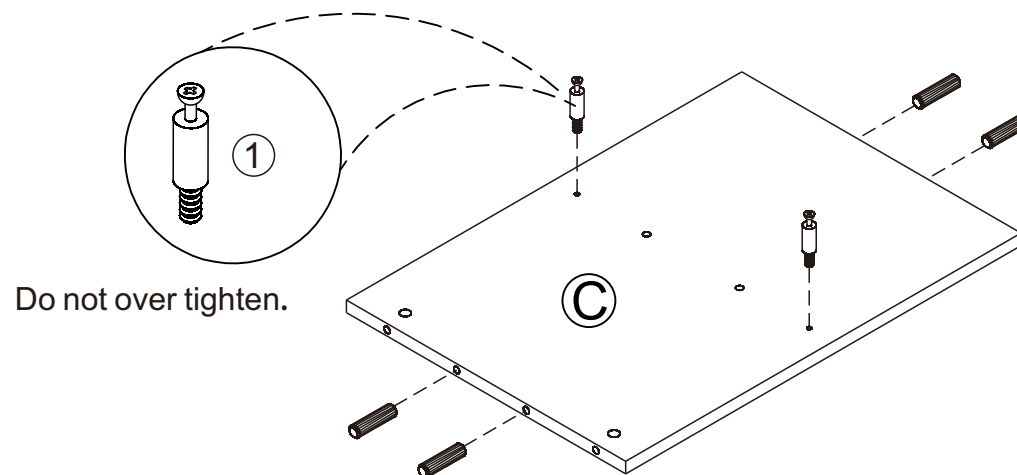    




3

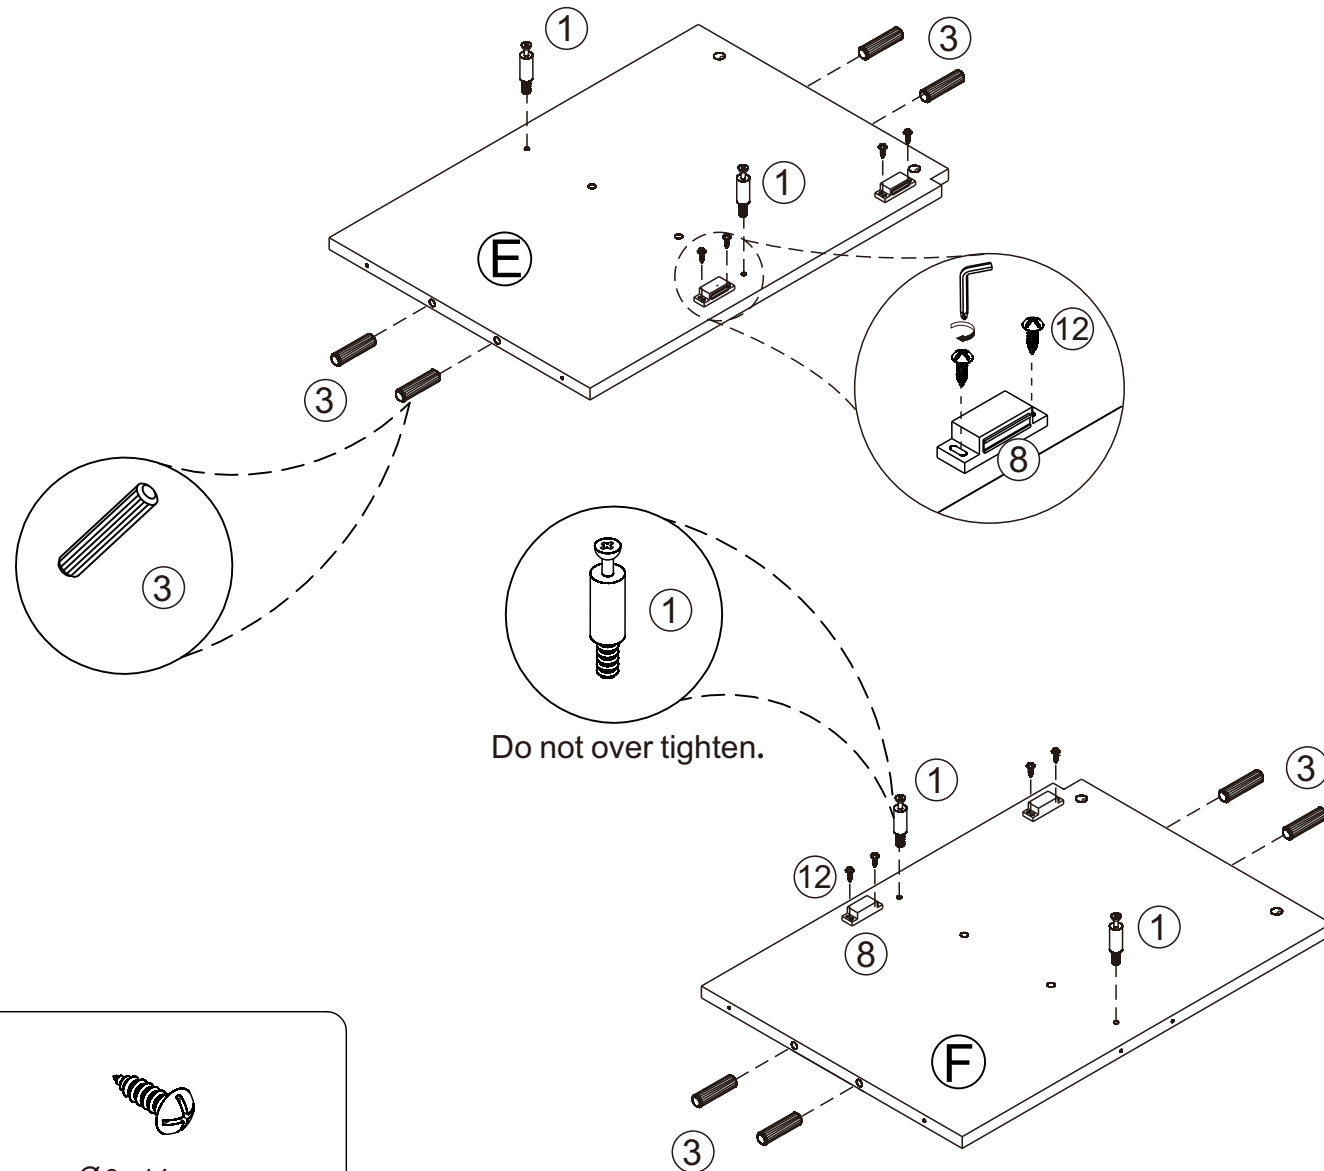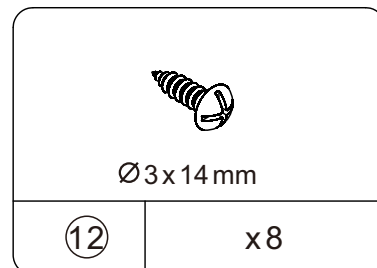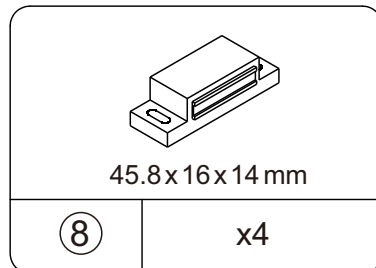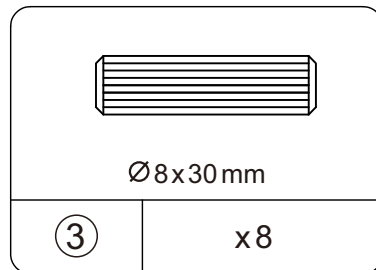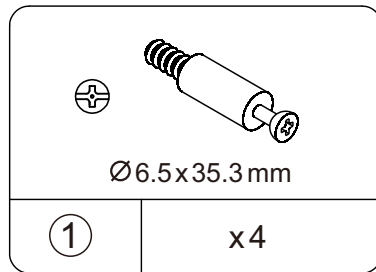     

4

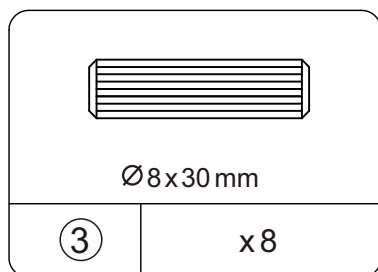 
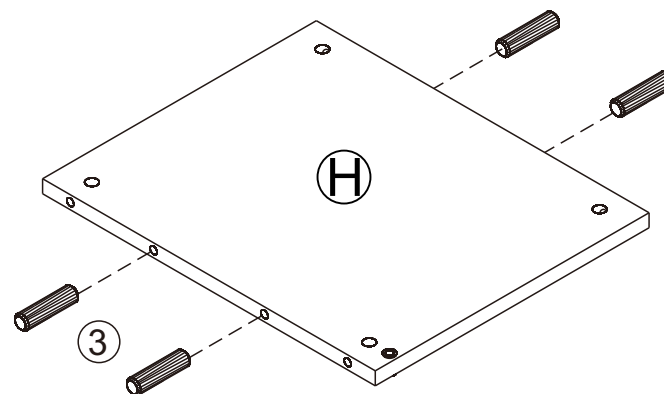 
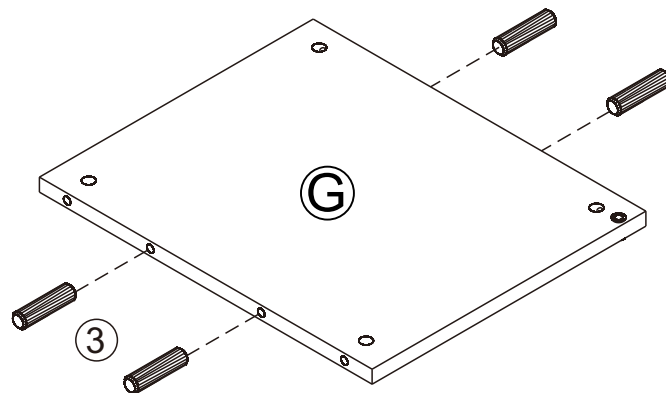 


5

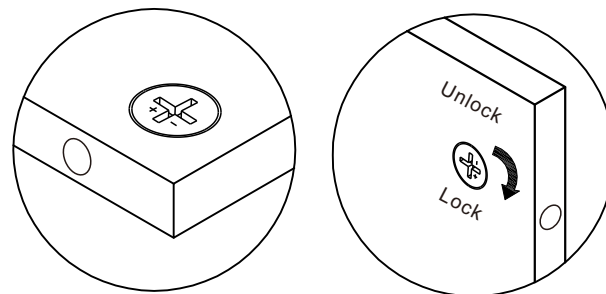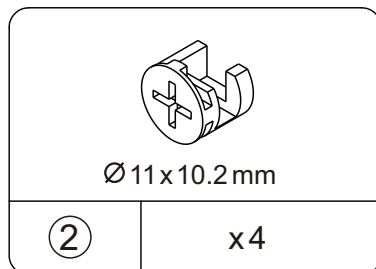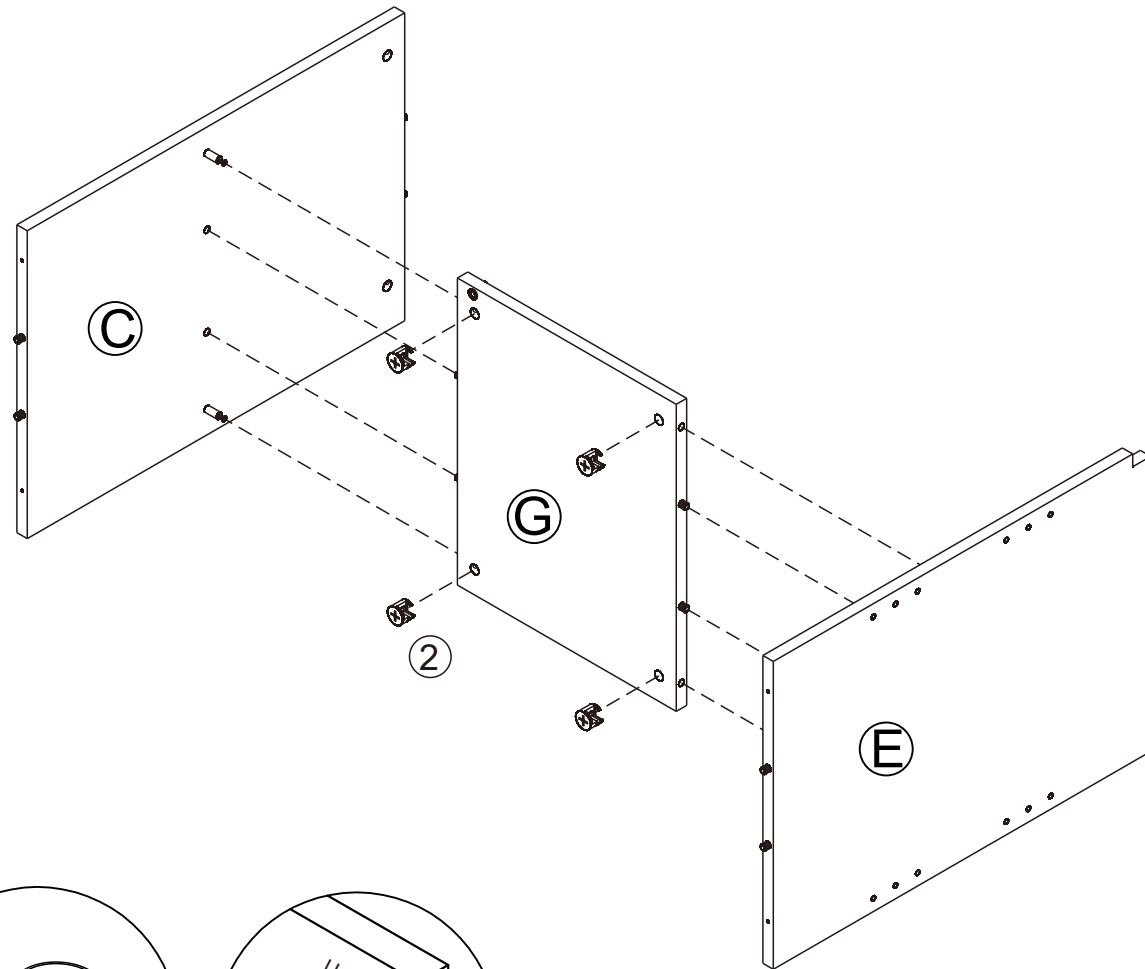   




Proper orientation of cam lock.

   6


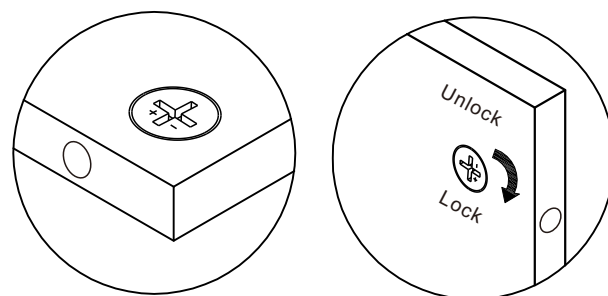
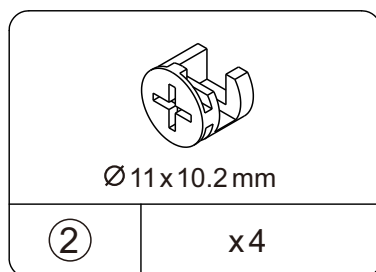
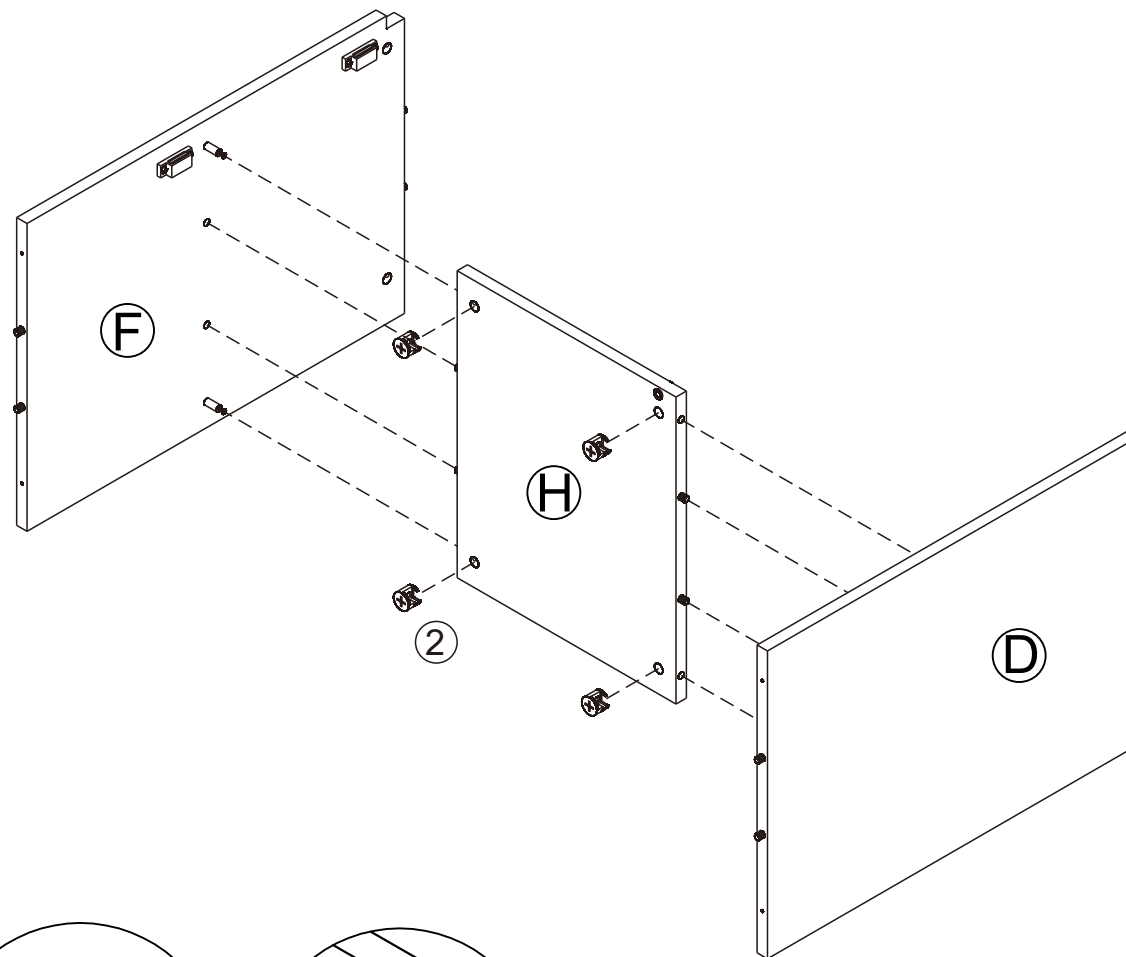


Proper orientation of cam lock.

   7



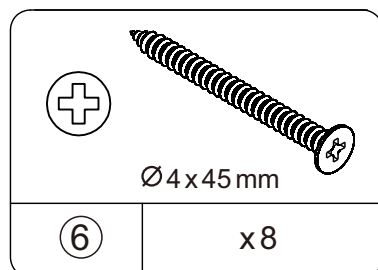
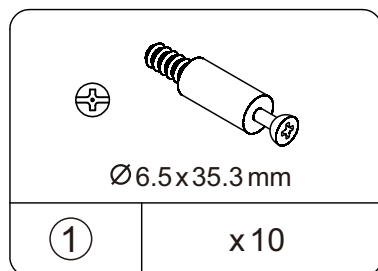
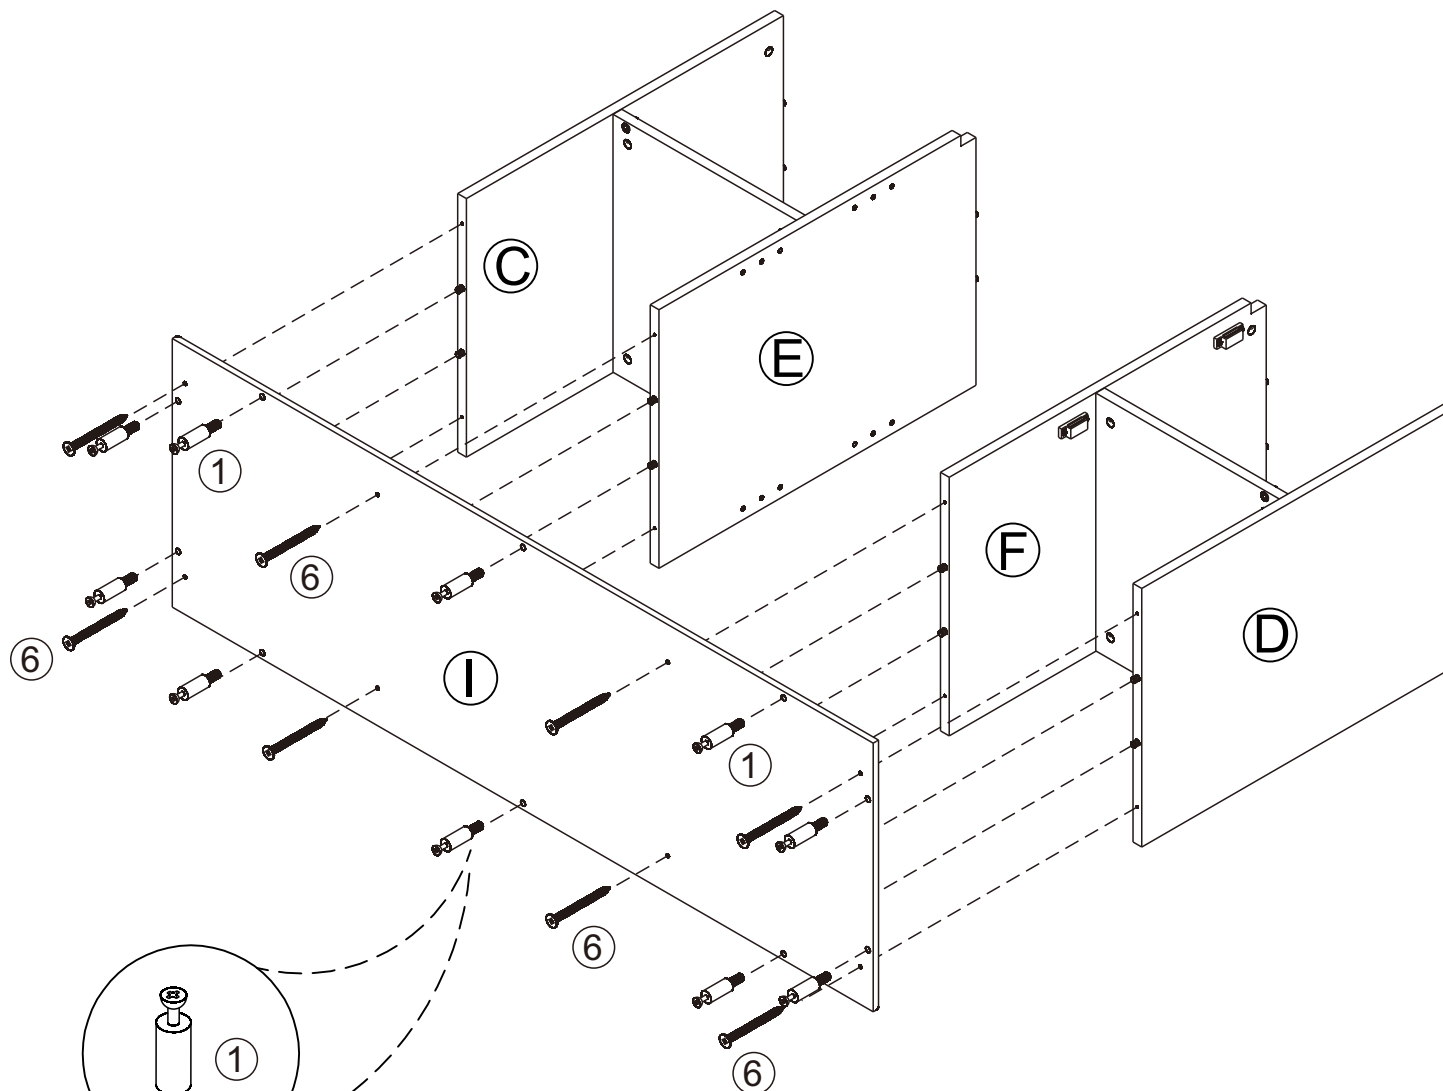


8

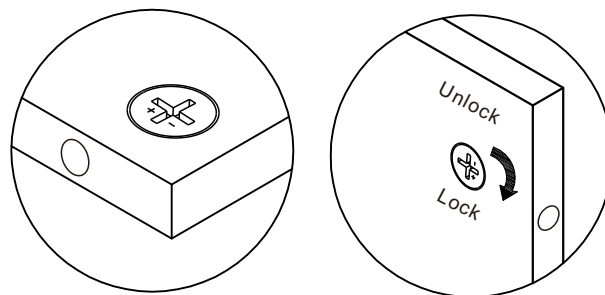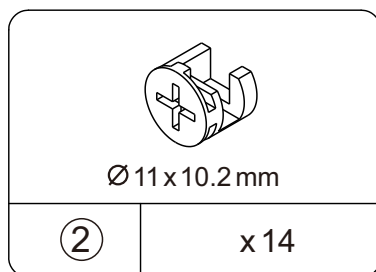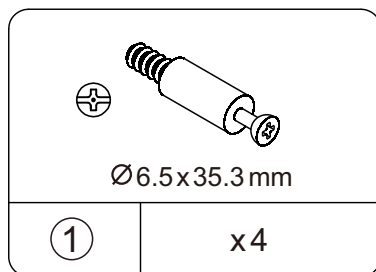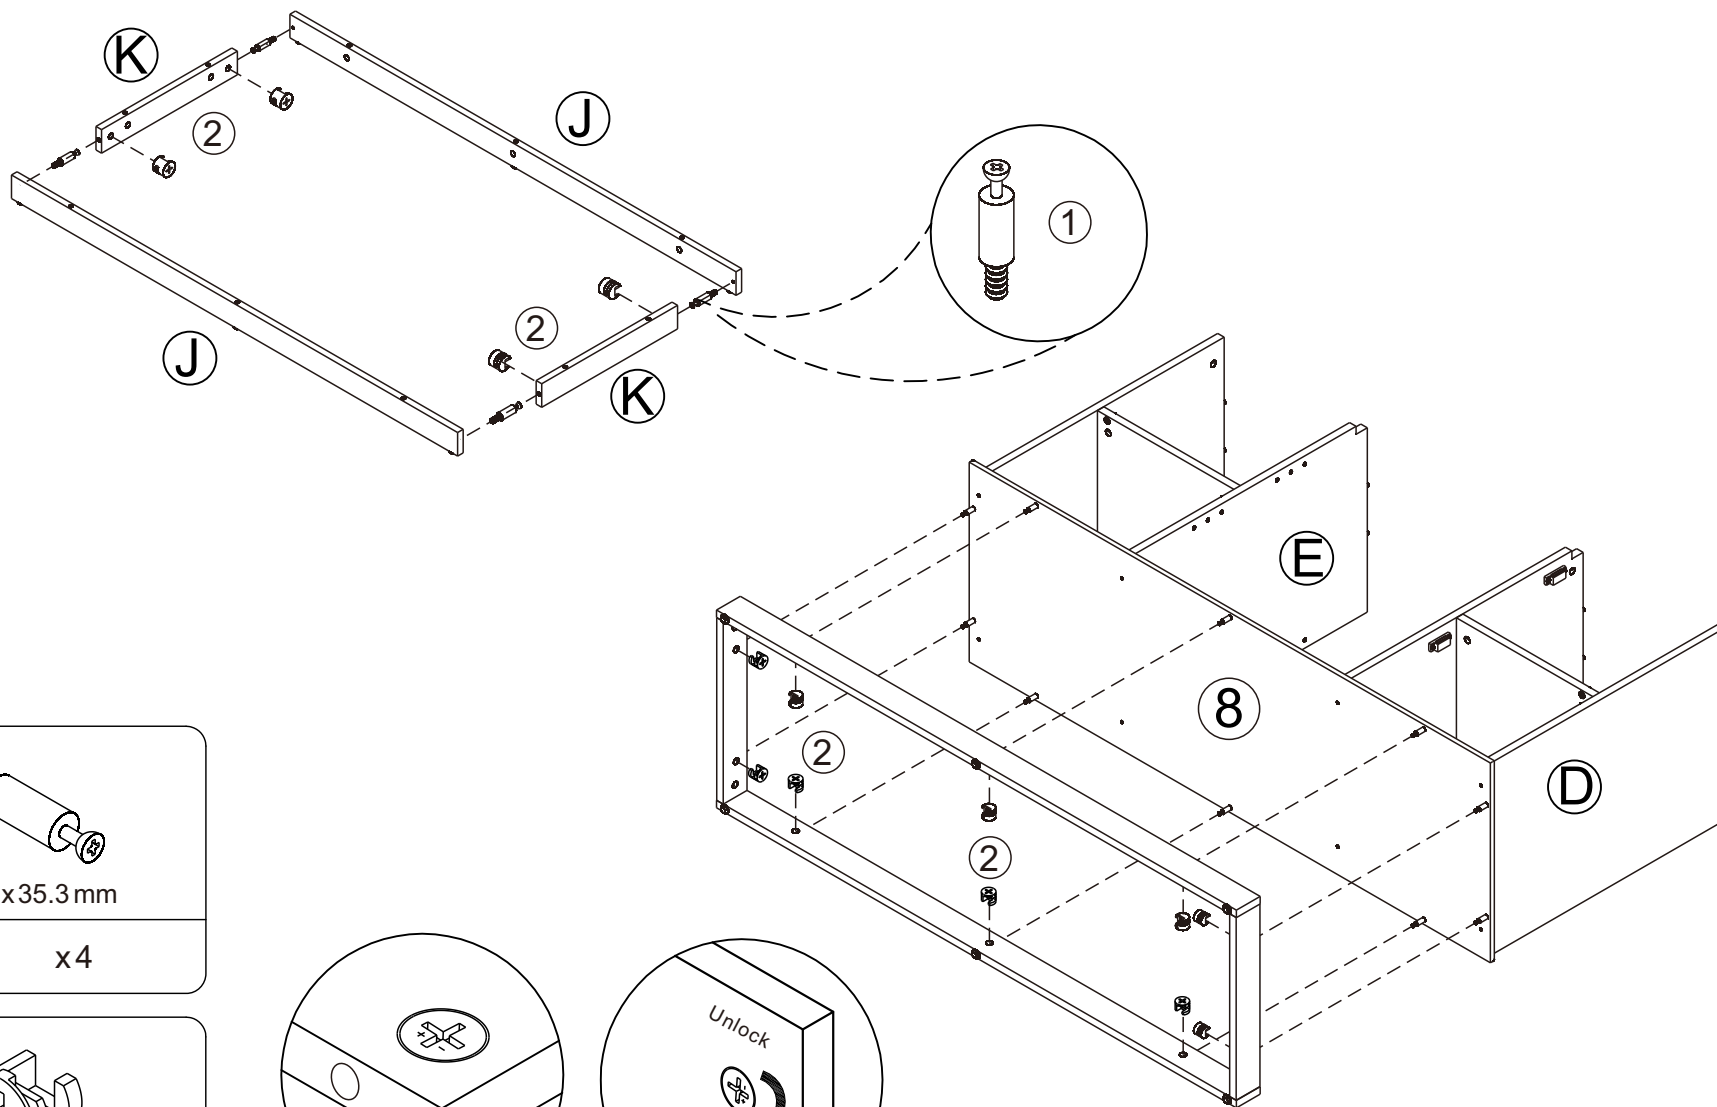    


Proper orientation of cam lock.

     9

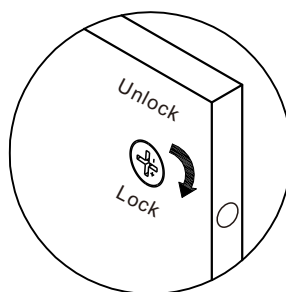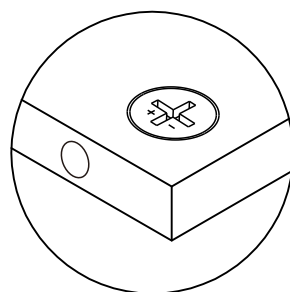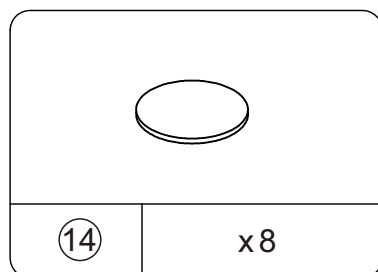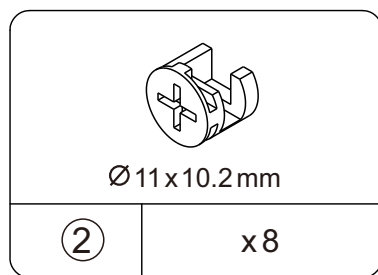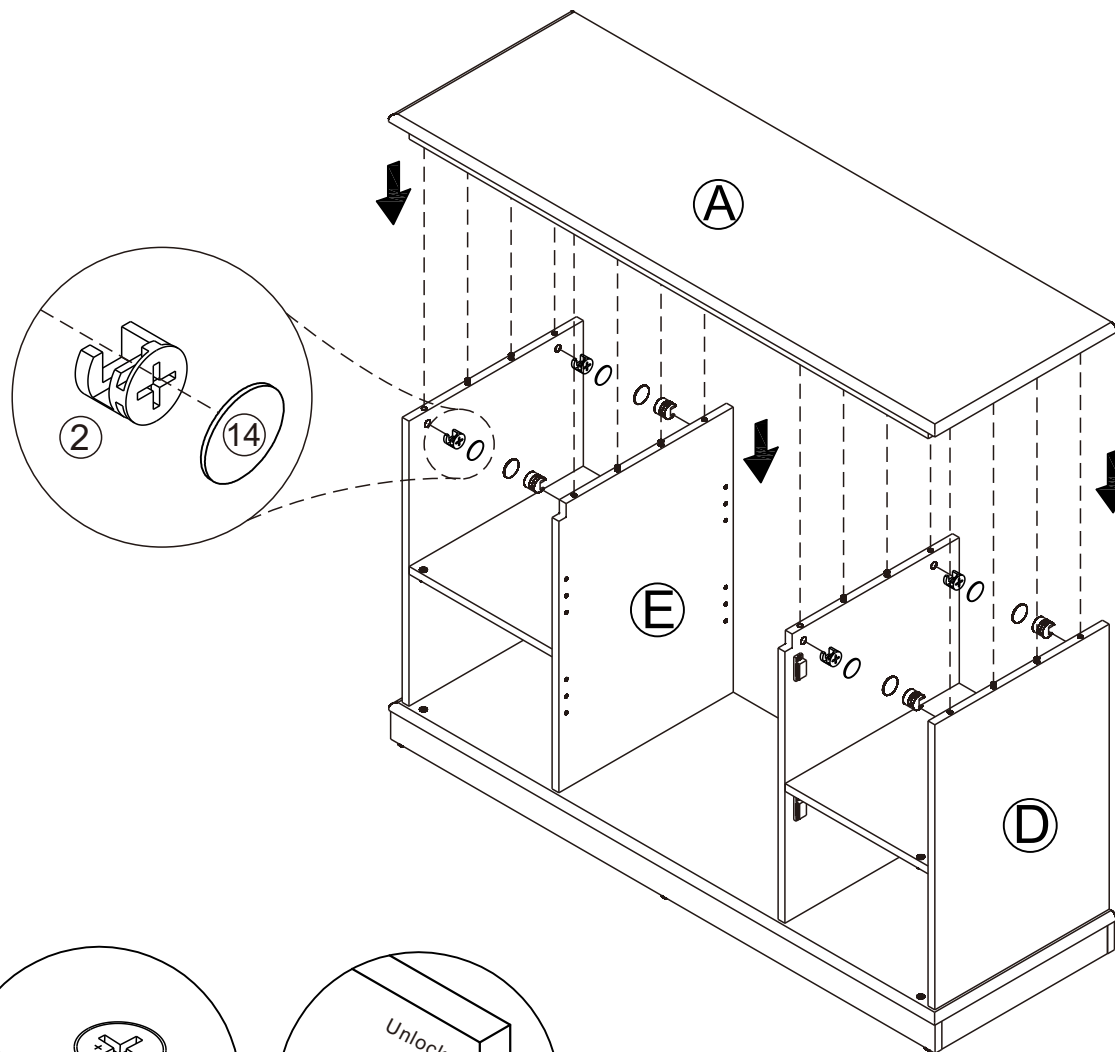

Proper orientation of cam lock.

 10


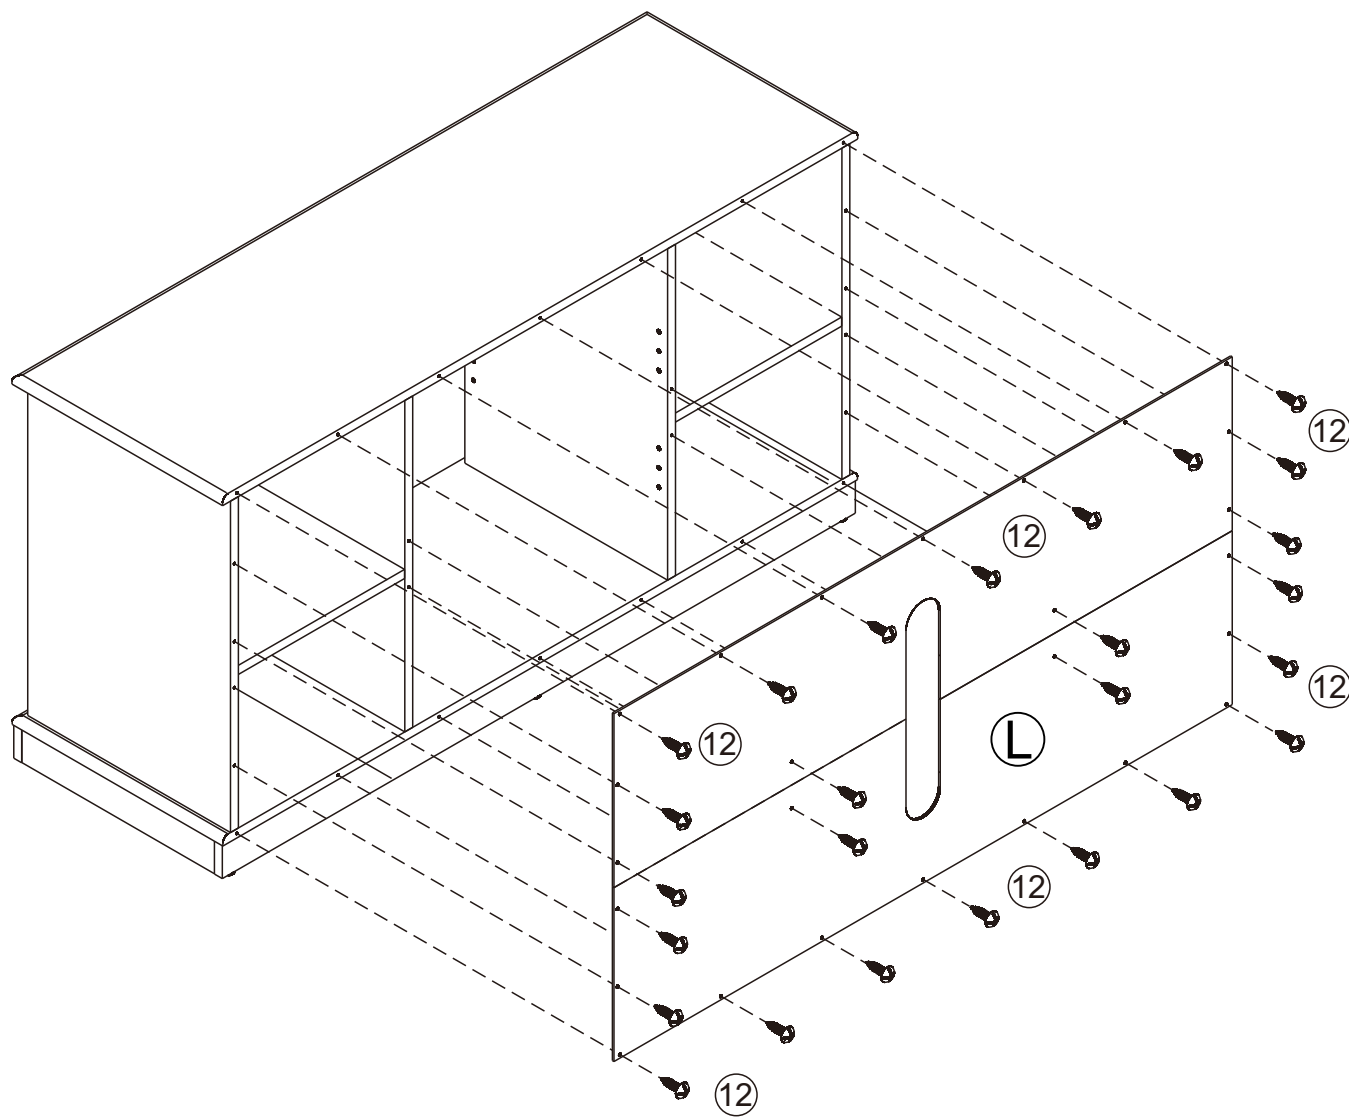


Ø3x14 mm

12













x 26

  11



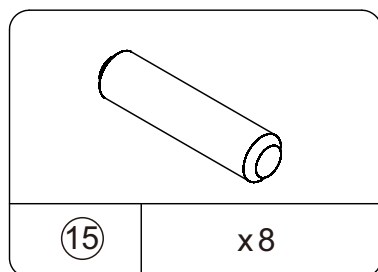
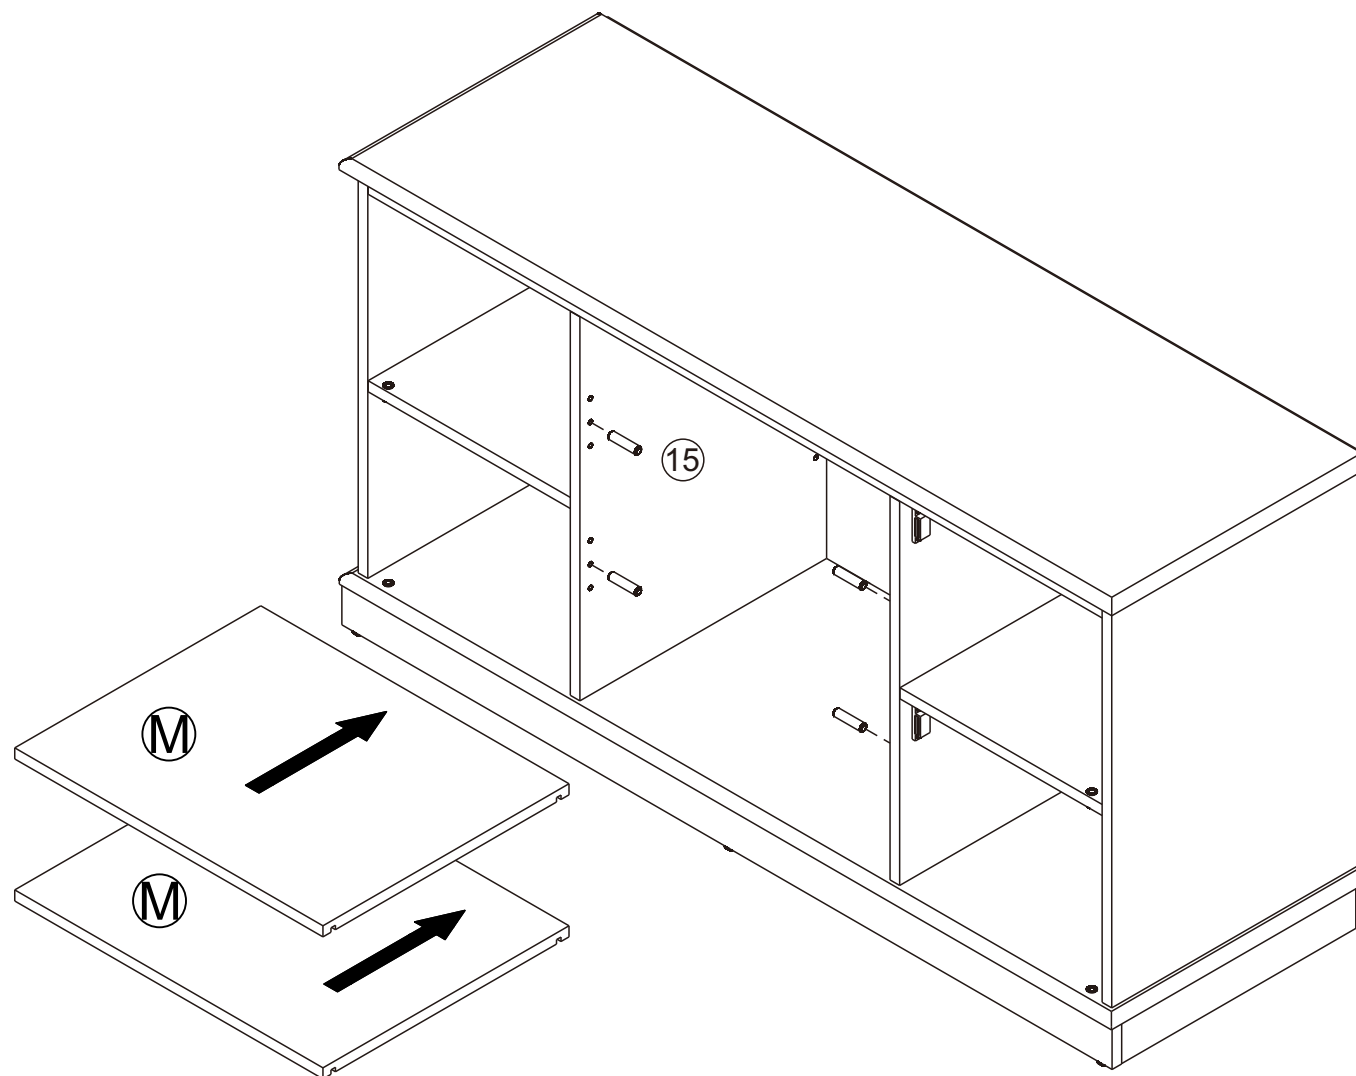


12

            
Please ensure door hinges (10&11) in proper position before you tighten the screws(20).

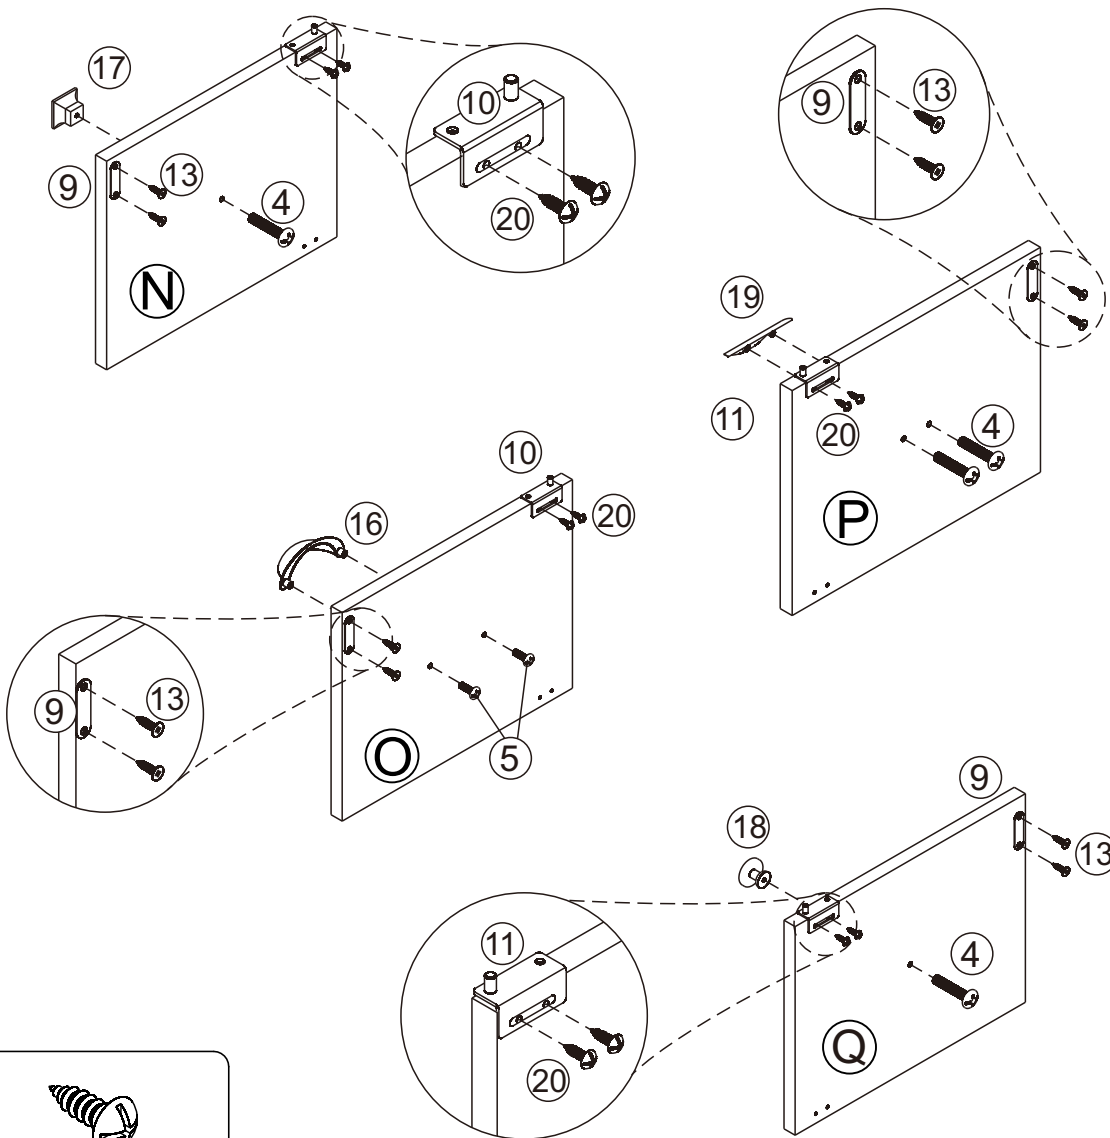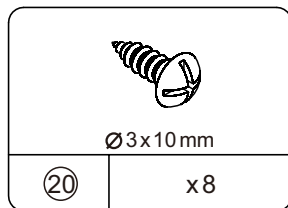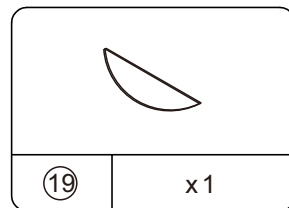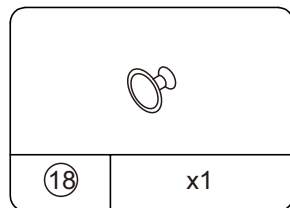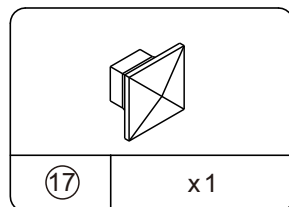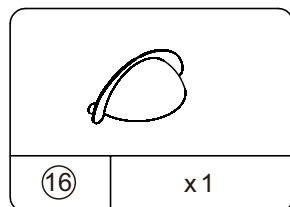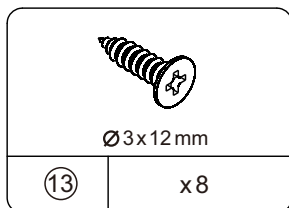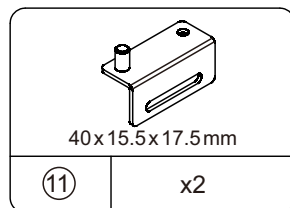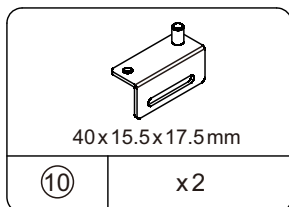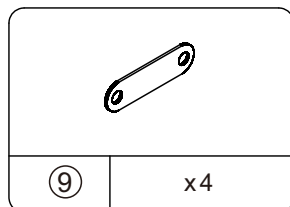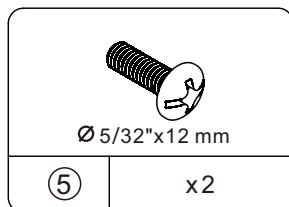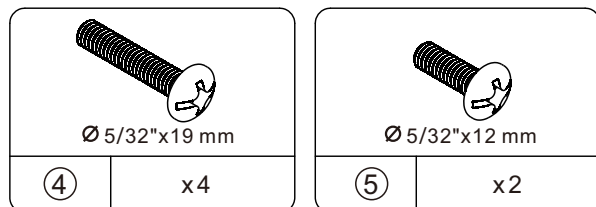

13

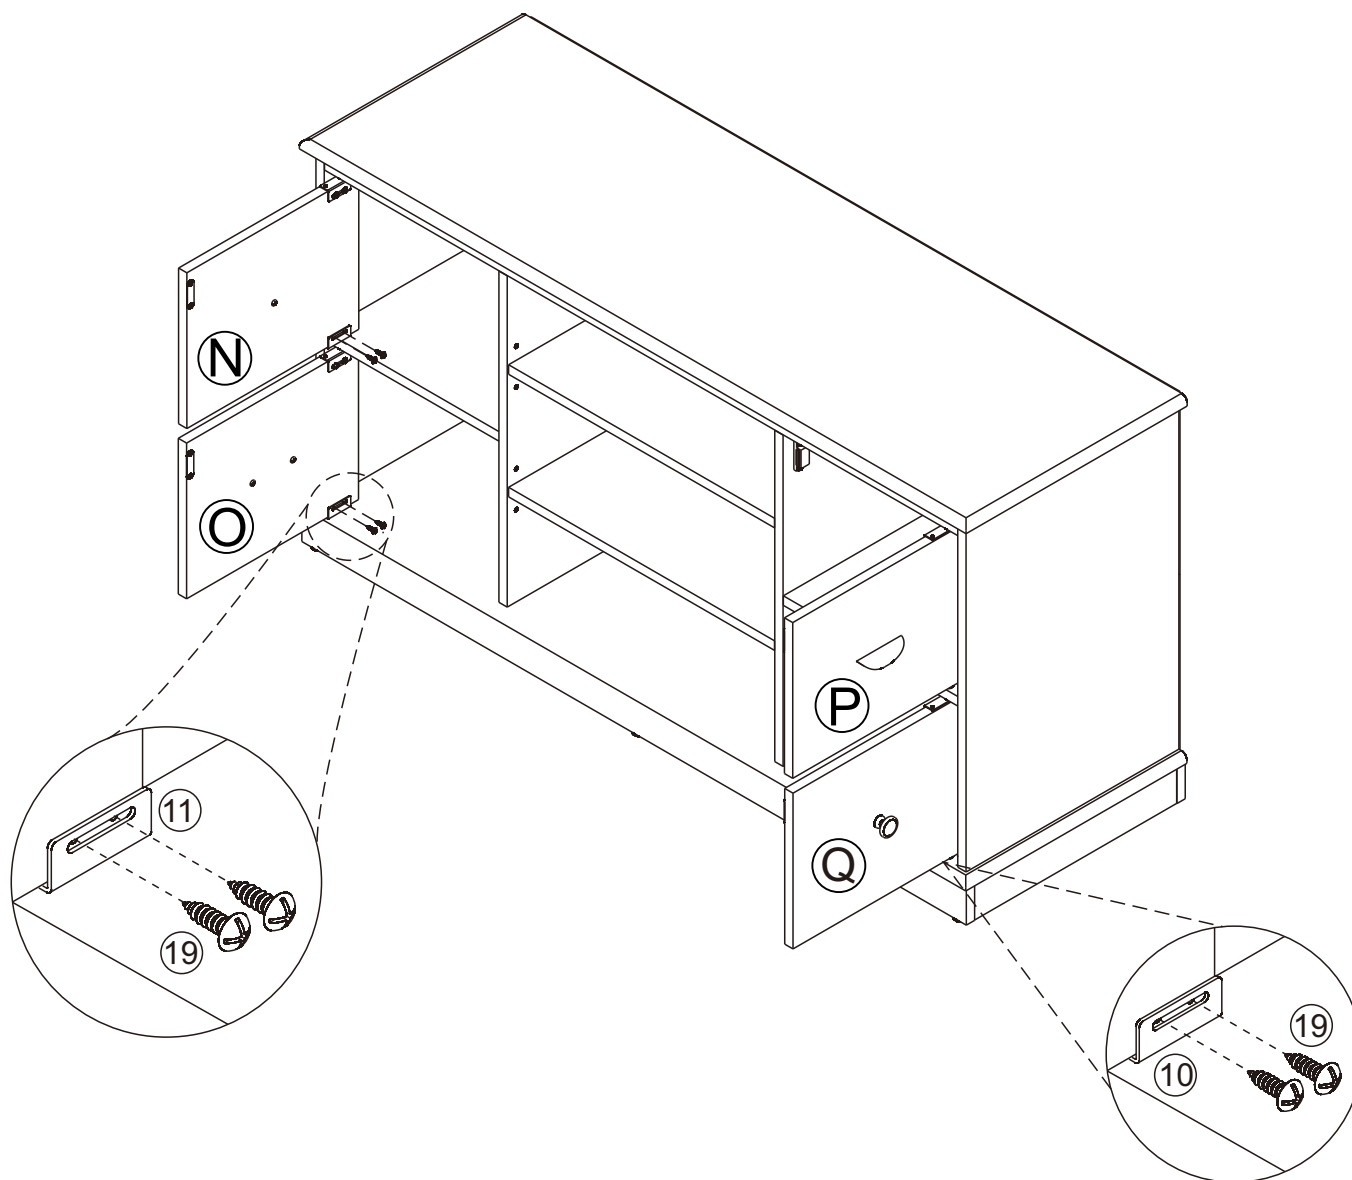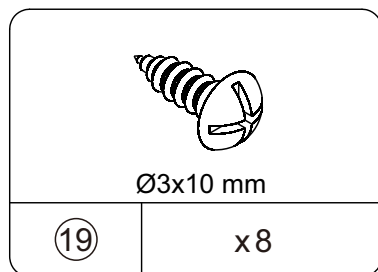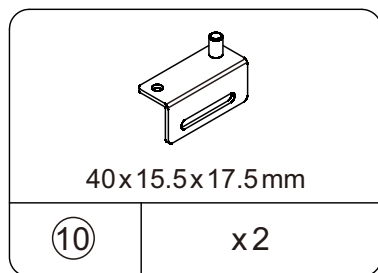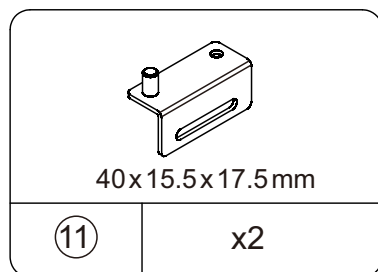    

WEIGHT LIMITS:

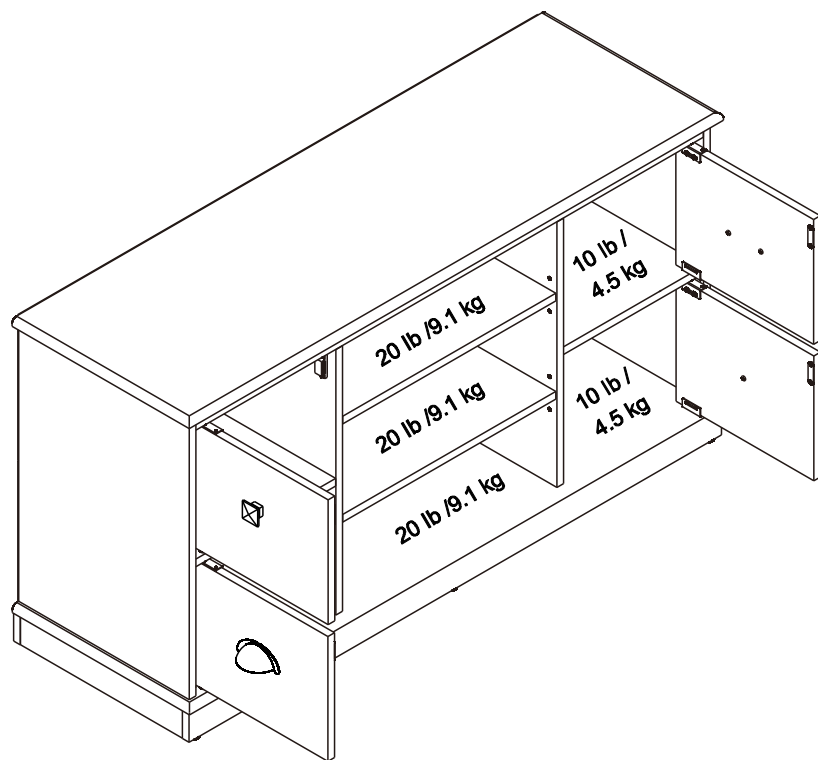 

This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

WARNING

Please make sure that all objects are removed before moving the assembled unit.

The unit must be team lifted, not dragged or pushed.

Failure to do so could cause instability, product collapse, and/or serious injury.

Enjoy Your Furniture