

# ASSEMBLY INSTRUCTIONS

1  
15

**Captain Cool** : CK 6249

**PRODUCT SIZE** : 920mm x 1930mm(900mm x 1880mm)

Thank you for purchasing this product. Before starting assembly we suggest you spend a short time reading through this leaflet, then follow the simple step by step guide.


Two persons are needed to assemble this product.



\* Approximately 30 Min



\* 2 People Required

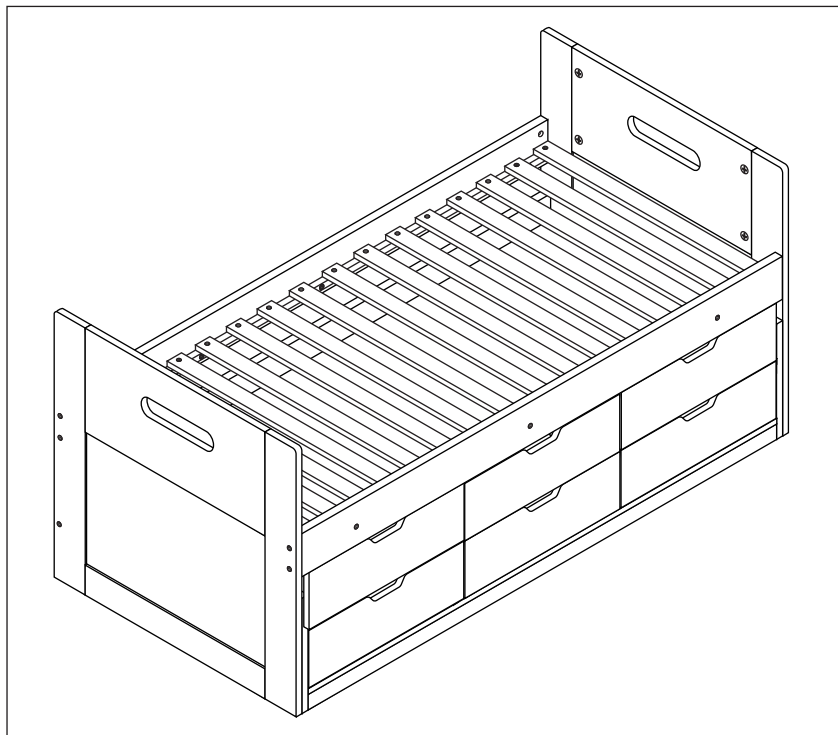

Ensure that you check regularly that all bolt are securely fastened and all components are in place.

If spare parts are required, contact your dealer.Do not use substitute part.


This instructions should be kept in a safe place for future reference.

## Tools Required For Assembly



Philips Screw Driver

## Tools Not Use

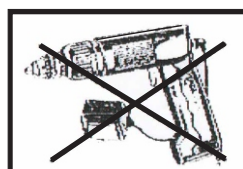

DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT. USE OF POWER TOOLS WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.



DO NOT USE HAMMER

# PARTS LIST


Model: CK 6249

Carton 1 of 3				Carton 3 of 3	
No.	Part Name	Pcs	(15)	BACK PANEL (TRUNDLE BED)	1
(01)	LEFT PANEL (FRONT)	1	(16)	SIDE FRONT PANEL (TRUNDLE BED)	1
(02)	LEFT PANEL (BACK)	1	(17)	PLINTH PANEL (TRUNDLE BED)	1
(03)	RIGHT PANEL (FRONT)	1	(18)	SUPPORT PANEL (TRUNDLE BED)	2
(04)	RIGHT PANEL (BACK)	1	(19)	TOP FRONT PANEL (TRUNDLE BED)	1
(05)	TOP LEFT PANEL (SINGLE BED)	1	(20)	TOP BACK PANEL (TRUNDLE BED)	1
(06)	TOP RIGHT PANEL (SINGLE BED)	1	(29)	BOTTOM FRONT PANEL (TRUNDLE BED)	1
(07)	BOTTOM LEFT PANEL (SINGLE BED)	1	(30)	BOTTOM BACK PANEL (TRUNDLE BED)	1
(08)	BOTTOM RIGHT PANEL (SINGLE BED)	1	(32)	METAL SUPPORT BASE (TRUNDLE BED)	2
(09)	CENTER LEFT PANEL (SINGLE BED)	1			
(10)	CENTER RIGHT PANEL (SINGLE BED)	1			
(11)	SIDE PANEL FRONT (SINGLE BED)	1			
(12)	SIDE PANEL BACK (SINGLE BED)	1			
(31)	METAL SUPPORT BASE (SINGLE BED)	2			
(33)	LVL SLAT BASE	13			
(34)	BRACE	2			
FITTING LIST					
Carton 2 of 3					
(13)	LEFT PANEL (TRUNDLE BED)	1			
(14)	RIGHT PANEL (TRUNDLE BED)	1			
(21)	FAKE DRAWER FRONT	3			
(22)	PARTICLE BOARD BASE	5			
(23)	LEFT PANEL (DRAWER)	3			
(24)	RIGHT PANEL (DRAWER)	3			
(25)	FRONT PANEL (DRAWER)	3			
(26)	BACK PANEL (DRAWER)	3			
(27)	BOTTOM PANEL (DRAWER)	3			
(28)	SUPPORT PANEL (DRAWER)	6			

# PARTS LIST

3  
15

Model: CK 6249

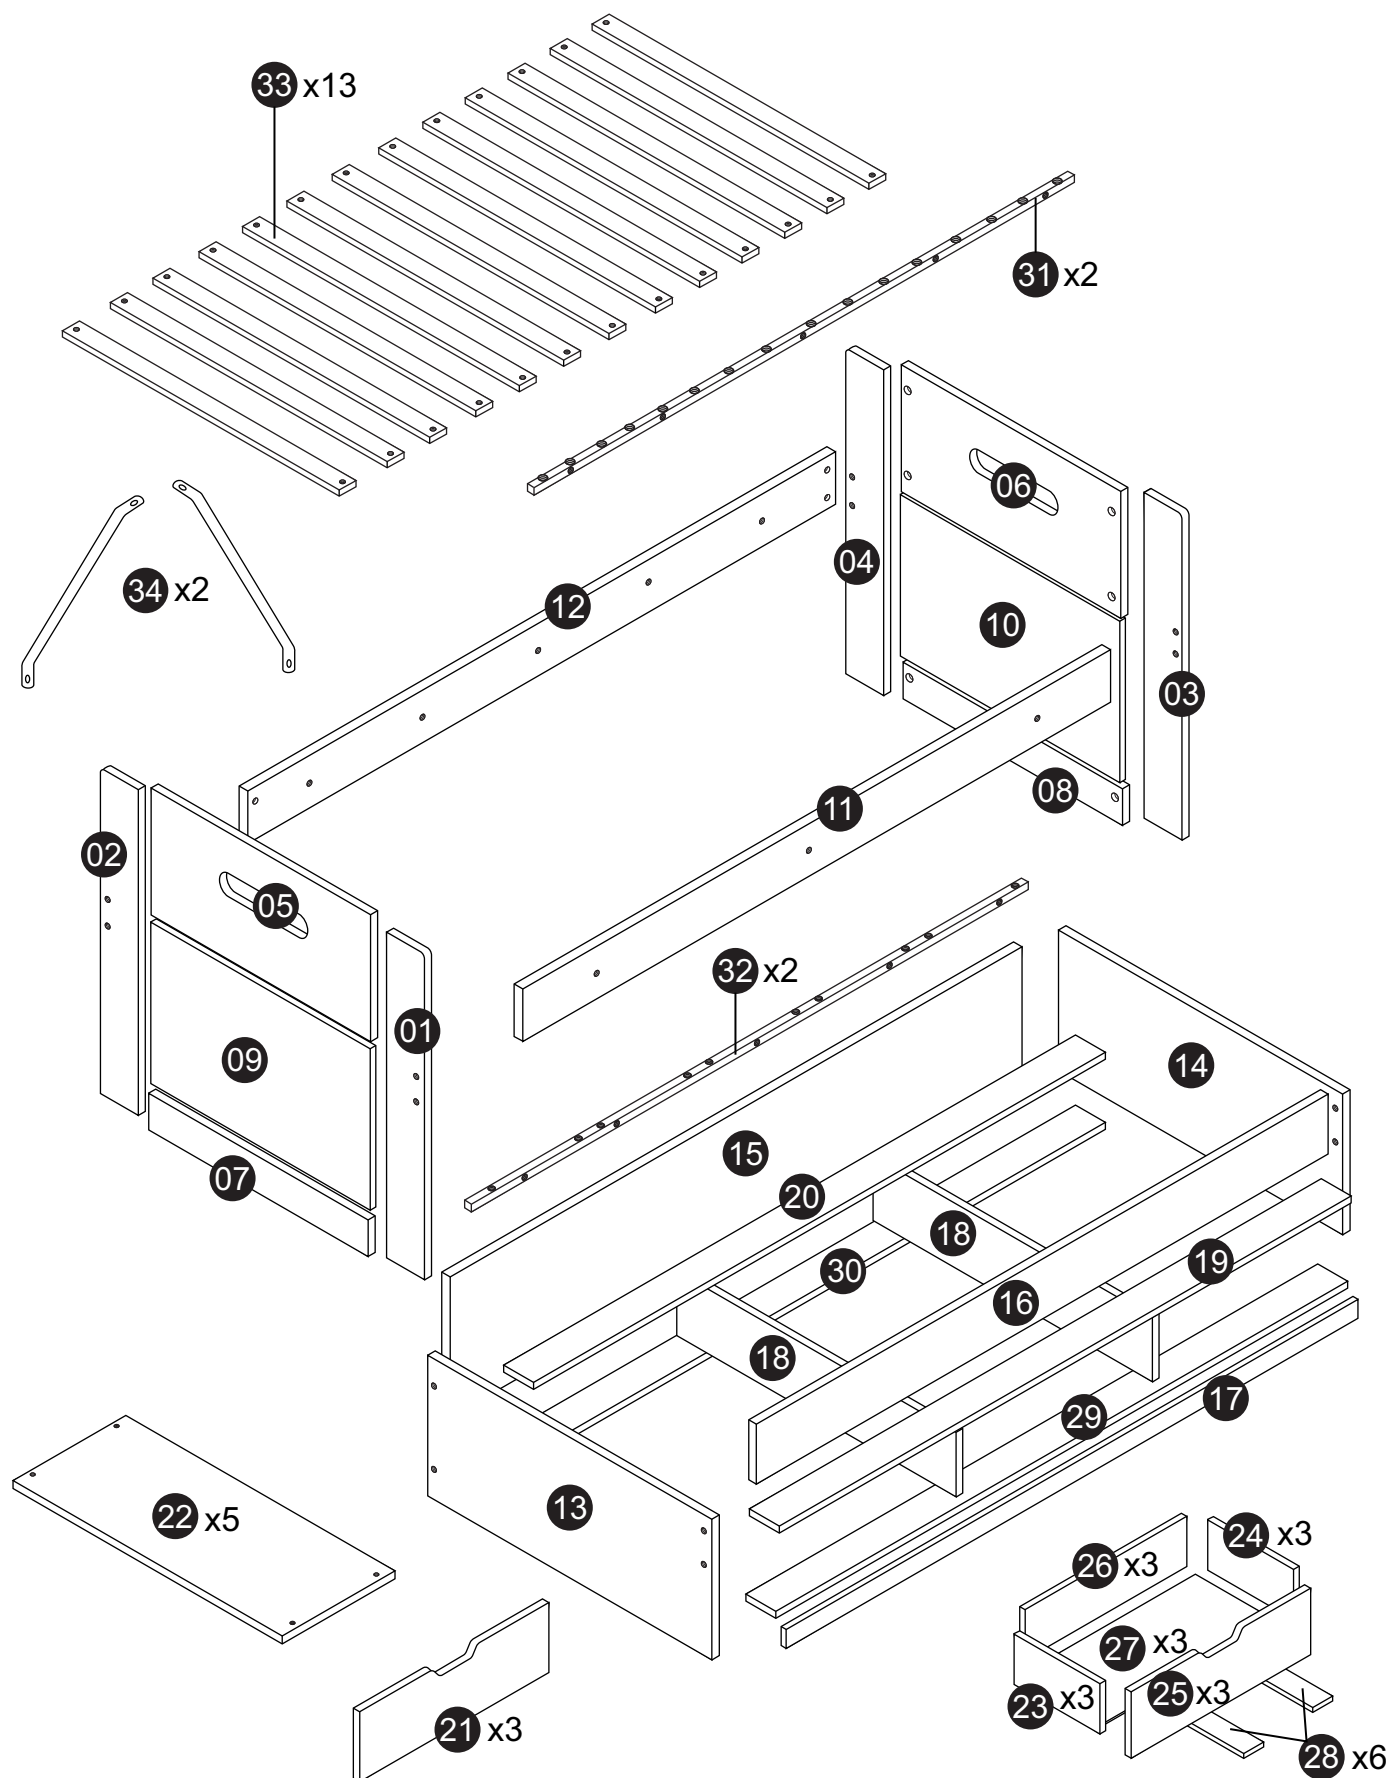

















# FITTING LIST

4  
15

## Captail Cool: CK 6249

### Fitting List

No.	Part Name	Pcs
(A)	Cam Stud (5137) 	46
(B)	Cam 	46
(C)	M8 x 25mm Wood Dowel 	80
(D)	M6 x 40mm Wood Dowel 	52
(E)	15mm Chipboard Screw 	46
(F)	45mm Chipboard Screw 	20
(G)	M6 x 15mm Allen Bolt 	4
(H)	M6 x 25mm Allen Bolt 	26
(J)	M6 x 30mm Allen Bolt 	26
(K)	M6 x 35mm Allen Bolt 	20
(L)	M6 x 50mm Allen Bolt 	16
(M)	M6 x 13mm Baller 	16
(N)	M6 JCN Nut 	11
(P)	25mm Plate Nylon Castes 	8
(Q)	14"Drawer Slide 	3set
(R)	M6 Allen Wrech 	2

### CAUTION

There are many small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit. As an extra precaution, screw cover caps should be permanently fixed in position. (Where applicable)

### USEFUL HINTS & TIPS

Two people will be required to assemble this unit

Please keep this assembly instruction for future reference

5	15
---	----

## STEP 1




A x 22









E x 34

Q x 6

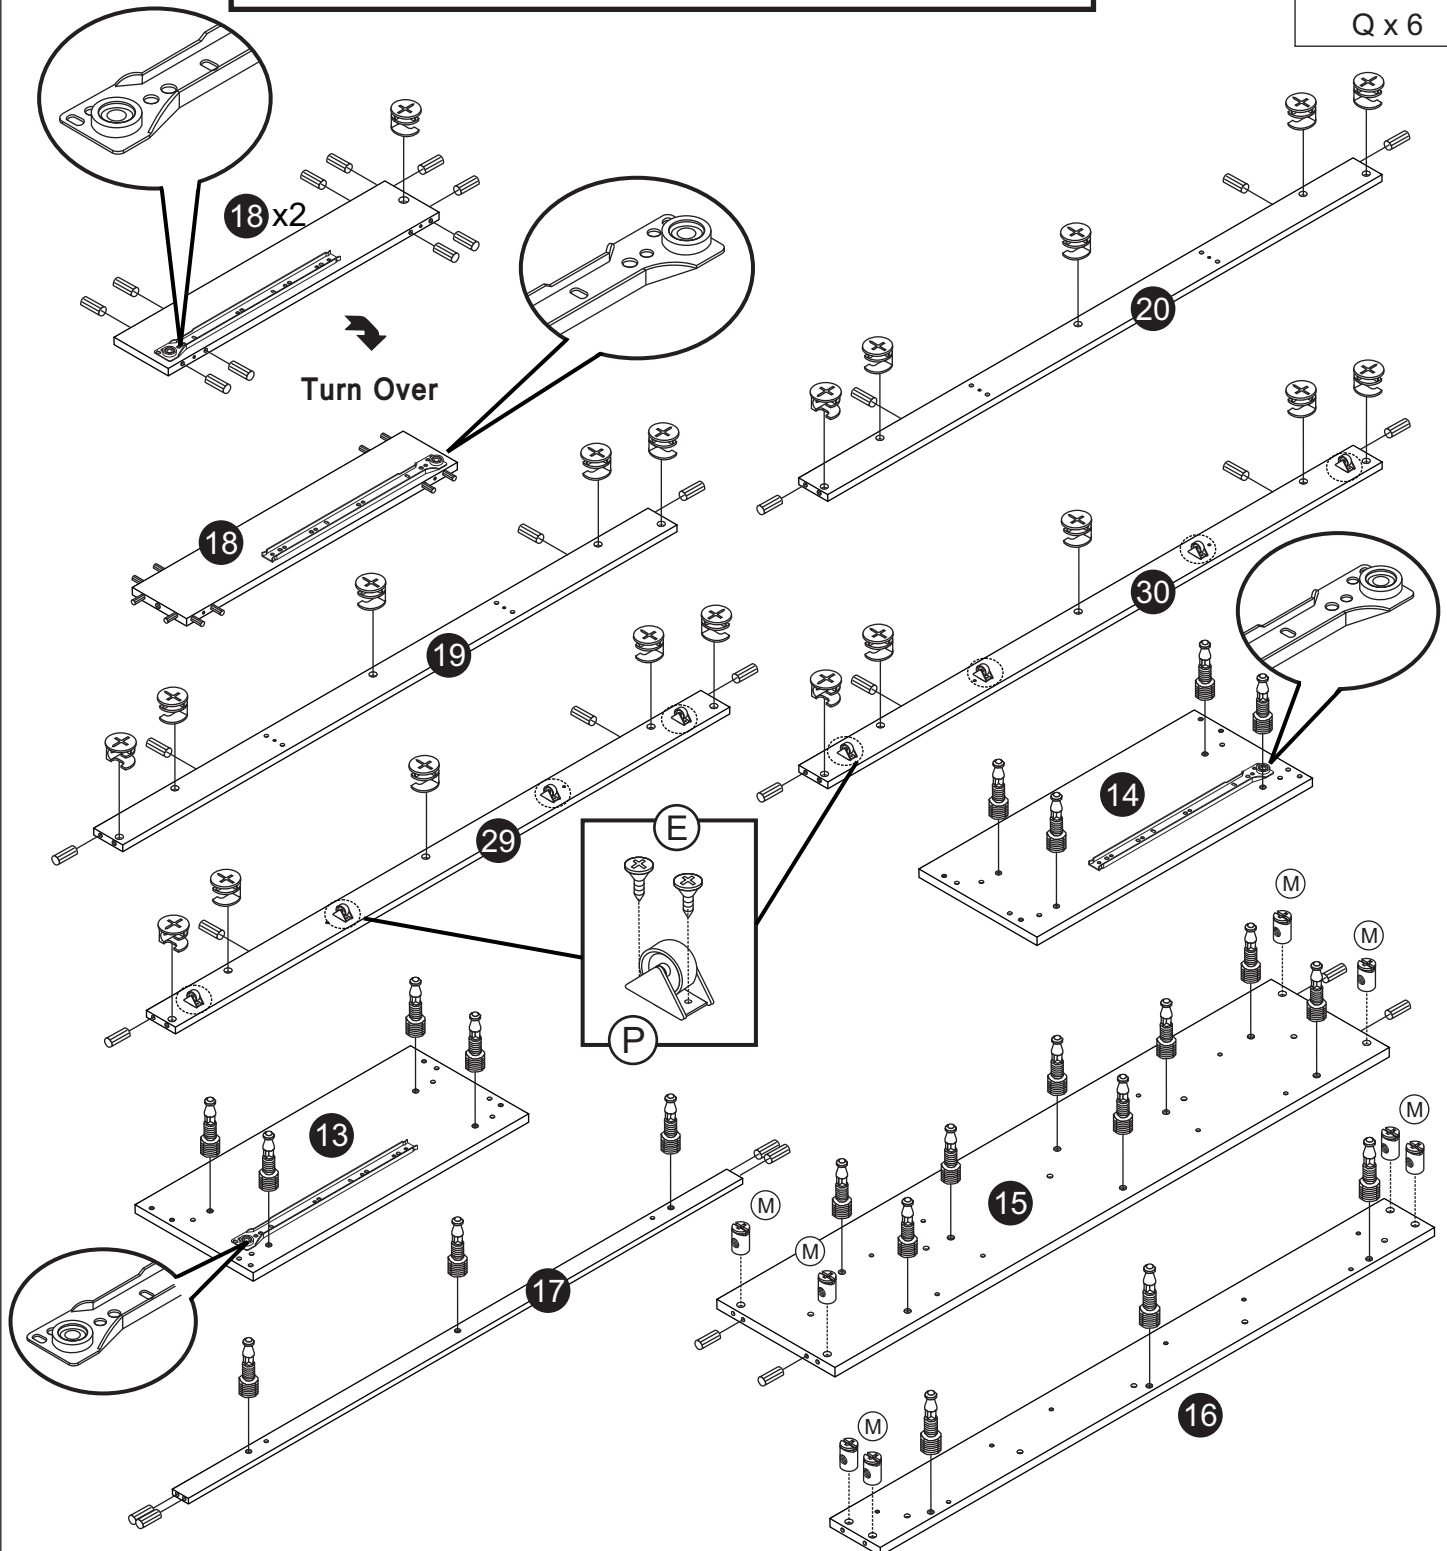

# GUIDE TO ASSEMBLY


Model: CK 6249

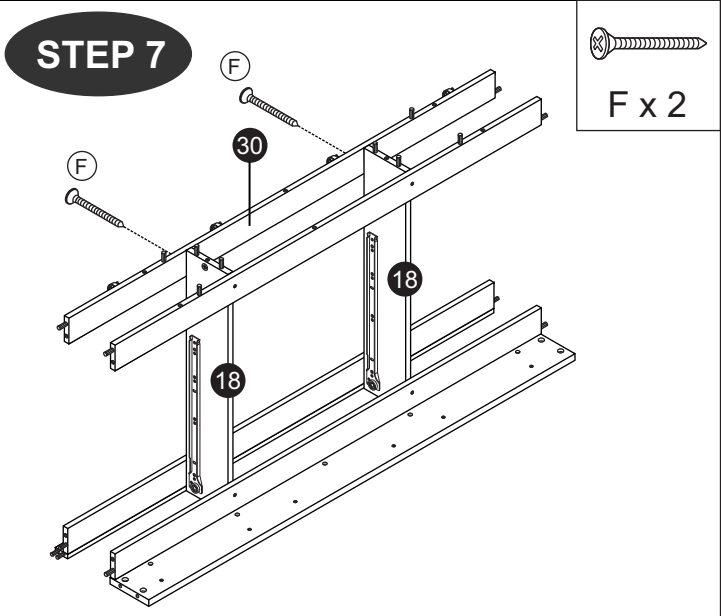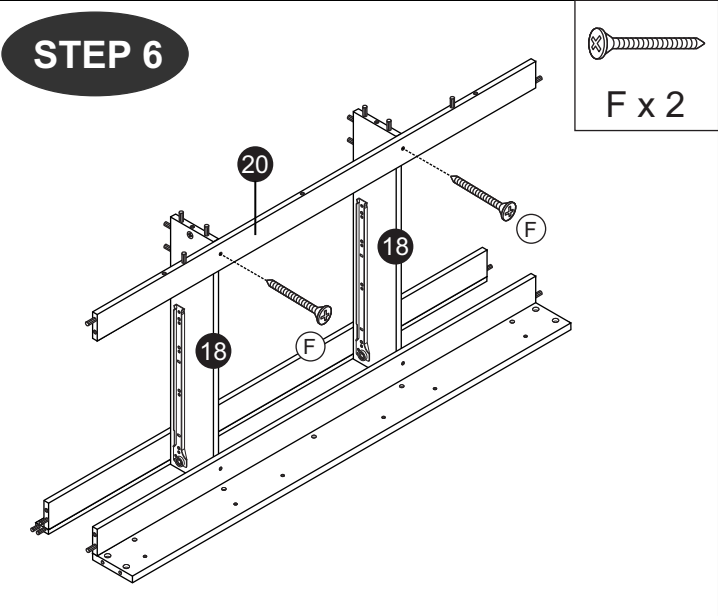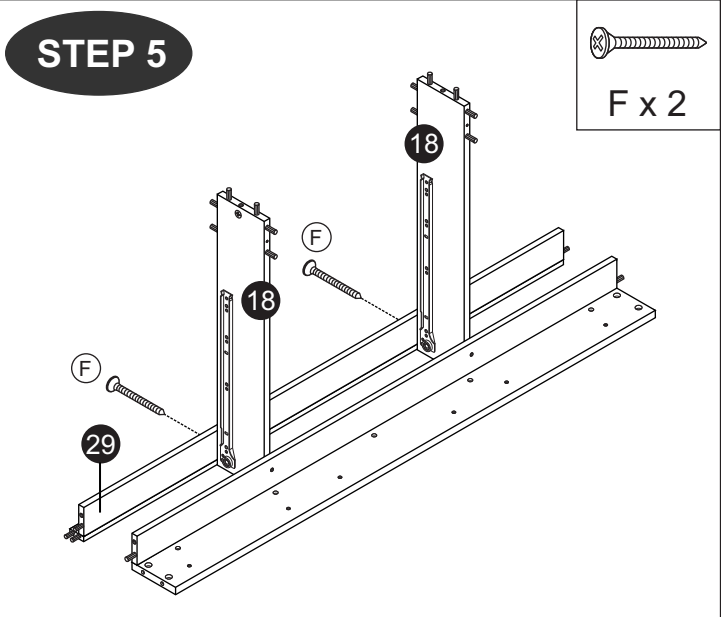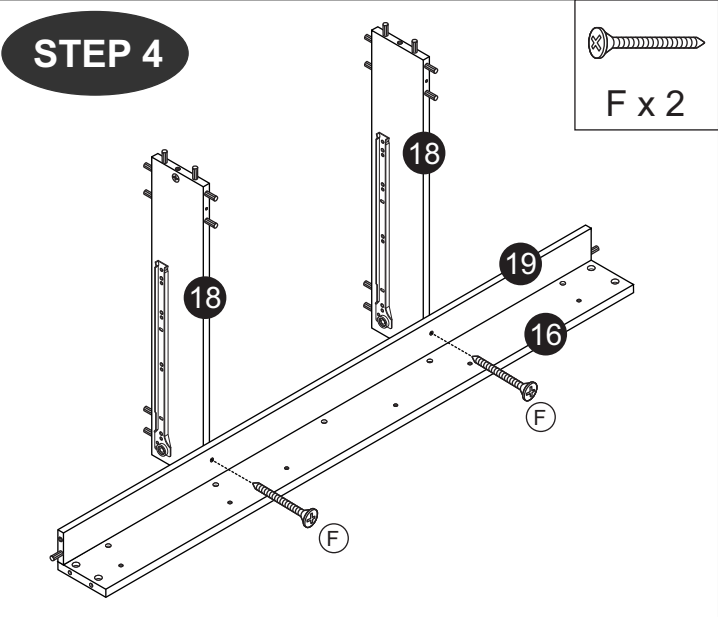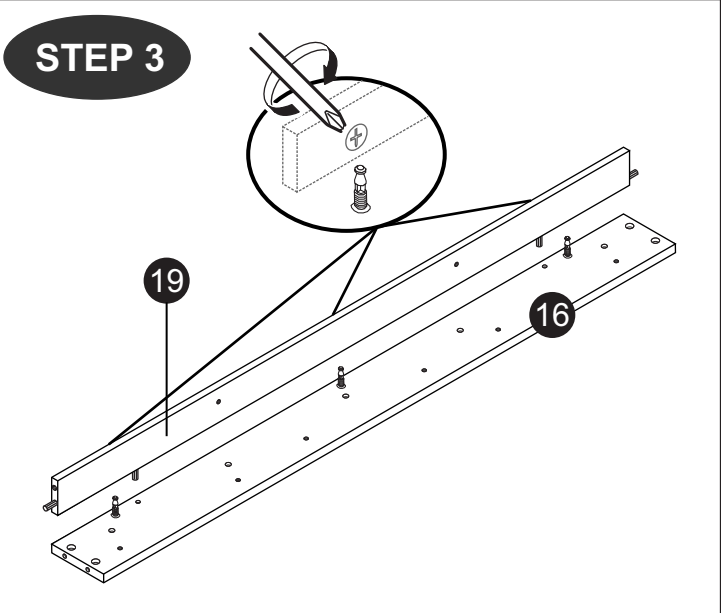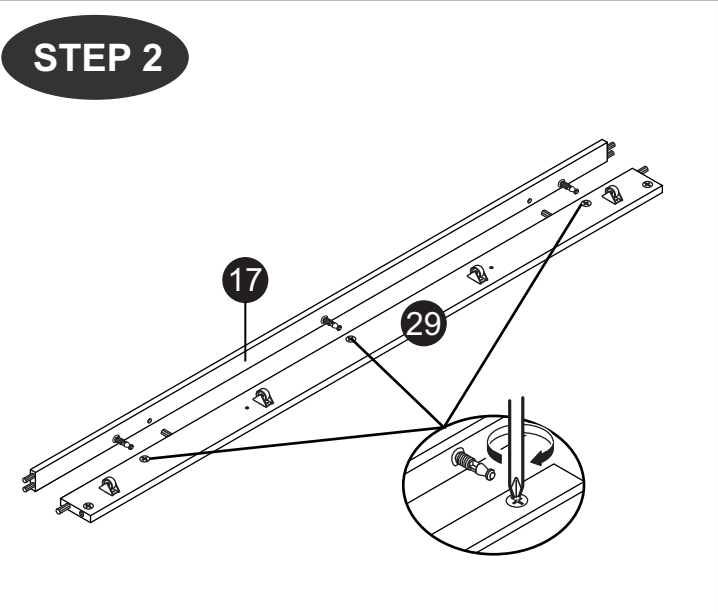


# GUIDE TO ASSEMBLY


Model: CK 6249

STEP 8

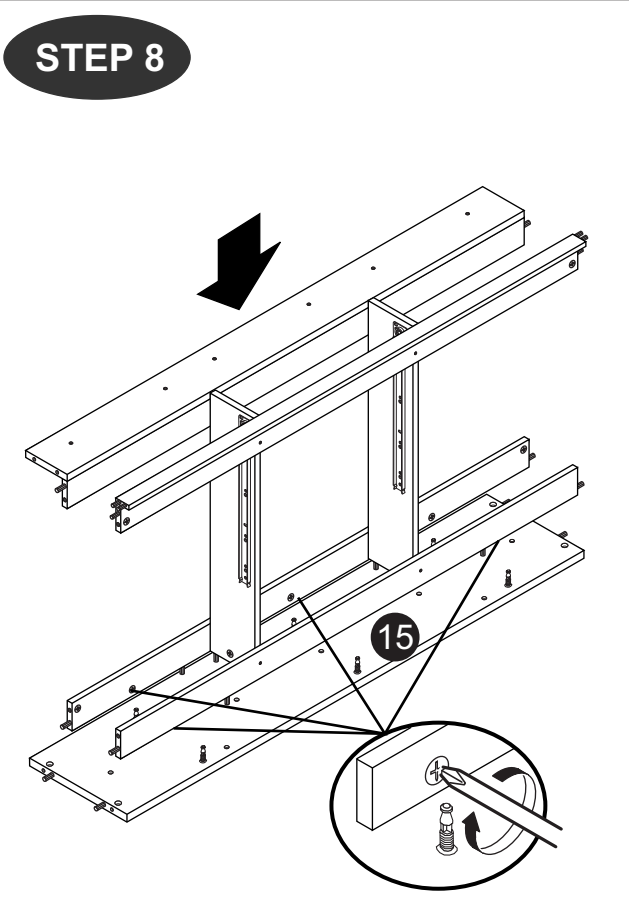



STEP 9

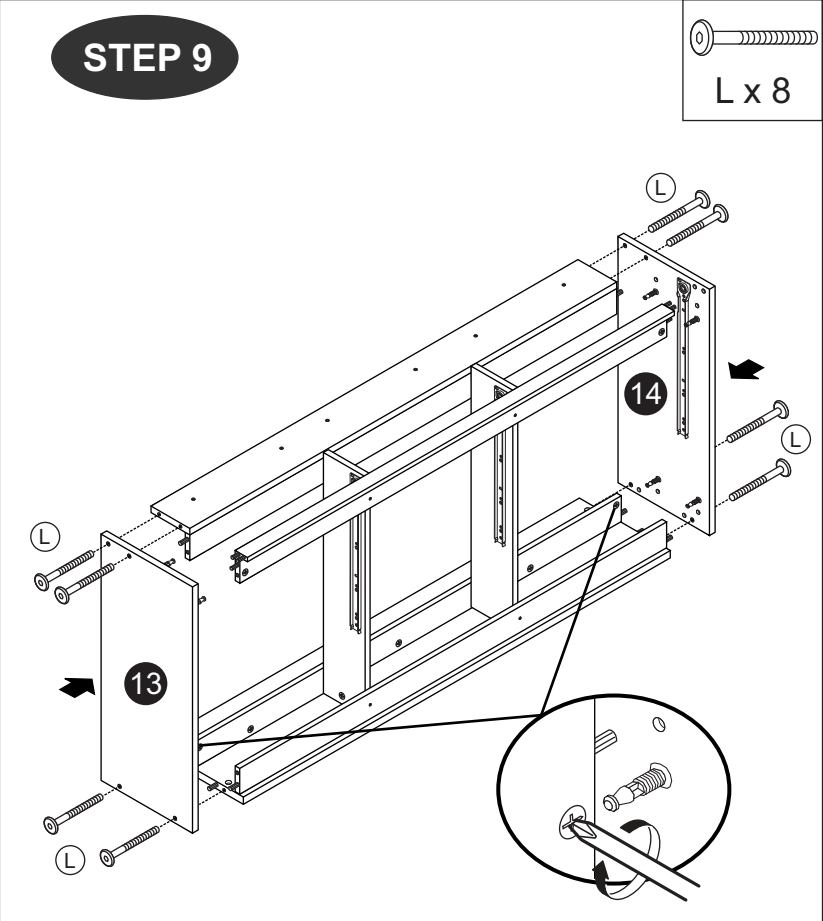


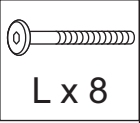  
L x 8

STEP 10

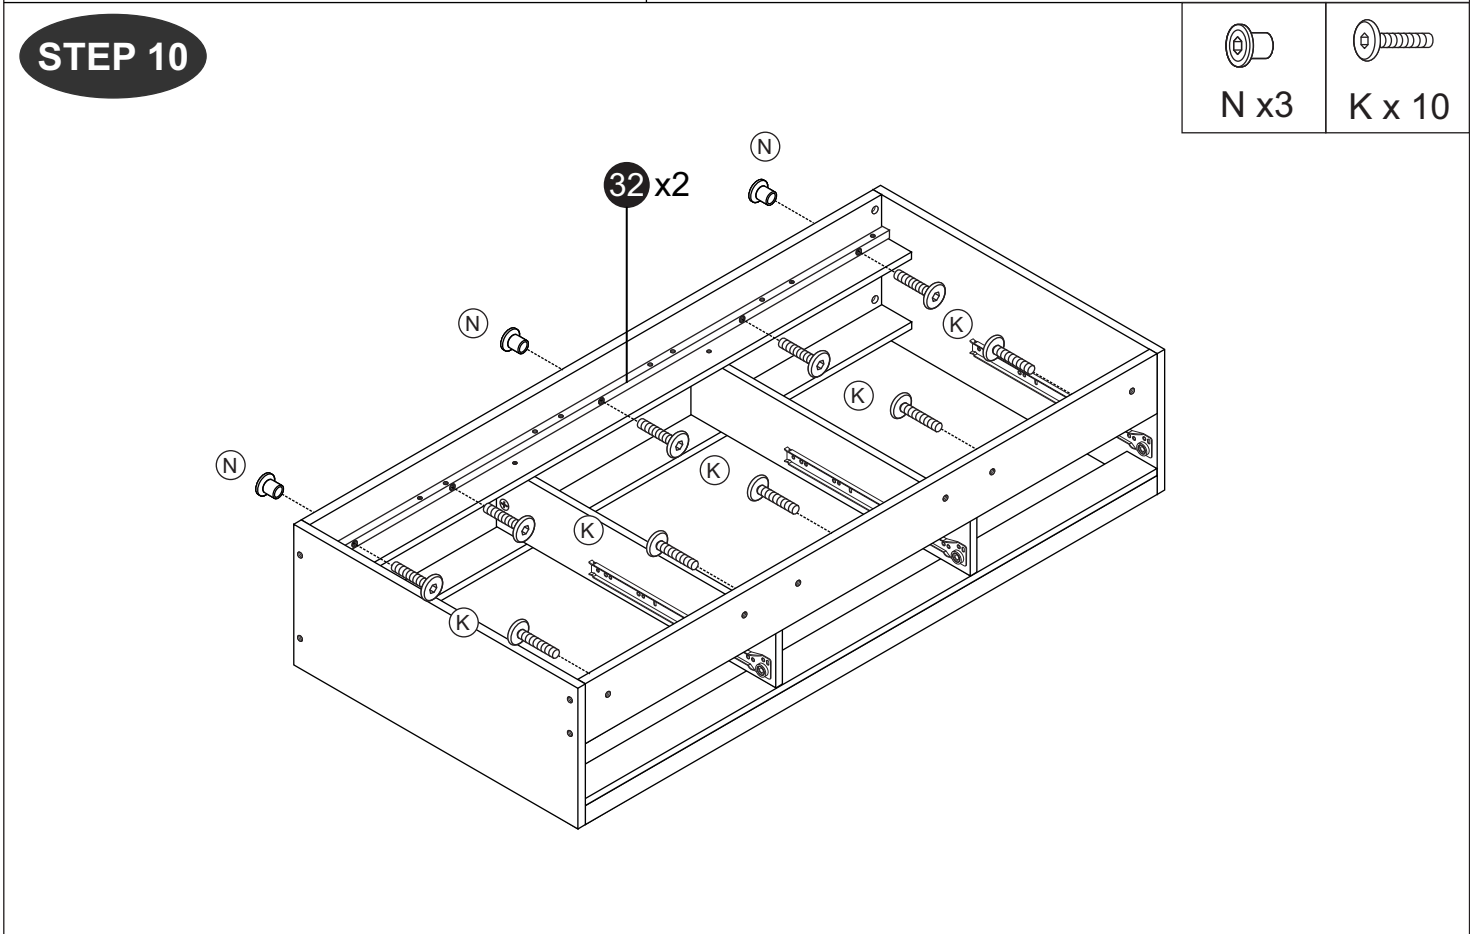


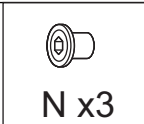
  
N x 3

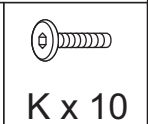  
K x 10



# GUIDE TO ASSEMBLY

Model: CK 6249

STEP 11

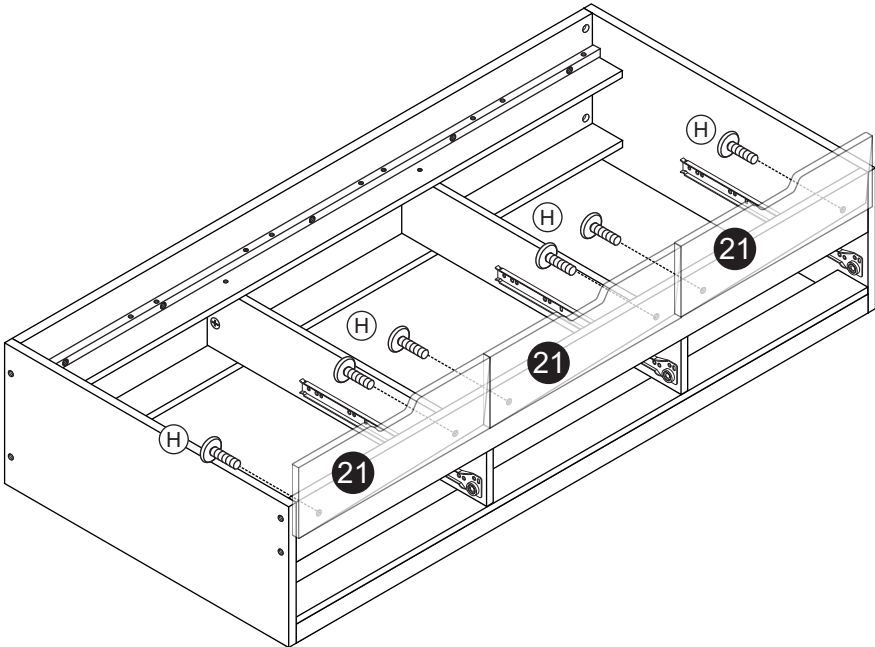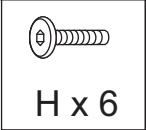

STEP 12

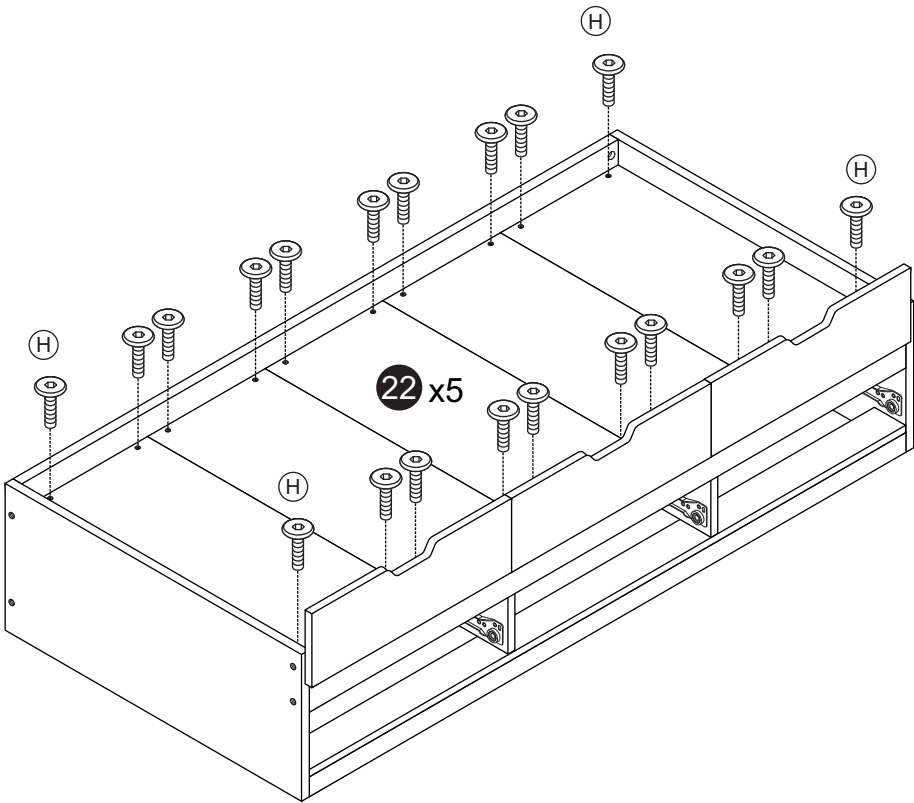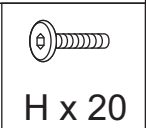



# GUIDE TO ASSEMBLY

Model: CK 6249

STEP 13

26x3

24x3

23x3

28x6

25x3

B x 12

A x 12

C x 24

STEP 14

23

24

26

F x 6

Do This Step 3 Times

STEP 15

27

Do This Step 3 Times

STEP 16

25

Do This Step 3 Times

STEP 17

28

28


Do This Step 3 Times

# GUIDE TO ASSEMBLY

10  
15


Model: CK 6249

## STEP 18

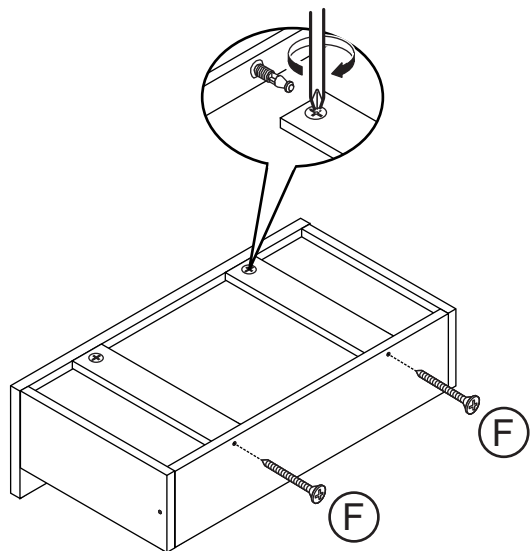


Do This Step 3 Times

## STEP 19

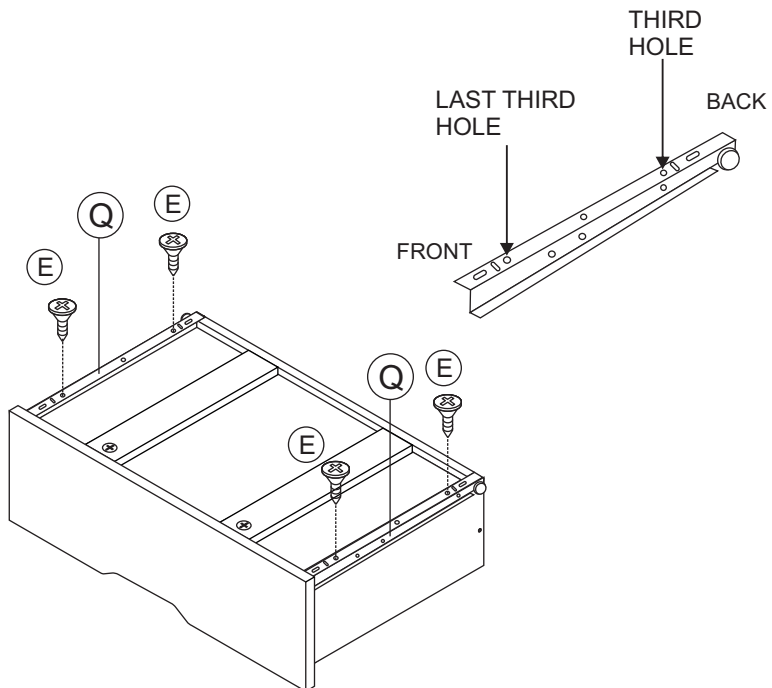

Do This Step 3 Times

## STEP 20

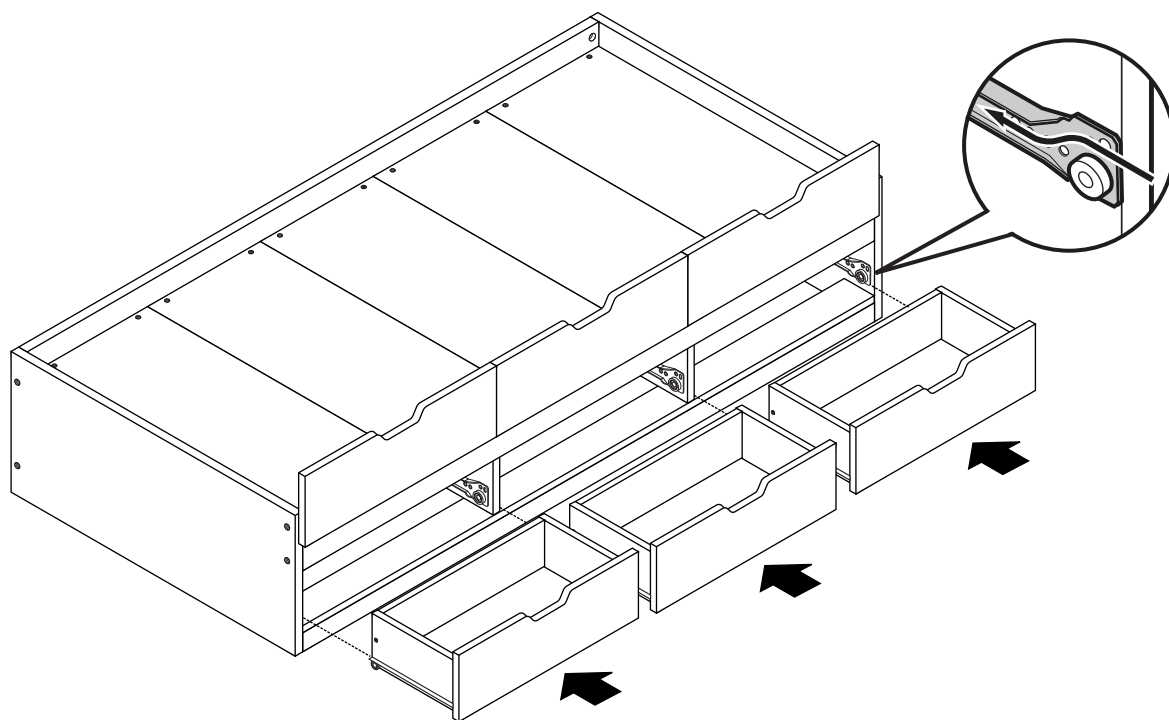

# GUIDE TO ASSEMBLY

Model: CK 6249

STEP 21


**WHEN FITTING CAMS**

ENSURE STARTING POSITION IS CORRECT  
BEFORE YOU INSERT CONNECTING BOLT  
TURN CLOCKWISE UNTIL SECURE

CORRECT






WRONG

B x 12	A x 12
D x 52	C x 12

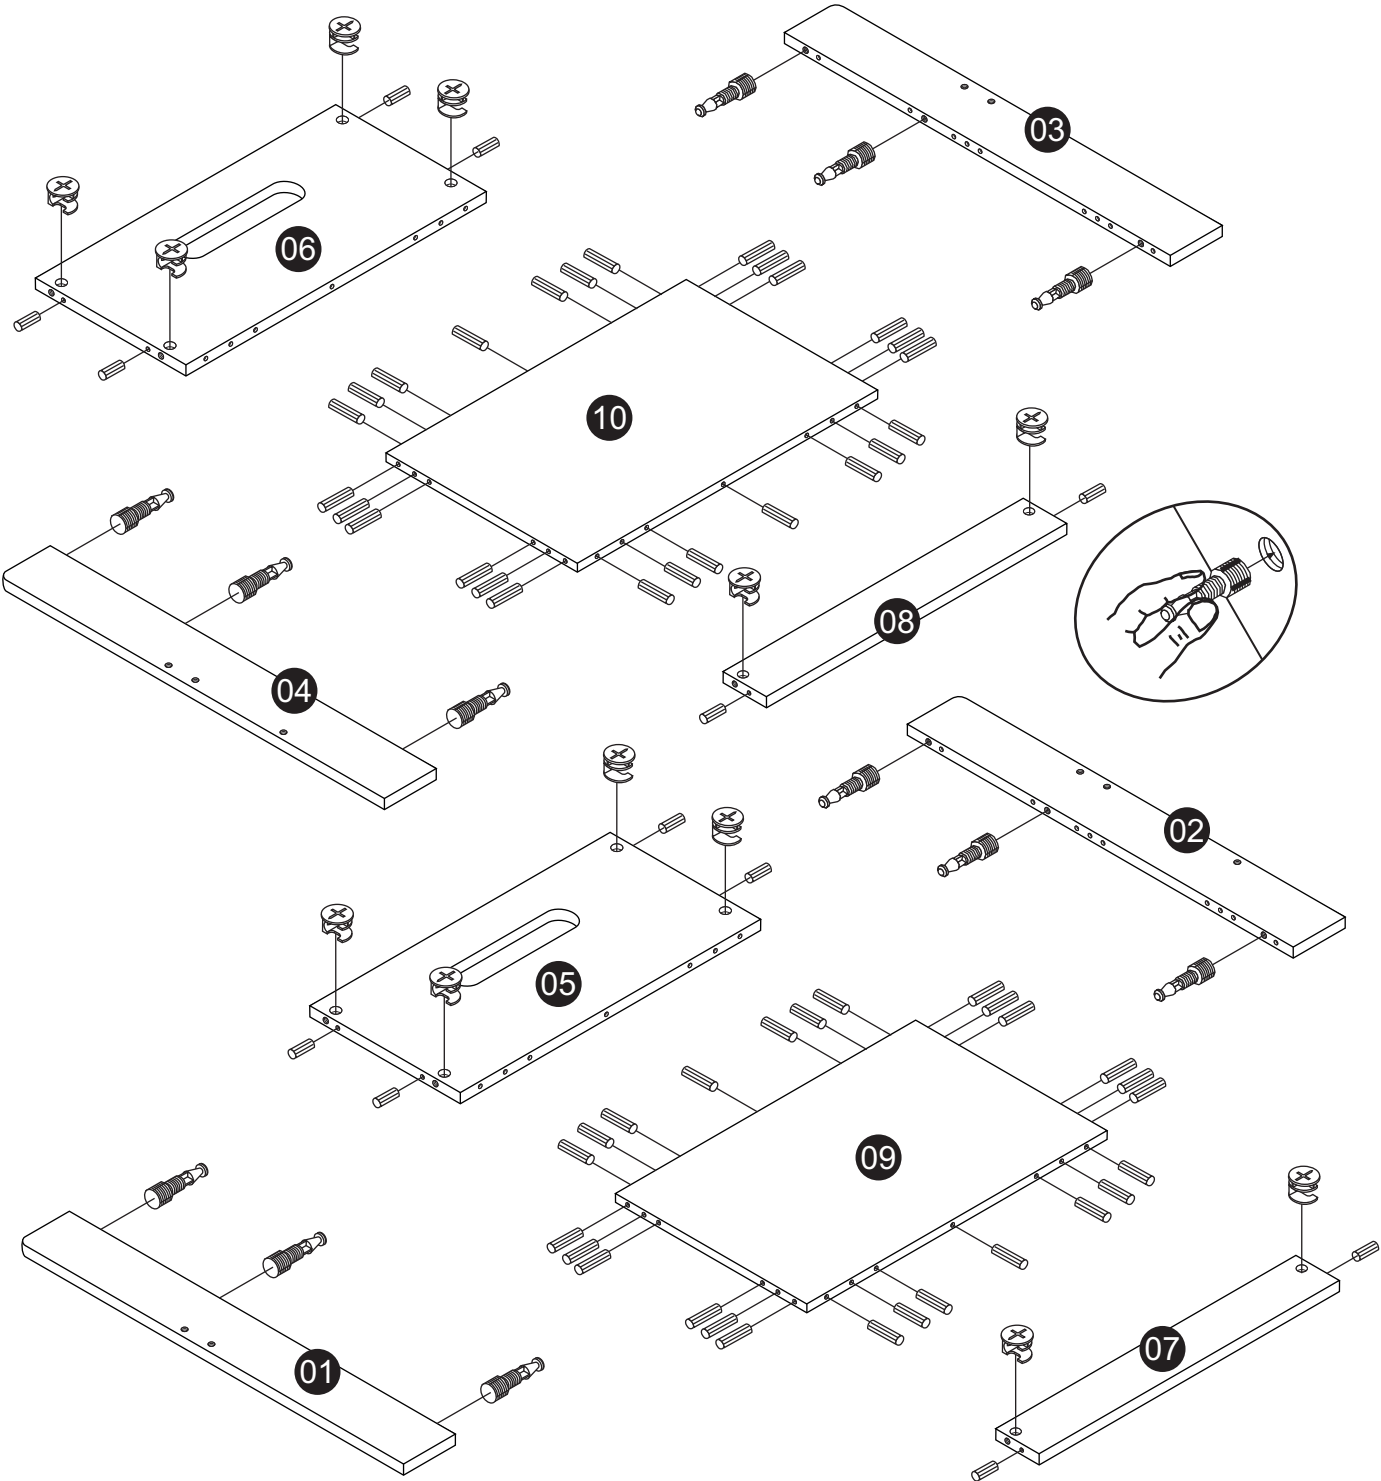

# GUIDE TO ASSEMBLY

Model: CK 6249

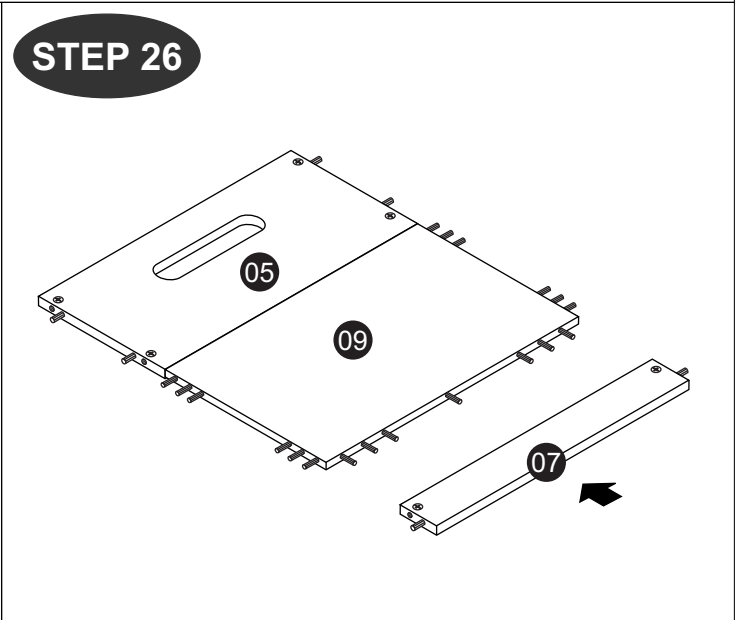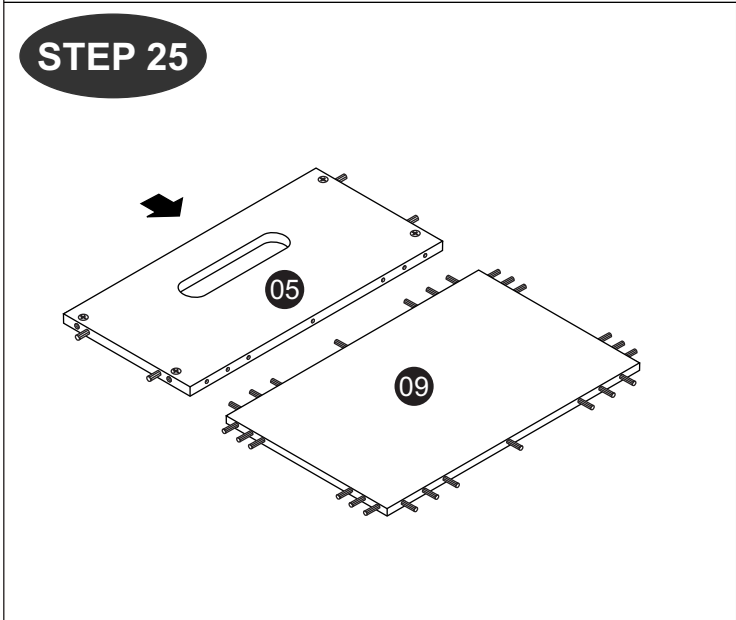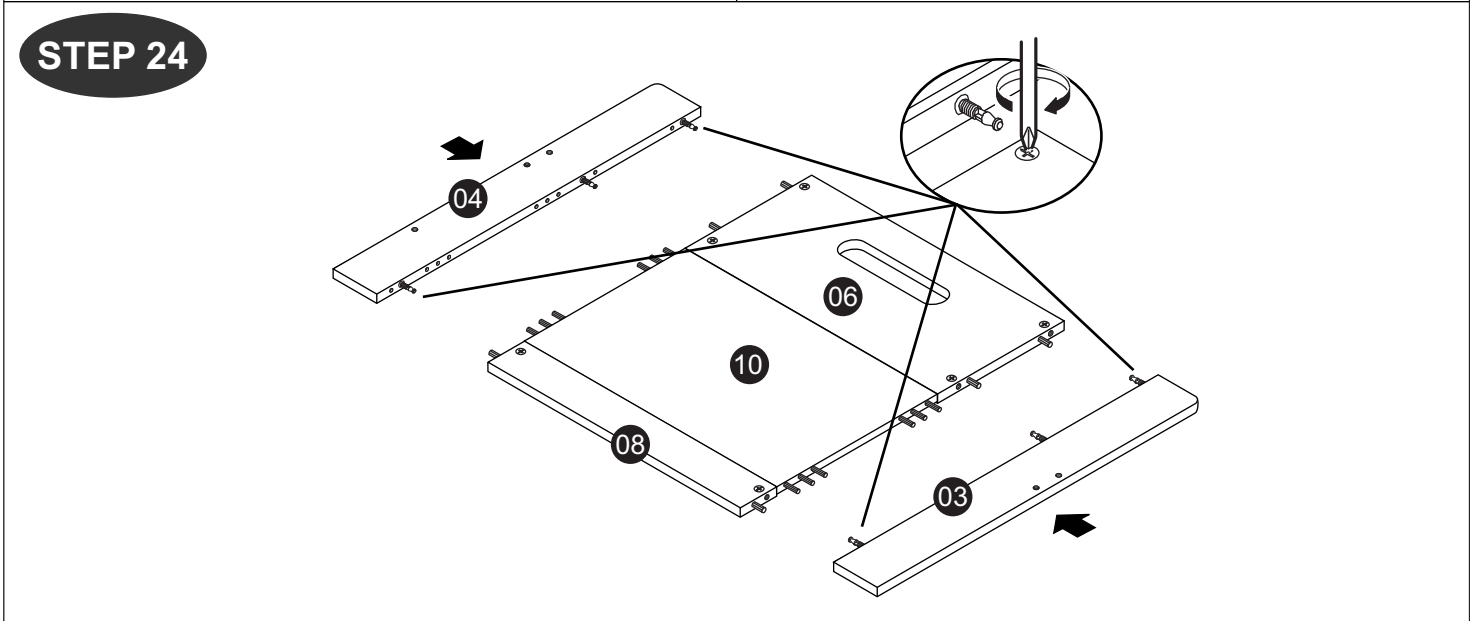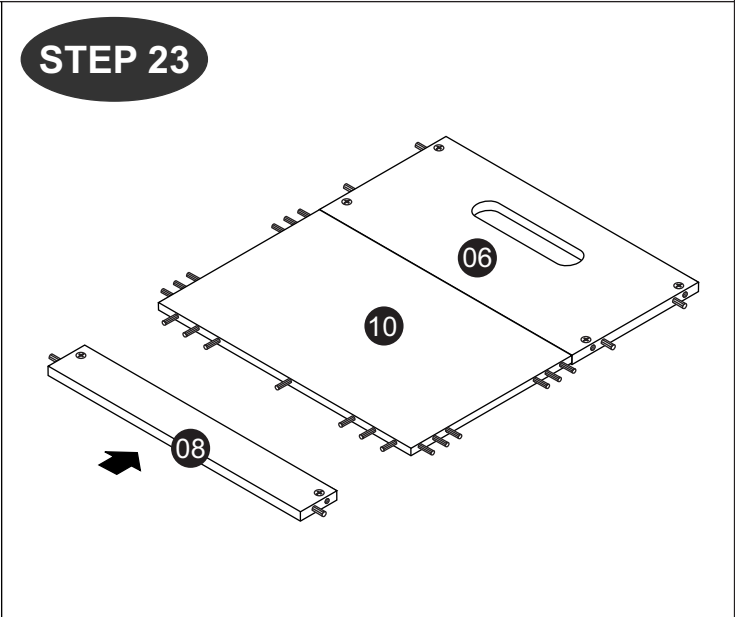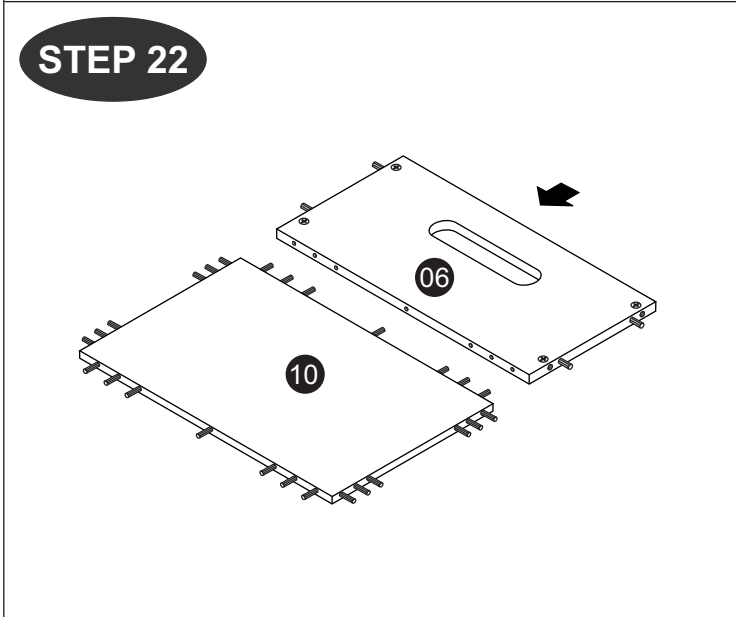


# GUIDE TO ASSEMBLY


13  
15

Model: CK 6249

## STEP 27


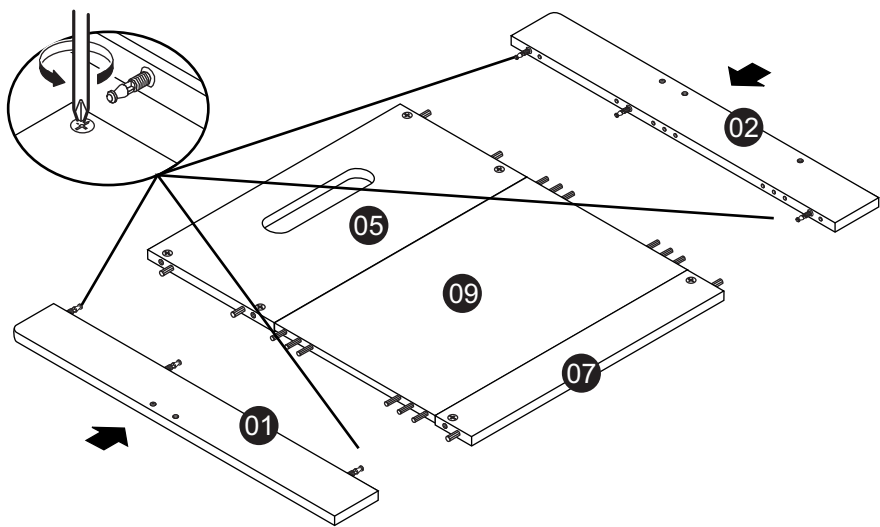


## STEP 28

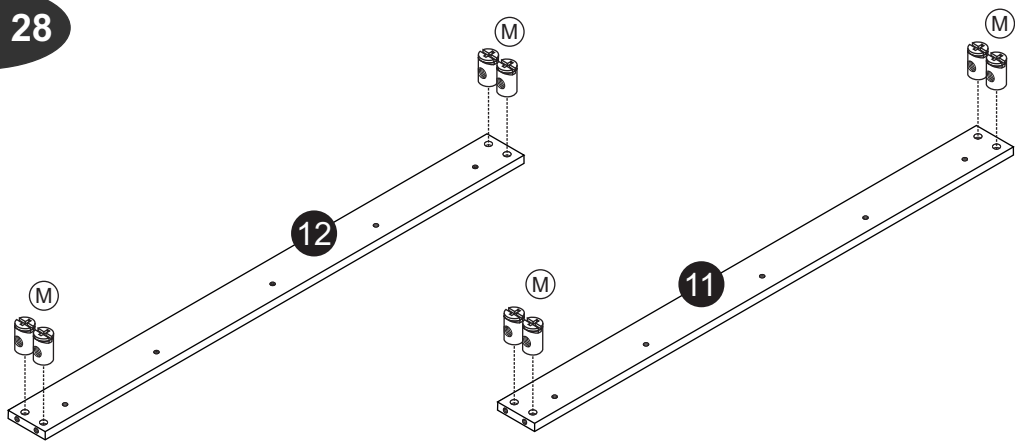

M x 8

## STEP 29

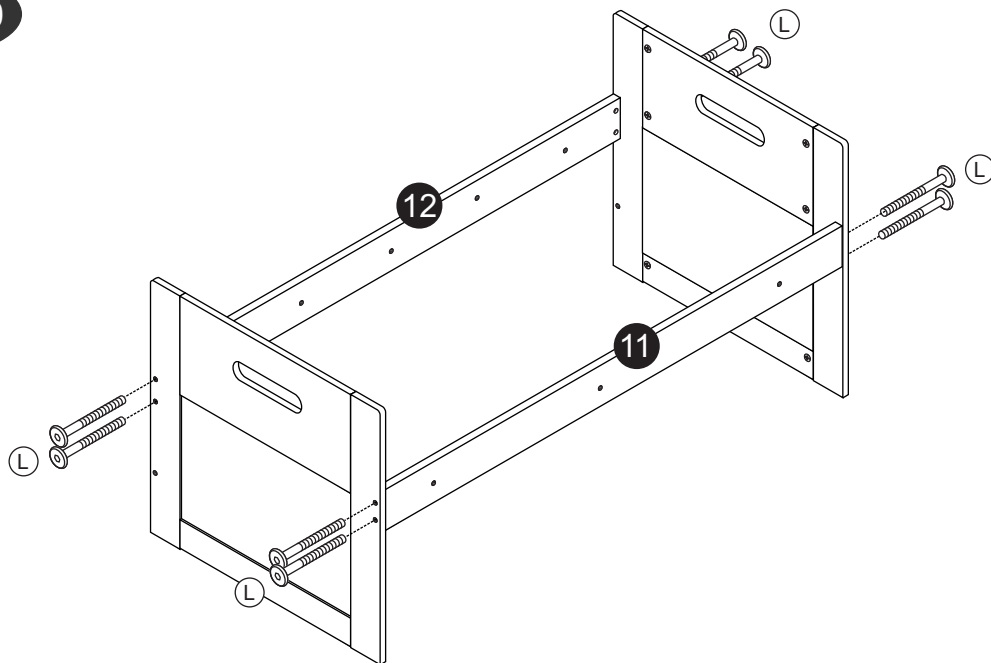




L x 8

# GUIDE TO ASSEMBLY


Model: CK 6249


STEP 30

	
N x 6	K x 10

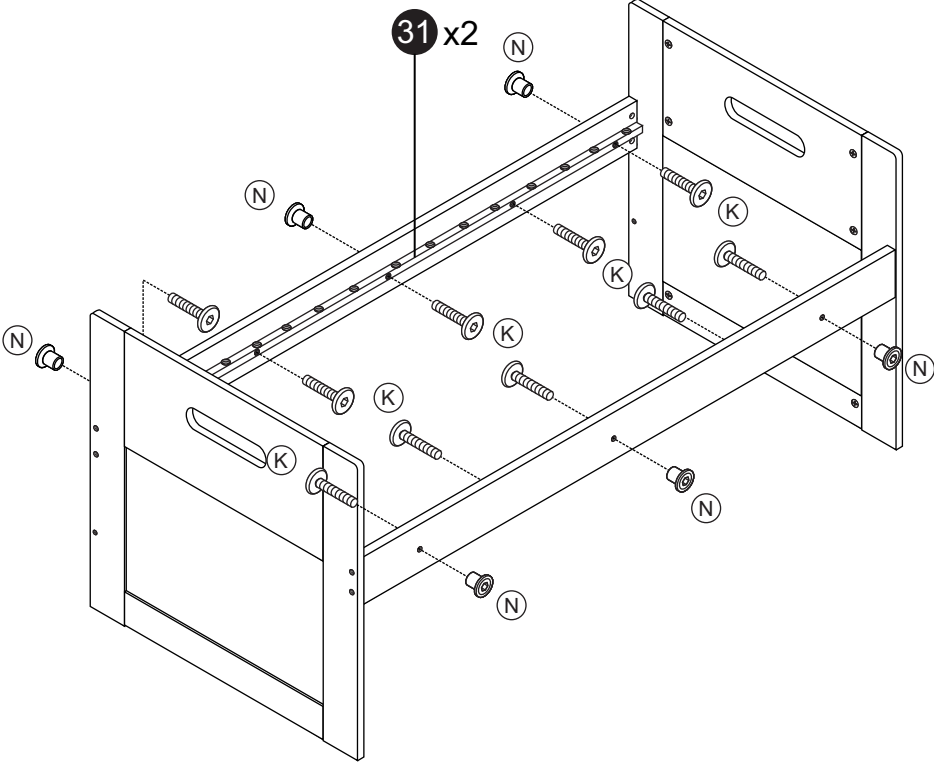

STEP 31



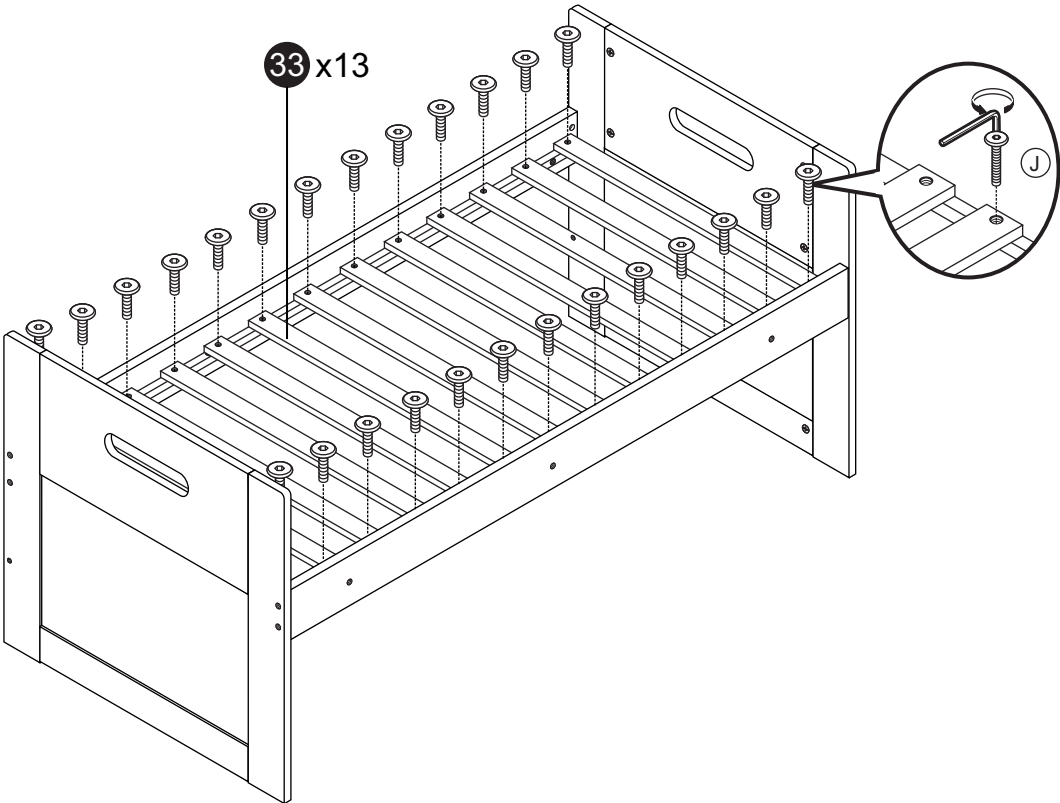
J x 26




# GUIDE TO ASSEMBLY

Model: CK 6249

STEP 32

	
N x 2	G x 4

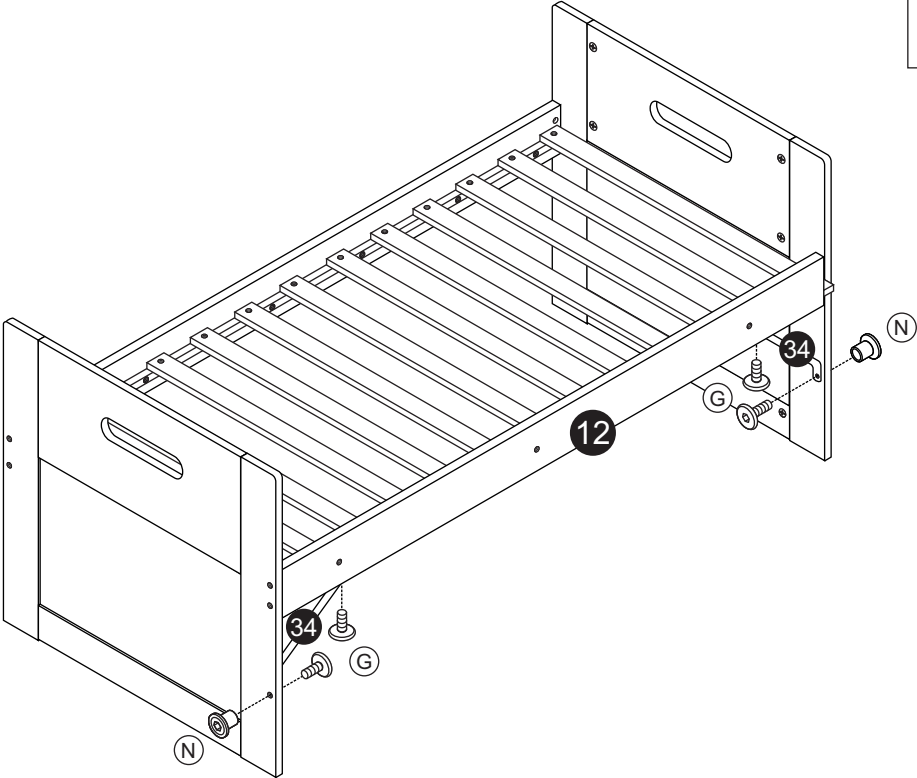

STEP 33

