

ASSEMBLY INSTRUCTION

VAREE QUEEN BED

IMPORTANT


Please inspect all items carefully before assembling.

If for any reason you need to return this item,


you must return in its original packaging.

Assembled item(s) cannot be returned.


Minimum no. of people
recommended to
assemble this product:

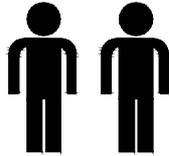



Approx. assembly time:
30 mins

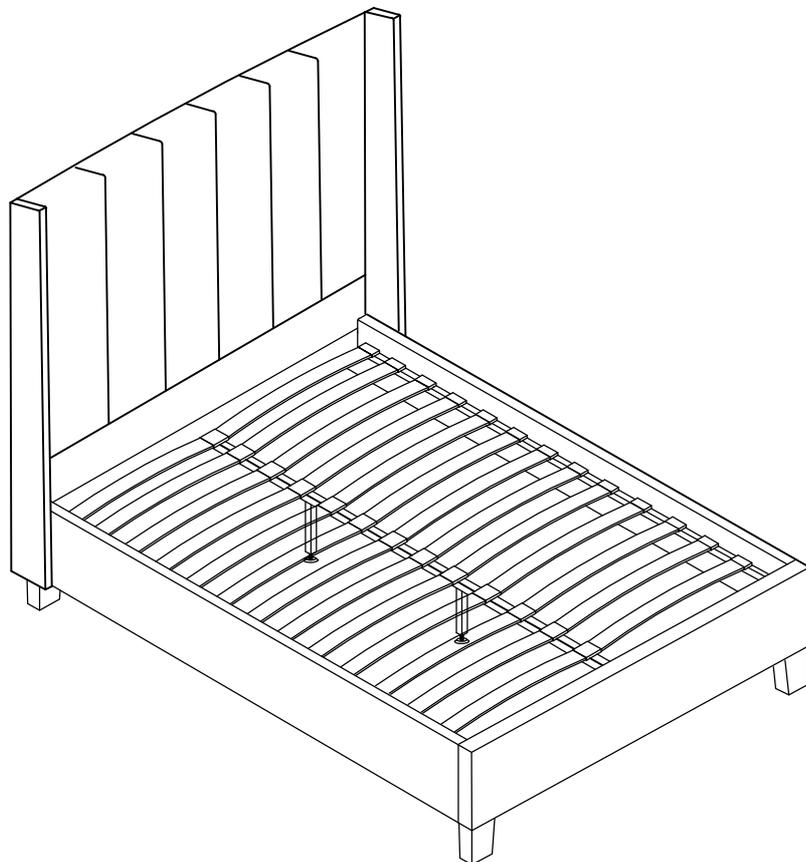

PART LIST

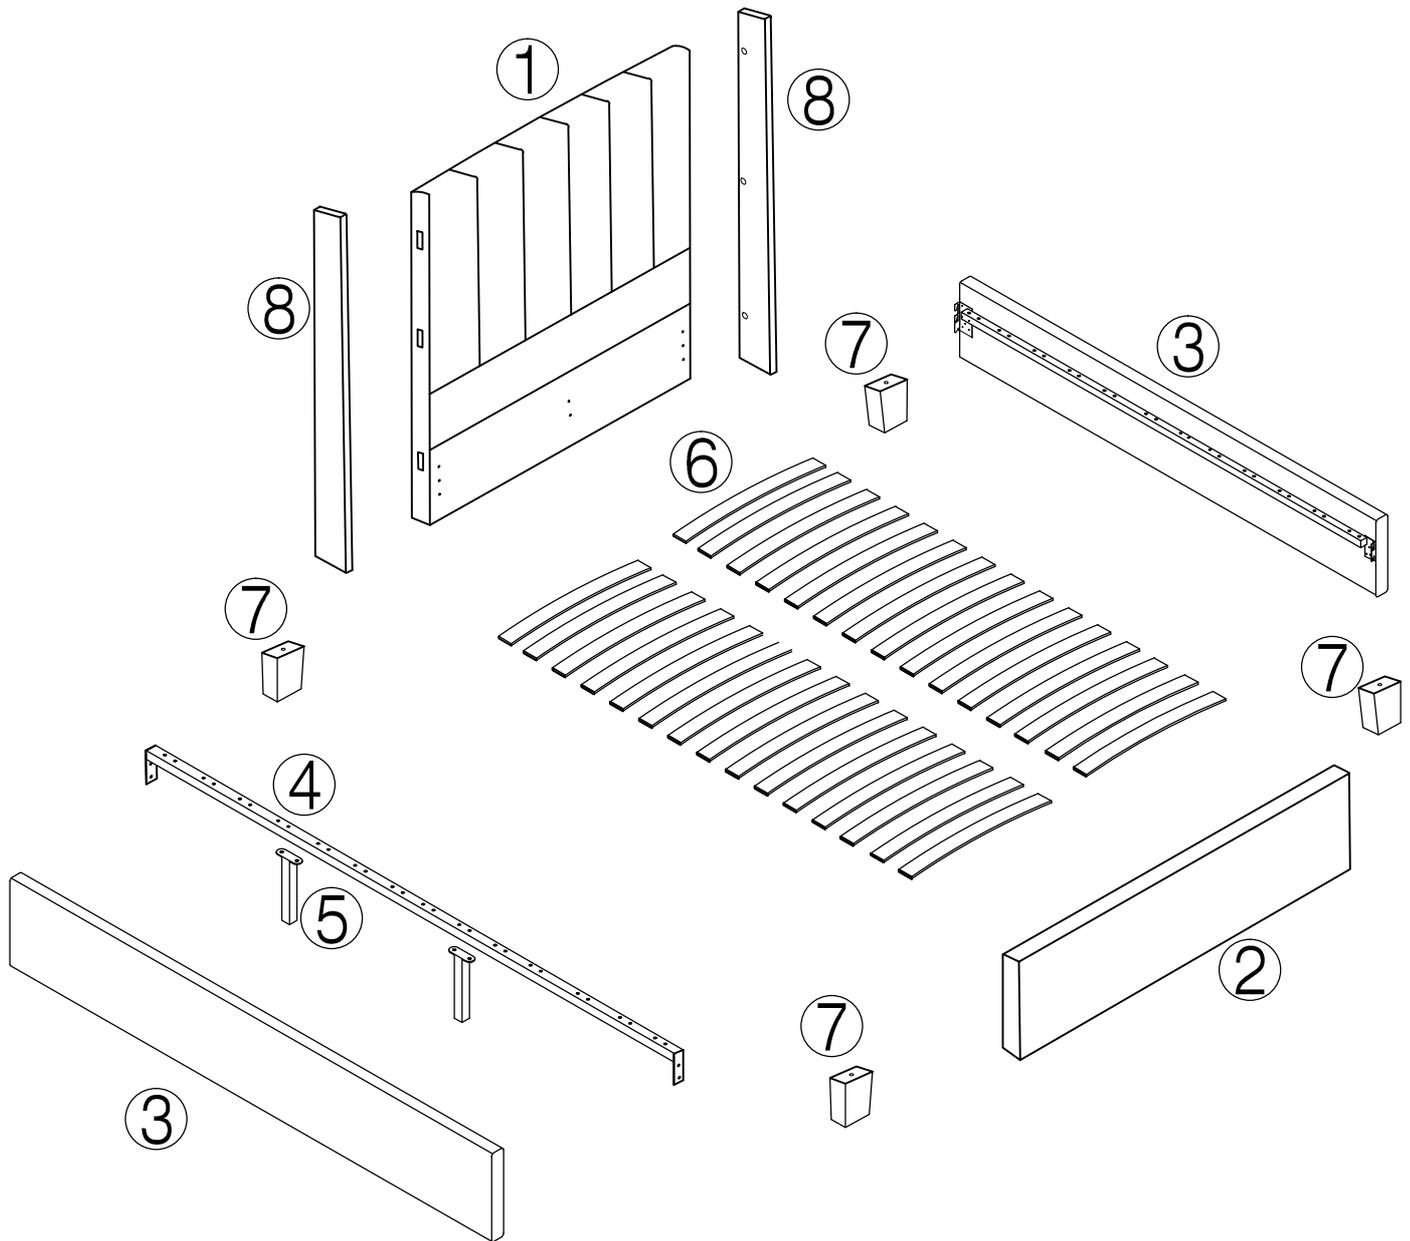


HARDWARE LIST

<p>A </p> <p>14x 30mm M8 bolt</p>	<p>B </p> <p>4x 16mm M8 bolt</p>	<p>C </p> <p>6x M8 Nut</p>	<p>D </p> <p>2x Adjustable Foot</p>	<p>E </p> <p>1x M5 allen key</p>
<p>F </p> <p>1x spanner</p>	<p>G </p> <p>4x 100mm M8 bolt</p>	<p>H </p> <p>6x 50mm M8 bolt</p>	<p>I </p> <p>6x Flat Washer M8x22</p>	<p>J </p> <p>15x Double cap</p>
<p>K </p> <p>30x single cap</p>				


Step 1

 4x 100mm M8 bolt	 1x M5 allen key			
--	---	--	--	--

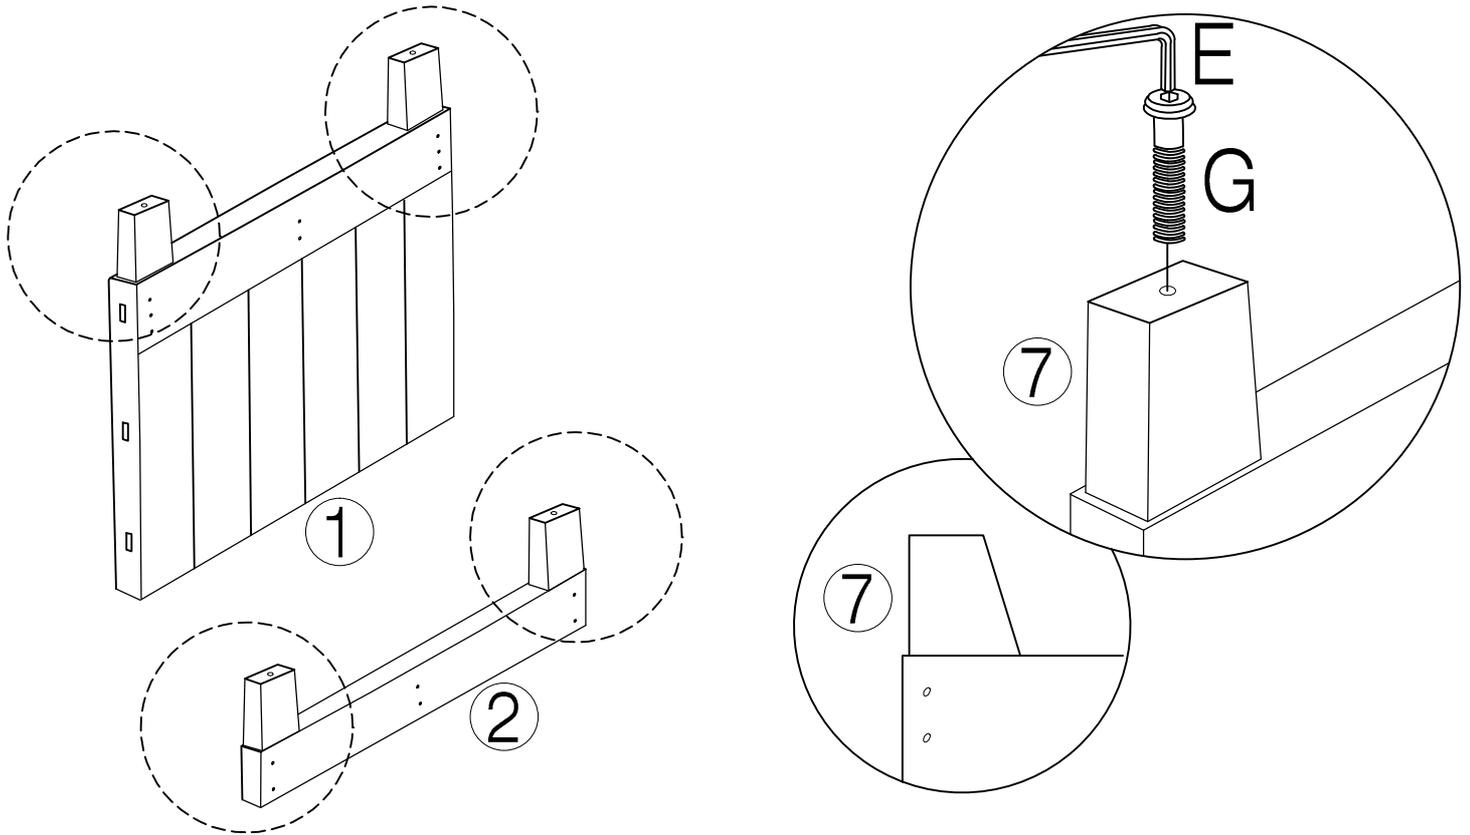


Step 2

 10x 30mm M8 bolt	 1x M5 allen key			
--	---	--	--	--

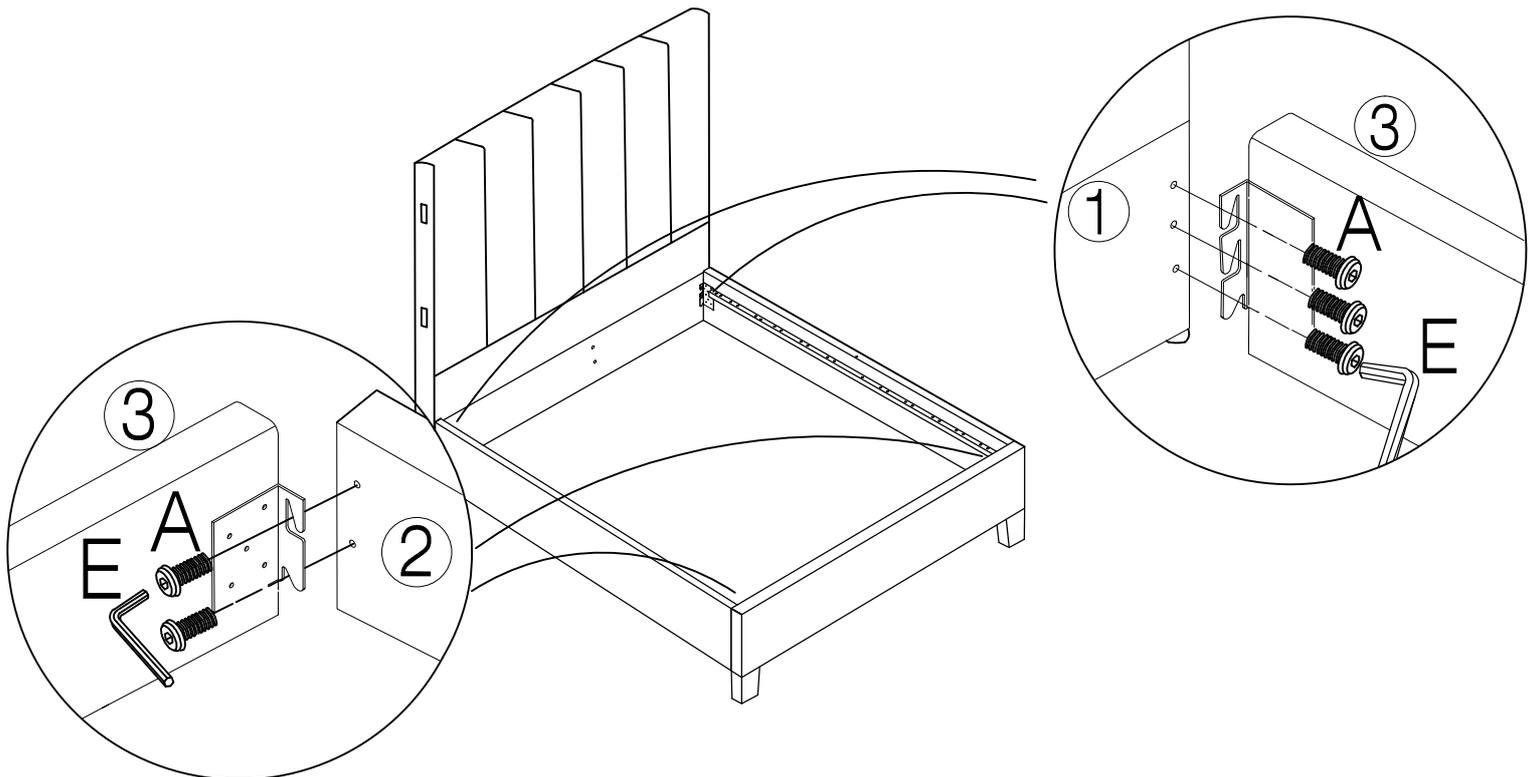


Step 3

(A) 4x 30mm M8 bolt	(B) 4x 16mm M8 bolt	(D) 2x Adjustable Foot	(E) 1x M5 allen key	
----------------------------------	----------------------------------	-------------------------------------	----------------------------------	--

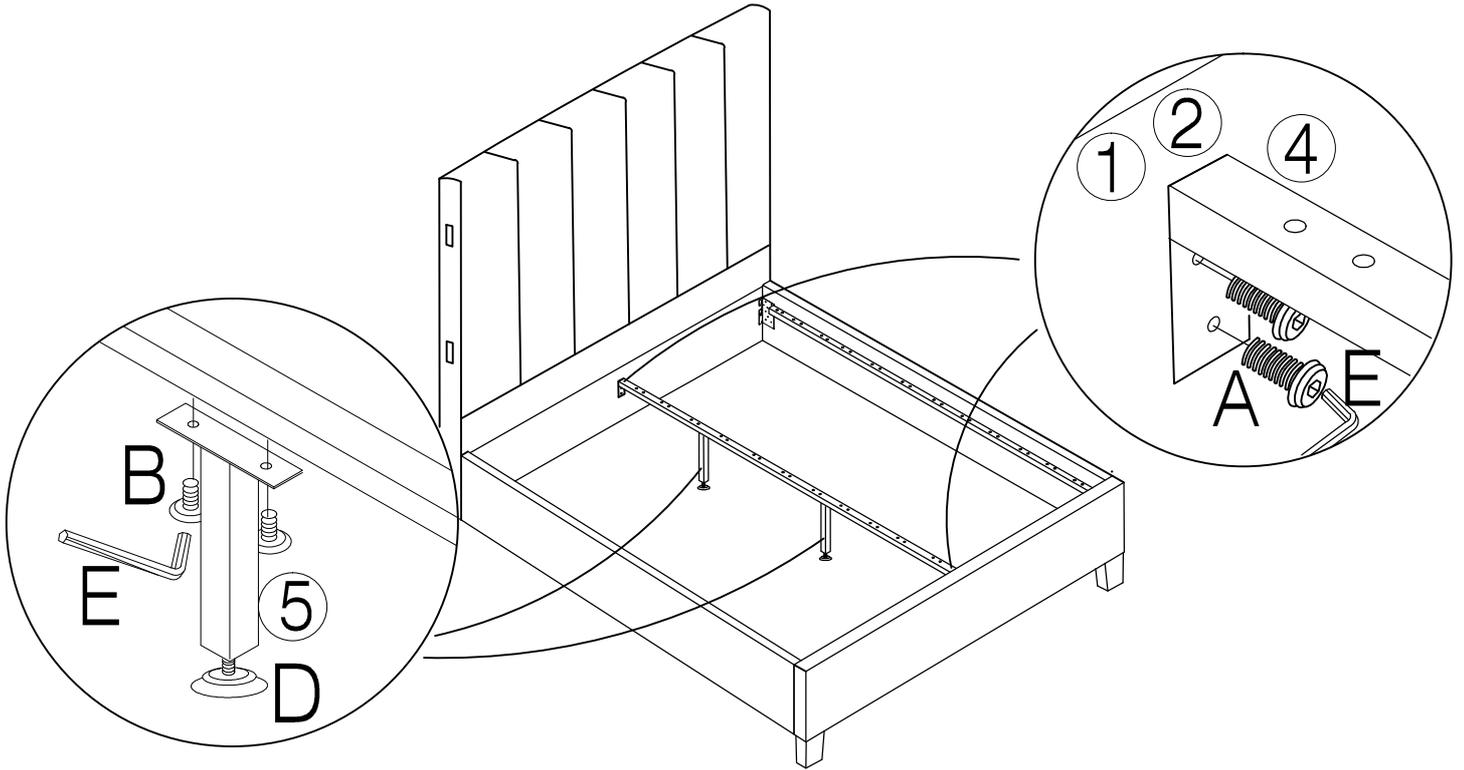


Step 4

(J) 15x Double cap	(K) 30x single cap			
---------------------------------	---------------------------------	--	--	--

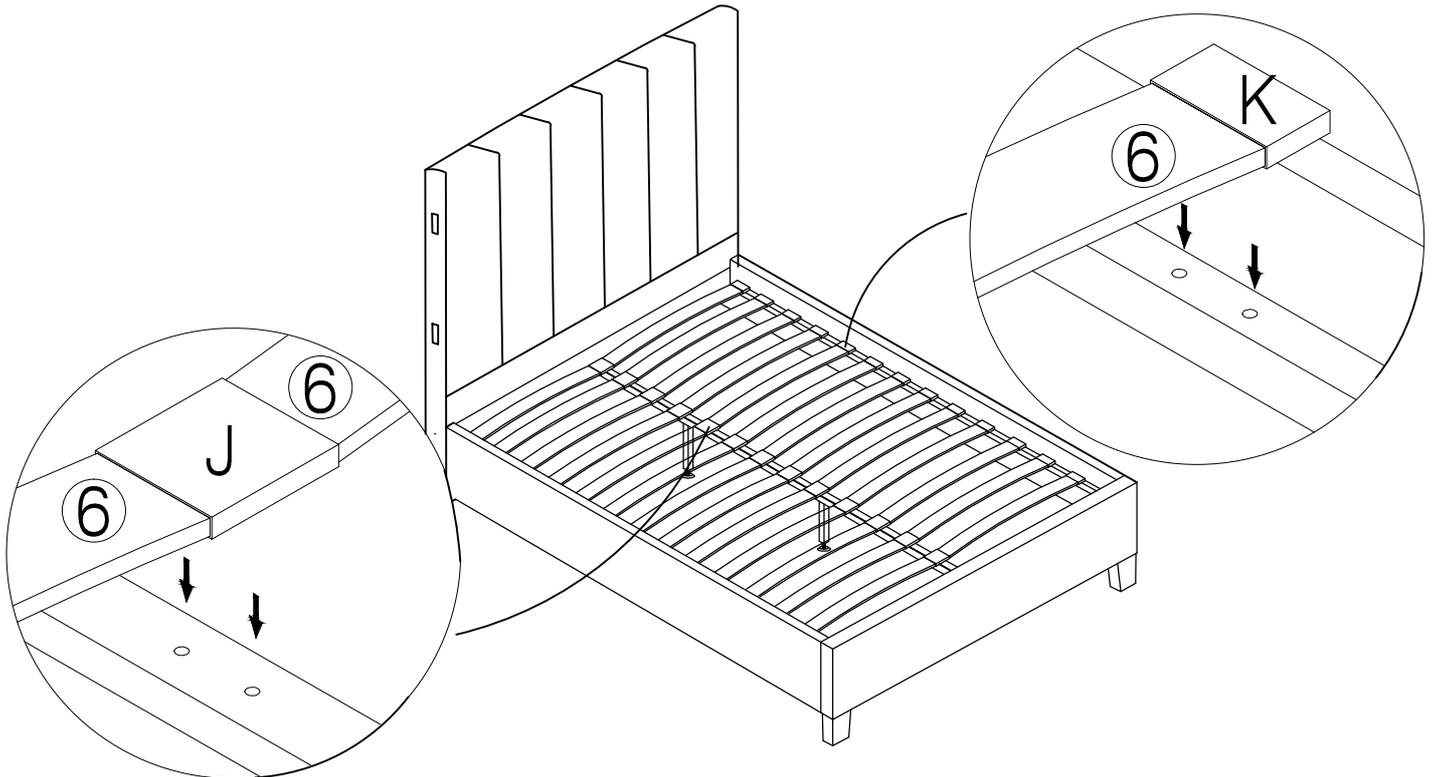


Step 5

 6x 50mm M8 bolt				
--	--	--	--	--

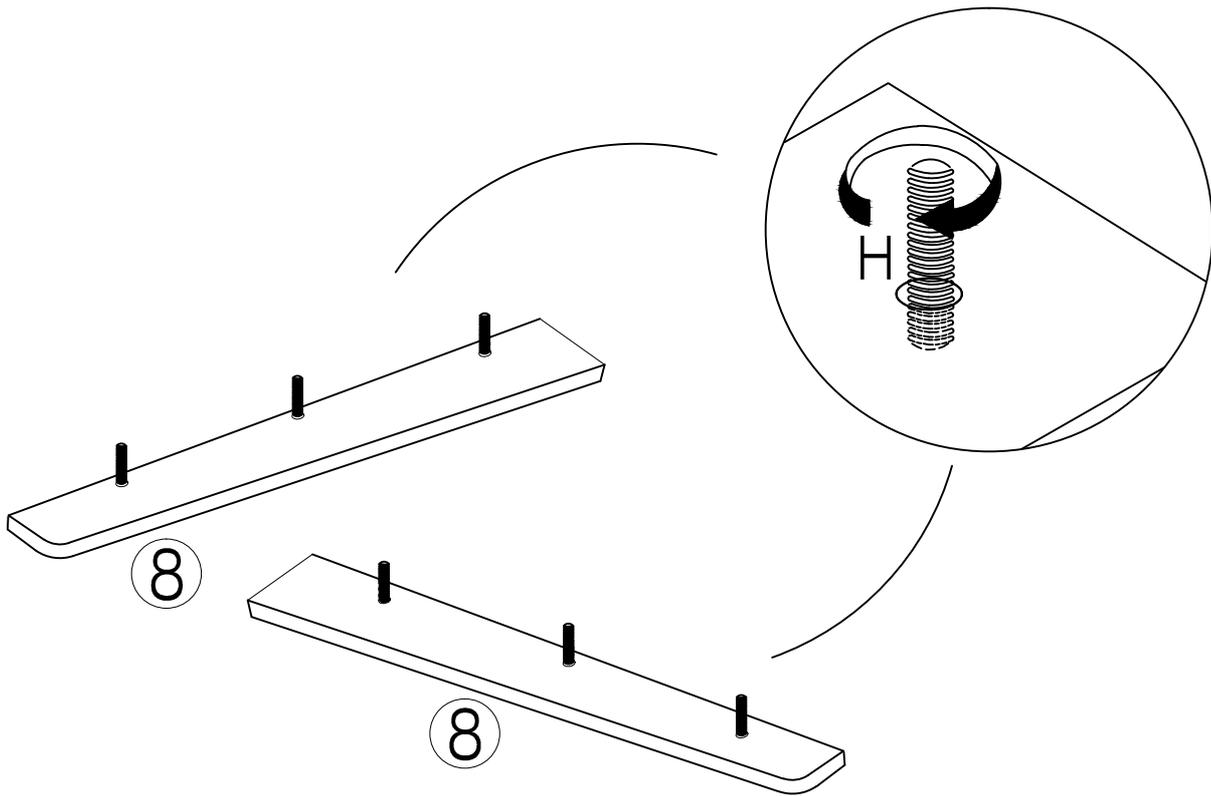

Step 6

 6x M8 Nut	 1x spanner	 6x Flat Washer M8x22		
---	--	--	--	--

