




LUNA BUNK BED





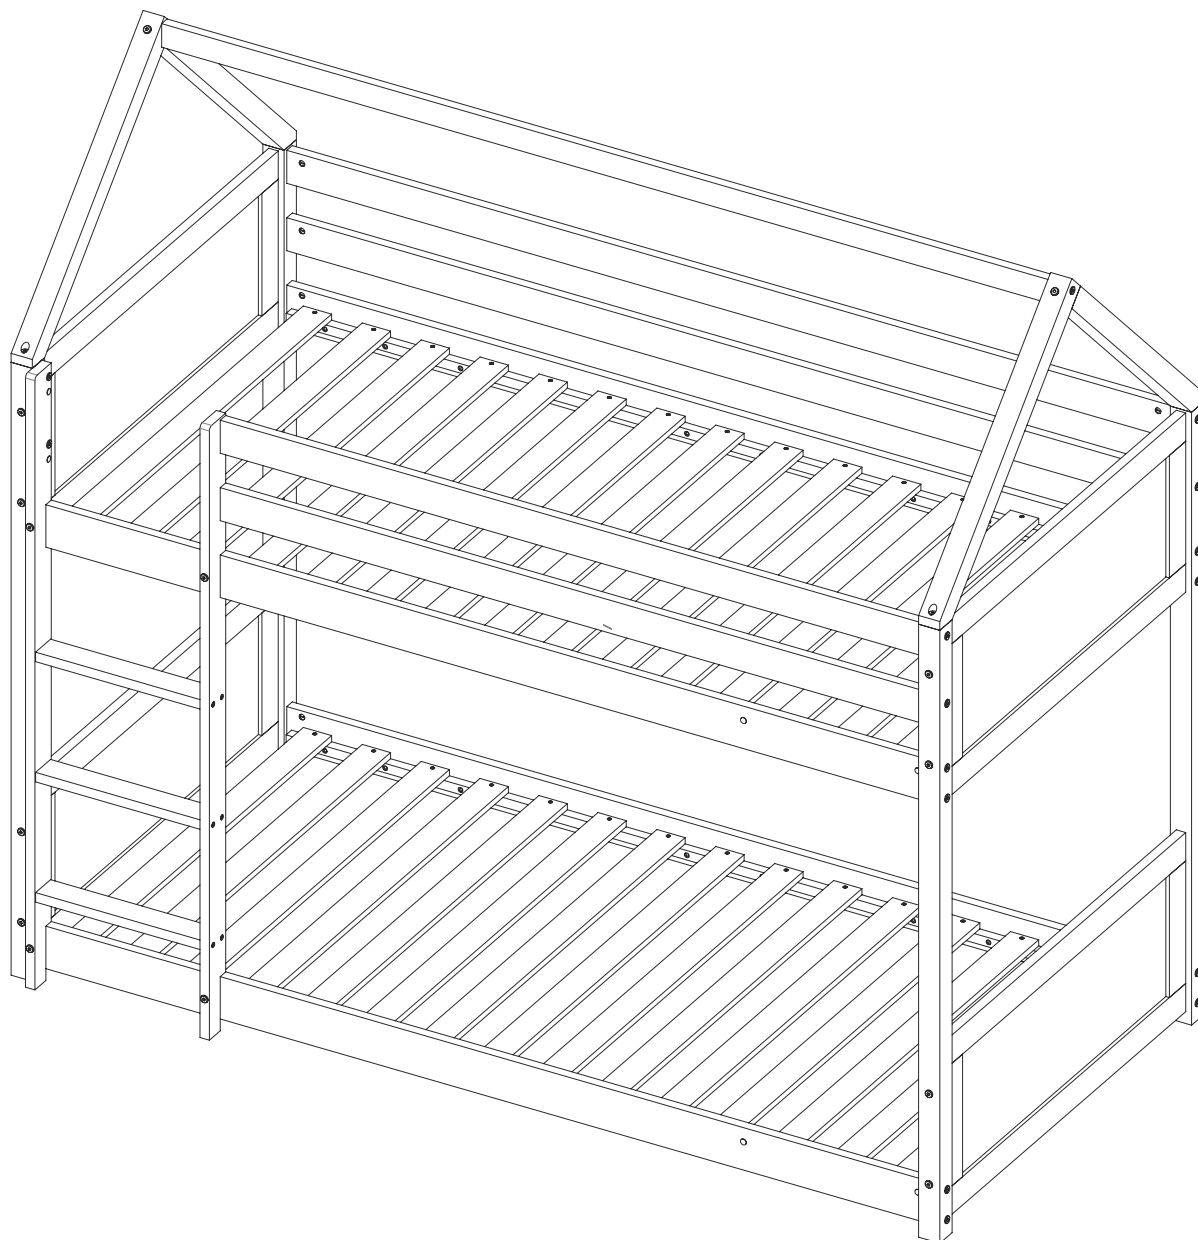



READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUING YOUR PIECE OF FURNITURE. GROUP AND CHECK THE HARDWARE FITTINGS. GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE

NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME. KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE. IN THE EVENT OF QUERY.

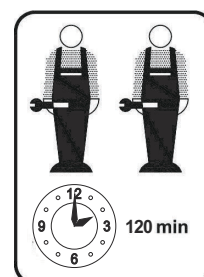


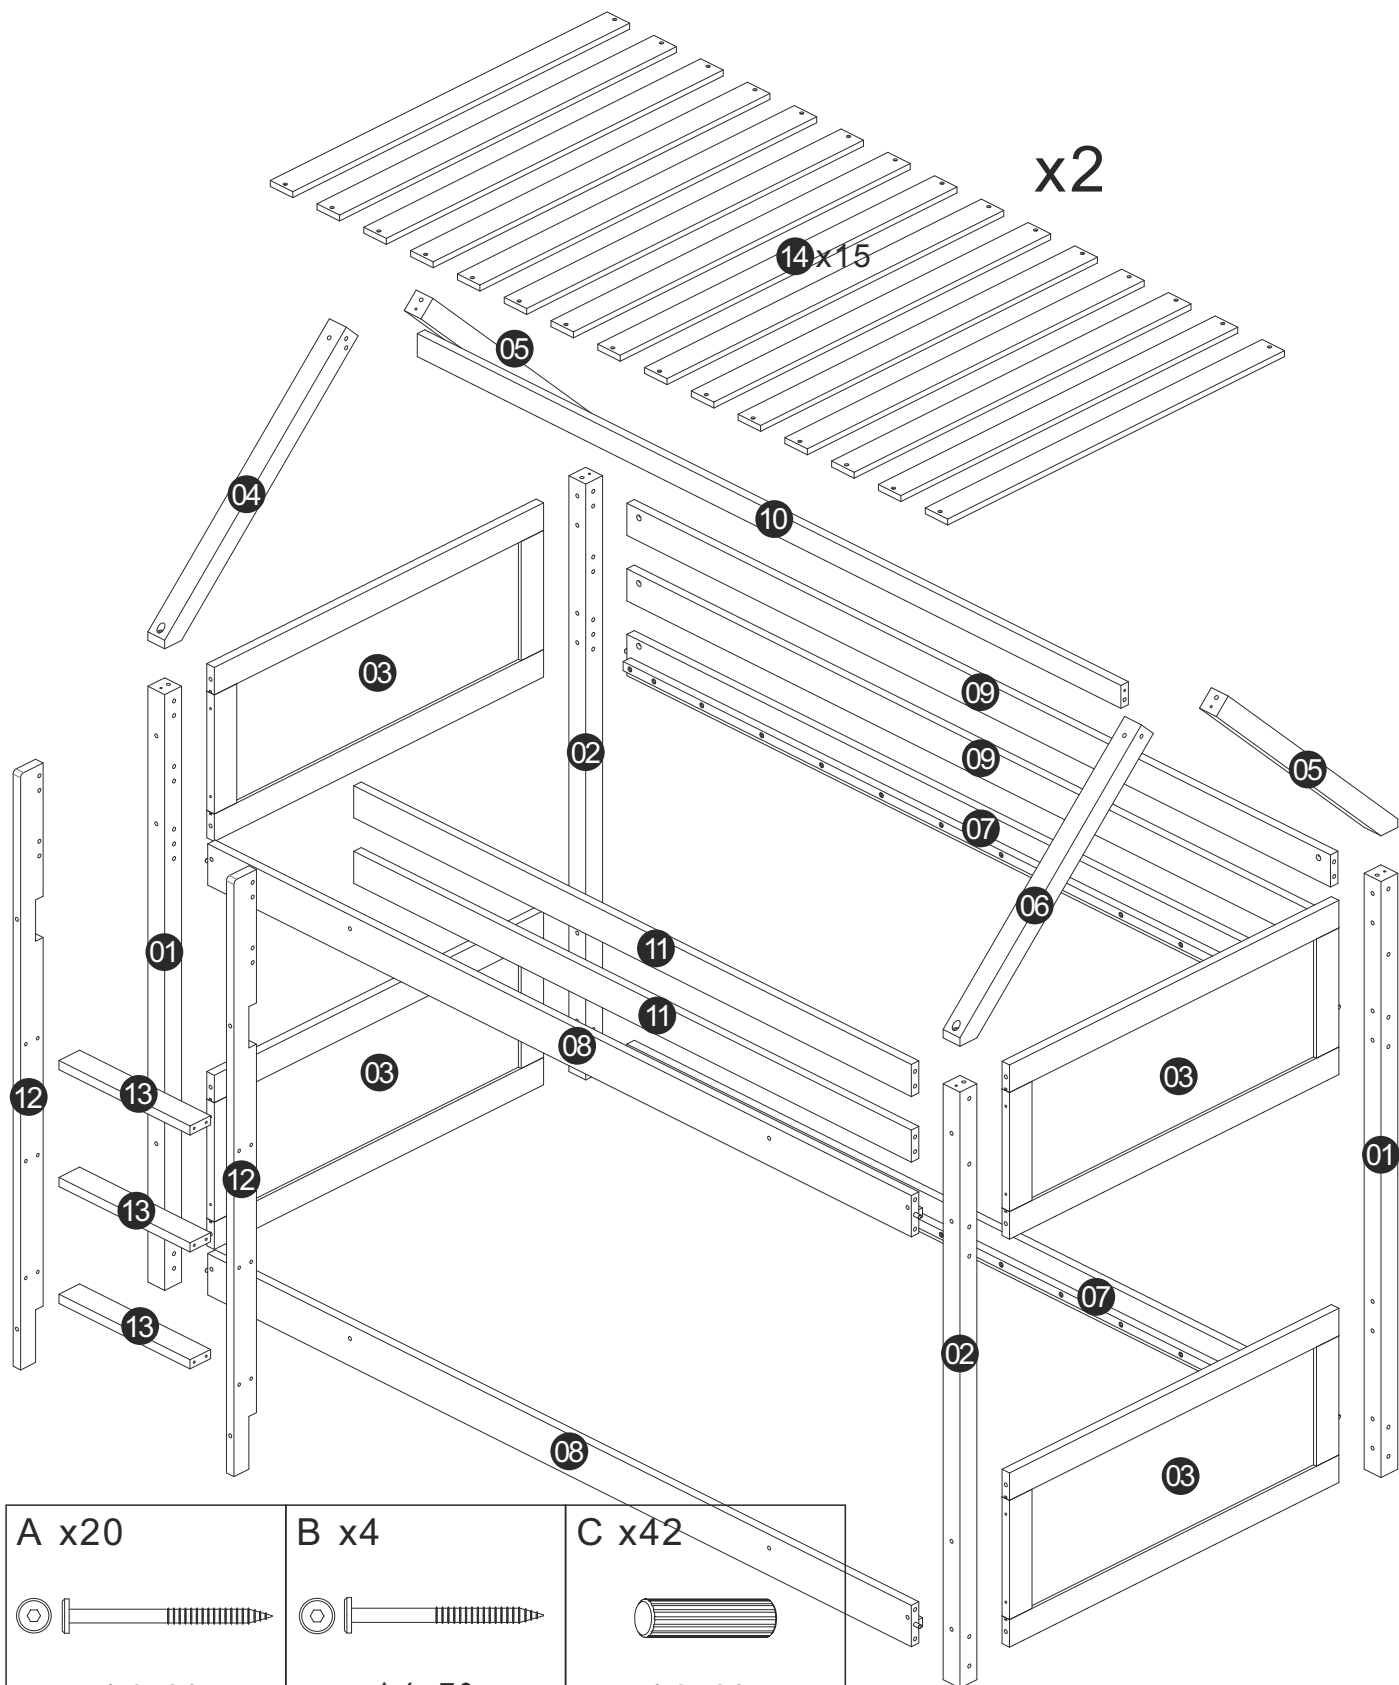


A x20  Φ6x90	B x4  Φ6x70	C x42  Φ8x30		
D x22  M6x90	E x24  	F x12  Φ7x60	G x4  M6x50	H x6 
J x2  M6x60	K x60  Φ3x30	L x8  	M x2  	N x2  M6x55

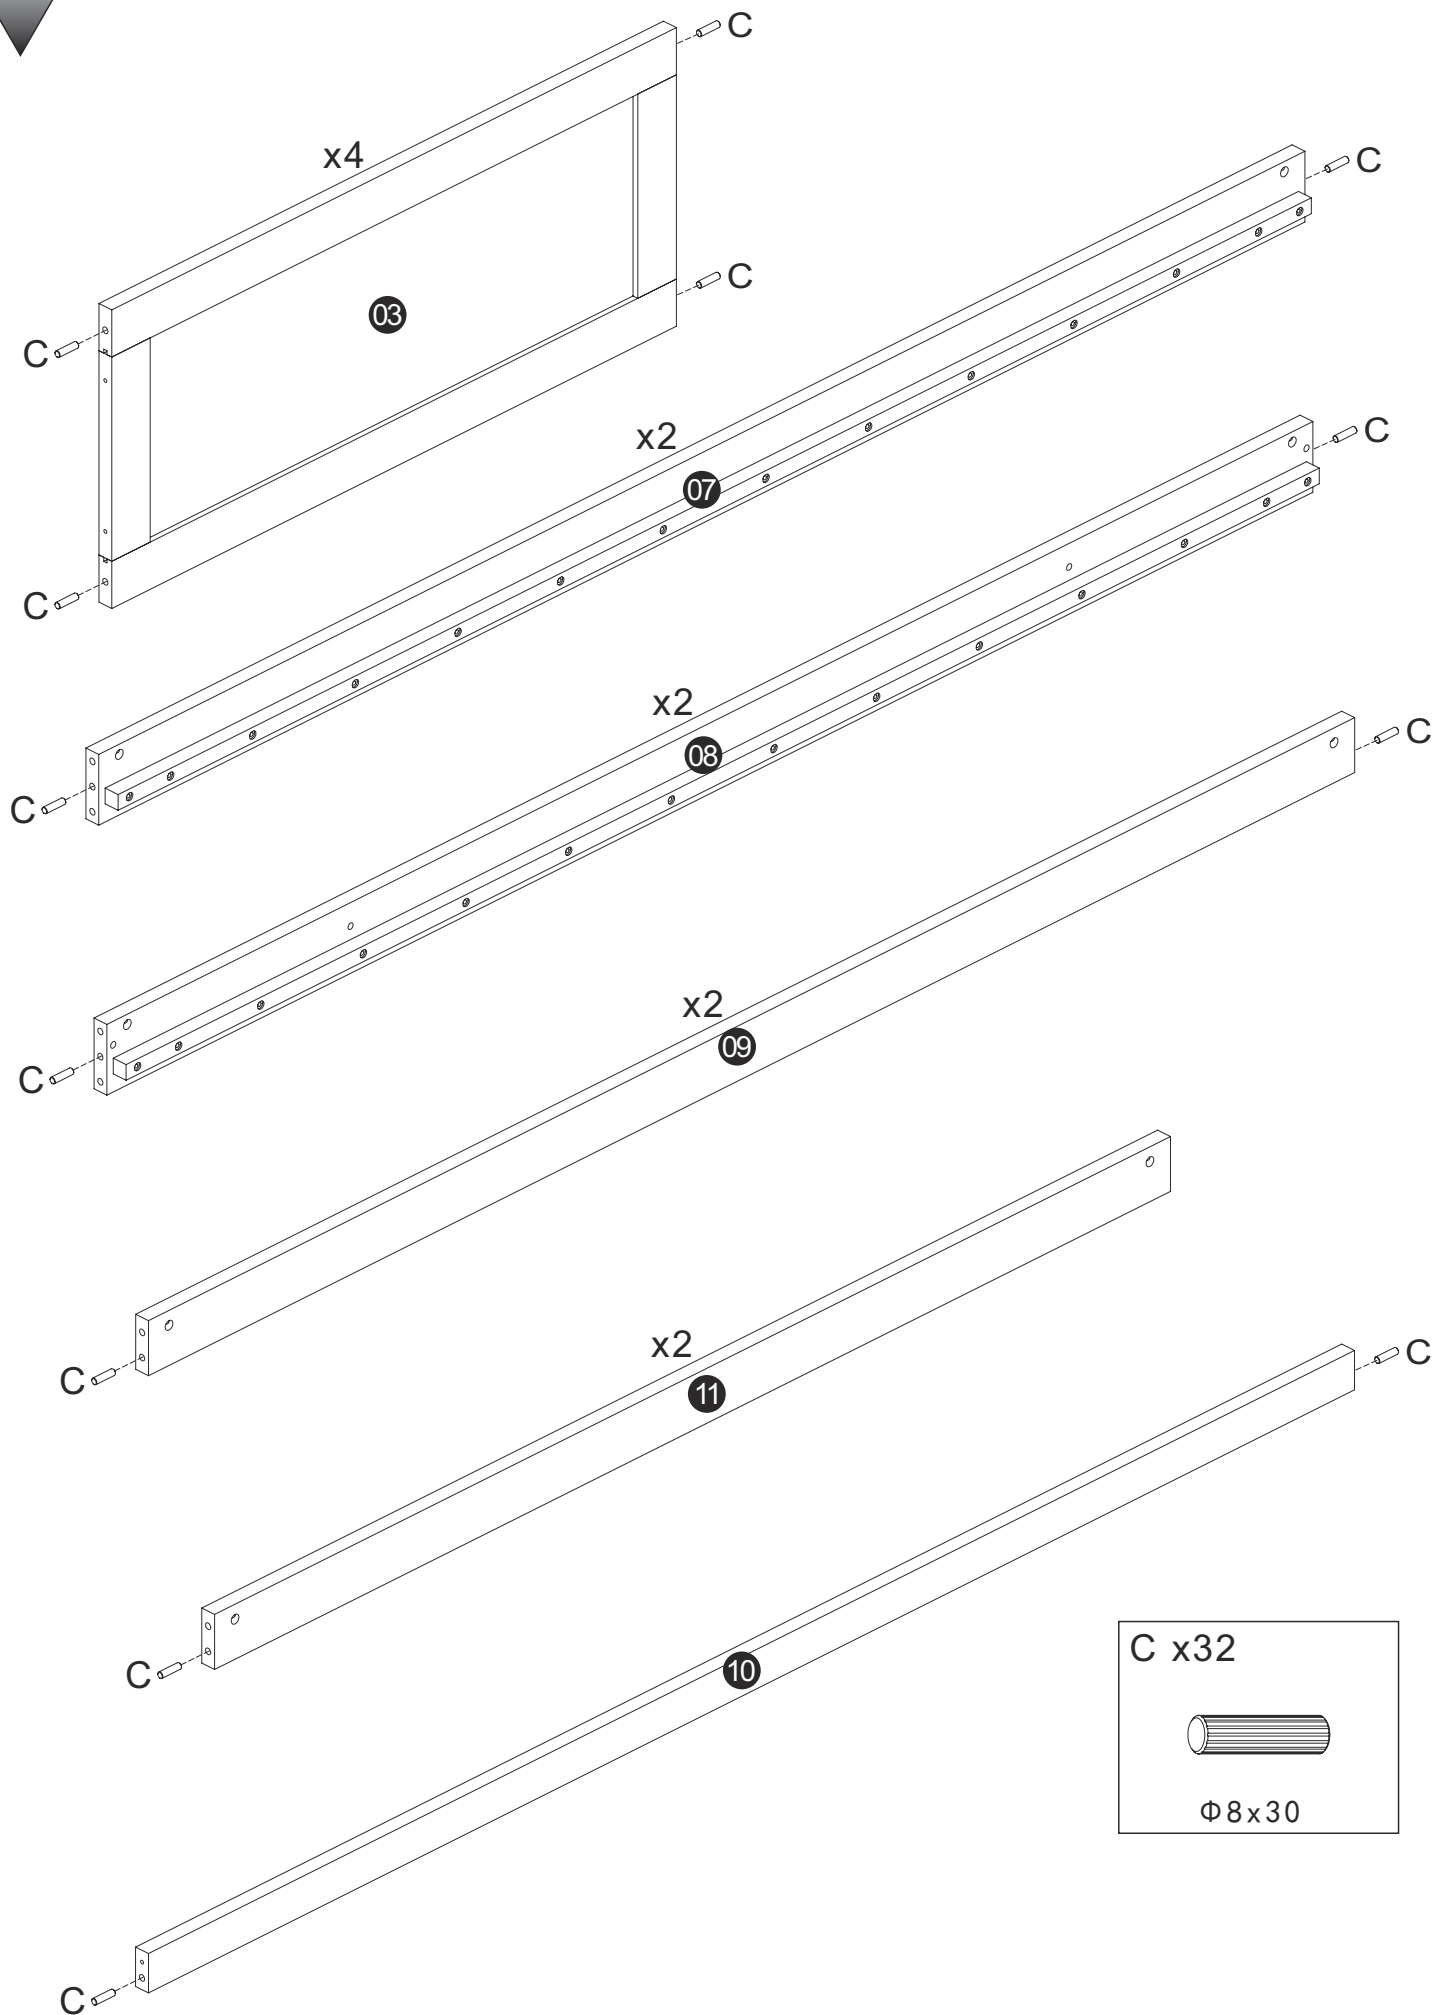

02

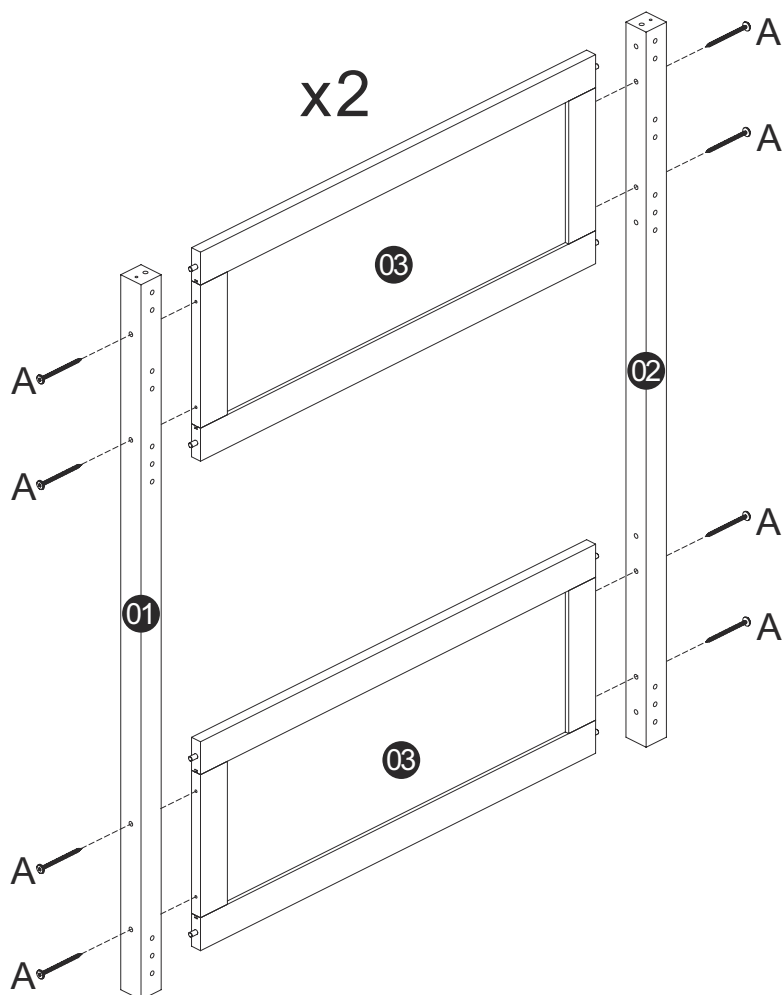


A x16



Φ 6x90

03

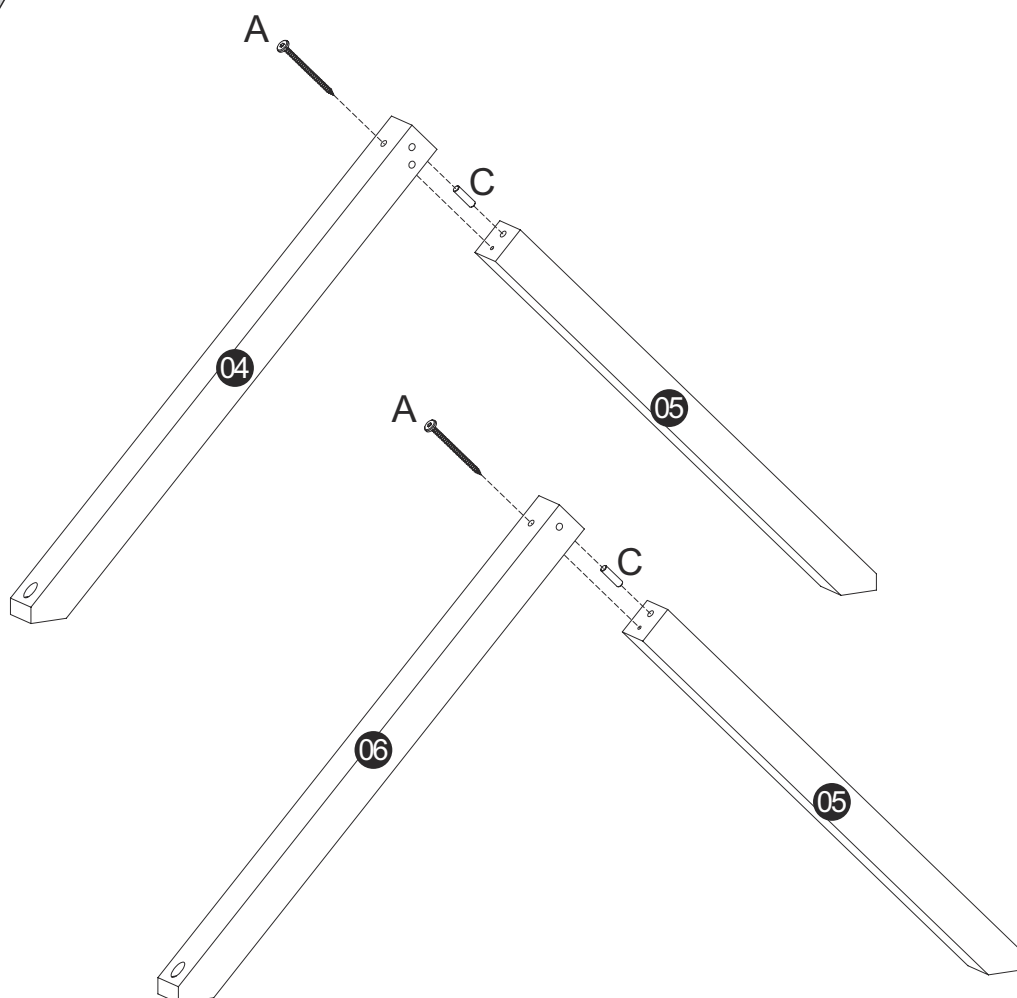

A x2




Φ 6x90


C x2




Φ 8x30

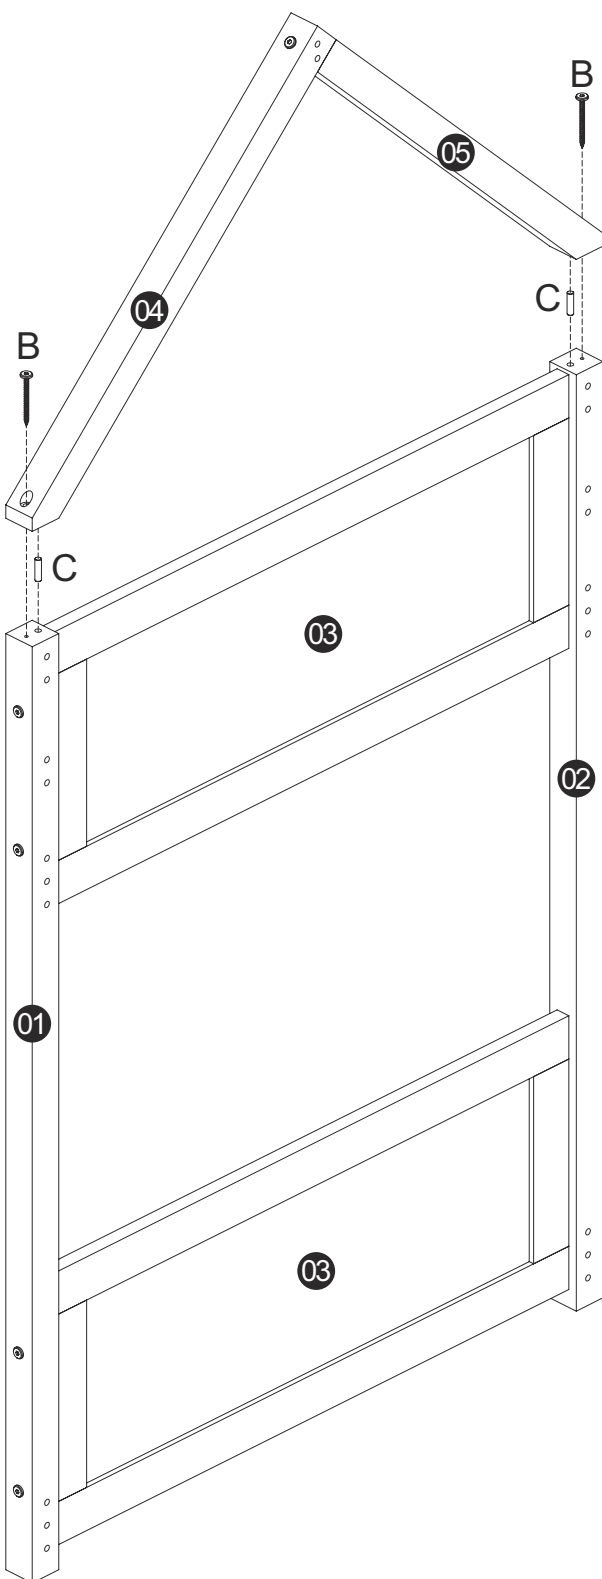


B x4


 $\Phi 6 \times 70$

C x4

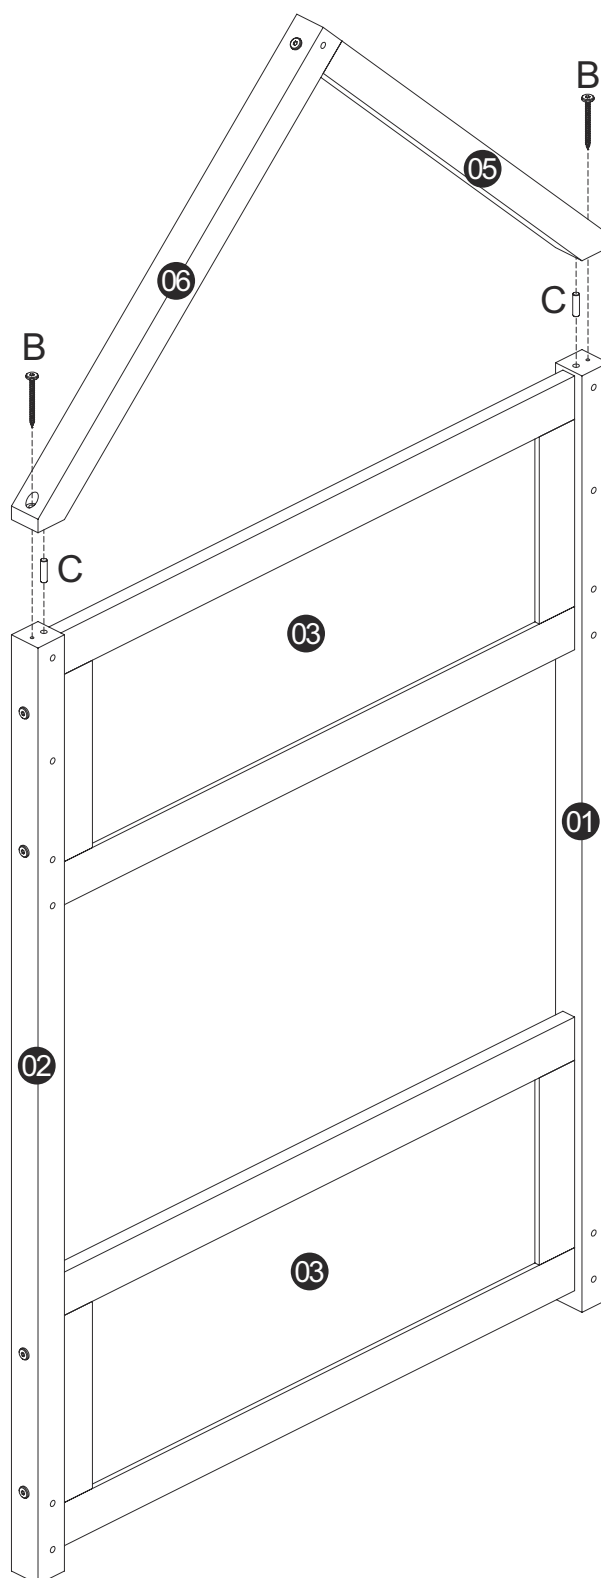 $\Phi 8 \times 30$ 

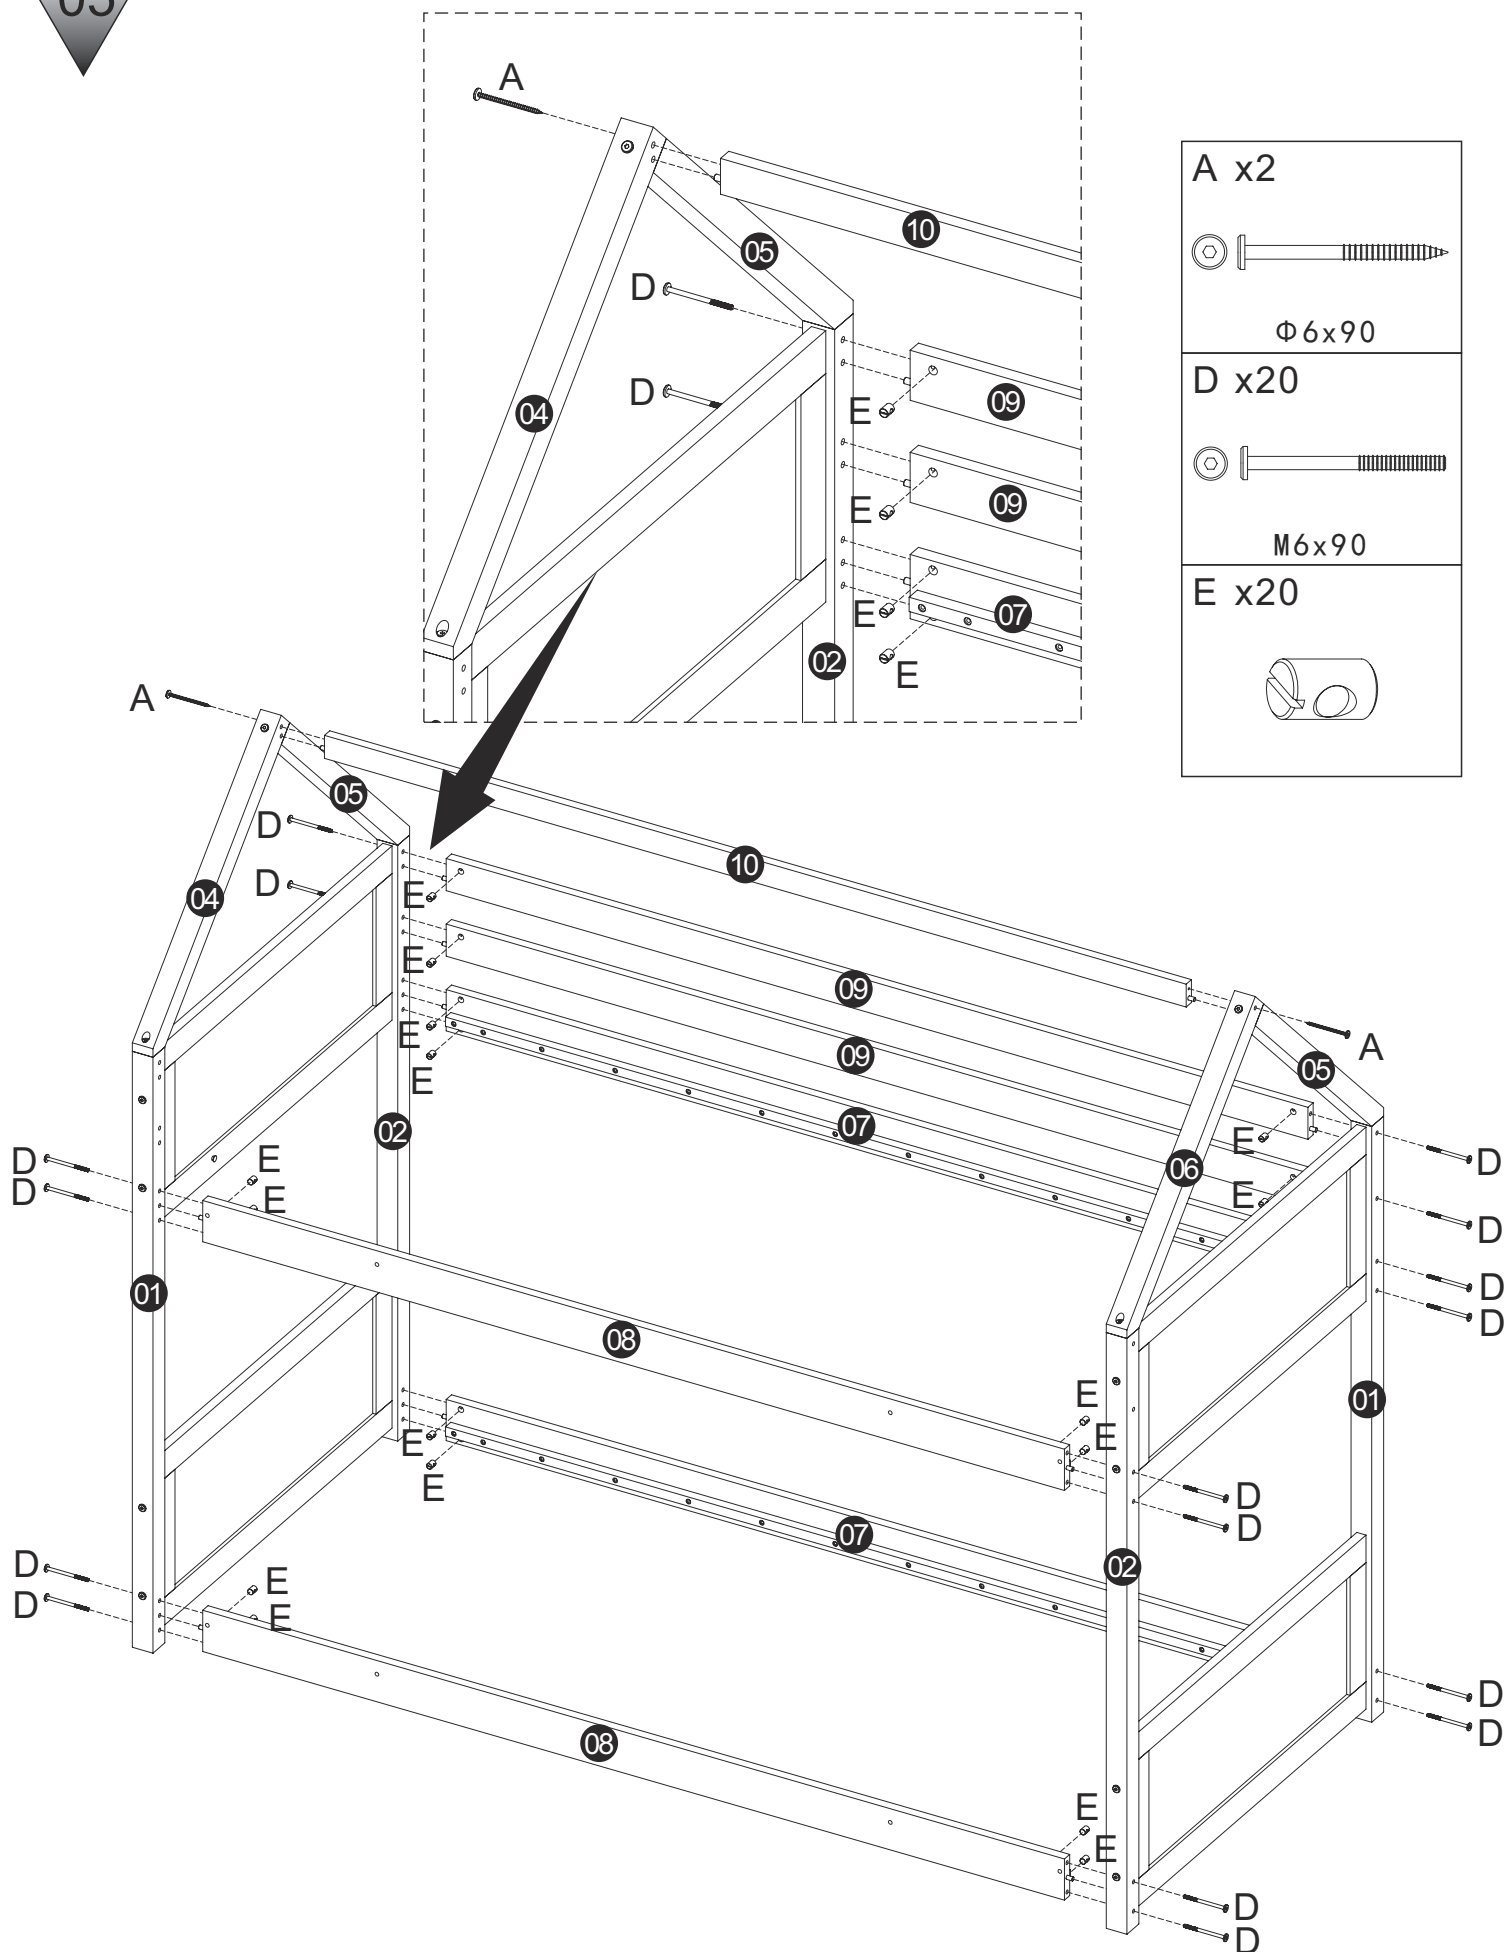

F x12

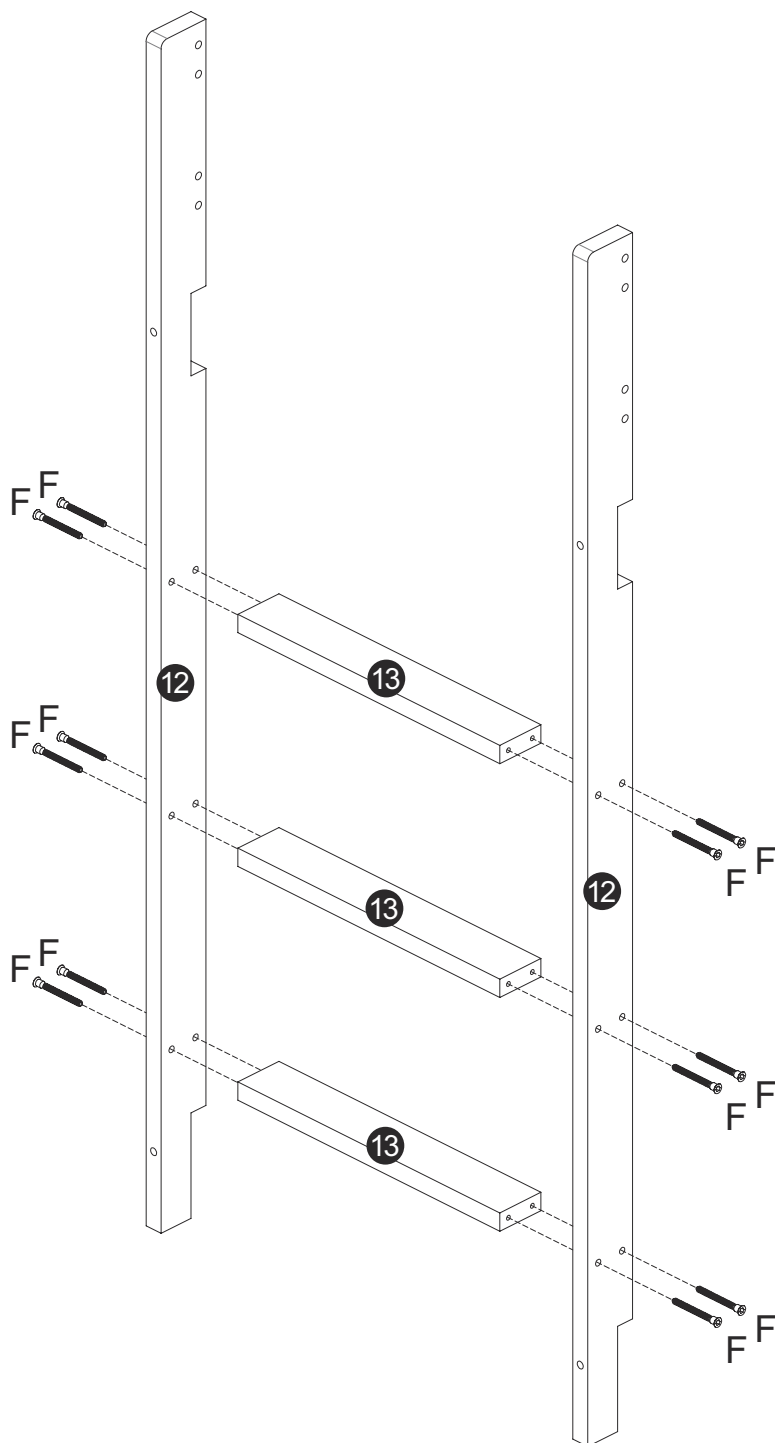 $\Phi 7 \times 60$ 

07 TYPE A

C x4



Φ8x30

D x2




M6x90

E x4




G x4



M6x50

H x6




J x2




M6x60

N x2



M6x55

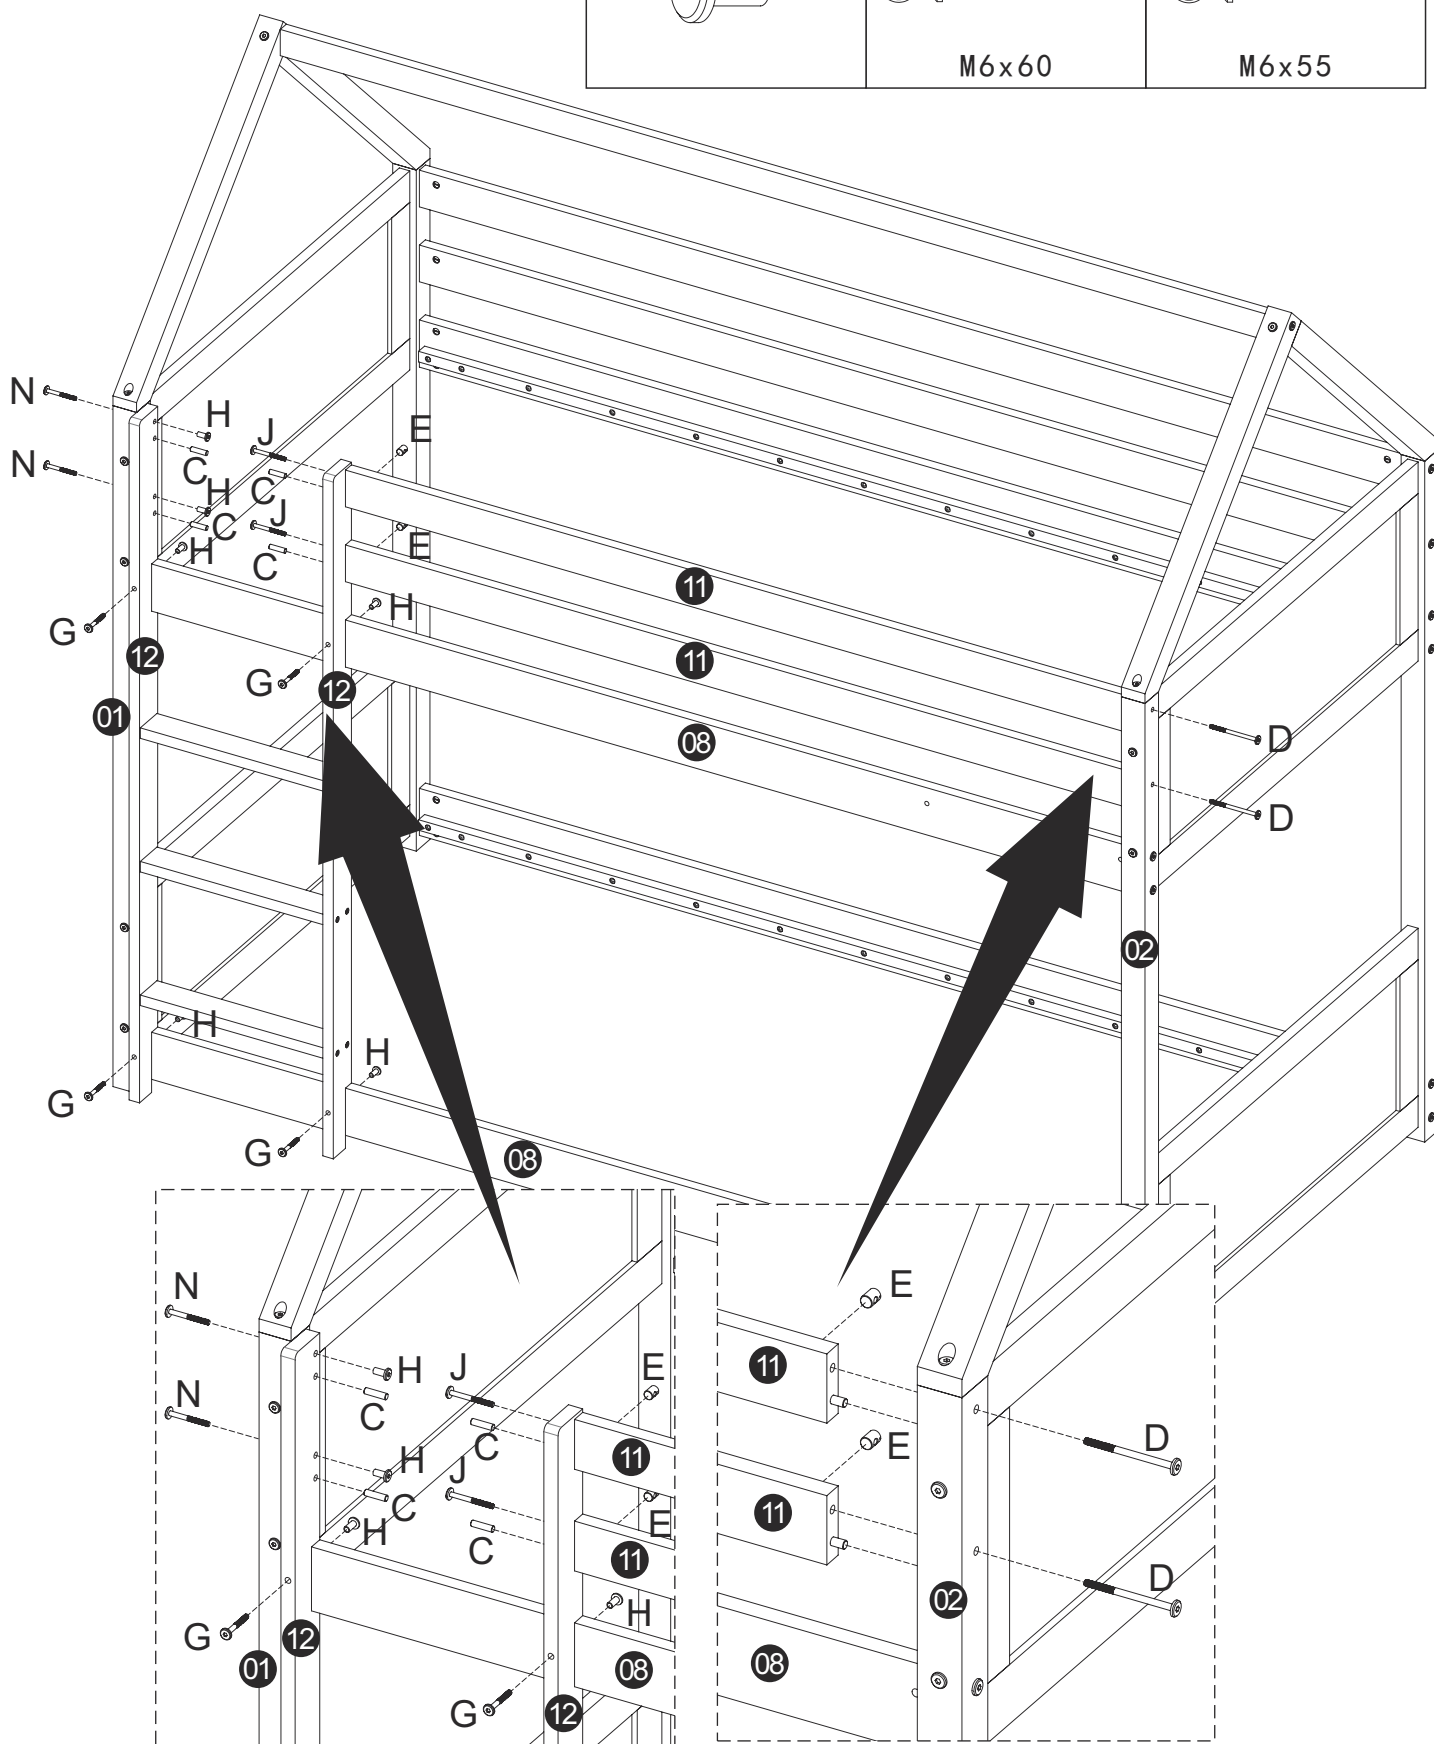

07

TYPE B

C x4

 $\Phi 8 \times 30$

D x2




M6x90

E x4




G x4



M6x50

H x6




J x2




M6x60

N x2




M6x55

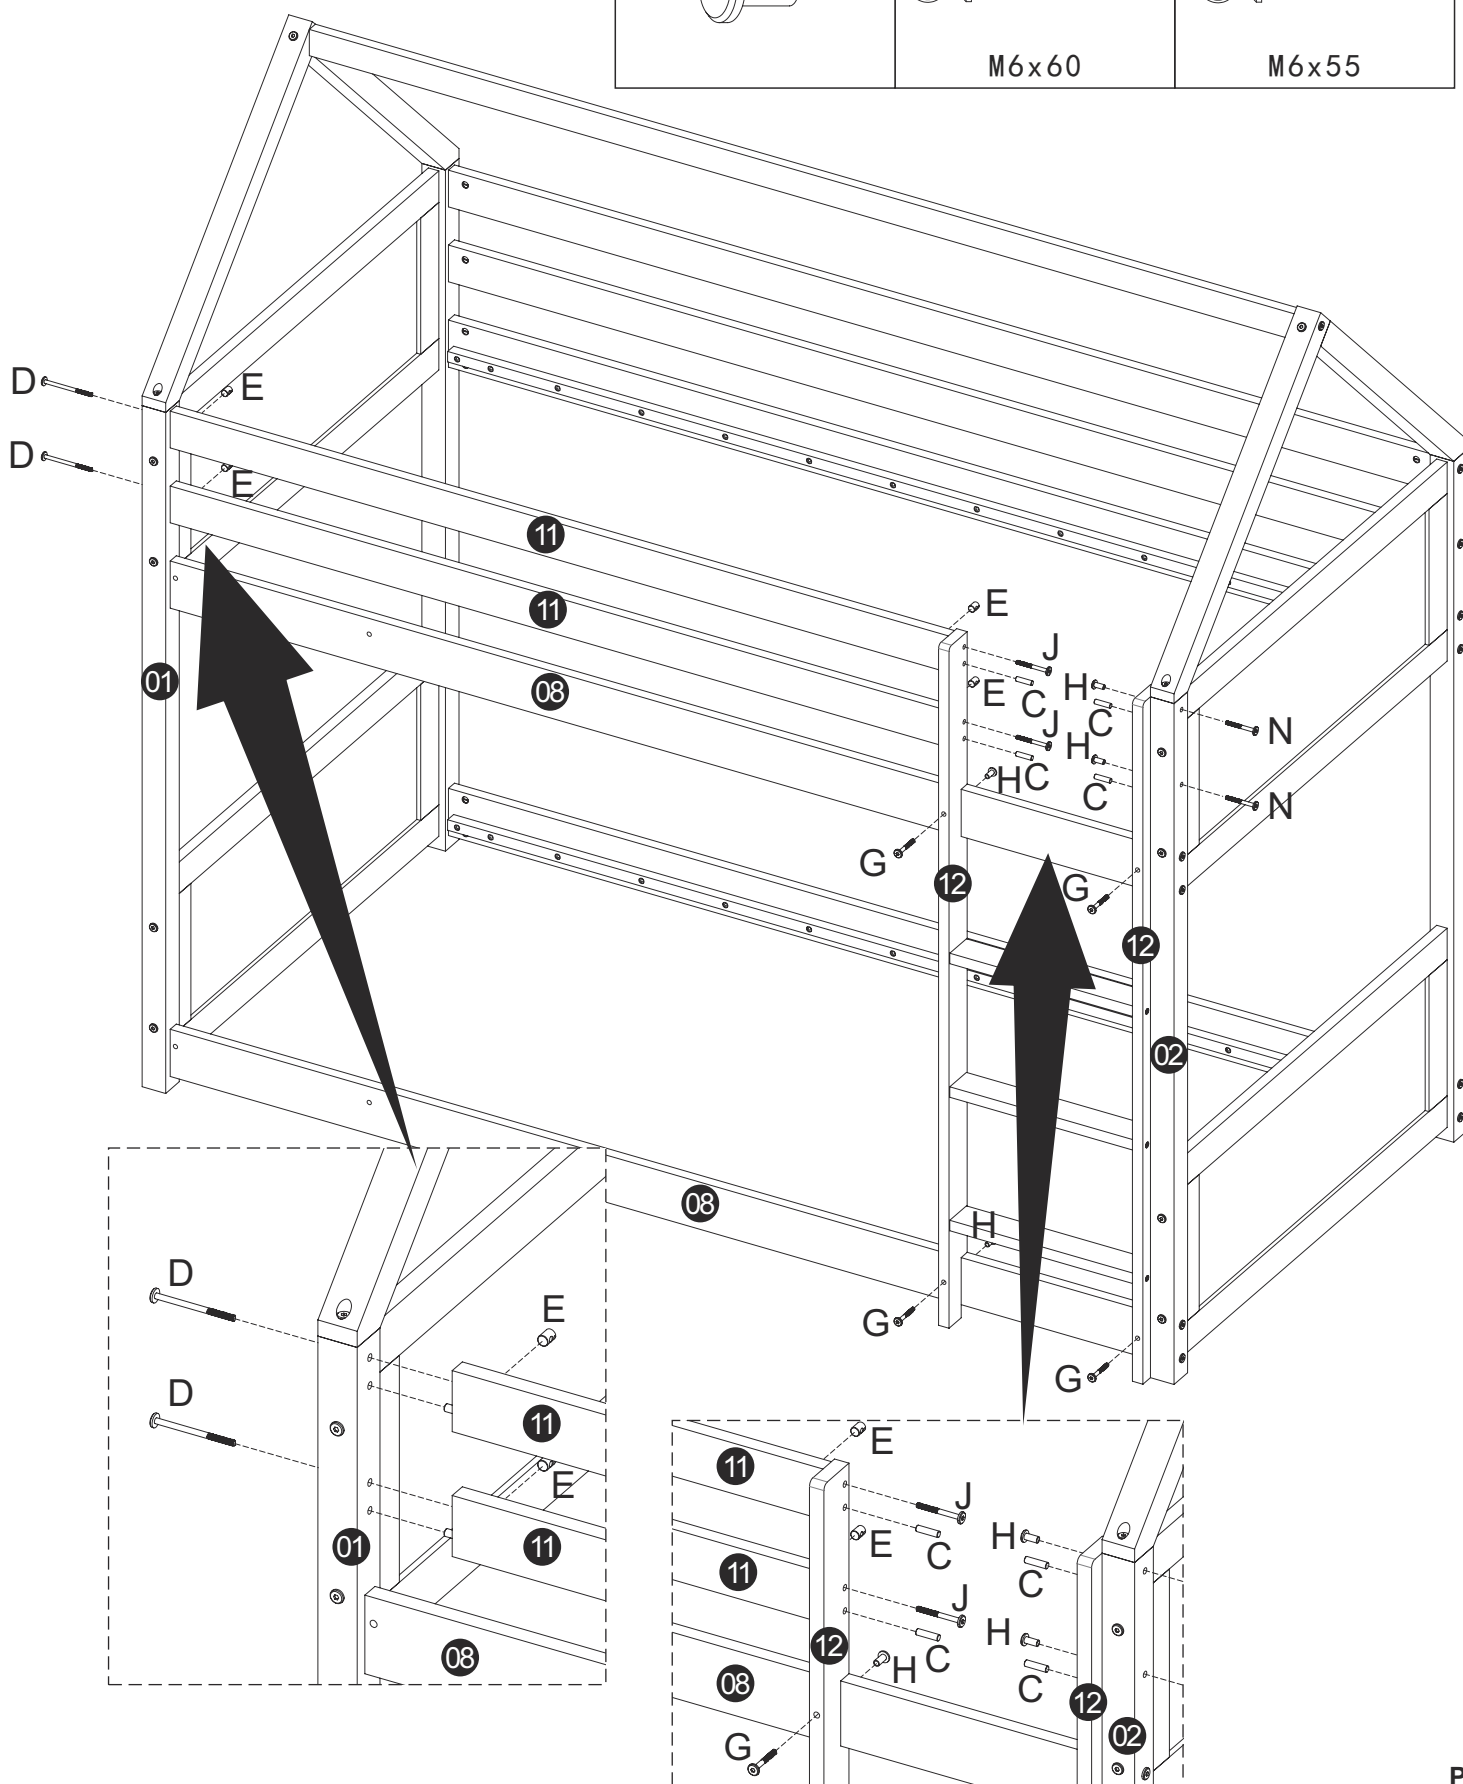

K x60



Φ3x30

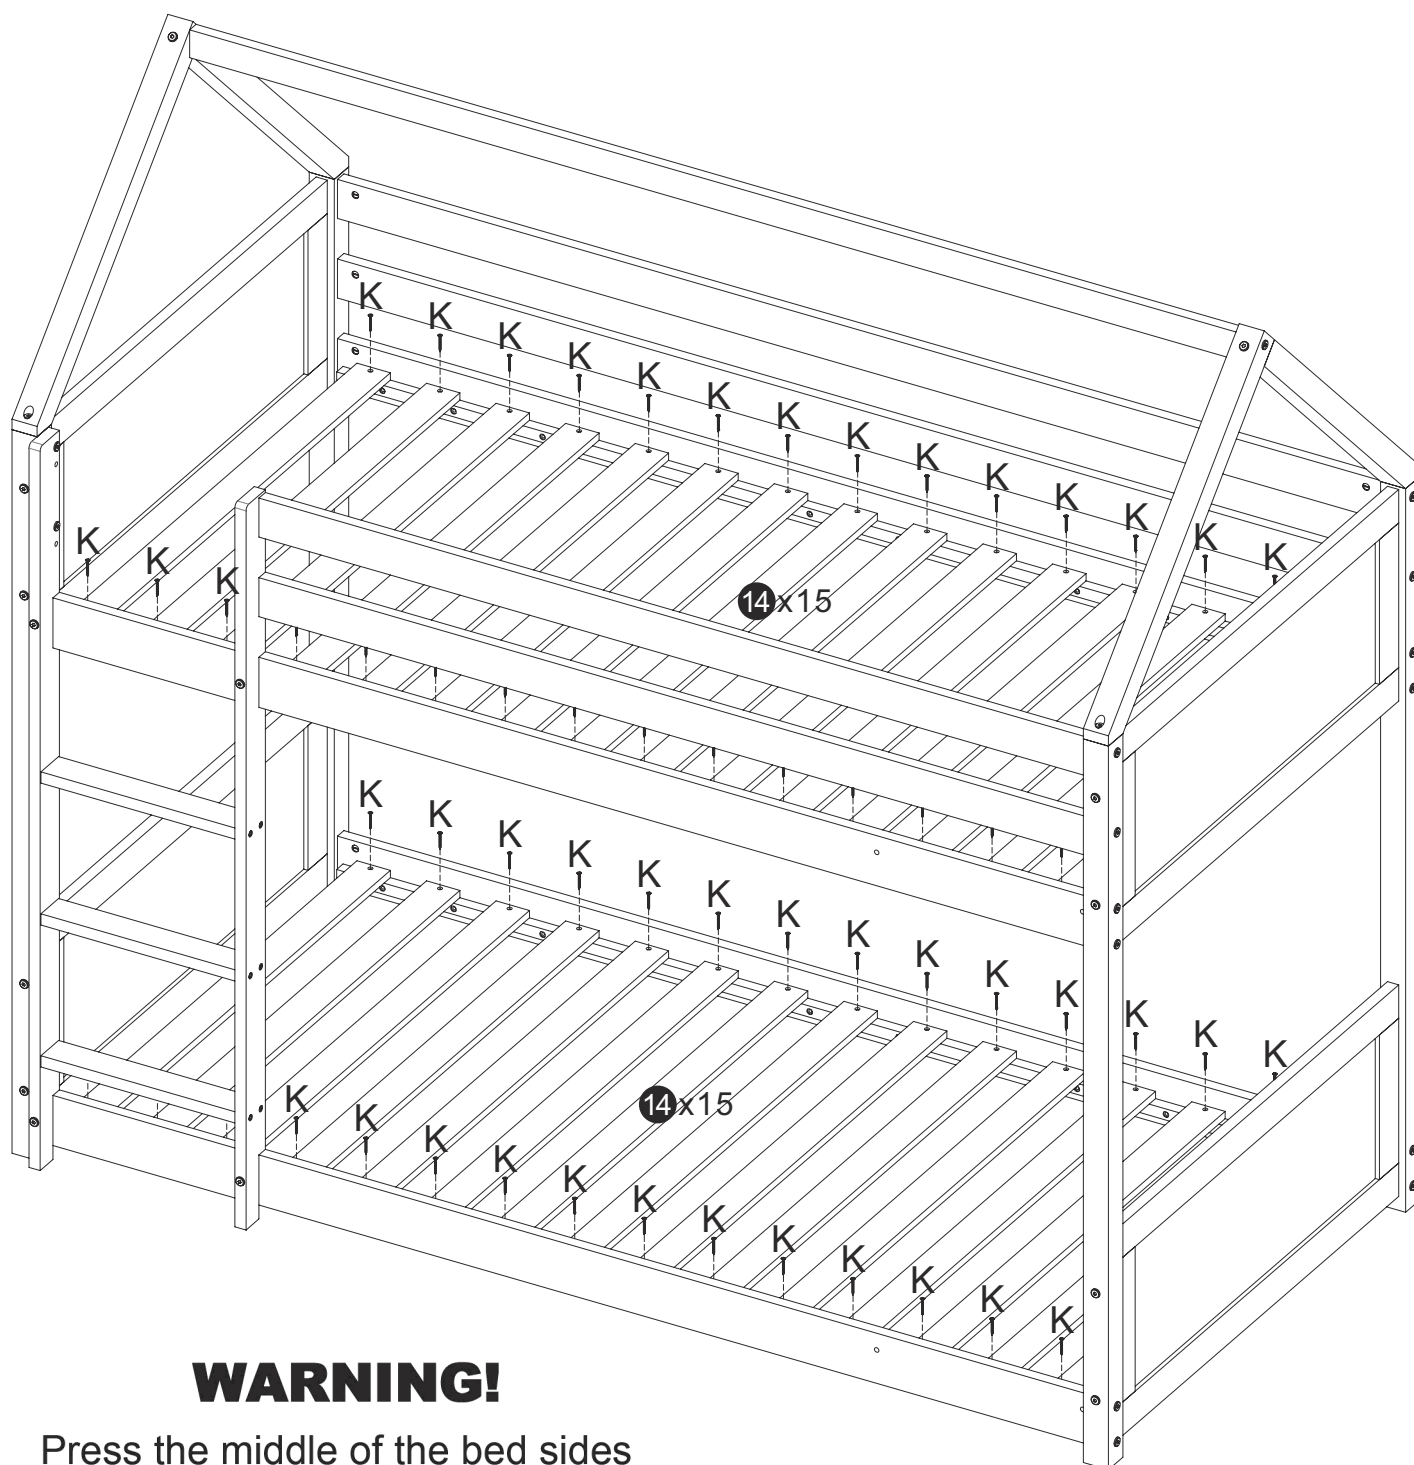**WARNING!**

Press the middle of the bed sides
and tighten the screw first!!!

L x8

