

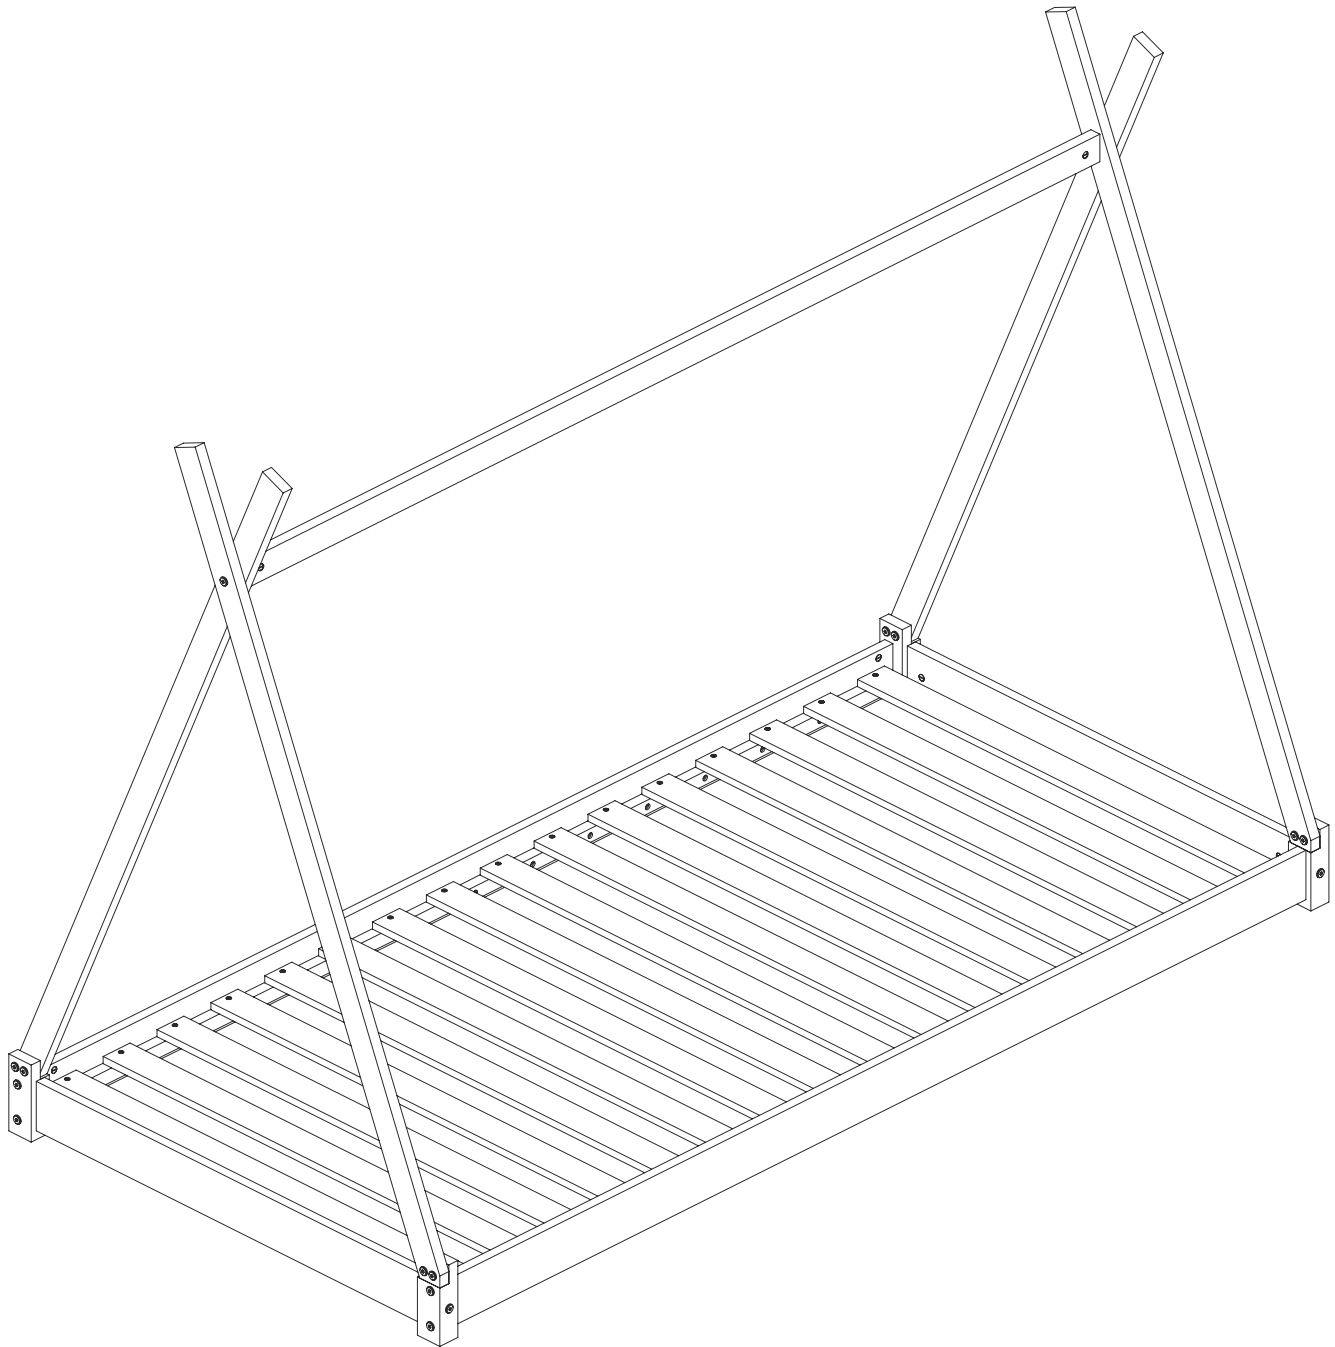
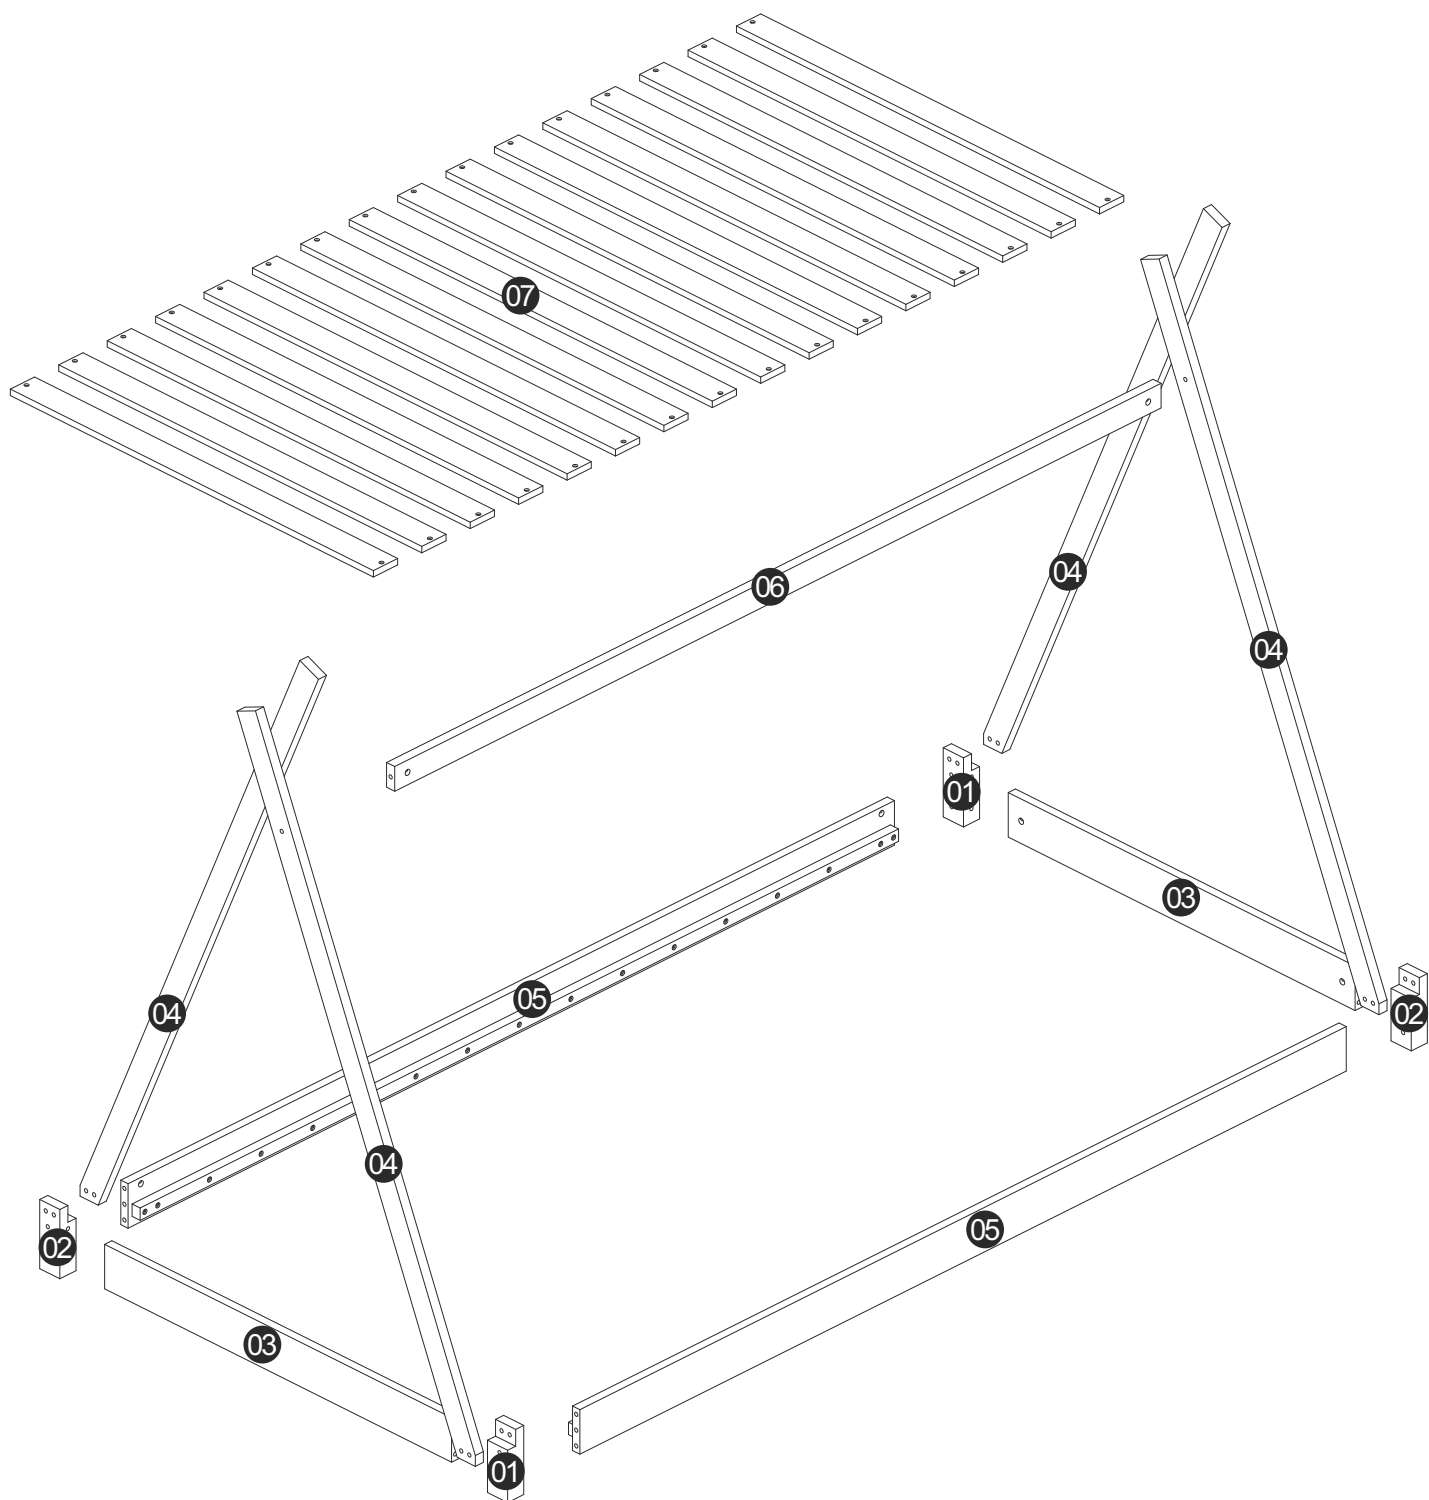



TENT TIPI WOODEN SINGLE BED







A x4  M6x120	B x10  M6x80	C x14 	D x8  M6x30
E x8 	F x12  Ø8x30	Gx26  Ø4x30	H x2 


01

F	 $\Phi 8 \times 30$	12
---	--	----

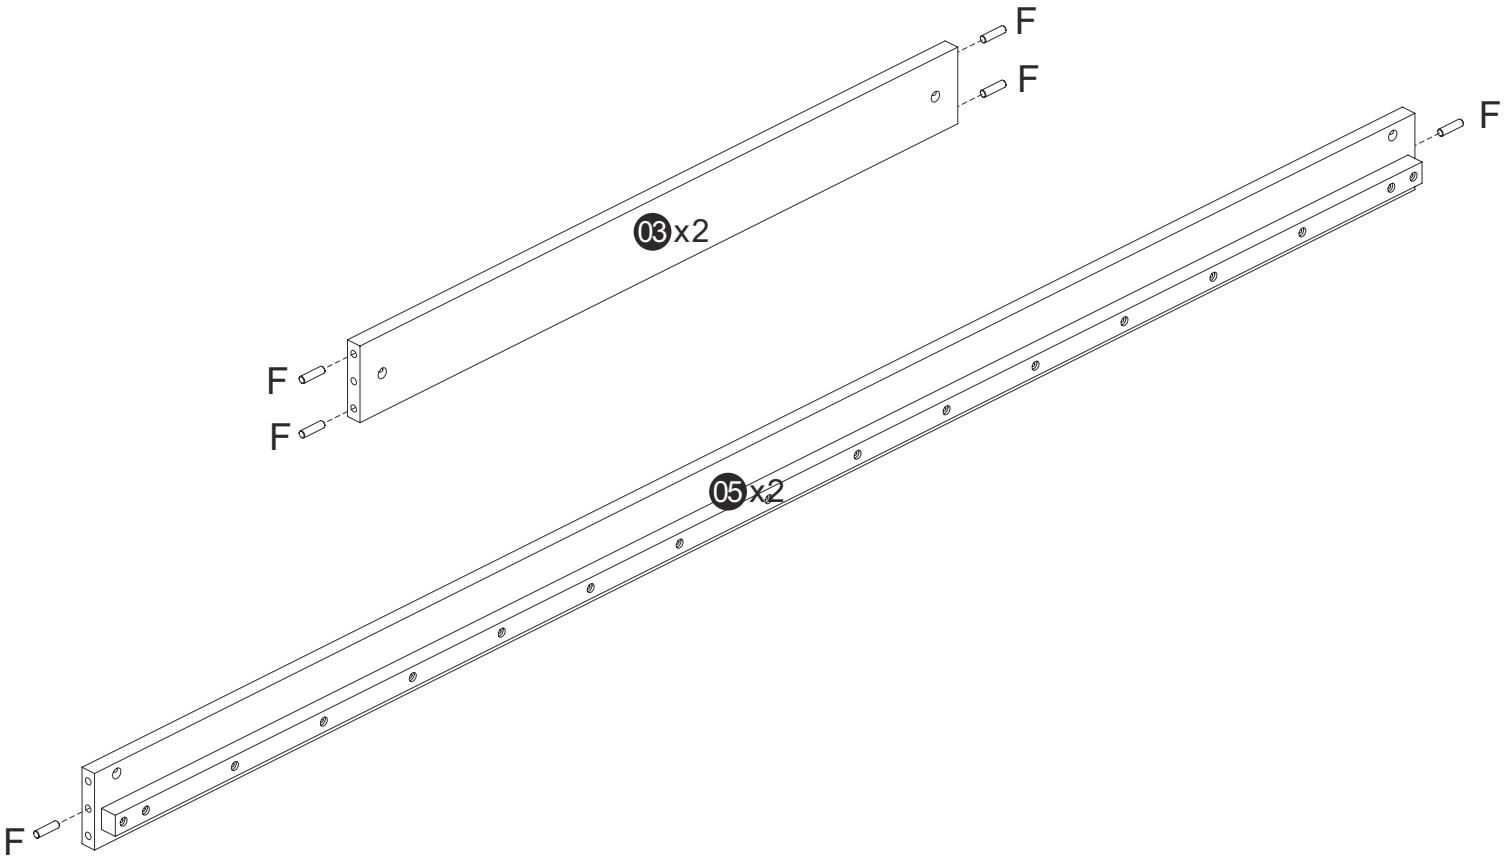


02

A	 M6x120	4
C		4

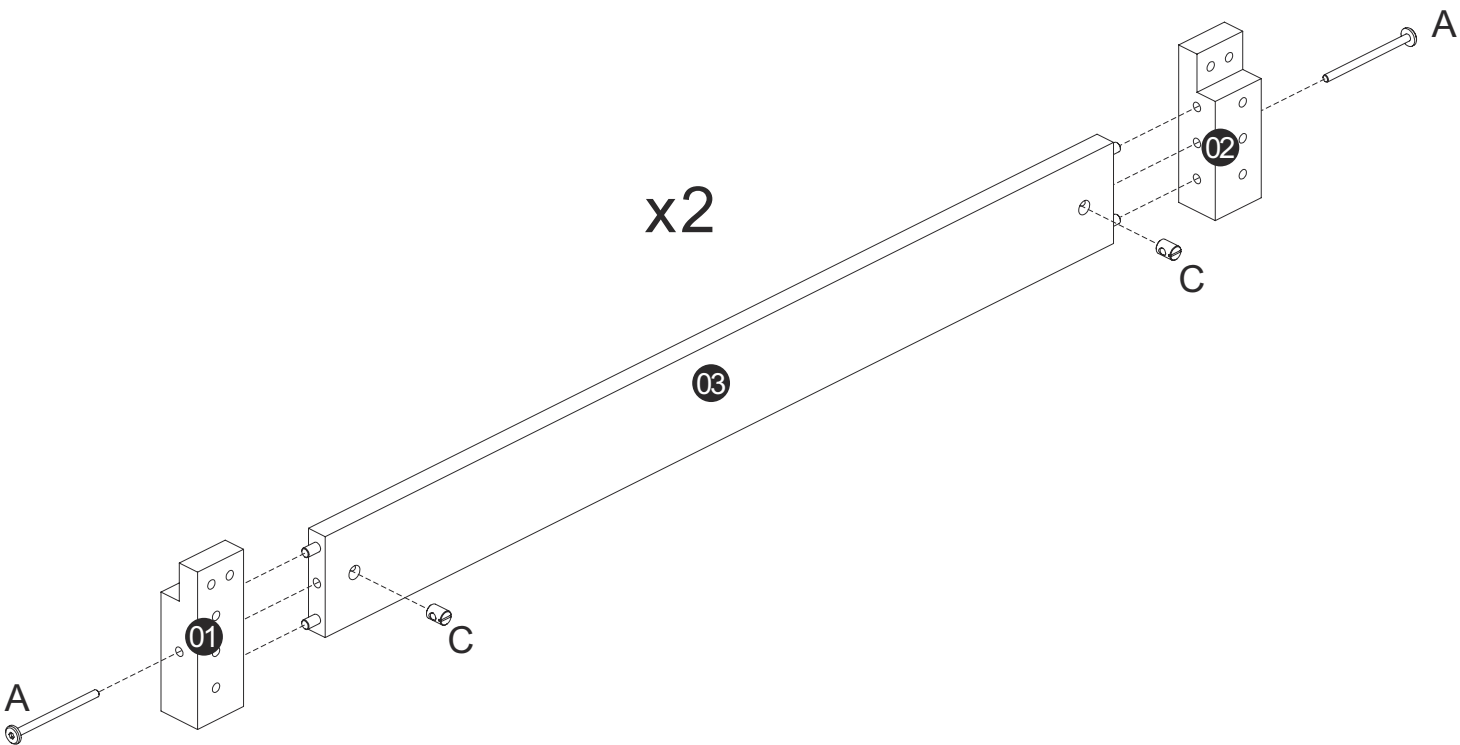


03


D	  M6x30	8
E		8

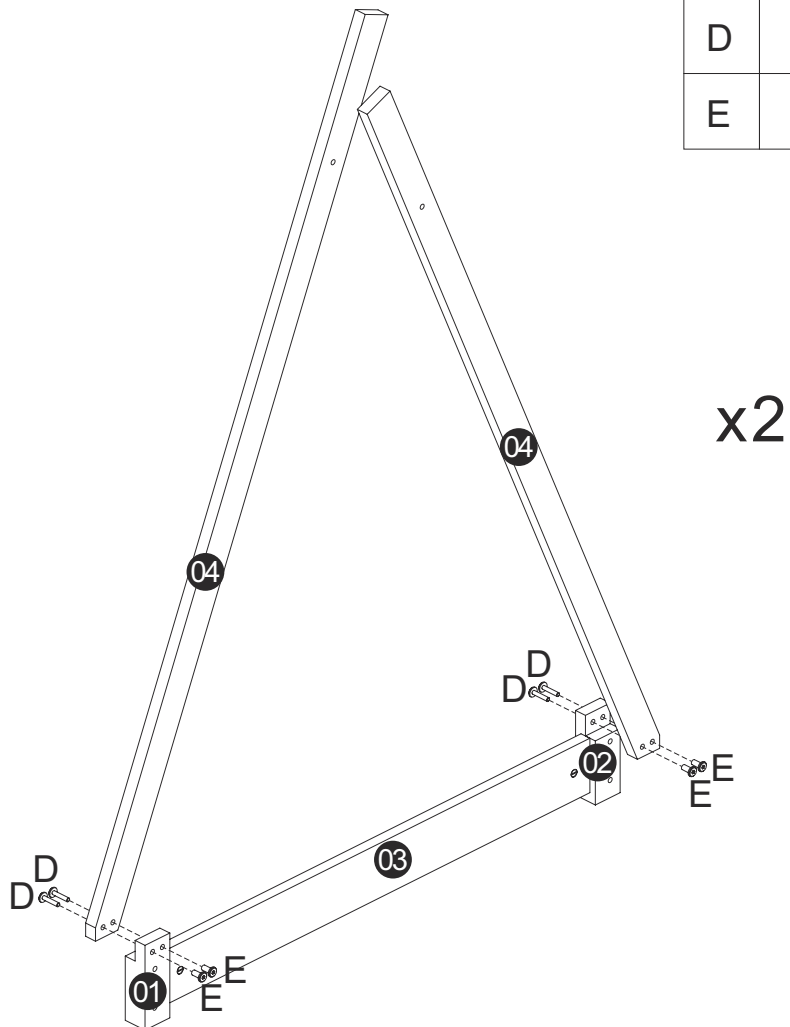

04

B	 M6x80	10	C		10
---	---	----	---	---	----

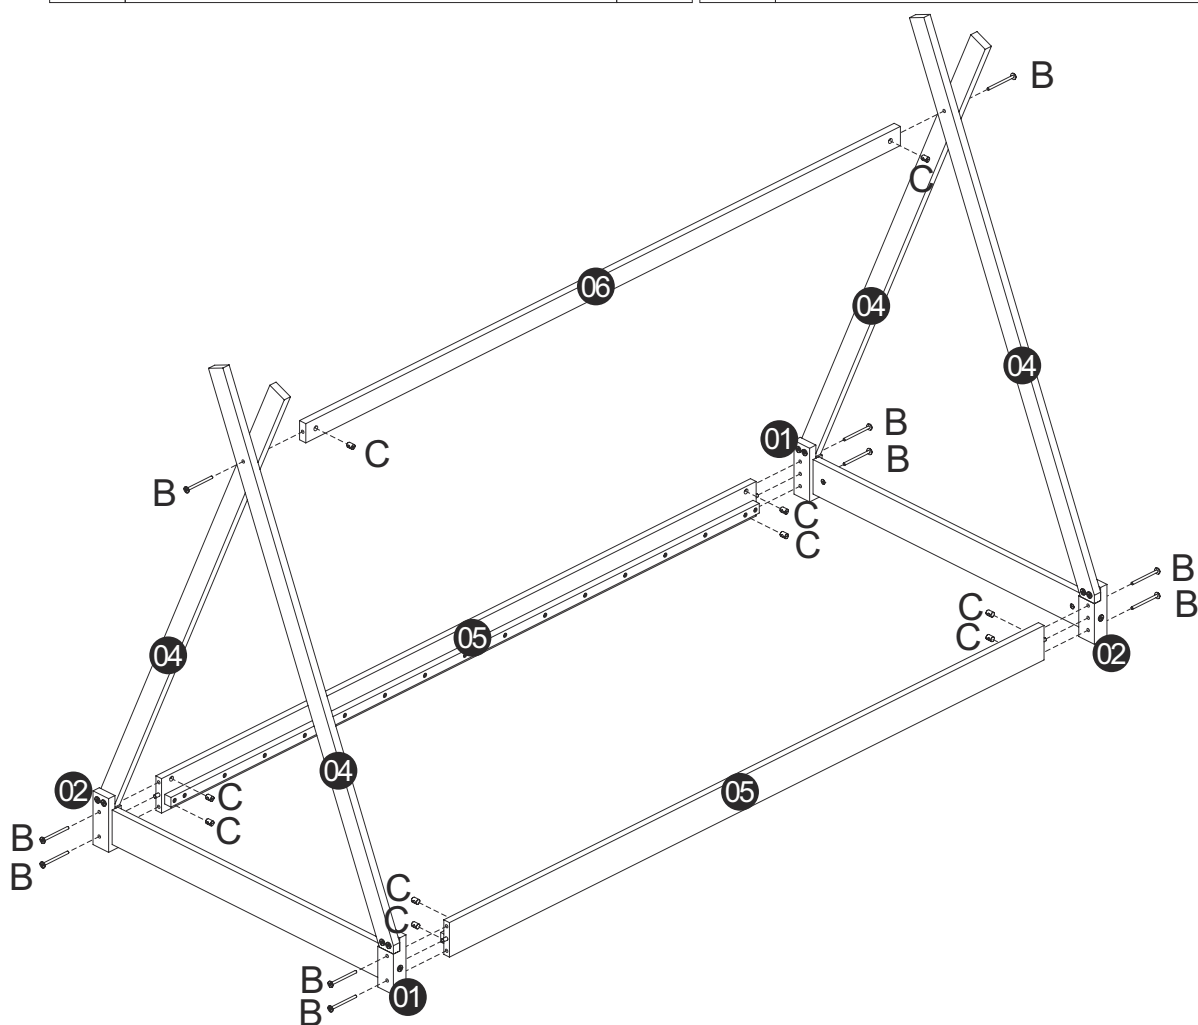

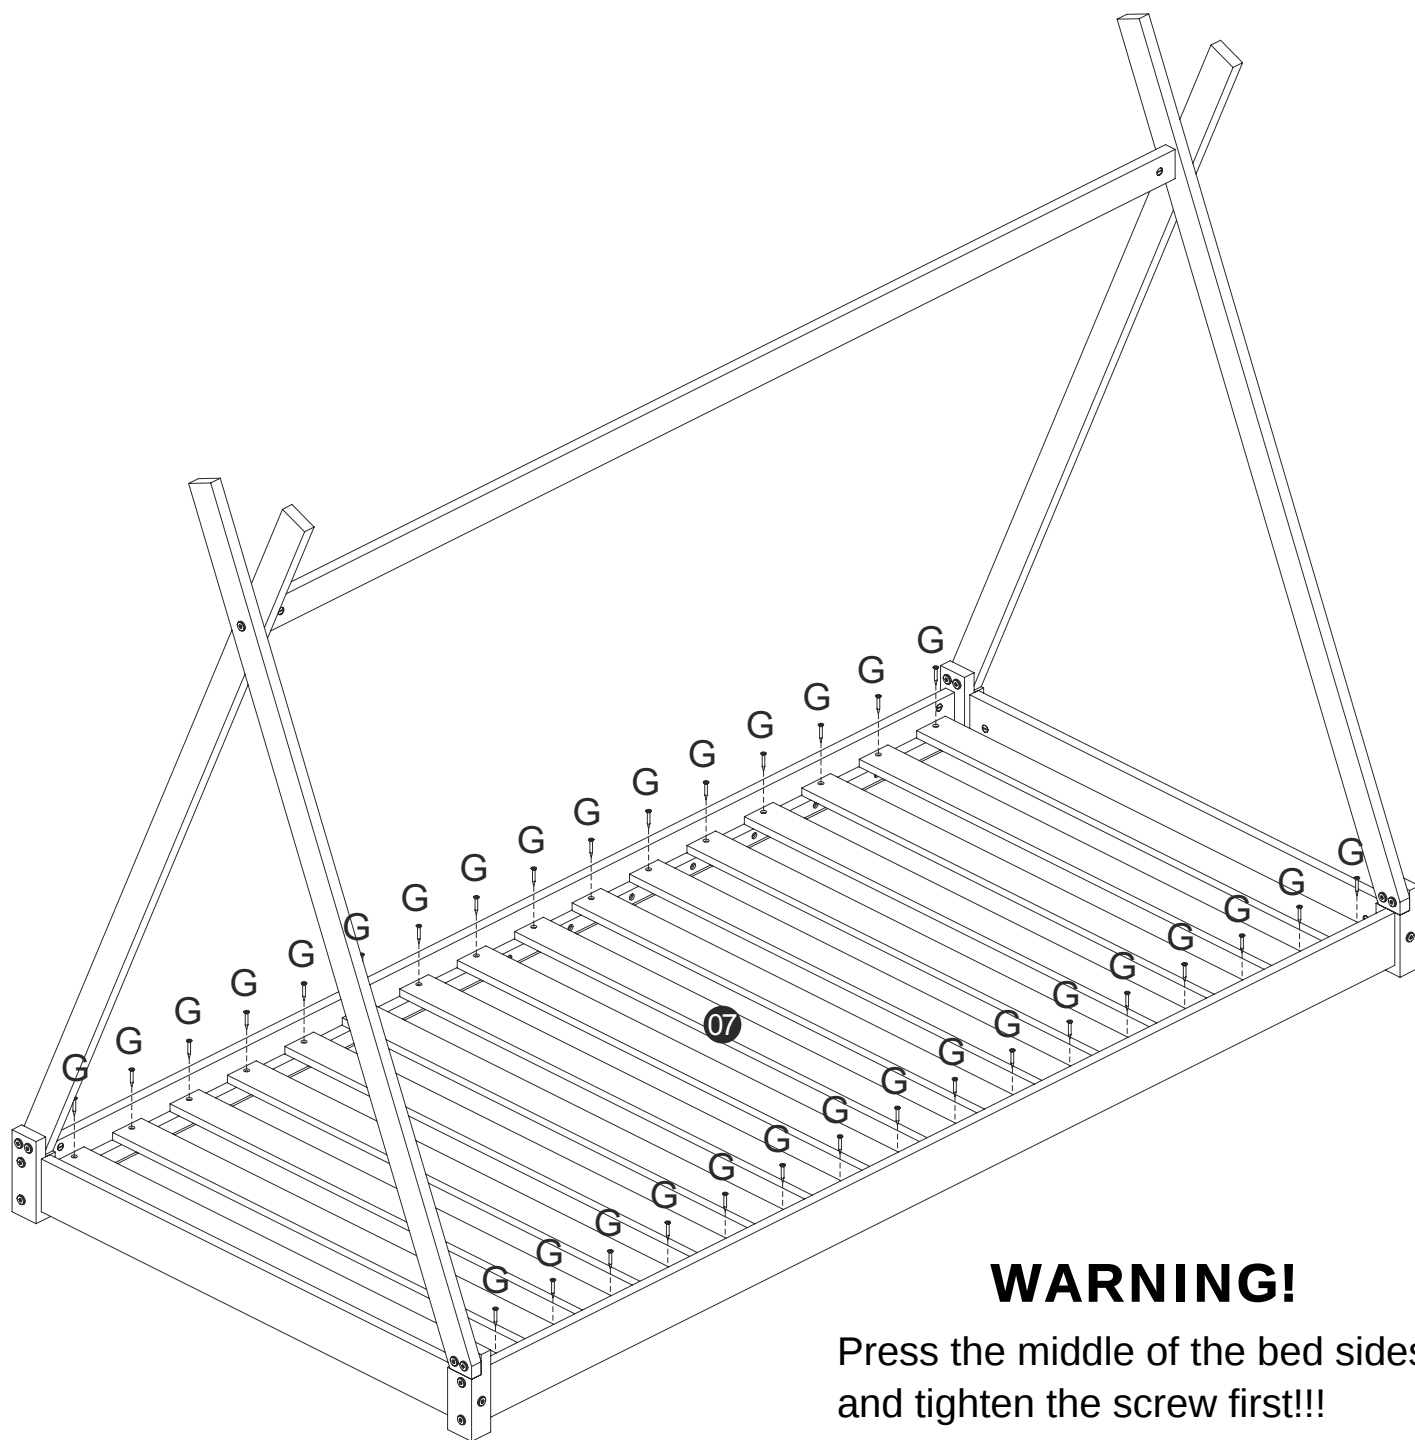

WARNING!

Press the middle of the bed sides
and tighten the screw first!!!