




MODEL: DISLEY WOODEN SINGLE BED




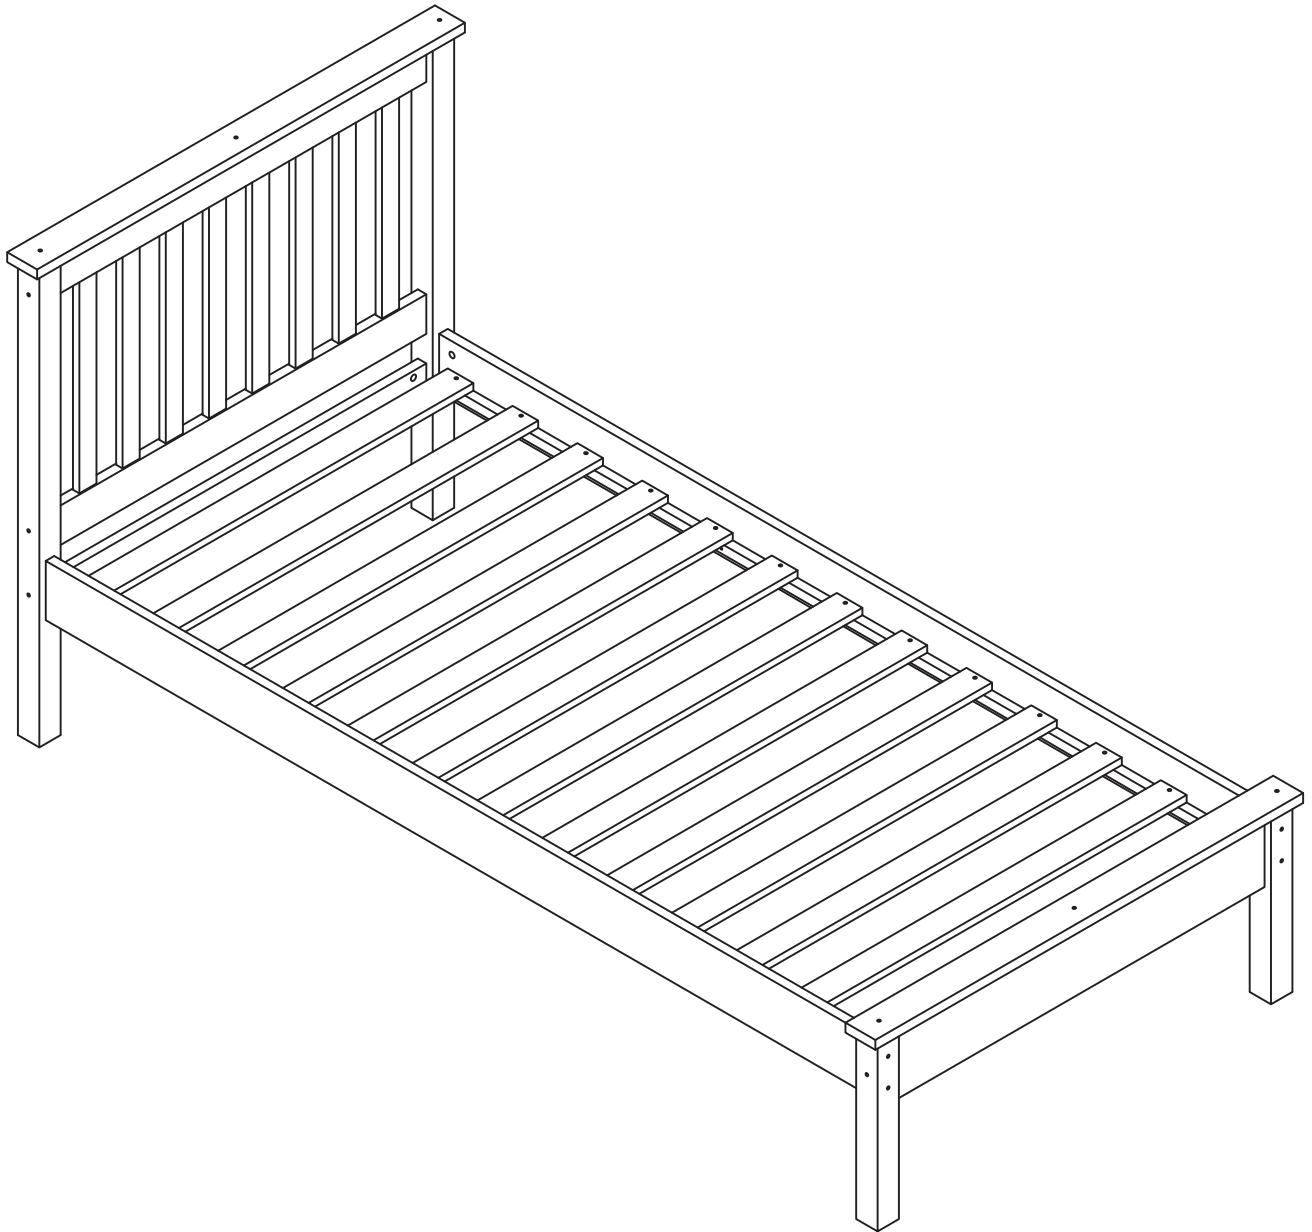


READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUING YOUR PIECE OF FURNITURE. GROUP AND CHECK THE HARDWARE FITTINGS. GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE


NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME. KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE. IN THE EVENT OF QUERY.

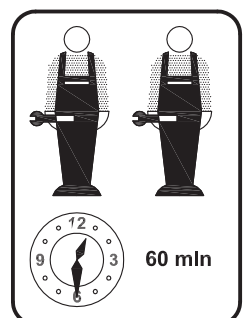

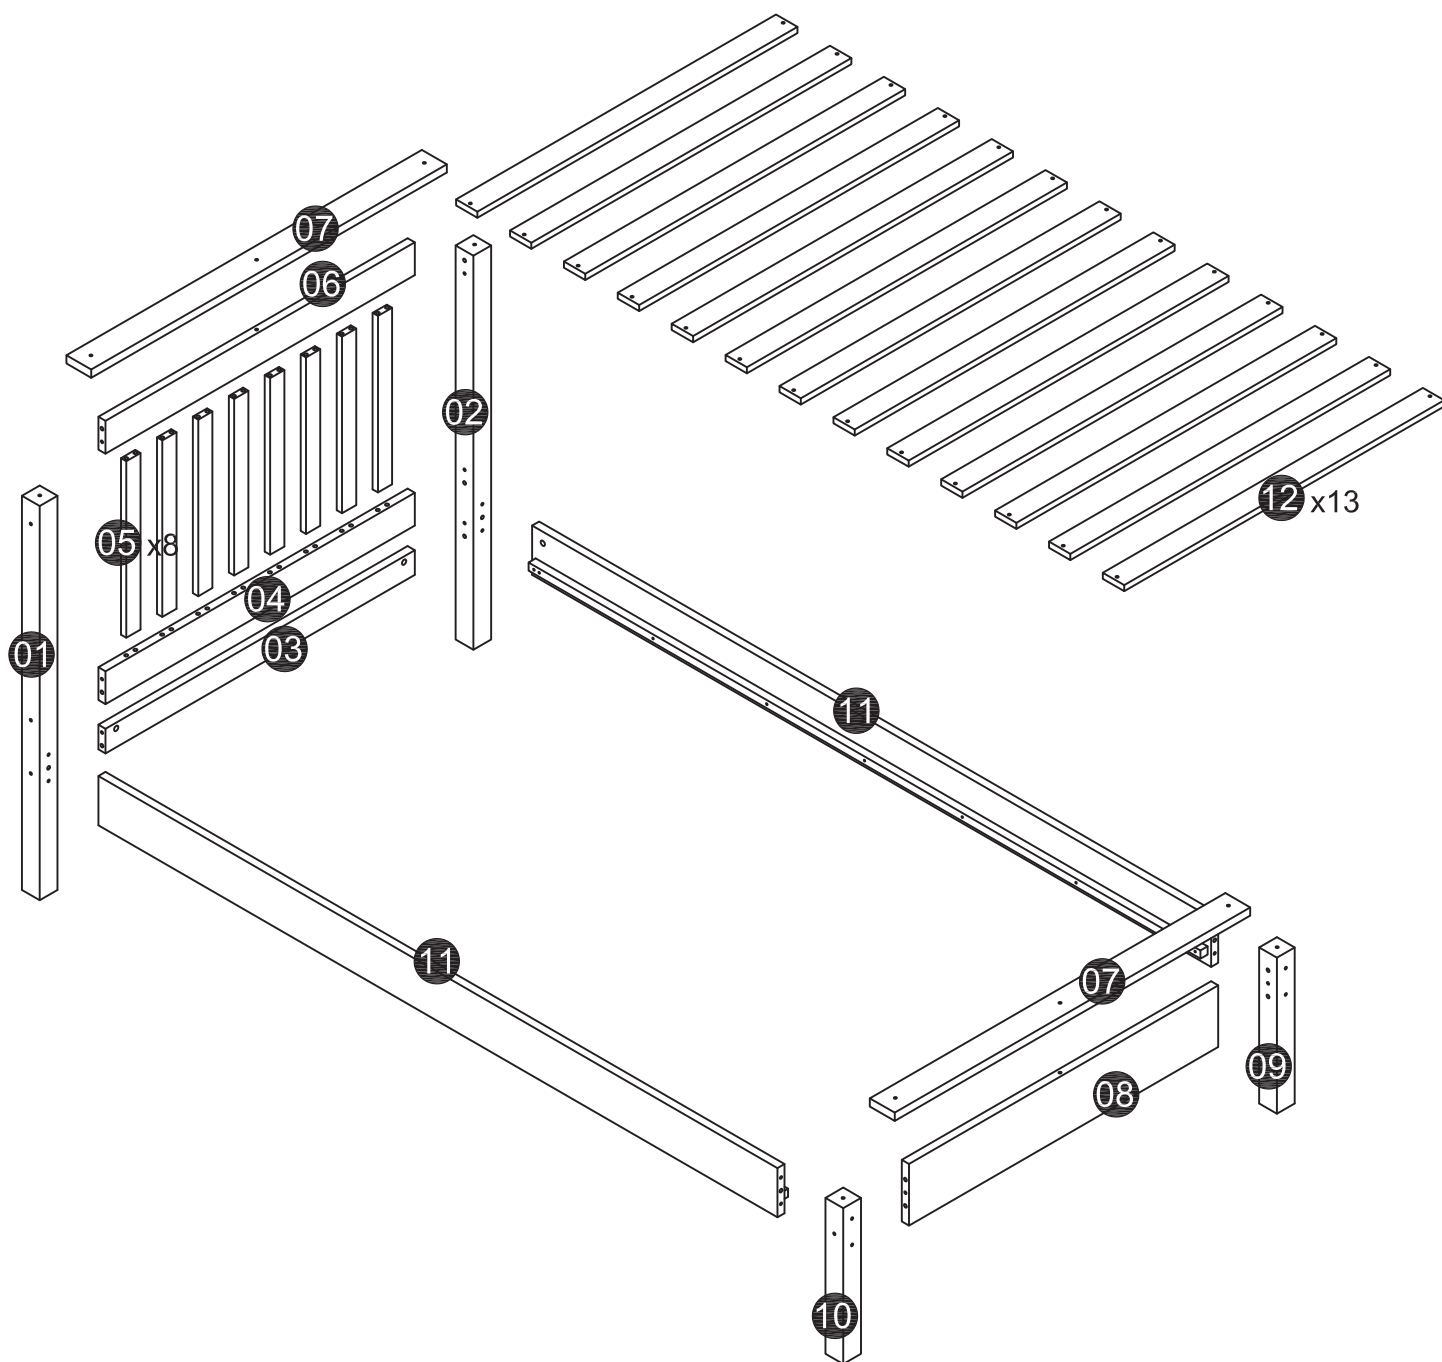


A x26  $\varnothing 4 \times 30\text{mm}$	B x12  $M6 \times 90\text{mm}$	C x46  $\varnothing 8 \times 30\text{mm}$	D x12 	E x1 
F x4  $\varnothing 6 \times 90\text{mm}$	G x6  $M6 \times 25\text{mm}$	H x6 	K x4 	


01

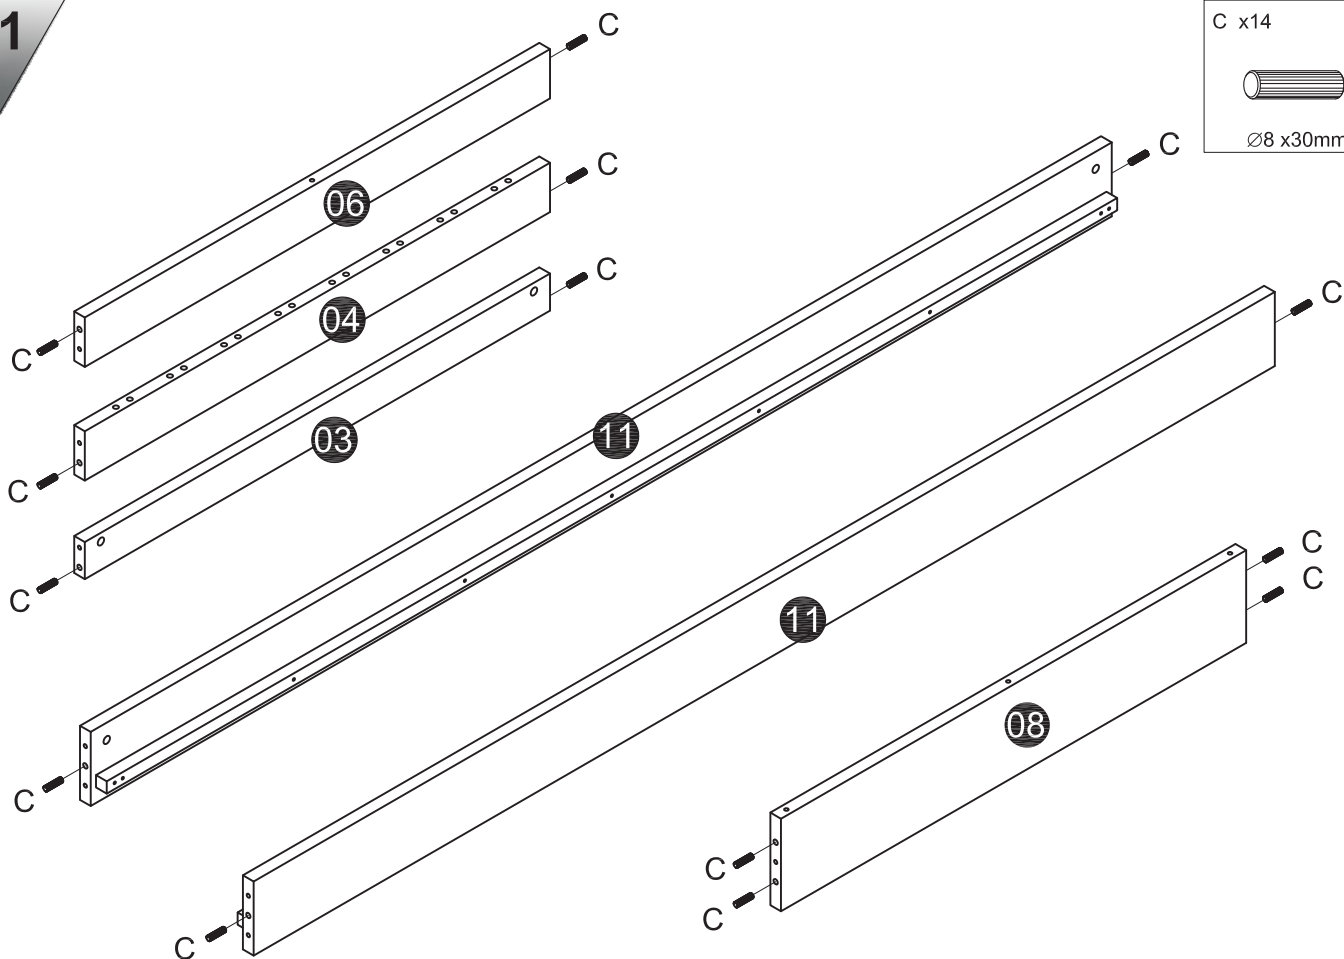


02

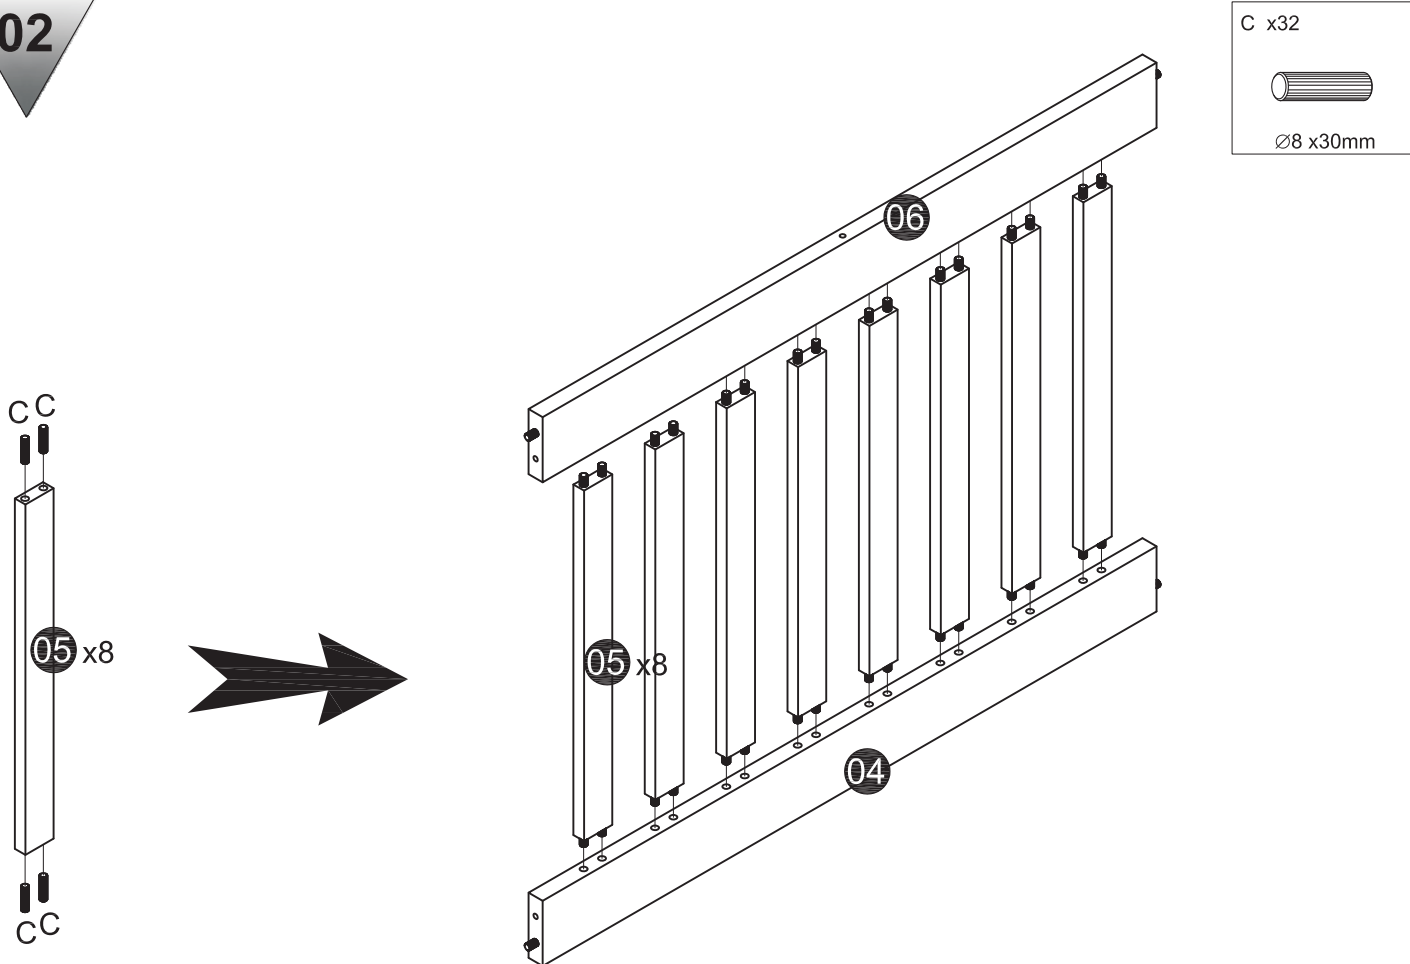


03

F x4  Ø6 x90mm	B x2  M6 x90mm	D x2 	E x1 
---	---	---	---

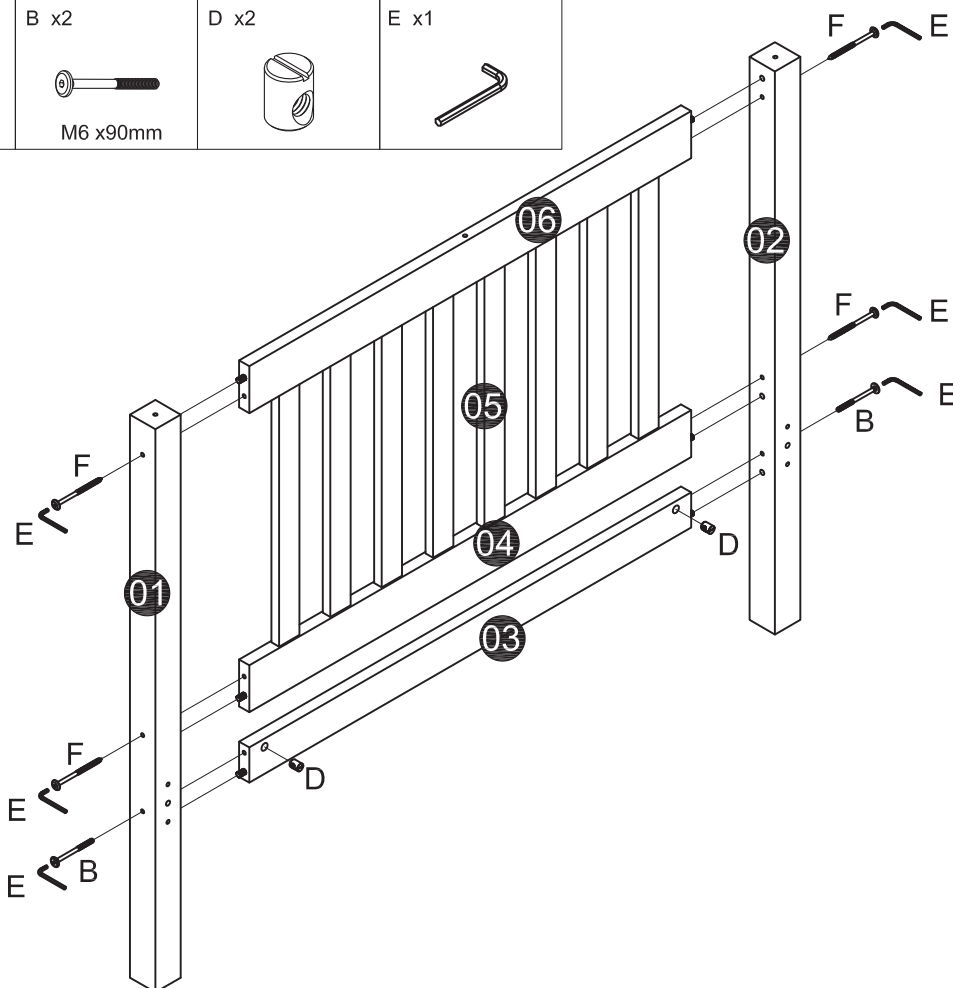

04

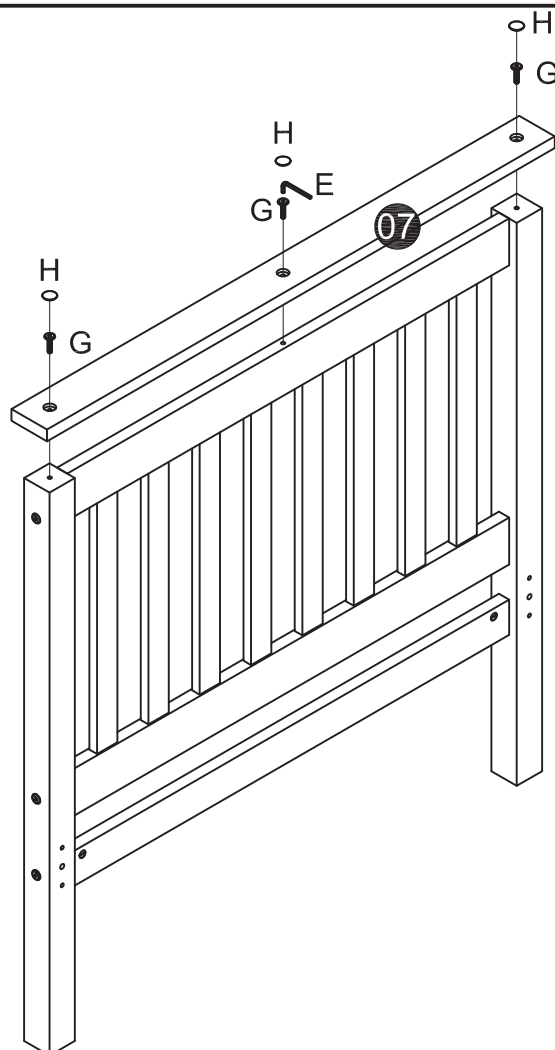

H x3 
G x3  M6 x25mm
E x1 

05

B x2




M6 x90mm

D x2



E x1

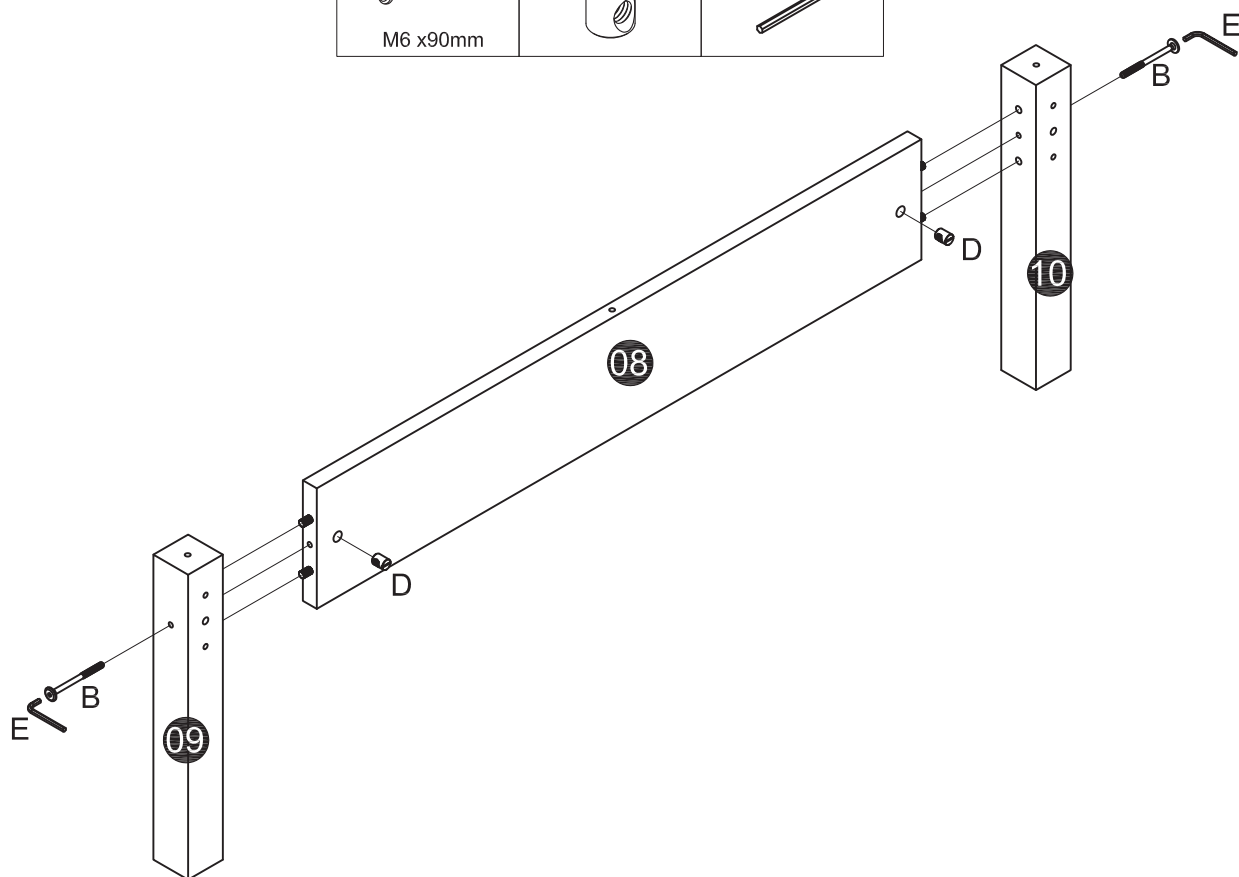

06

H x3




G x3




M6 x25mm

E x1

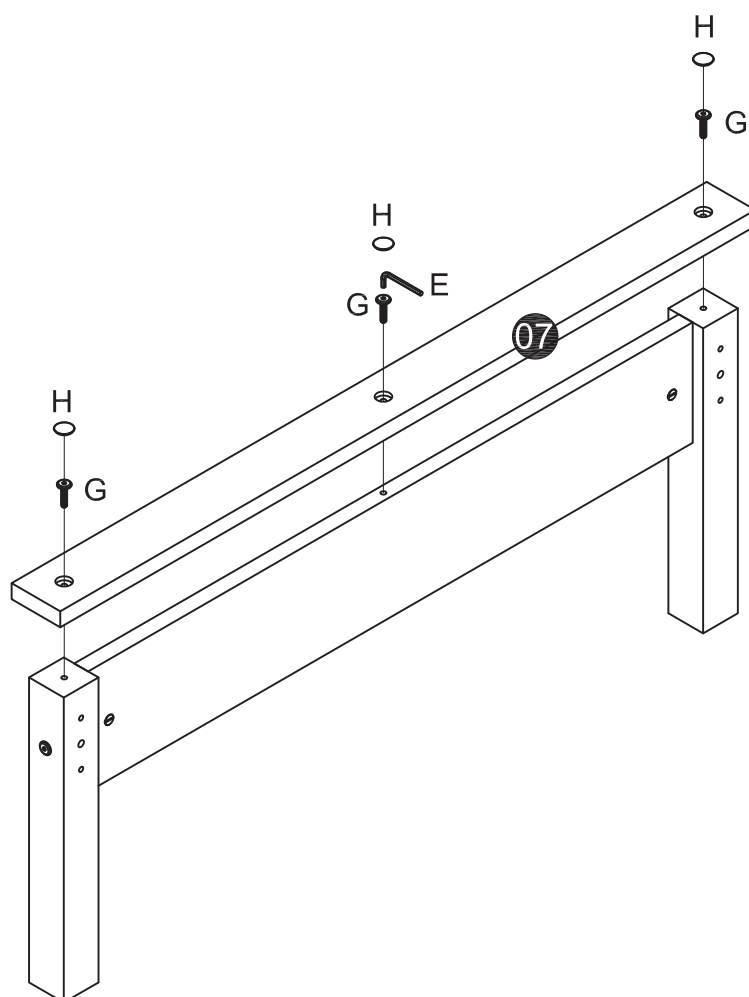

07



B x8



D x8



E x1

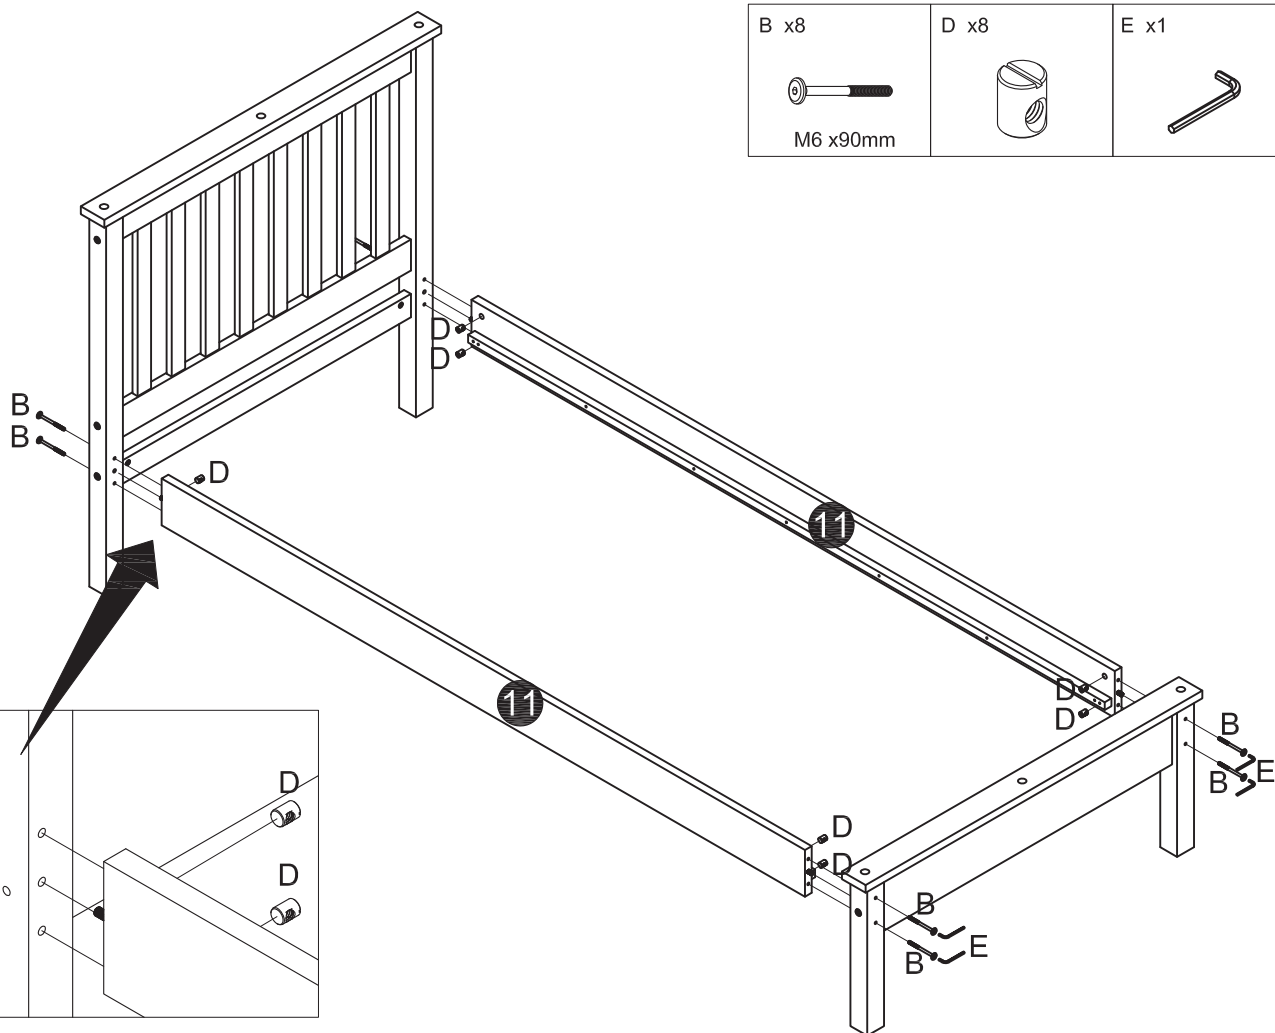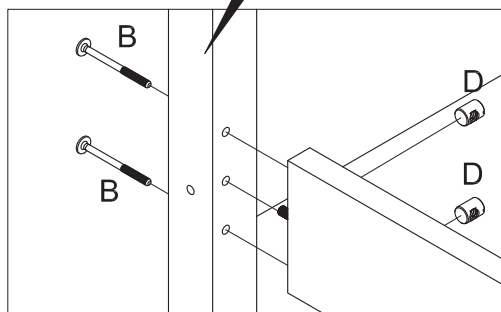



08

A x26



Ø4 x30mm

K x4

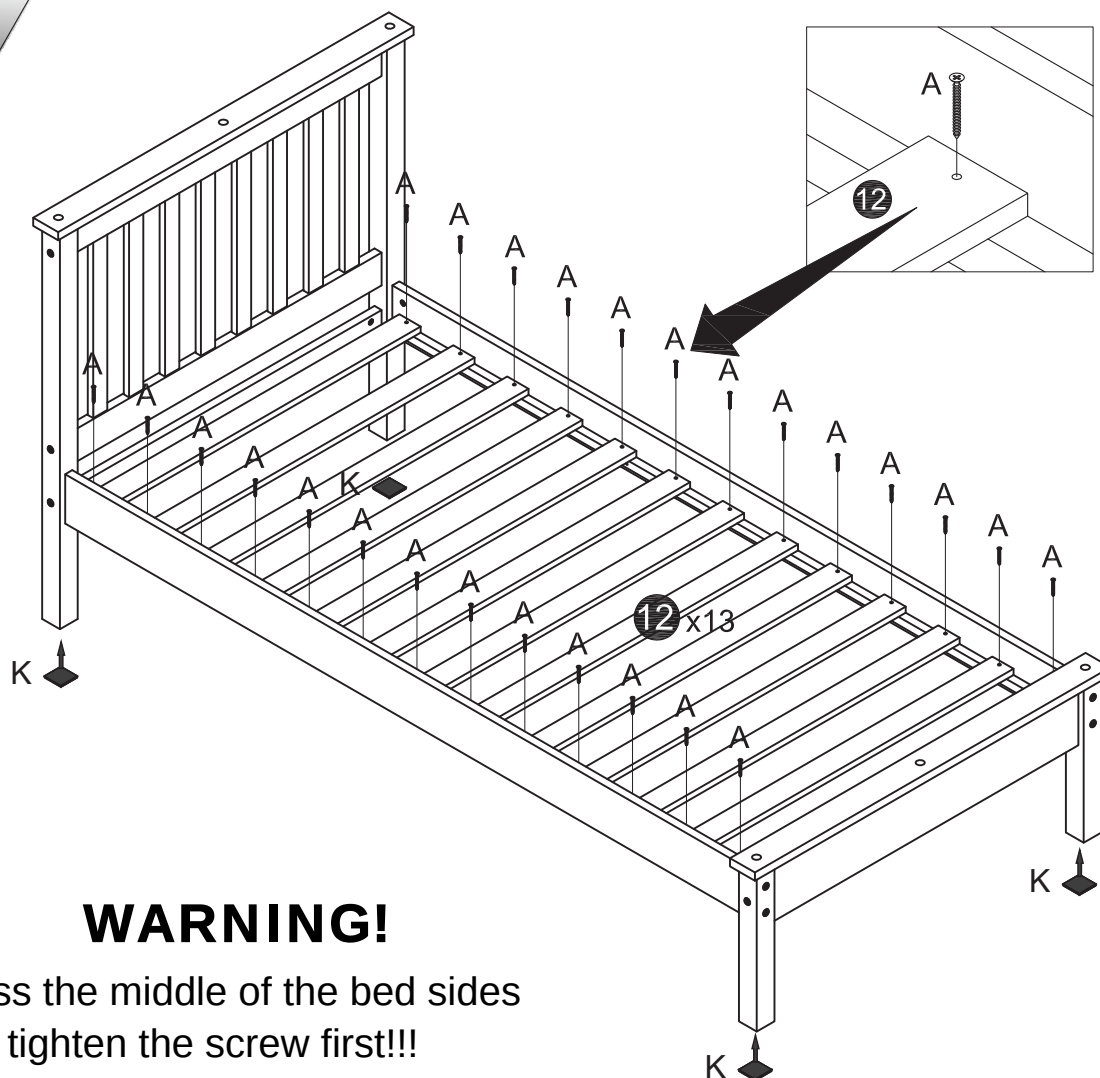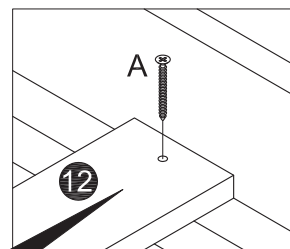

WARNING!

Press the middle of the bed sides
and tighten the screw first!!!