



MODEL: HOUSE WOODEN BED

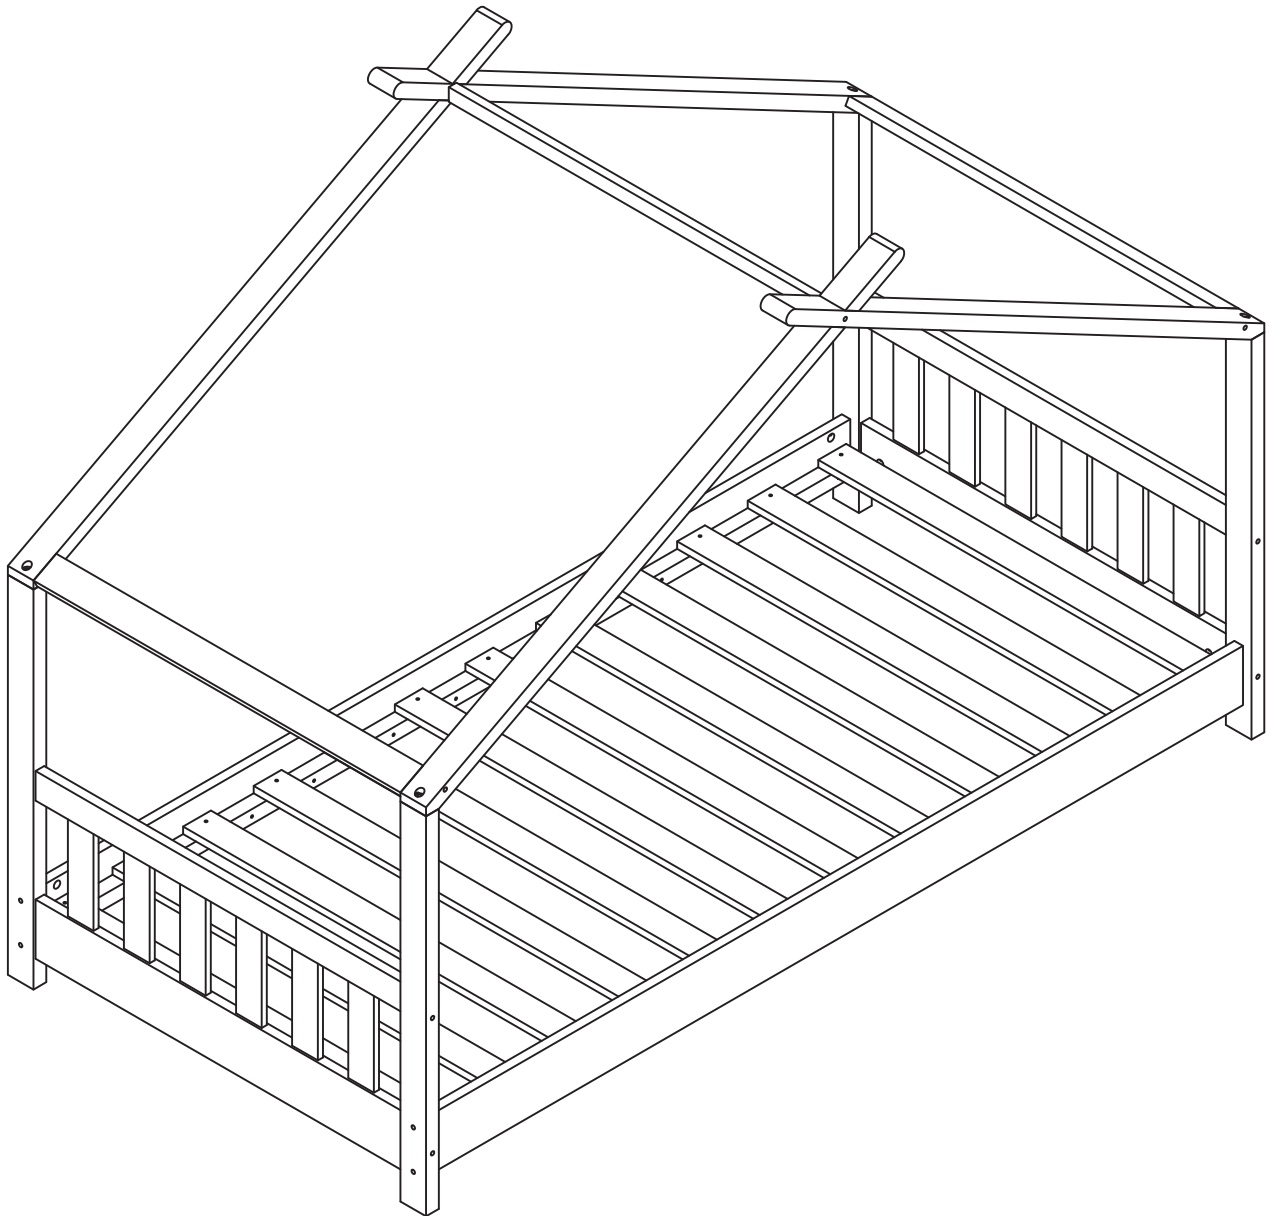


READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUING YOUR PIECE OF FURNITURE. GROUP AND CHECK THE HARDWARE FITTINGS. GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE






NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME. KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE. IN THE EVENT OF QUERY.

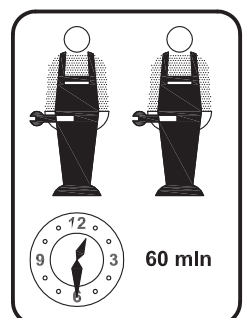



EXPLODED VIEW

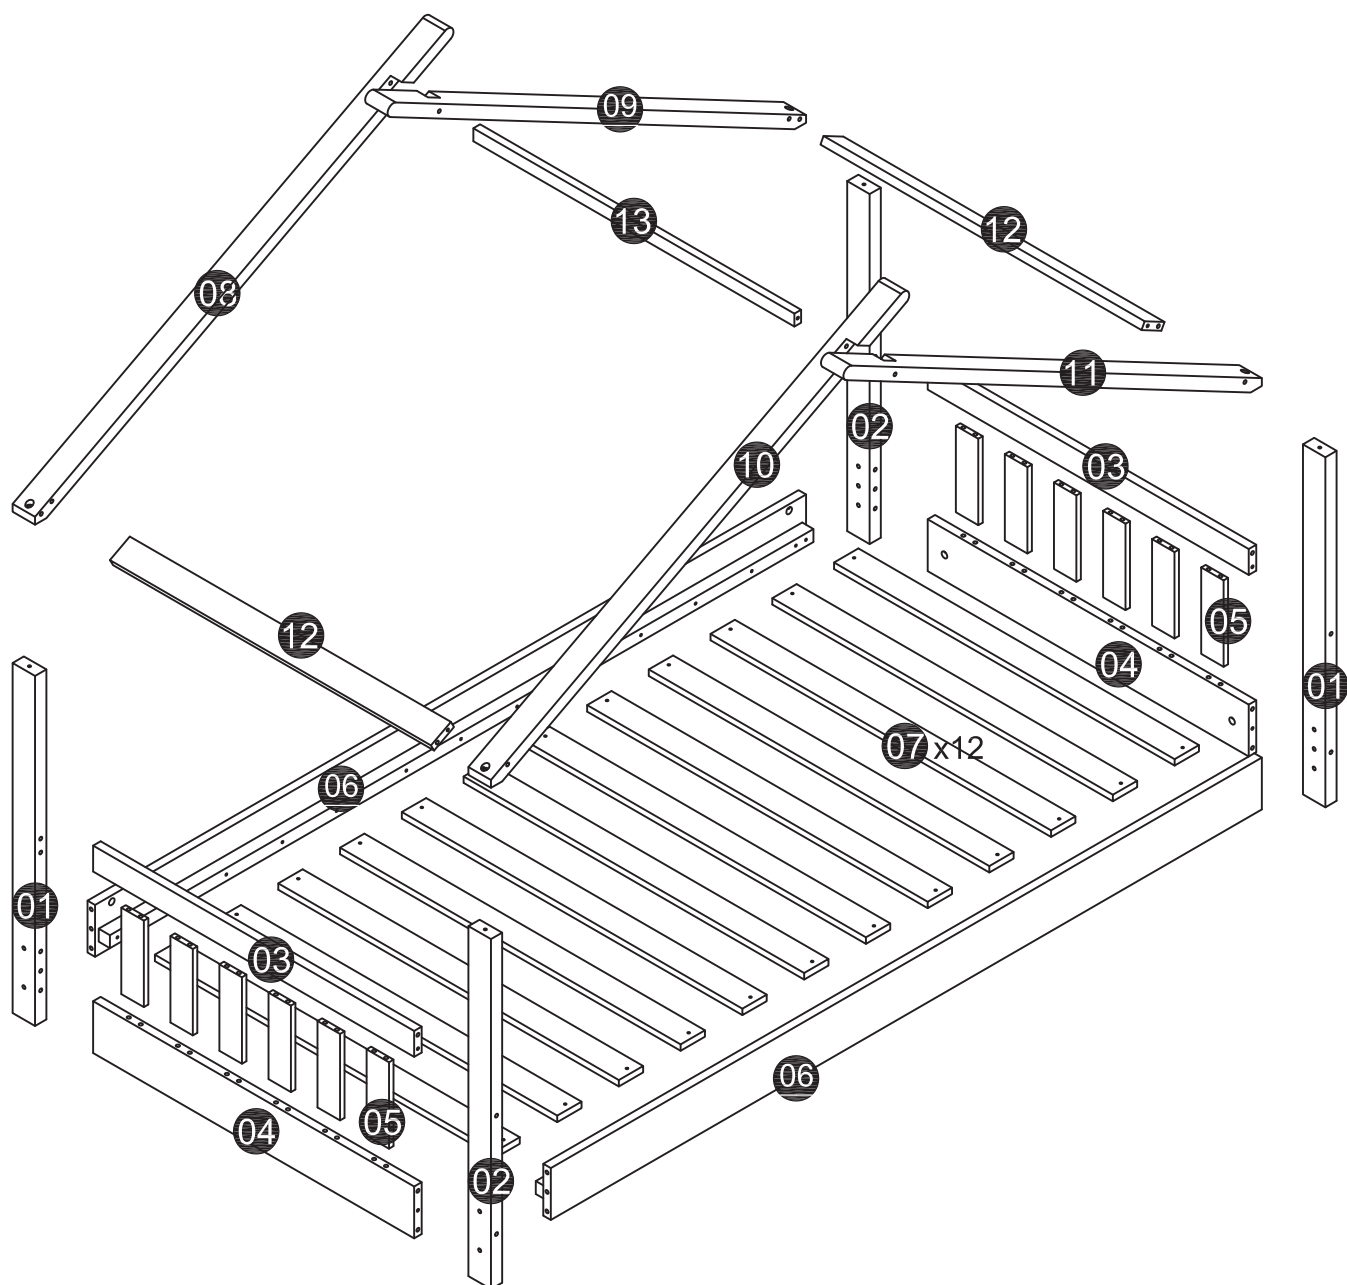


HARDWARE

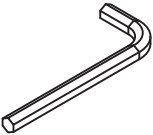A x8  M6 x80mm	B x12  	C x68  Ø8 x30mm	D x10  Ø6 x100mm	E x24  Ø4 x30mm
F x1  	G x4  Ø6 x80mm	H x4  M6 x100mm	K x4  	



TOOLS



Ruler - Use this ruler to help correctly identify the screws








01

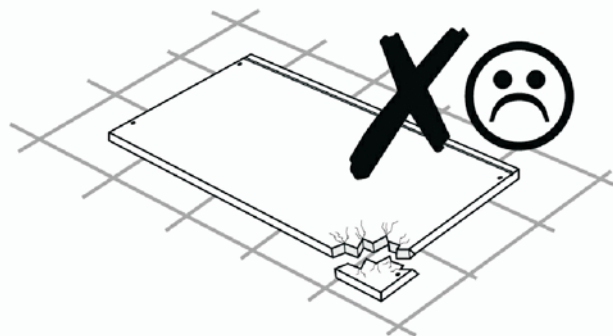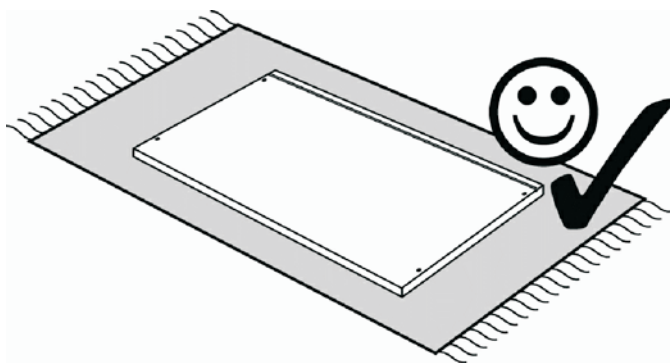


C x68



Ø8 x30mm

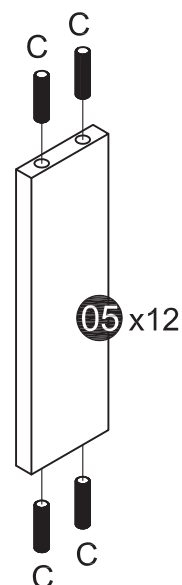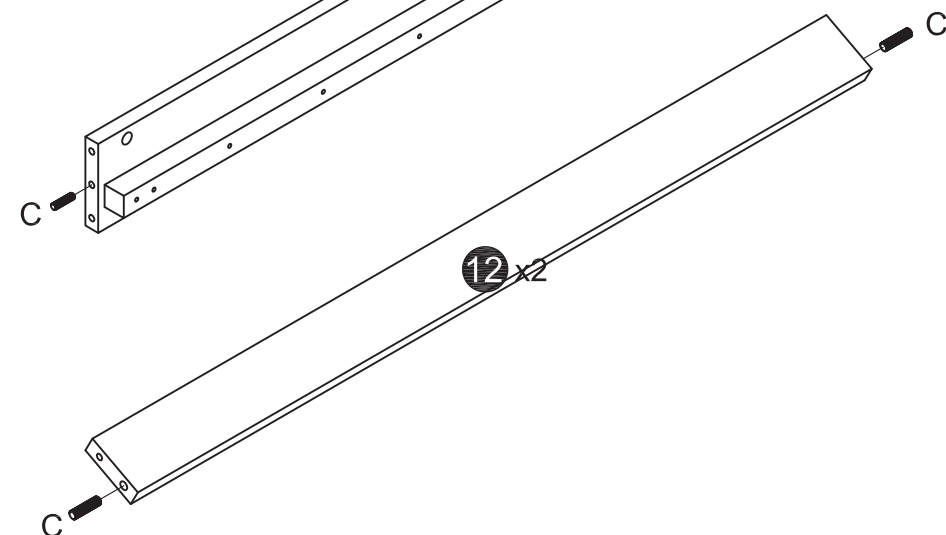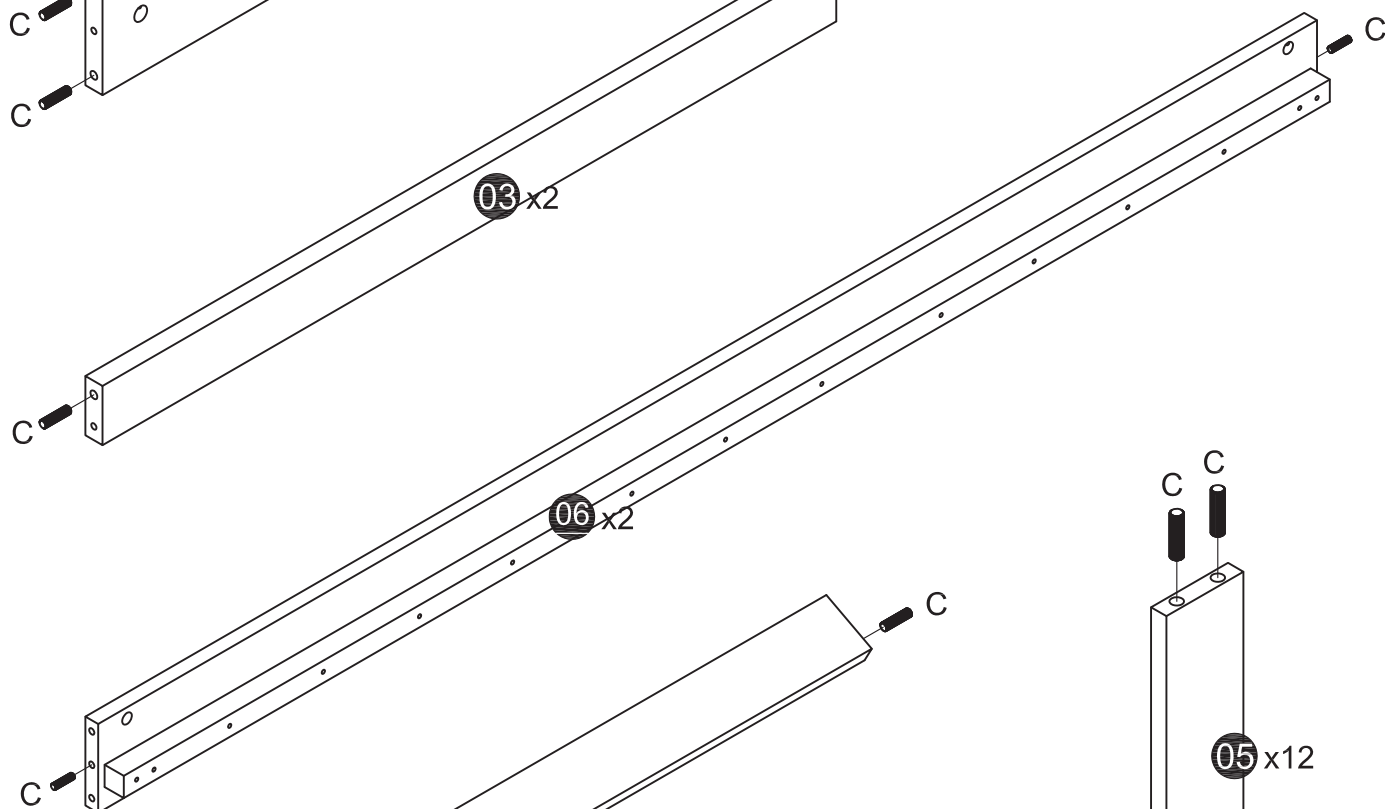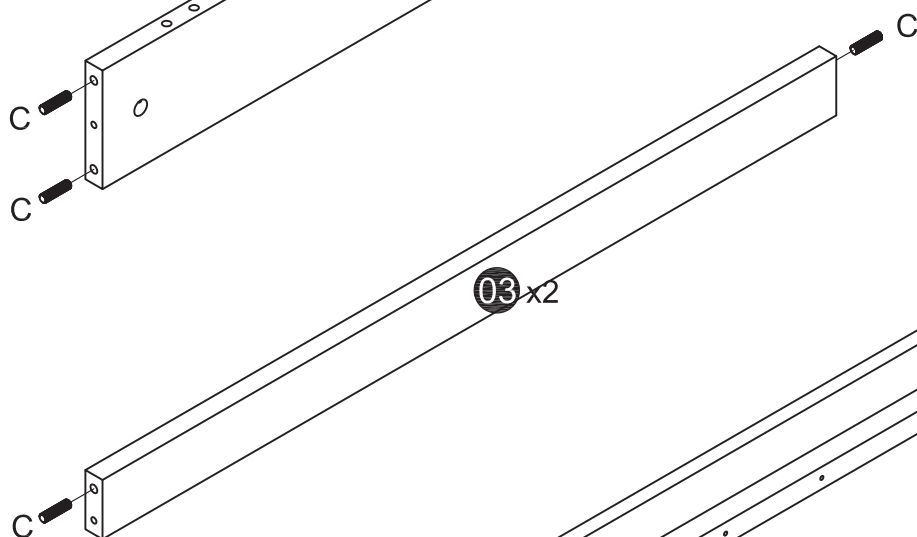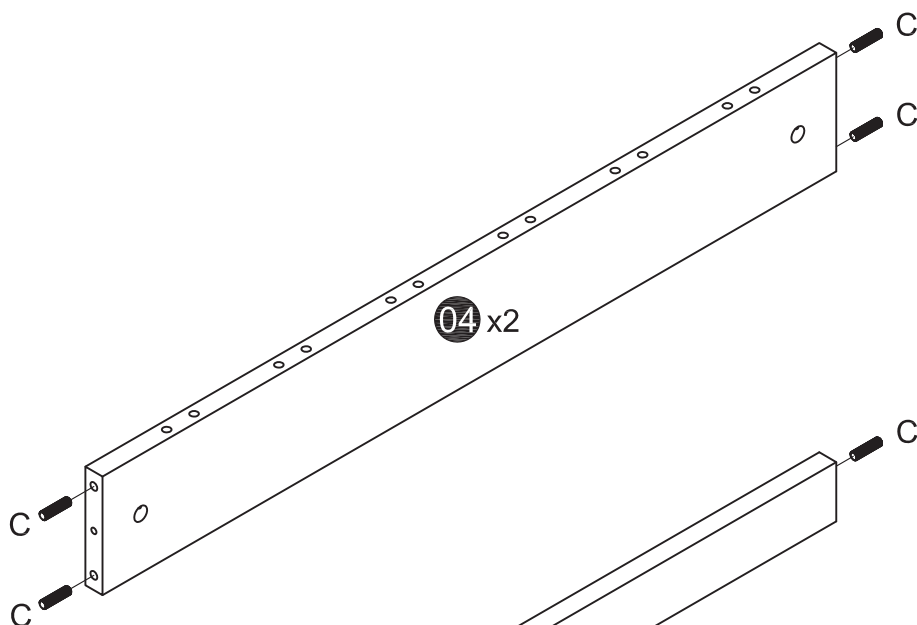



02

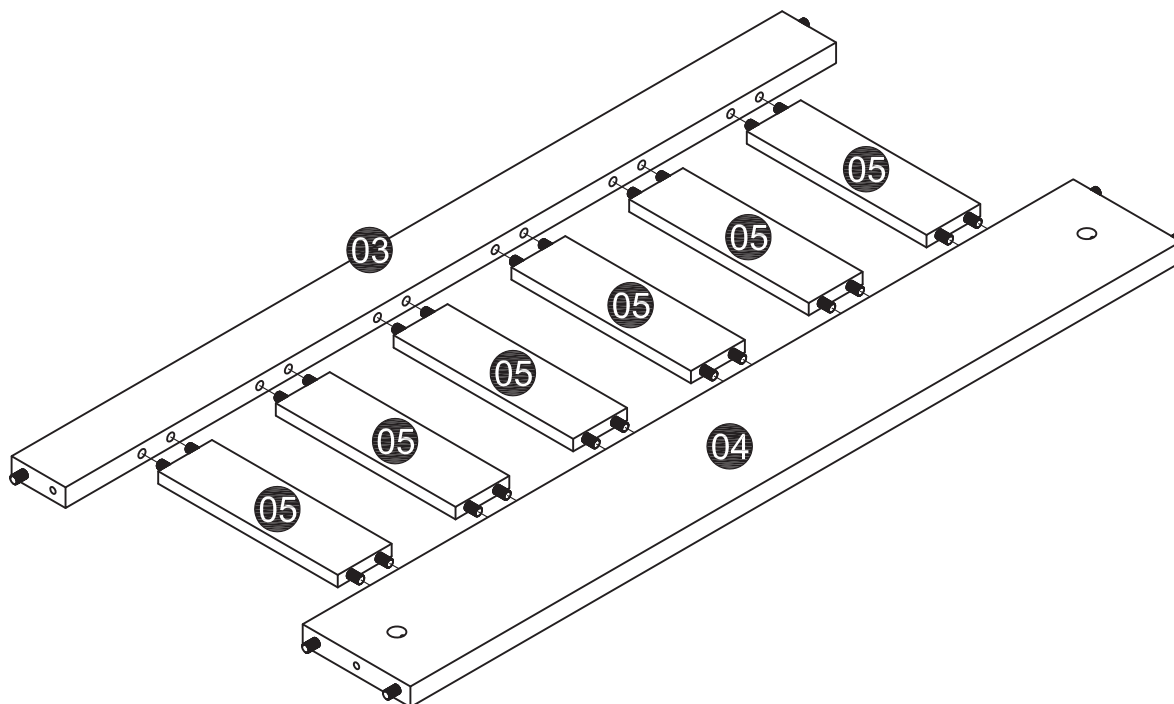

2 x


03


B x4 	H x4  M6 x100mm	F x1 	D x4  Ø6 x100mm
---	--	---	--

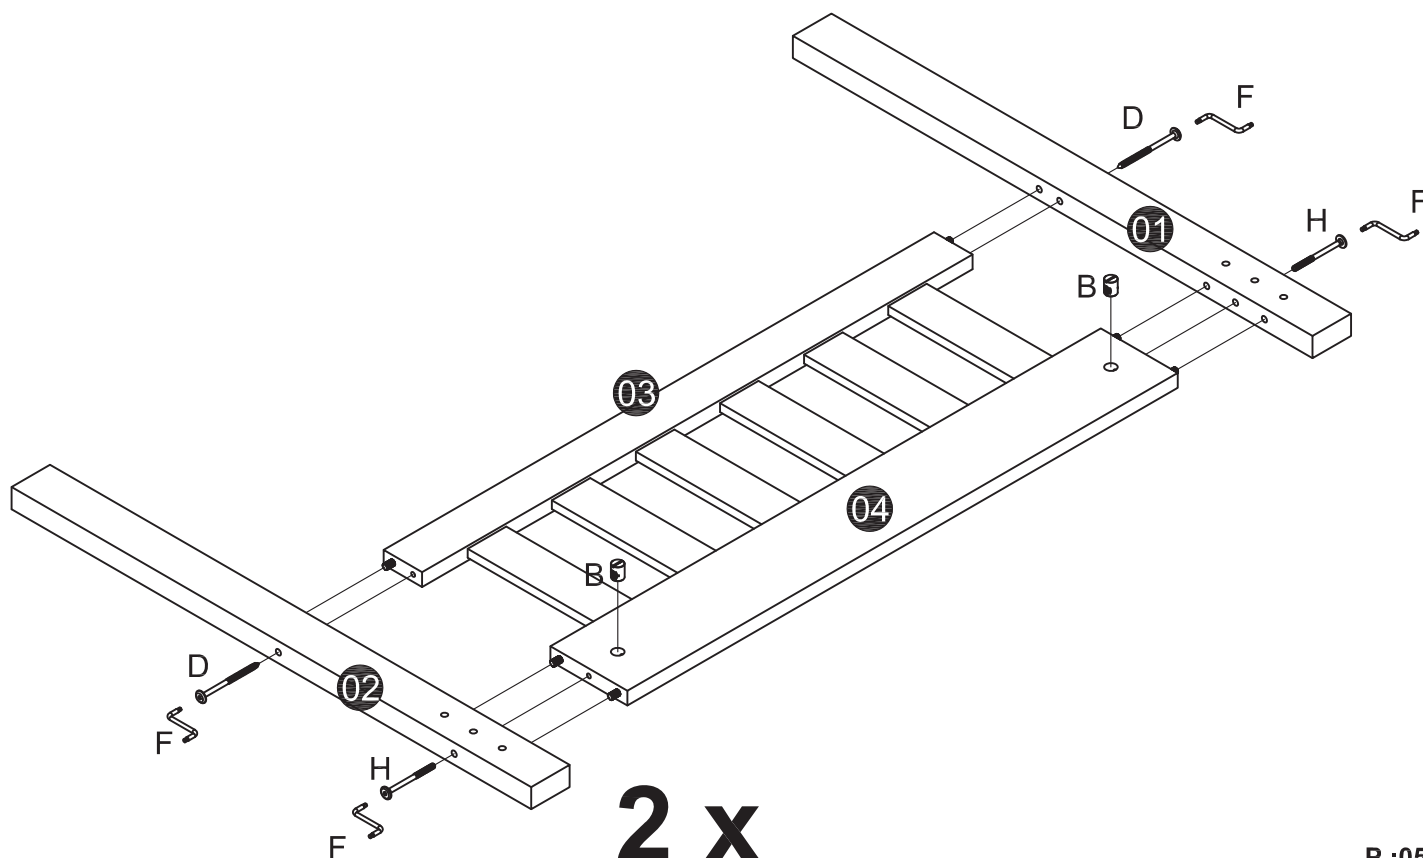

2 x

04


F x1	A x8	B x8
	 M6 x80mm	

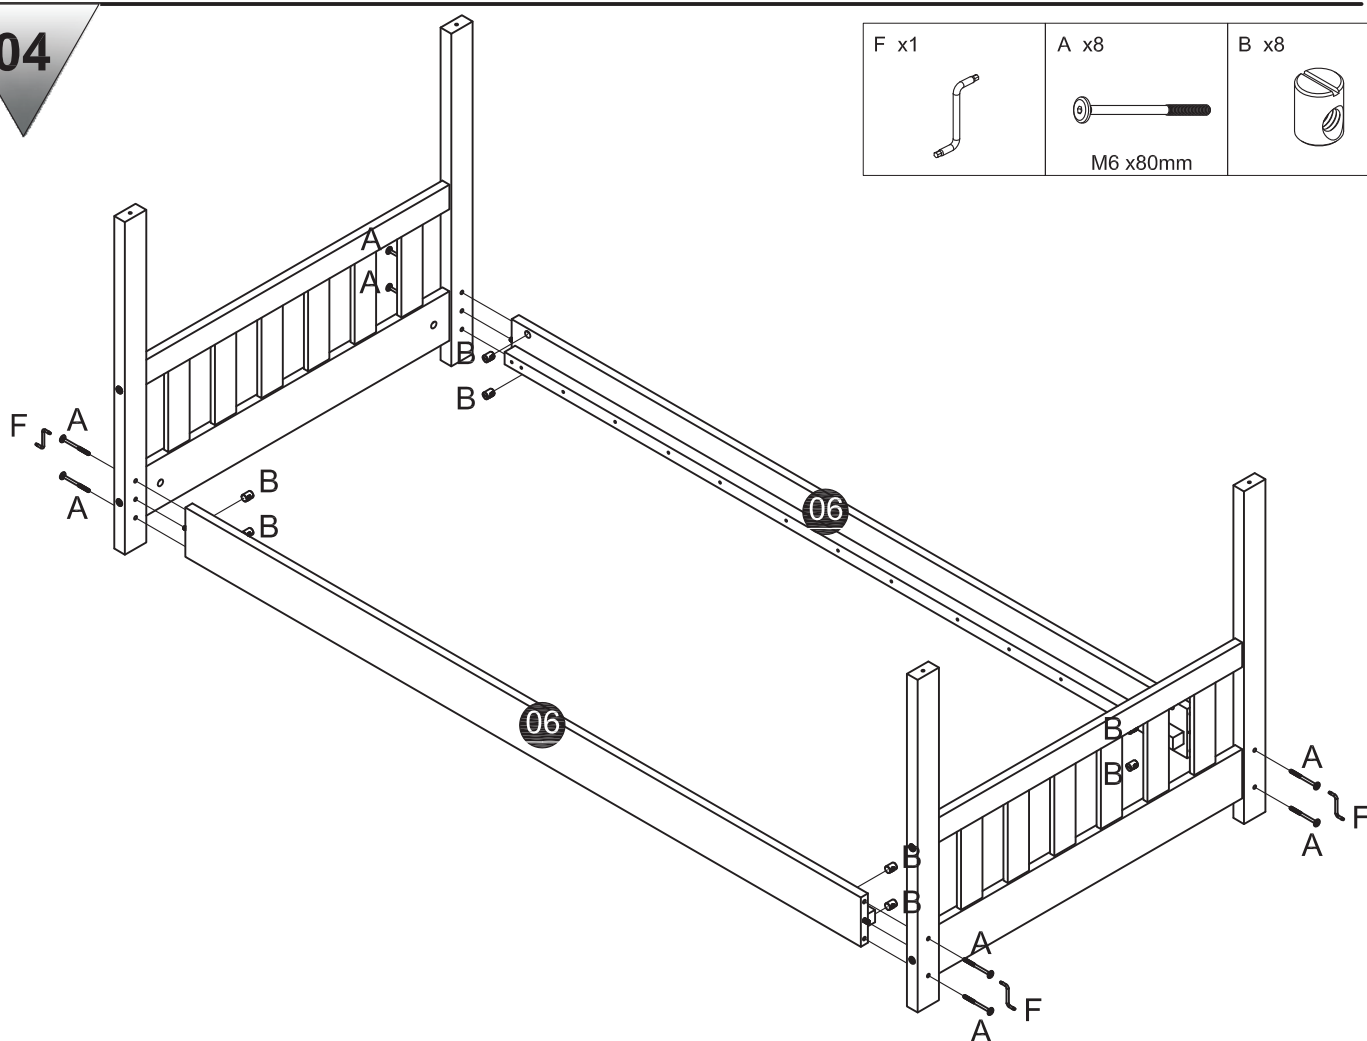

05

E x24


Ø4 x30mm

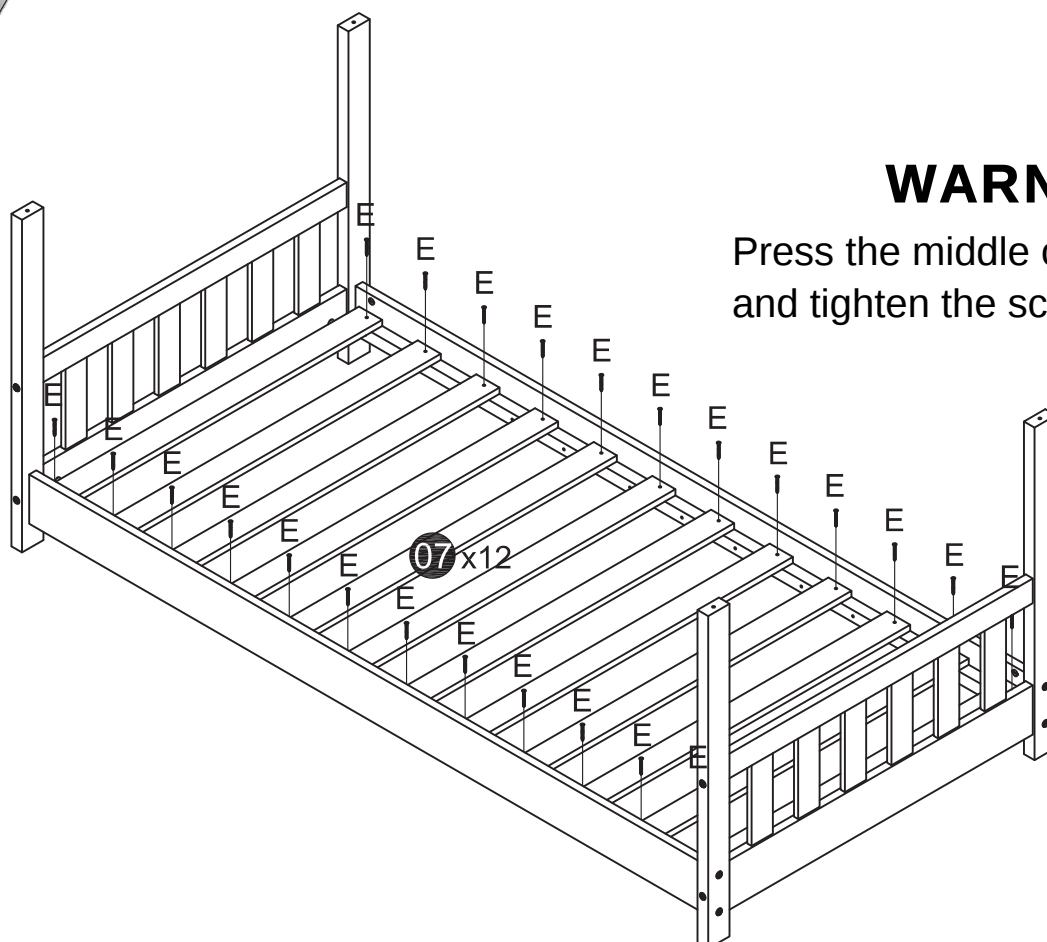


WARNING!


Press the middle of the bed sides and tighten the screw first!!!

06

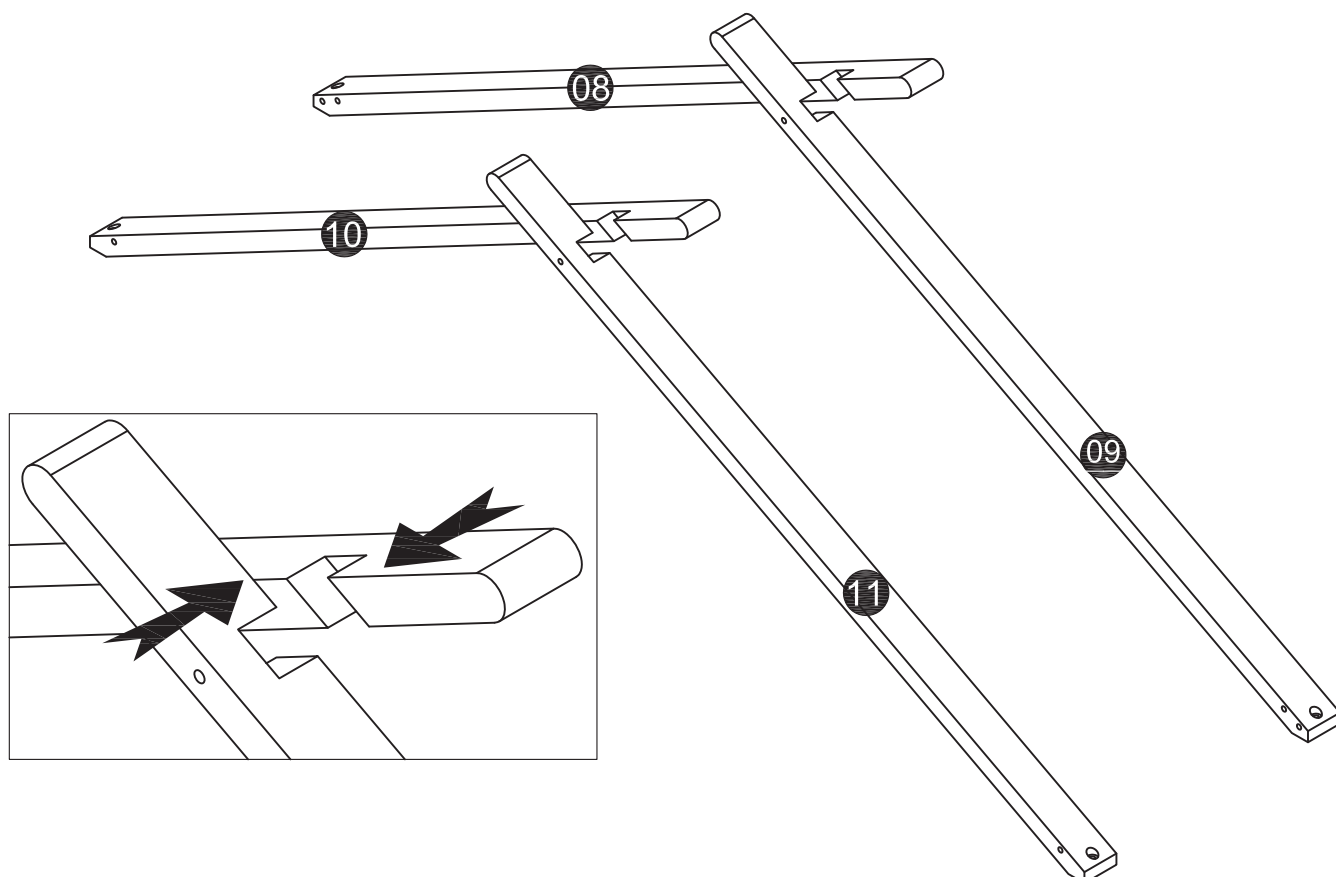


07

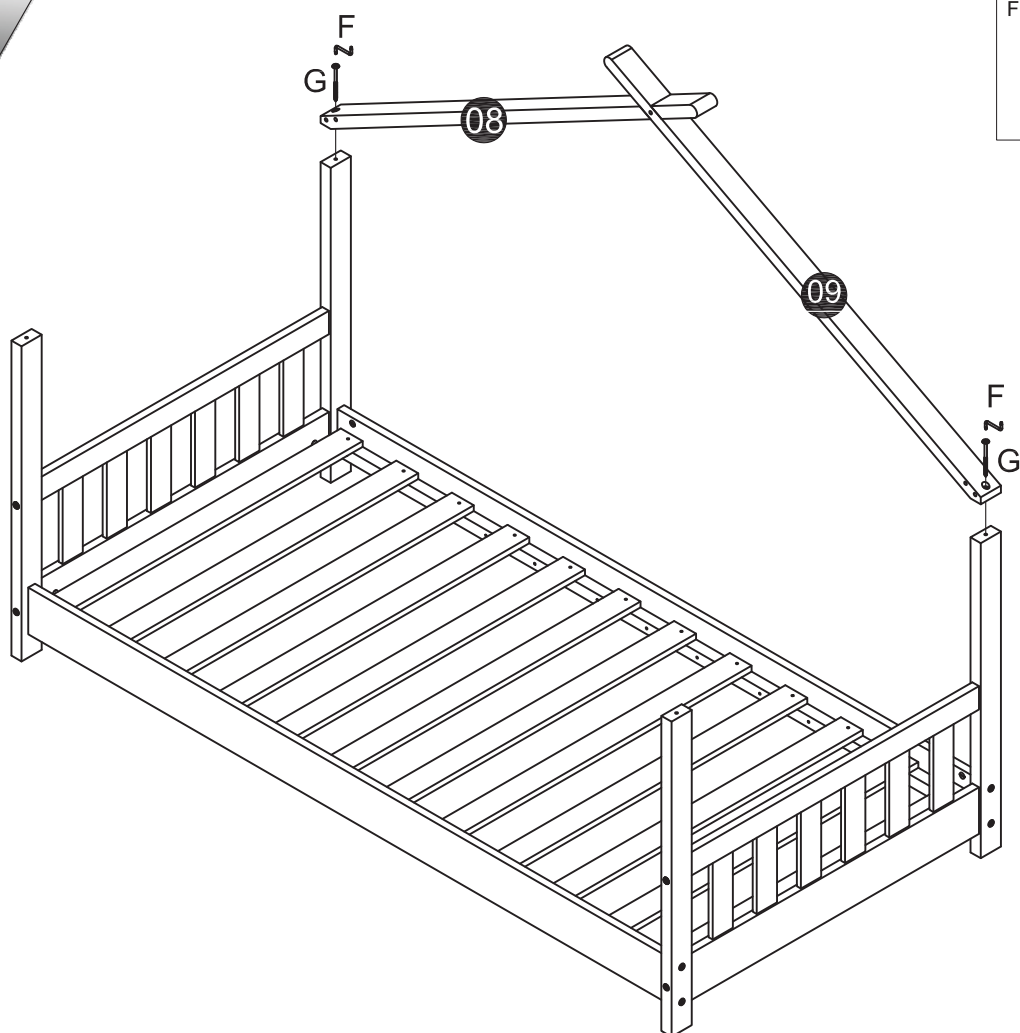


F x1	G x2
	
	Ø6 x80mm


08

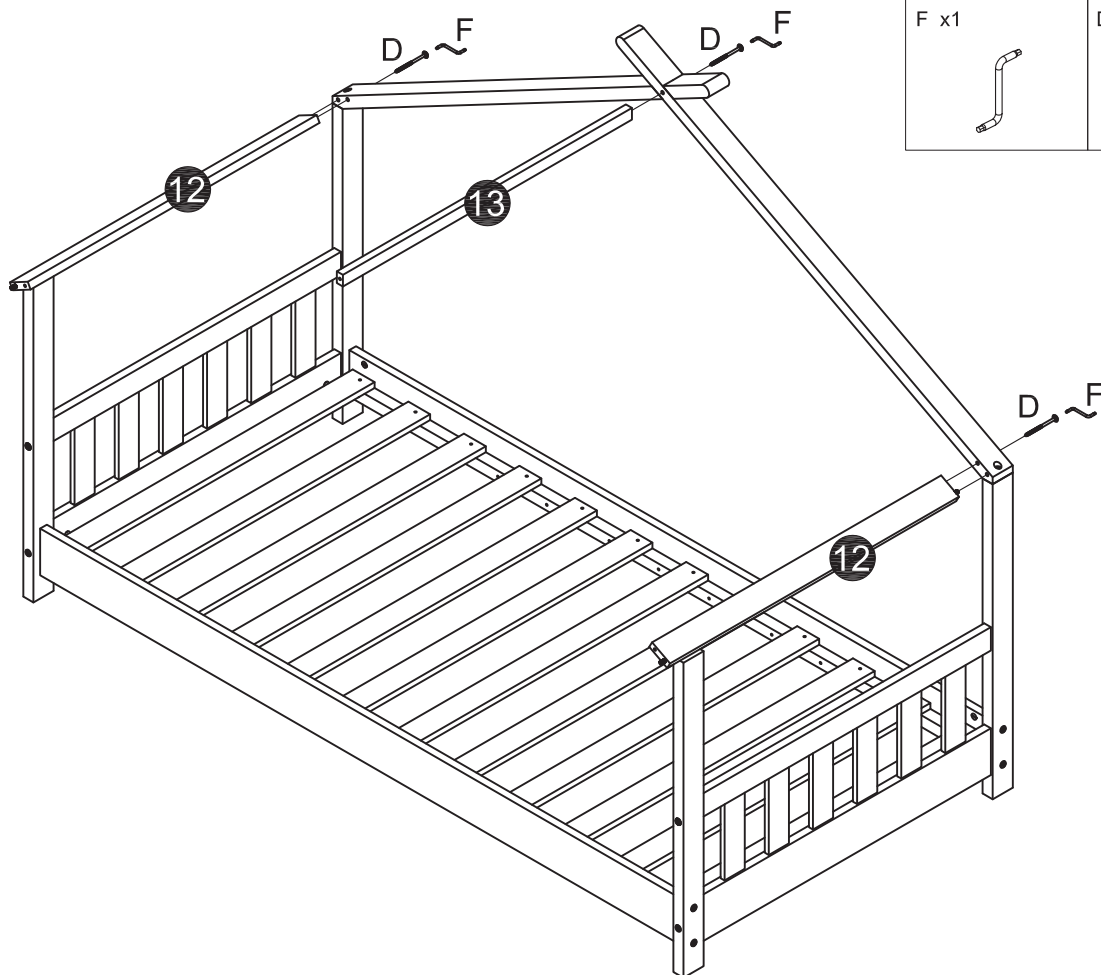

09

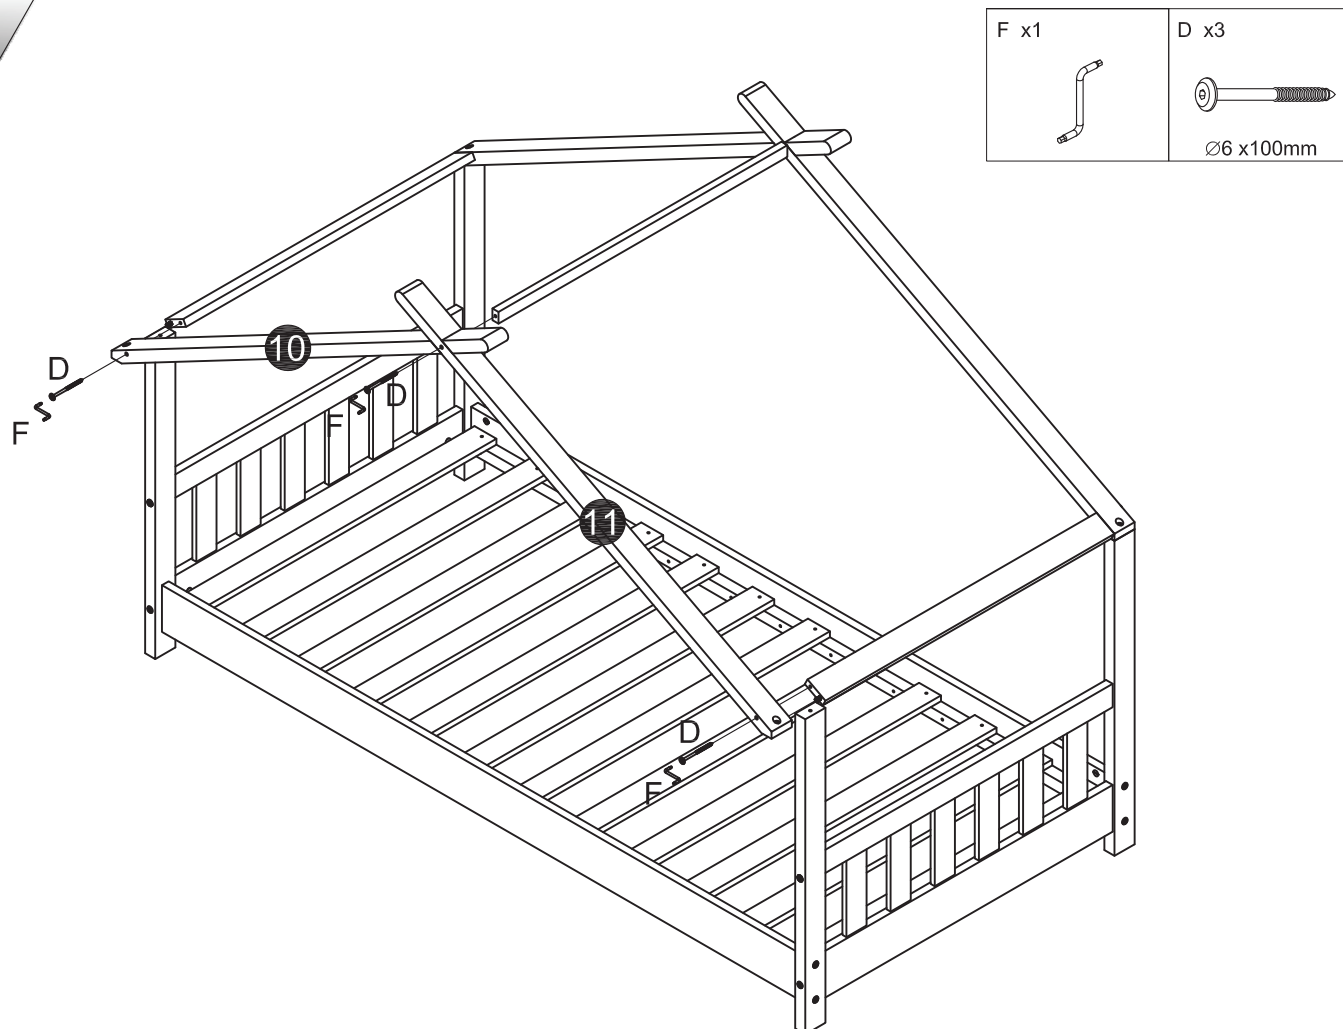

10

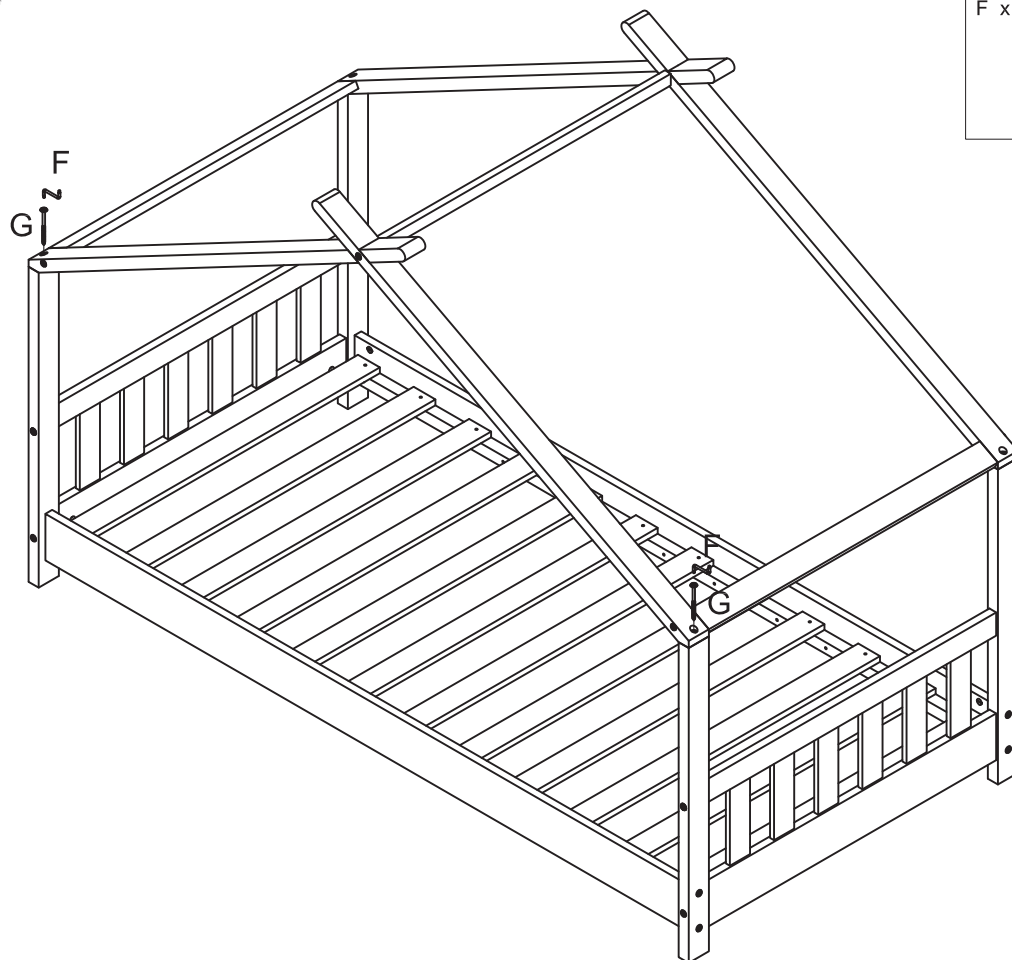

F x1




G x2



Ø6 x80mm

11

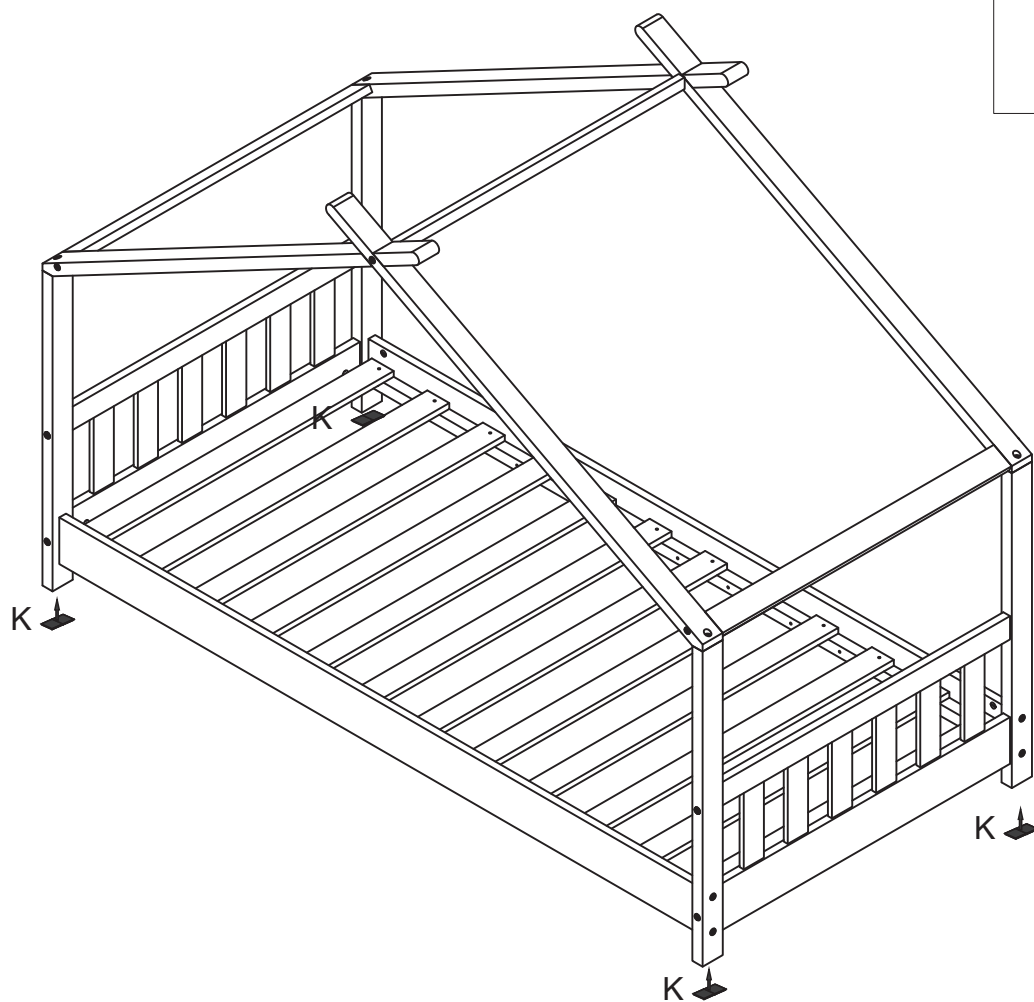

K x4

