



IMPORTANT – READ CAREFULLY – RETAIN FOR FUTURE REFERENCE

- A) **WARNING** – The upper bed of bunk beds are not suitable for children under six years old due to the risk of injury from falls.
- B) **WARNING** – Bunk beds can present a serious risk of injury from strangulation if not used correctly. Never attach or hang items to any part of the bunk bed that are not designed to be used with the bed, for example, but not limited to ropes, strings, cords, hooks, belts and bags.
- C) **WARNING** – children can become trapped between the bed and the wall, a roof pitch, the ceiling, adjoining pieces of furniture (e.g. cupboards) and the like. To avoid risk of serious injury the distance between the top safety barrier and the adjoining structure shall not exceed 75mm or shall be more than 230mm.
- D) **WARNING** – Do not use the bunk bed if any structural part is broken or missing.
- E) Always follow the manufacturer's instruction.
- F) Recommended size of mattress: upper bed: 90 x 190cm and lower bed: 90 x 190cm
- G) Maximum thickness of mattress 15cm.
- H) Periodically check and ensure that the guardrails, ladder, and other components are in their proper position, free from damage. Also, make sure the connectors are tight and secure.
- I) Ventilation of the room is necessary in order to keep the humidity low and to prevent mould in and around the bed
- J) This item meets the UK test standards

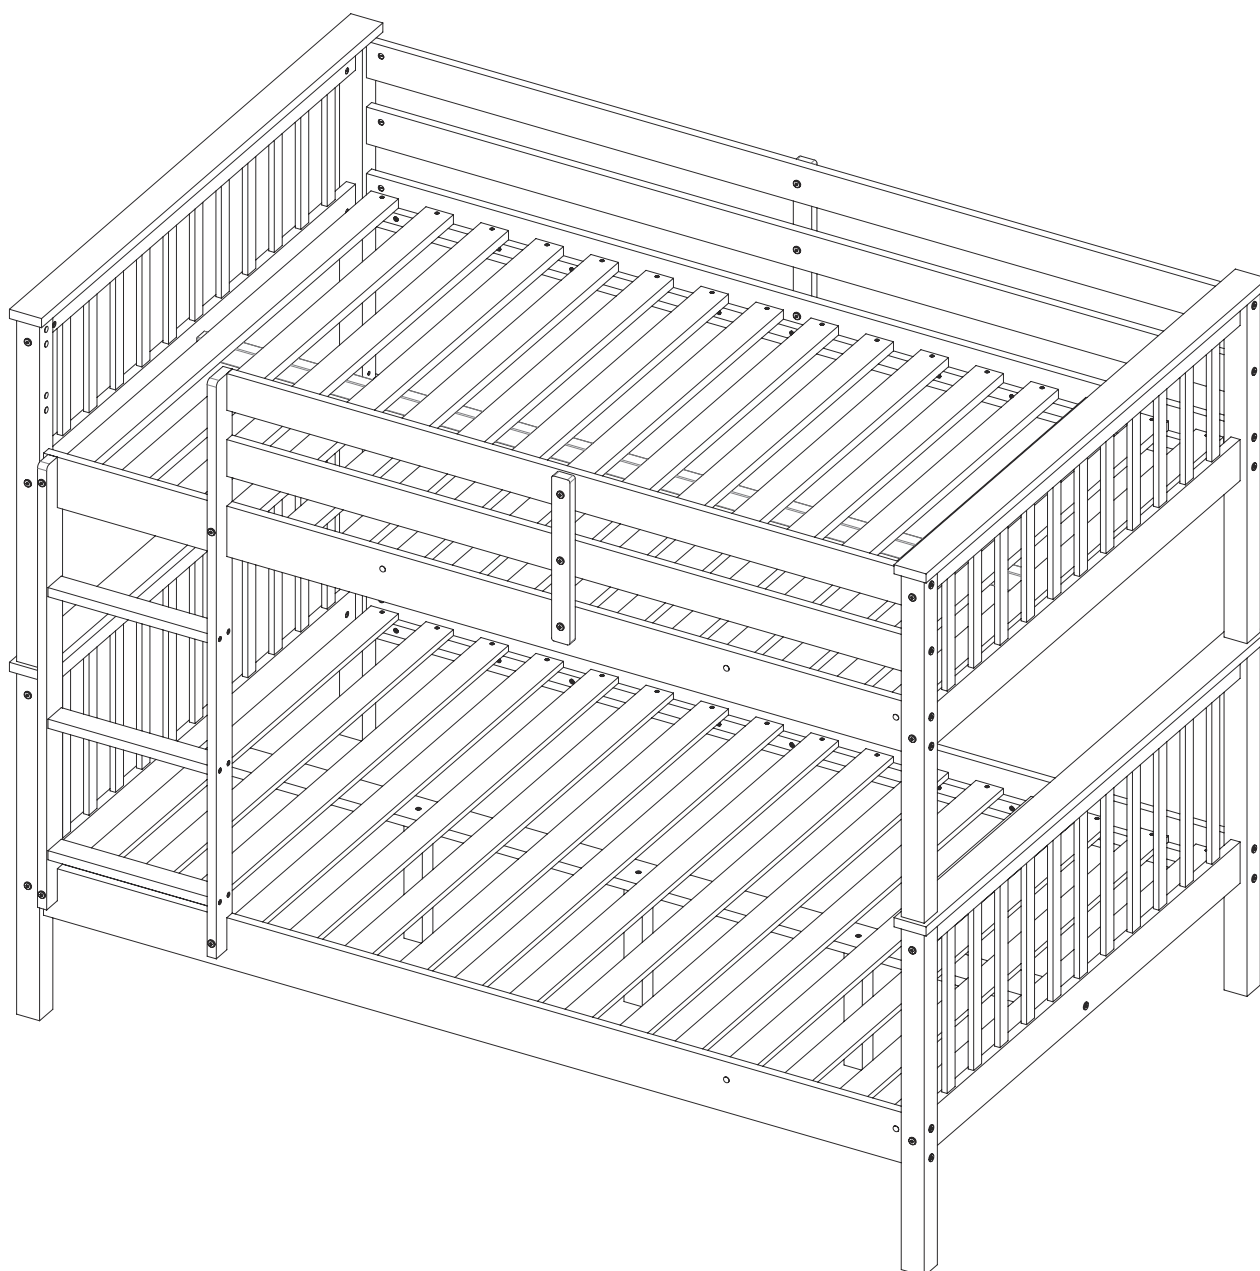


READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUING YOUR PIECE OF FURNITURE. GROUP AND CHECK THE HARDWARE FITTINGS. GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE









NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME. KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE. IN THE EVENT OF QUERY.

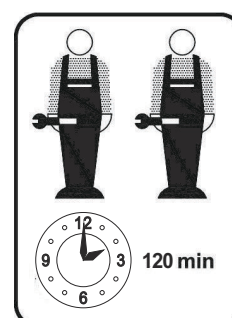

EXPLODED VIEW

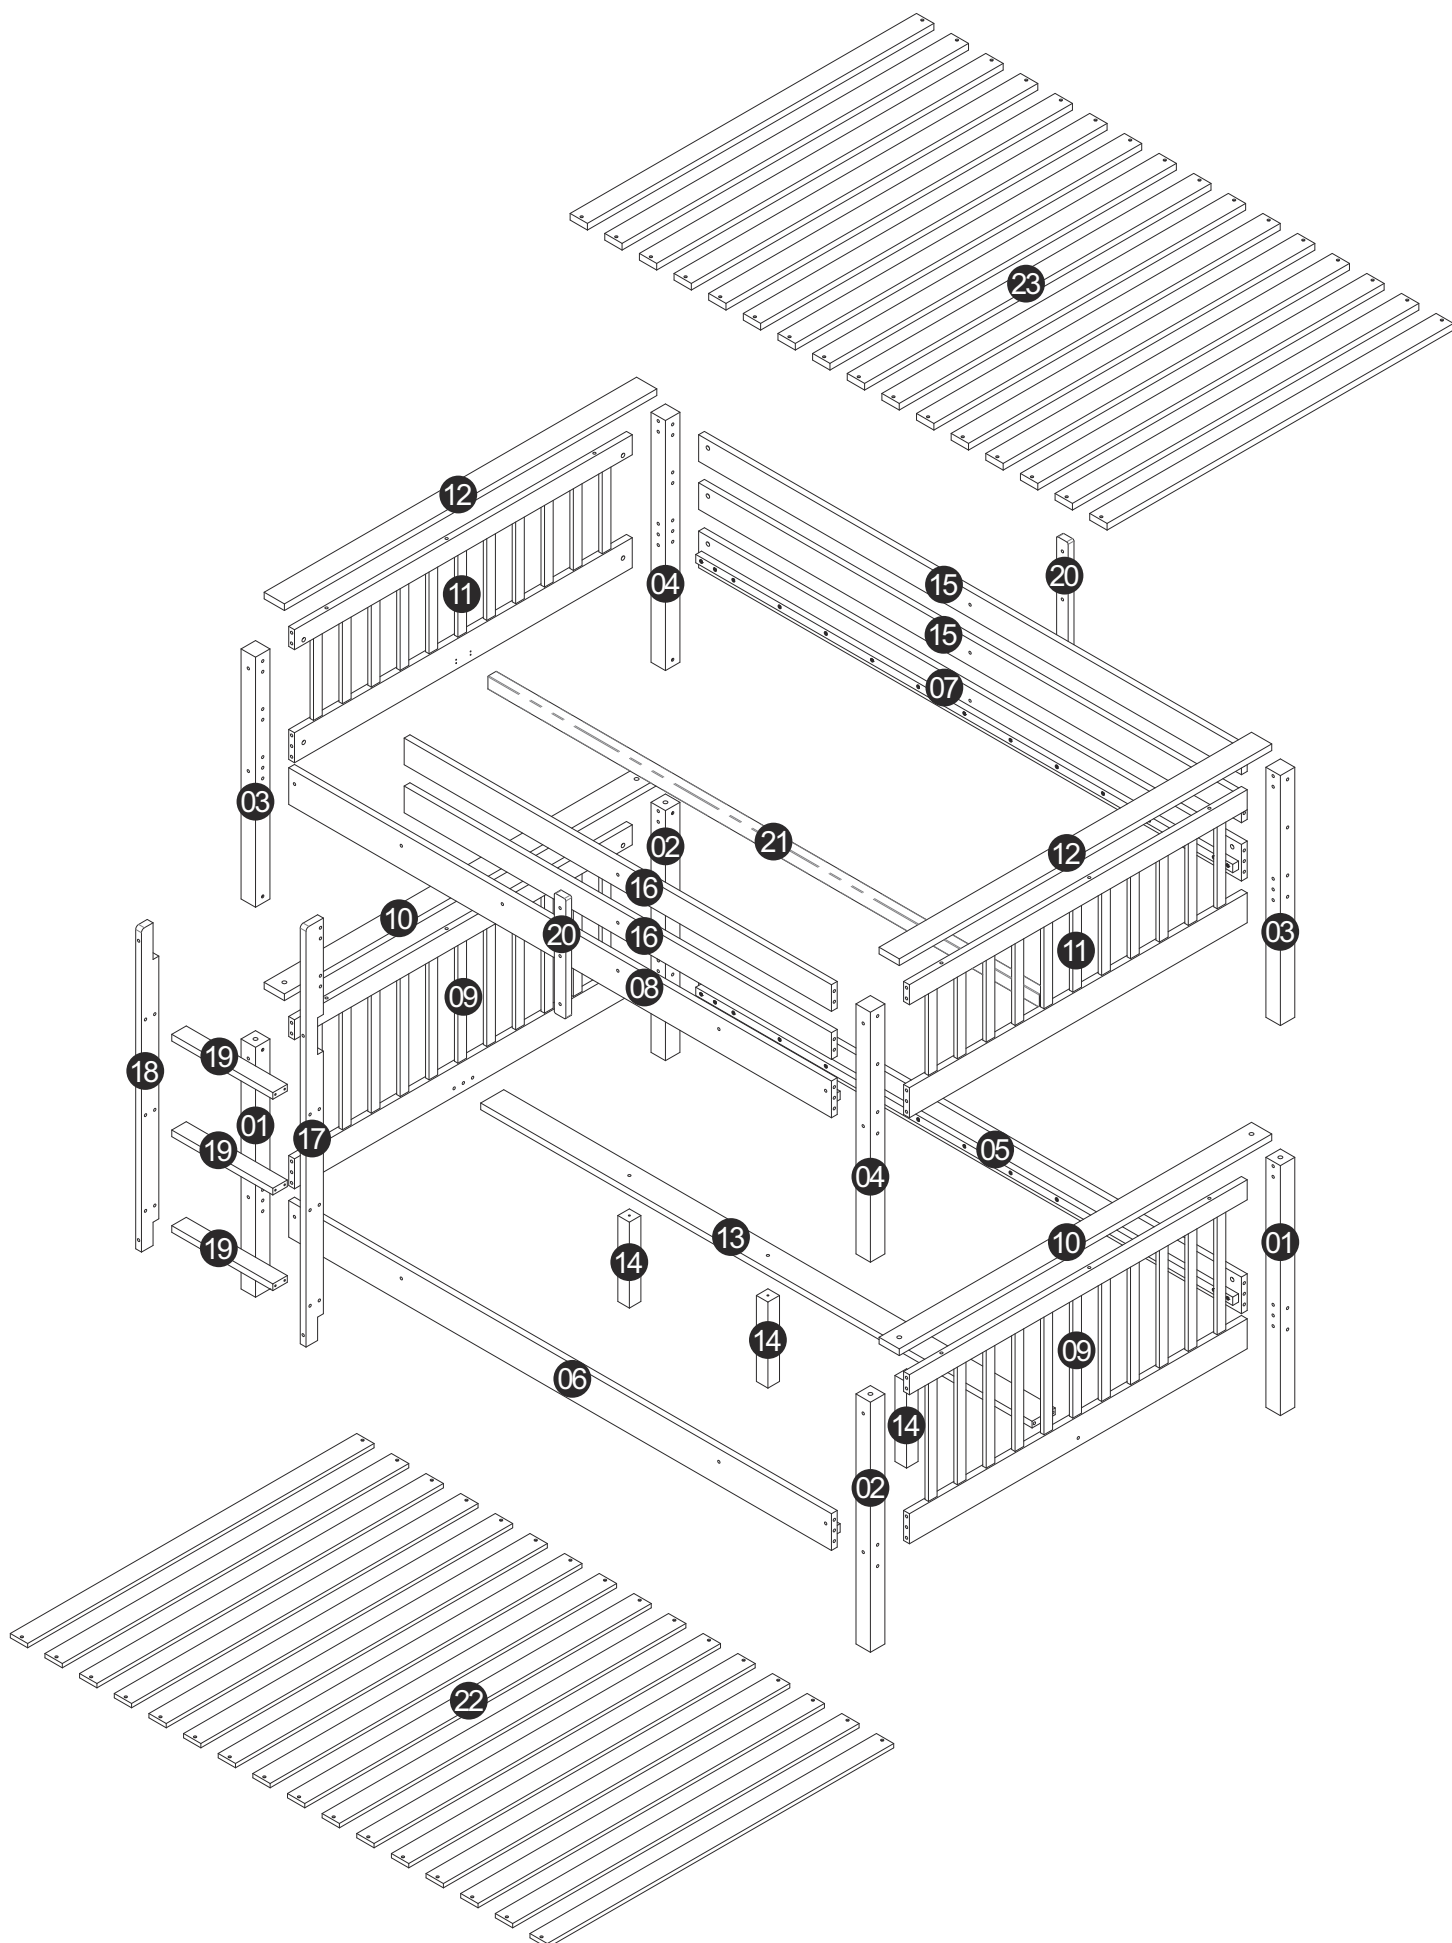


HARDWARE

A x38  M6x90	B x40  	C x44  Φ8x30	D x12  M6x70	E x2 
F x8  Φ3.5x16	G x15  Φ7x60	H x2  Φ6x60	J x4  Φ12x80	K x8  Φ4x25
L x2  M6x60	M x4  M6x50	N x10  	P x6  M6x30	Q x64  Φ3x30
R x2  	S x13  			




TOOLS



Ruler - Use this ruler to help correctly identify the screws





01-1

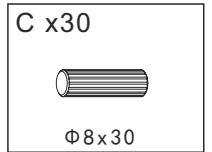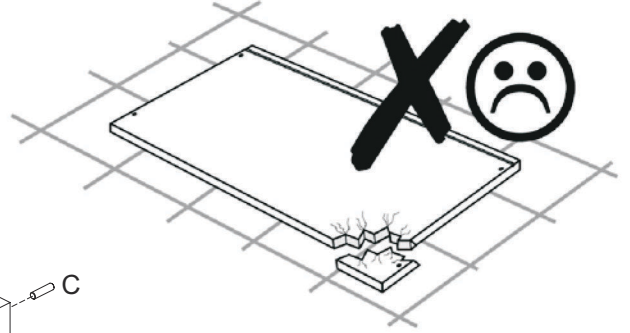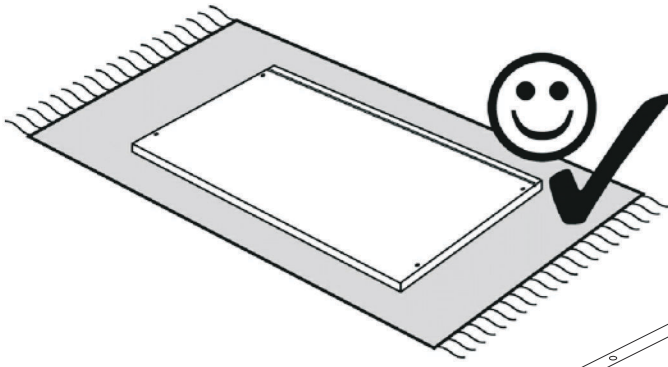


x2

x2

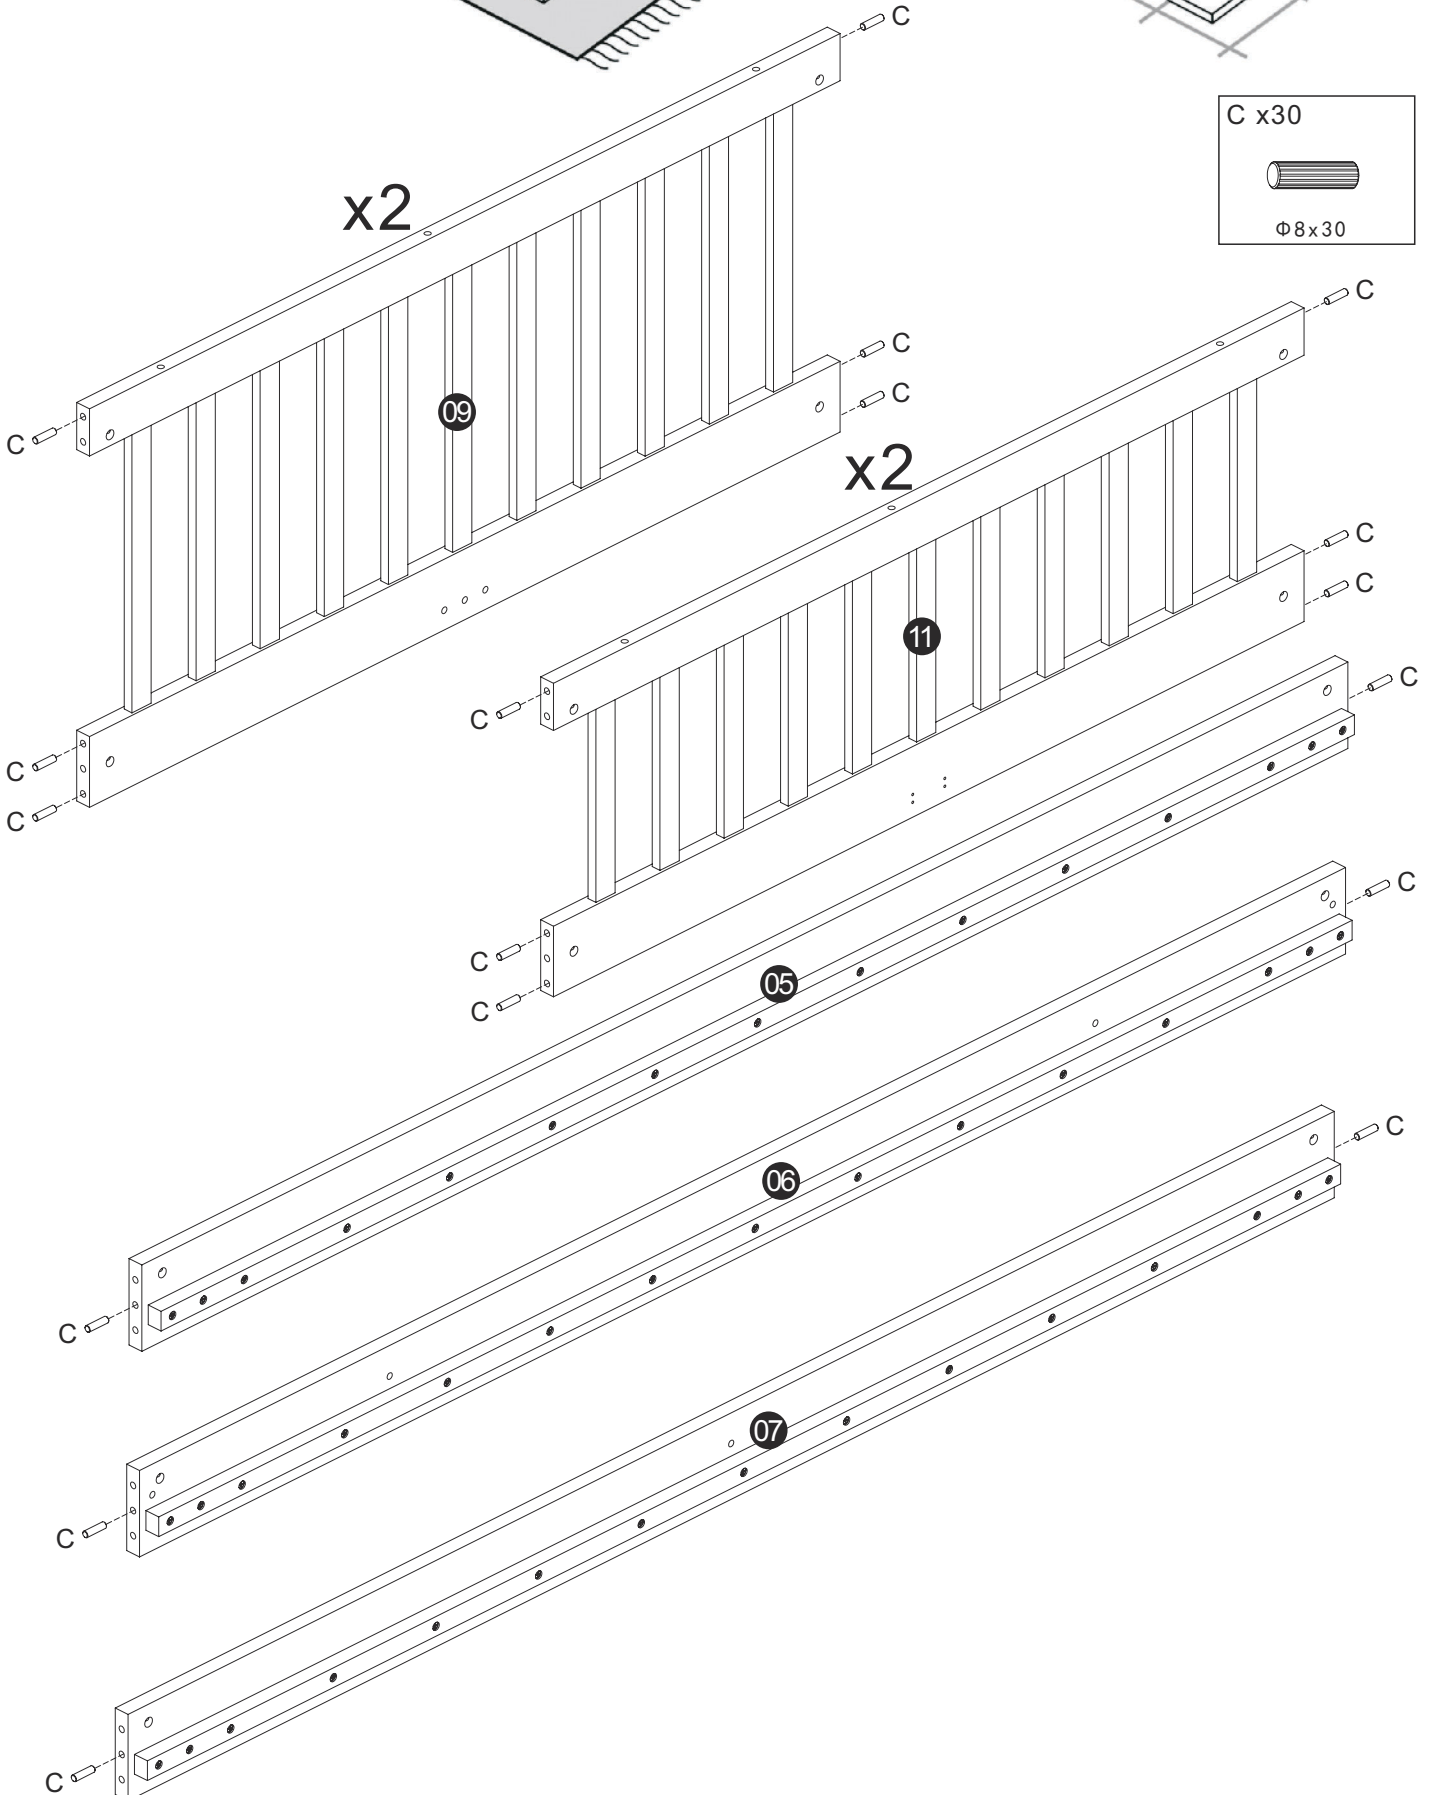


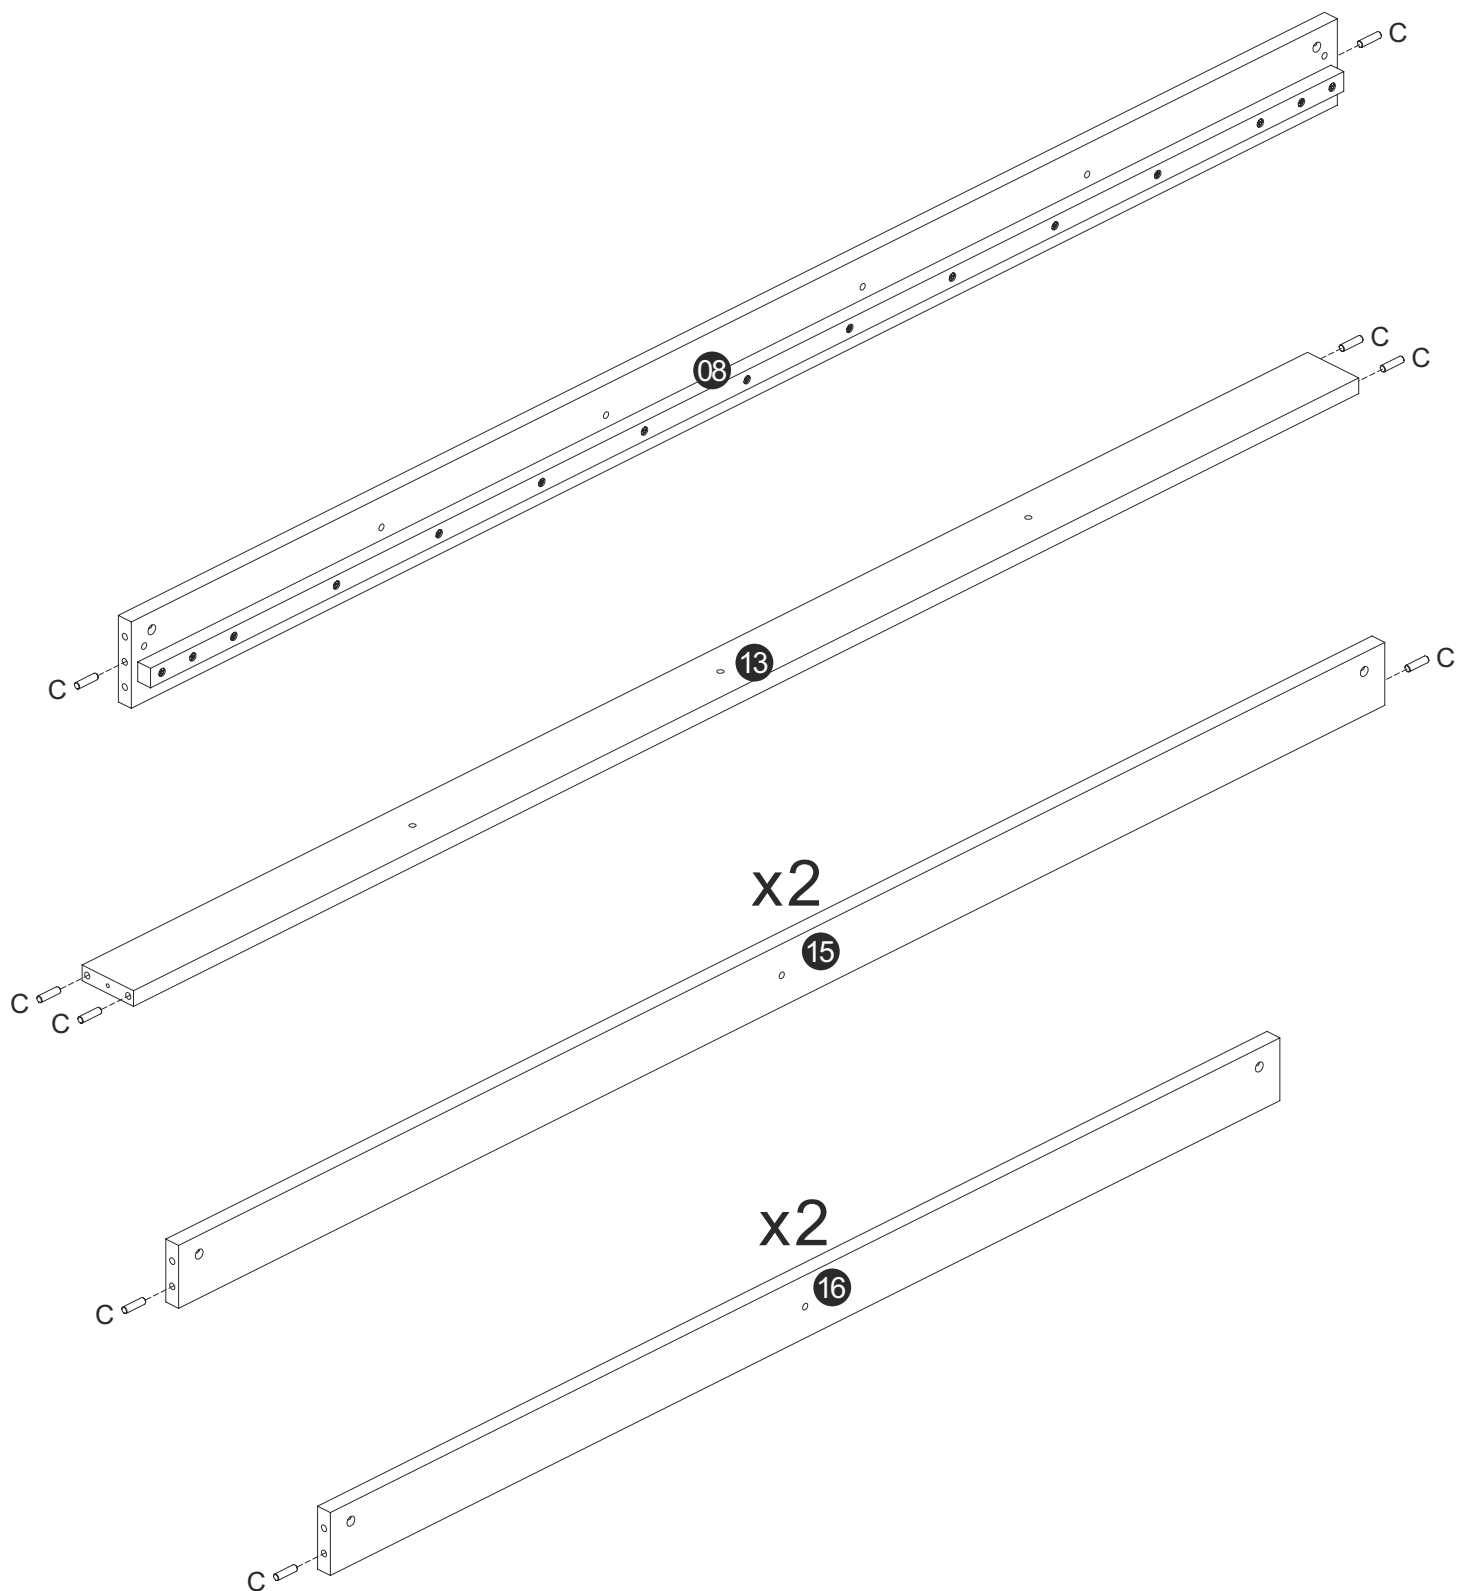



02

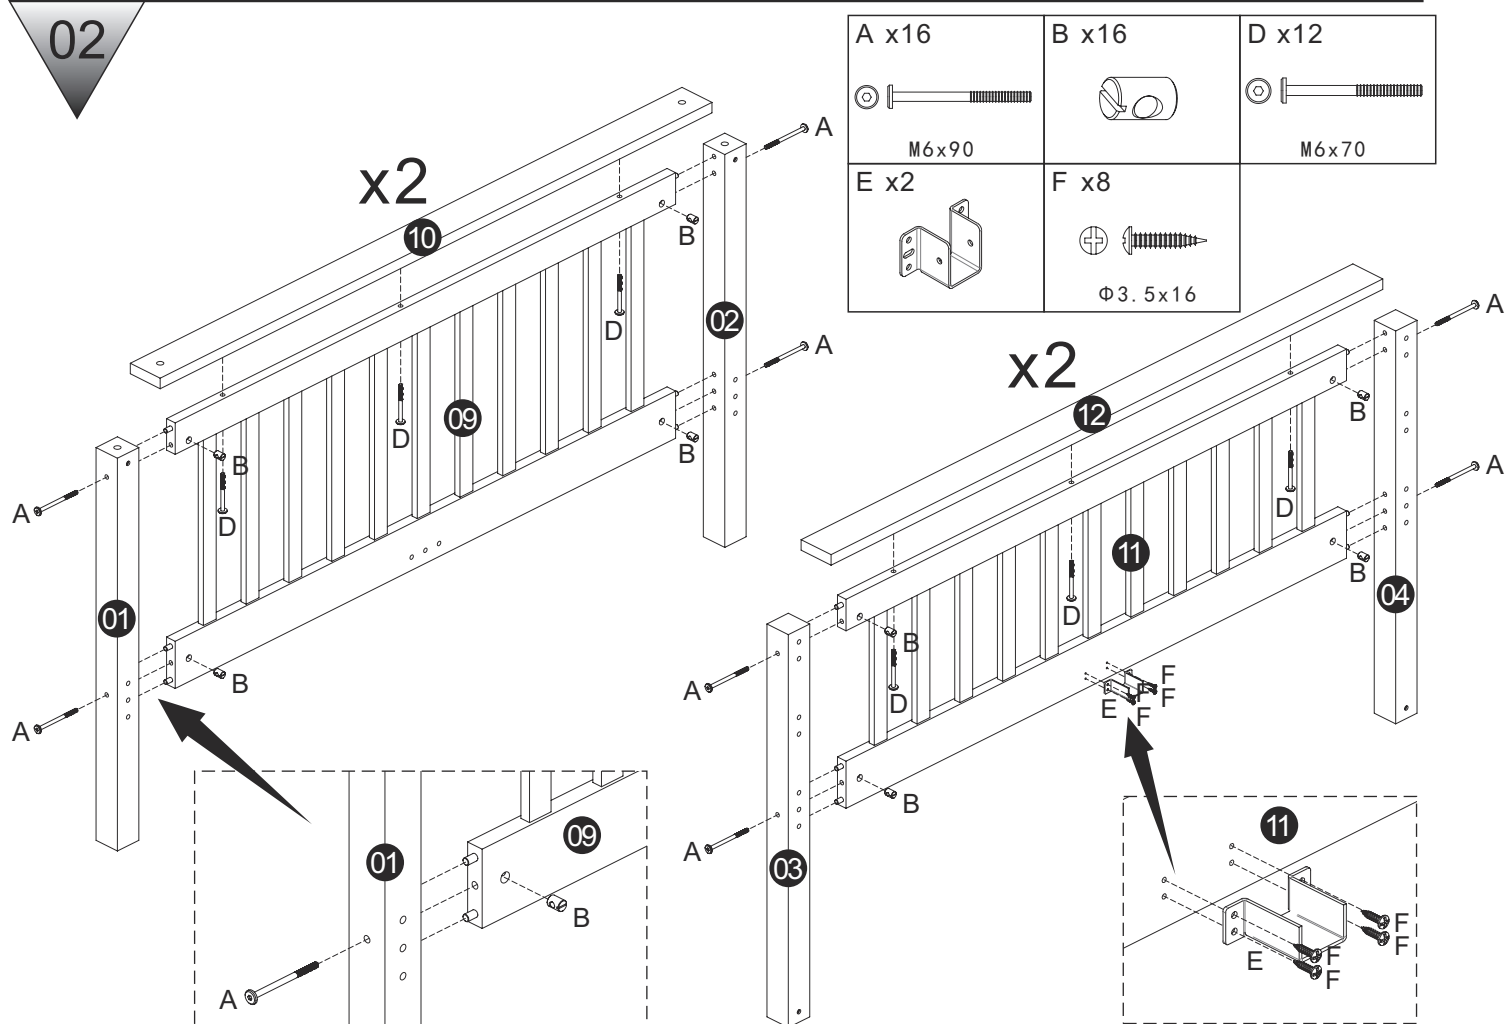


03

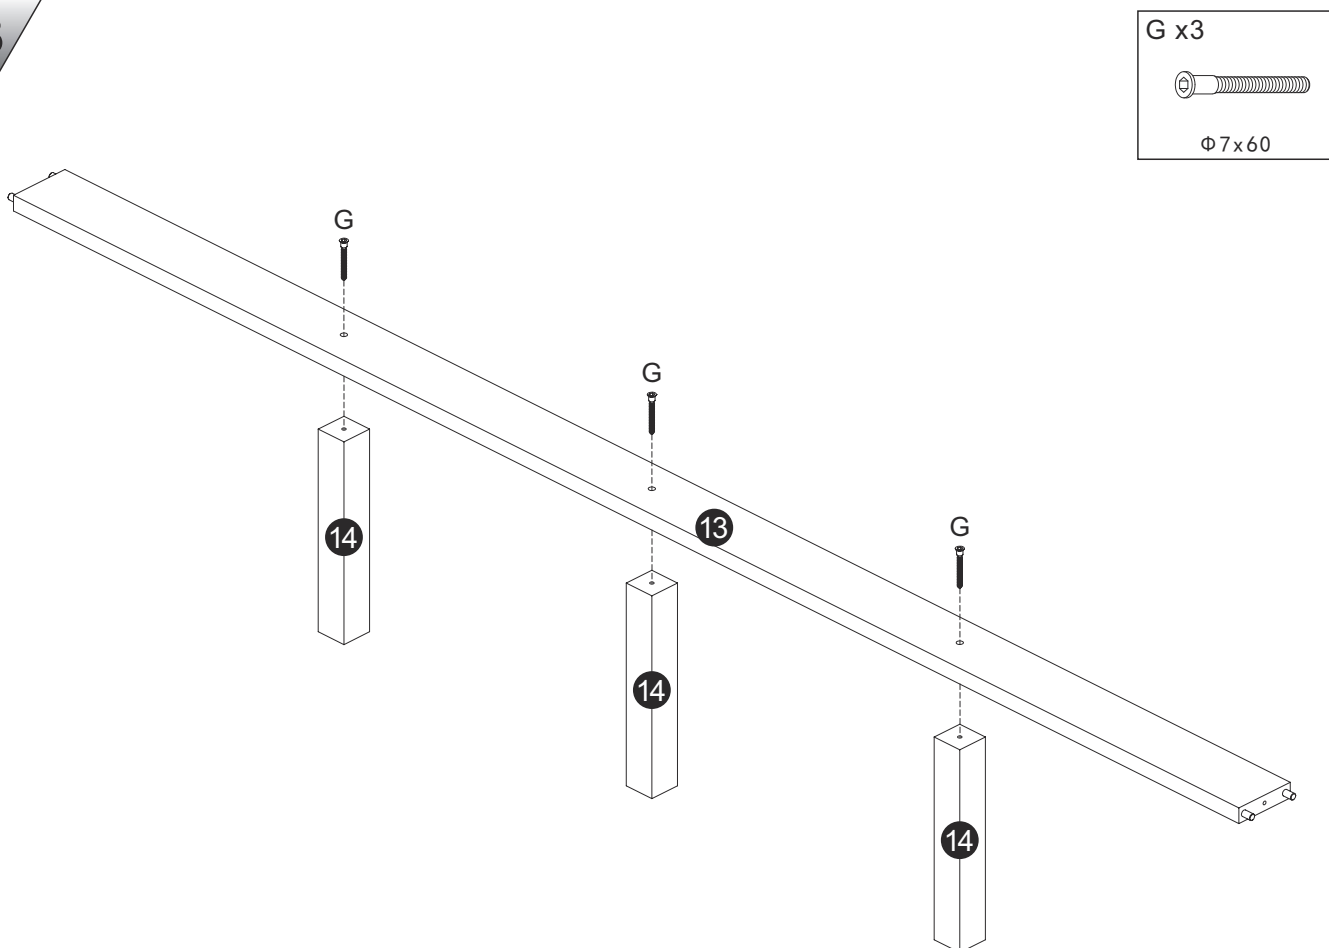


04

A x8	B x8	H x2
		
M6x90		Φ6x60

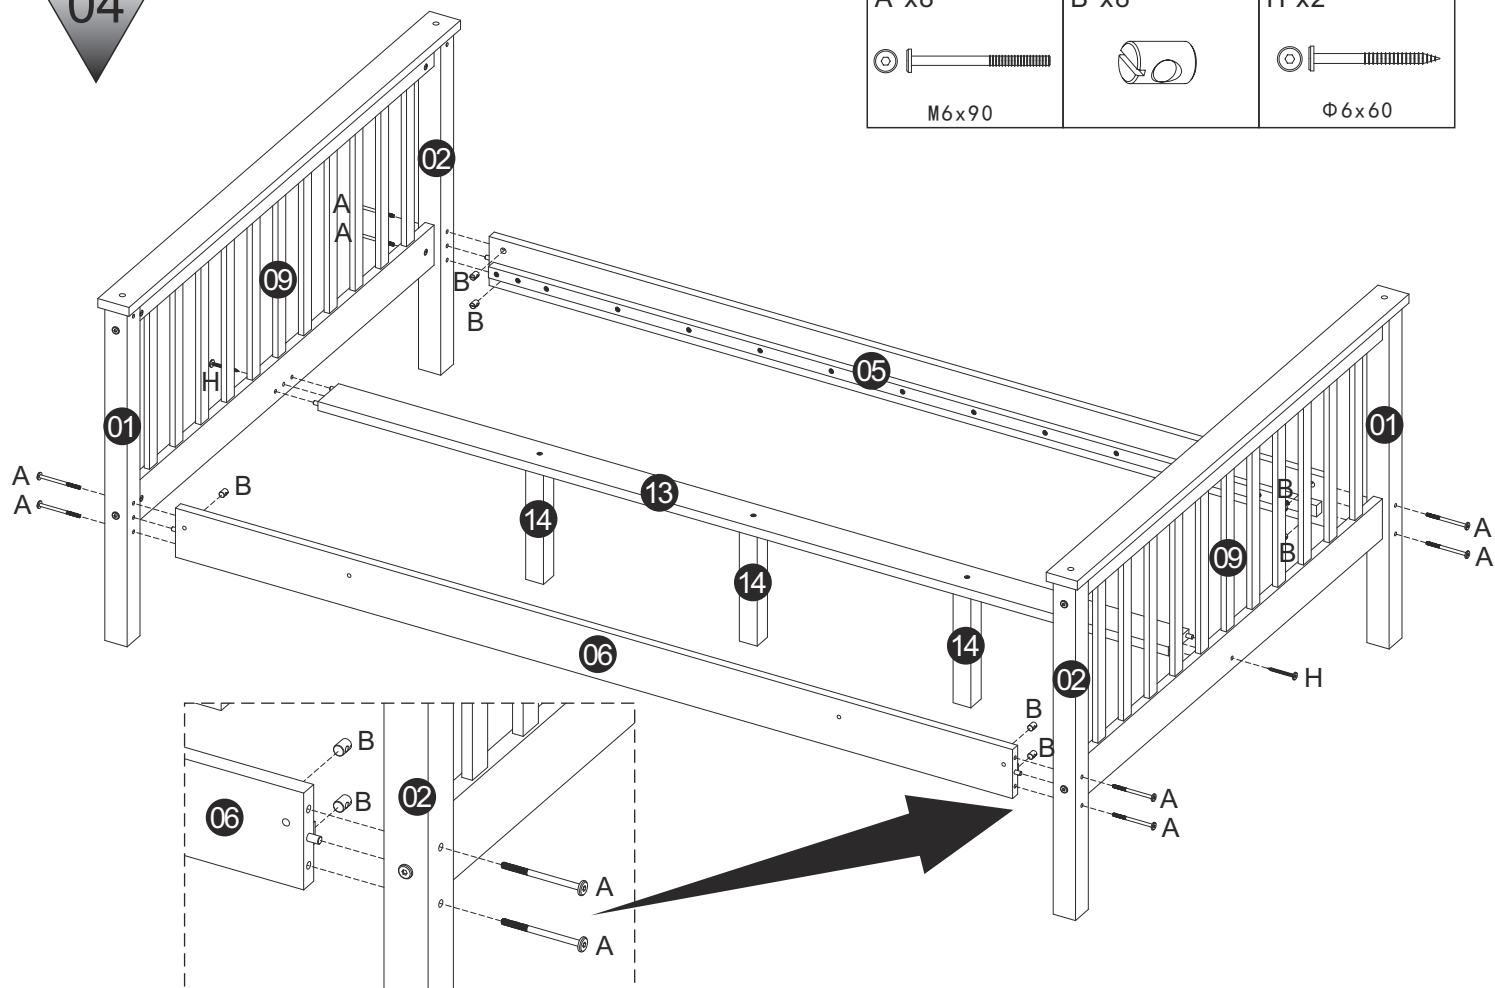

05

A x12	B x12
	
M6x90	

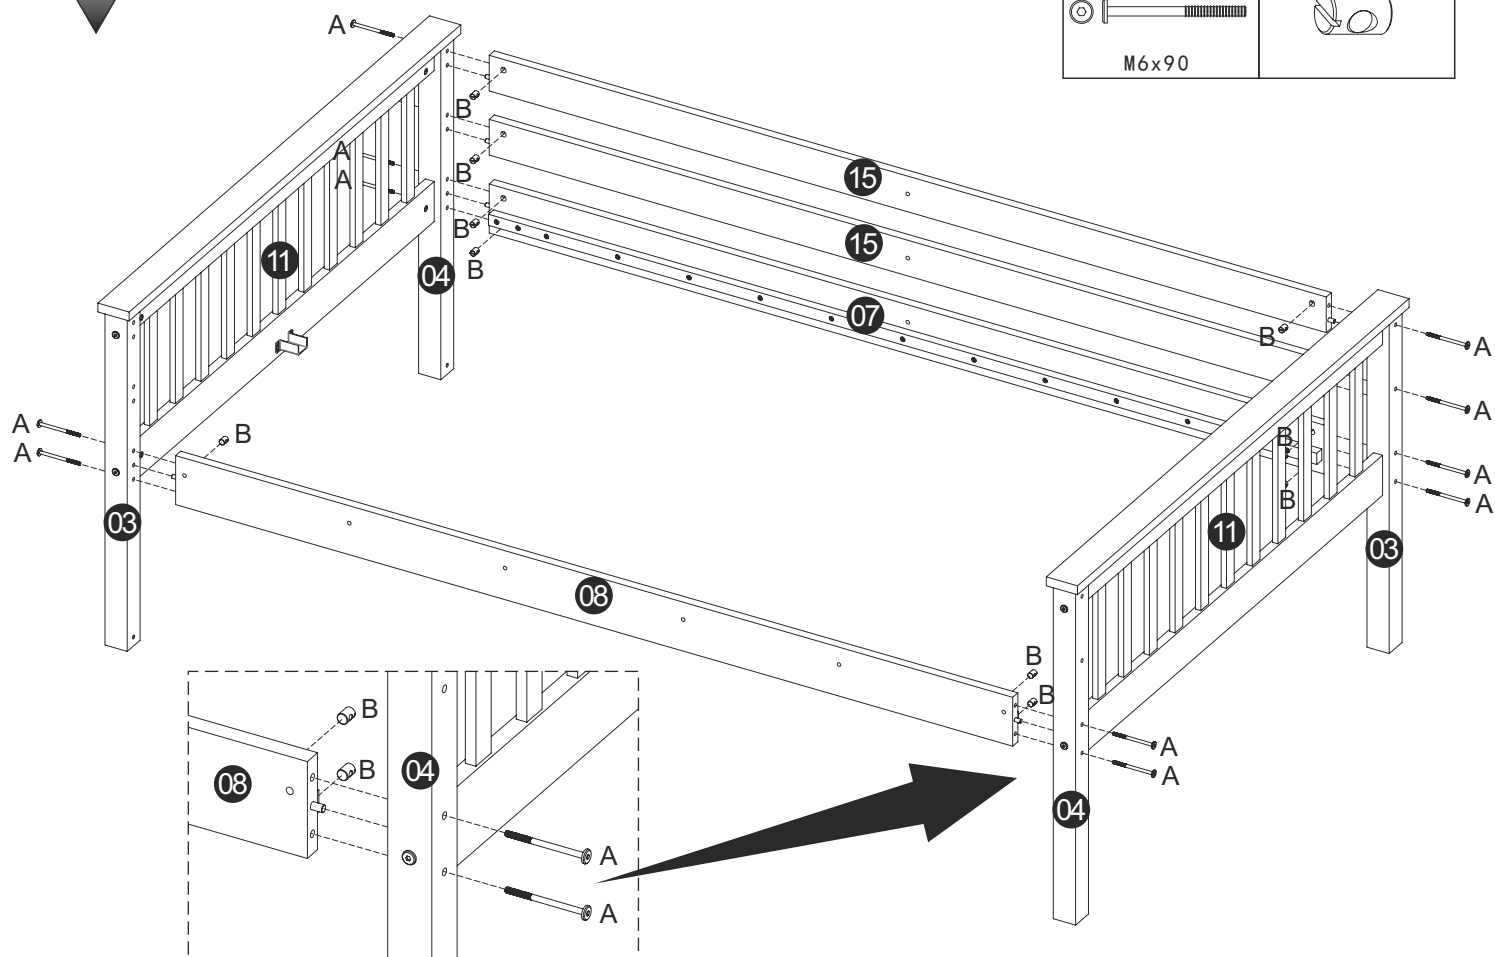

J x4




Φ12x80

K x8




Φ4x25

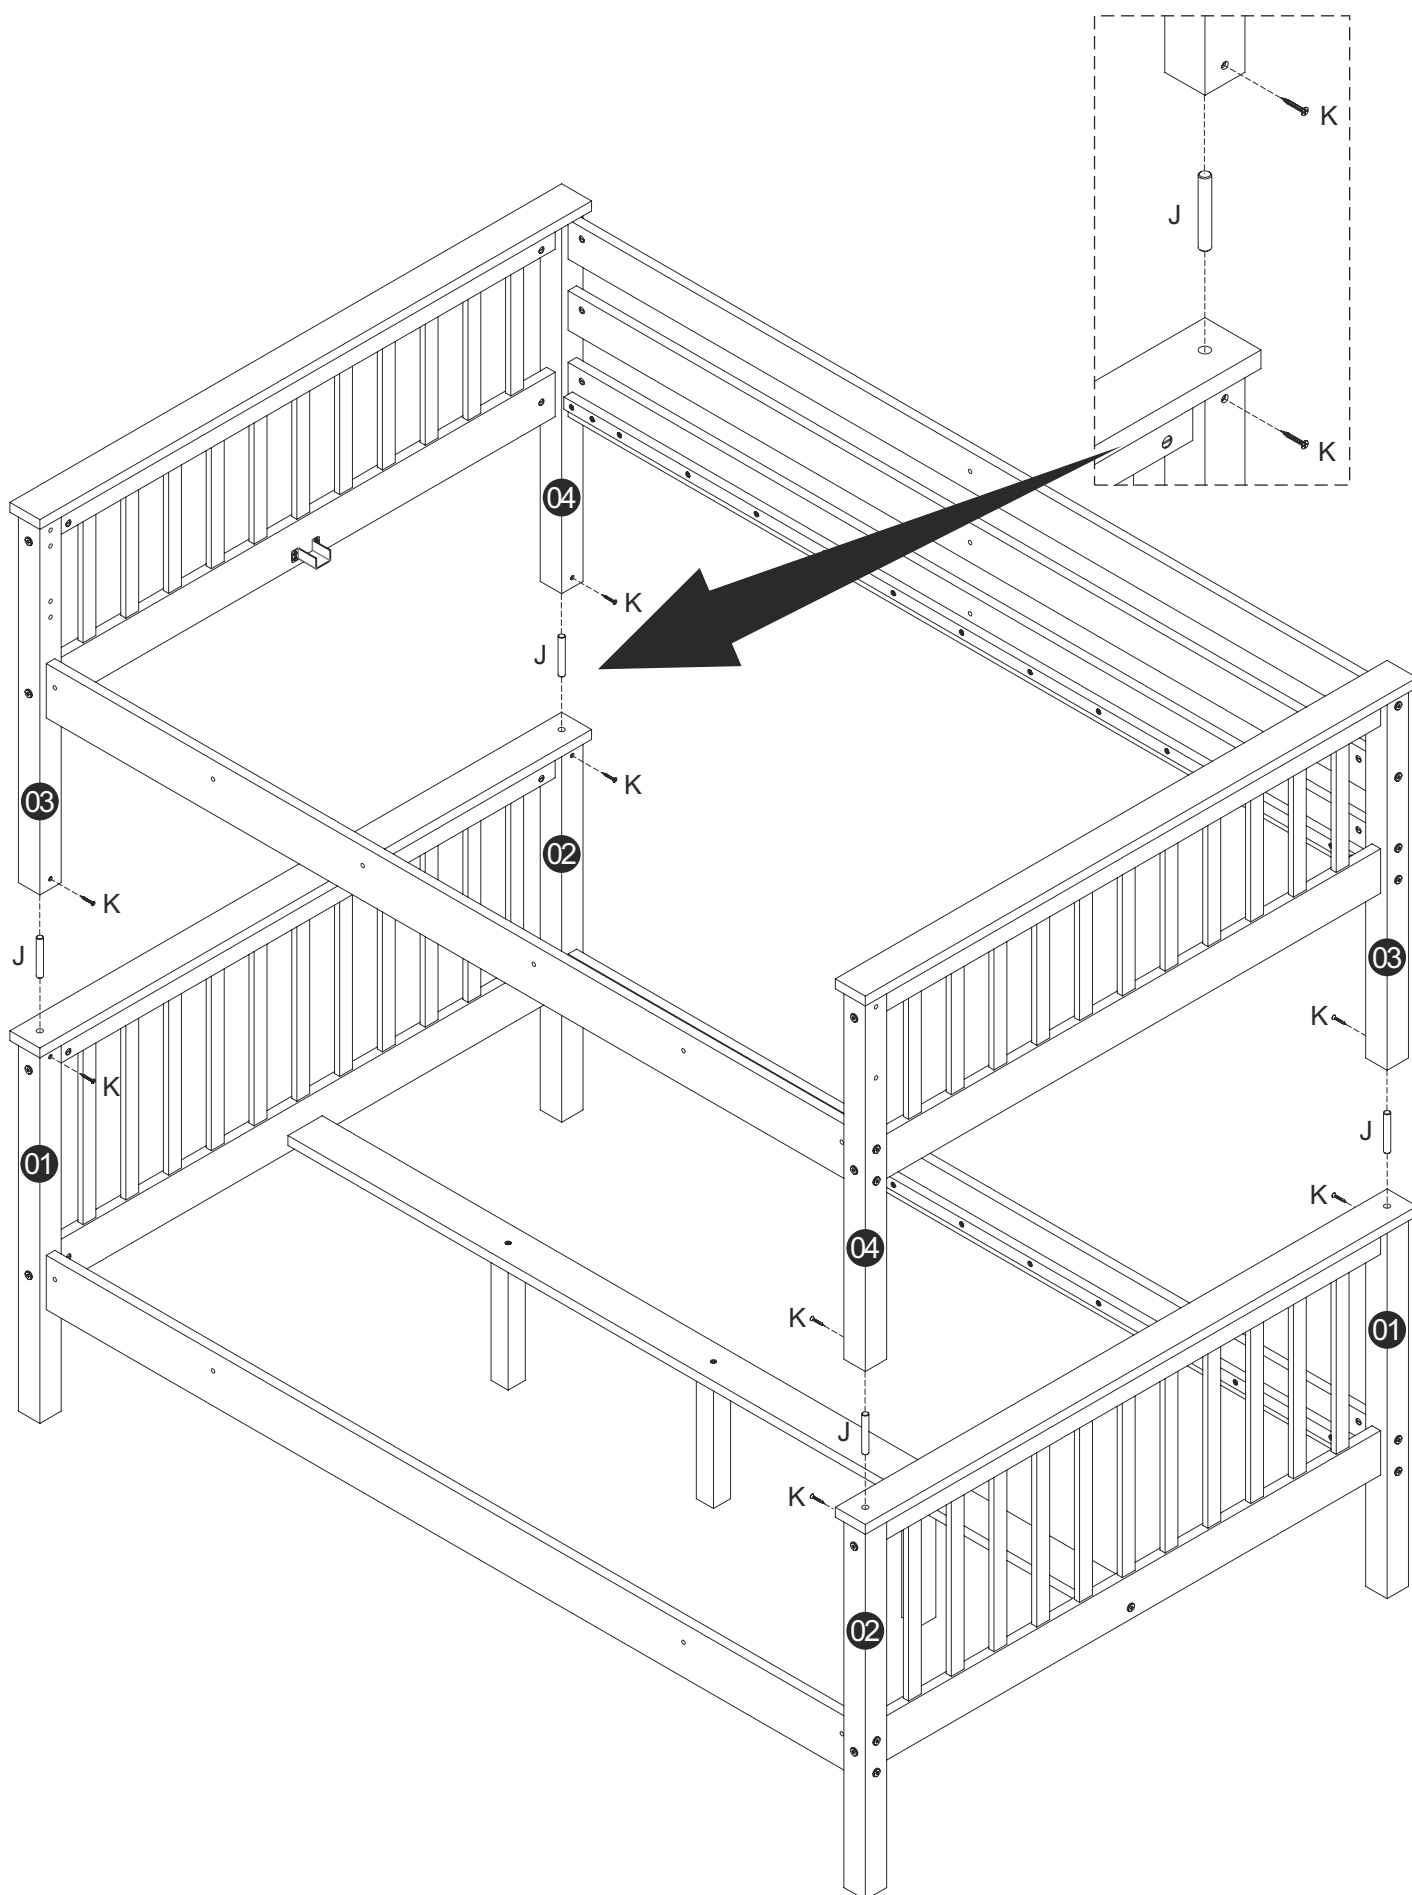





Option A

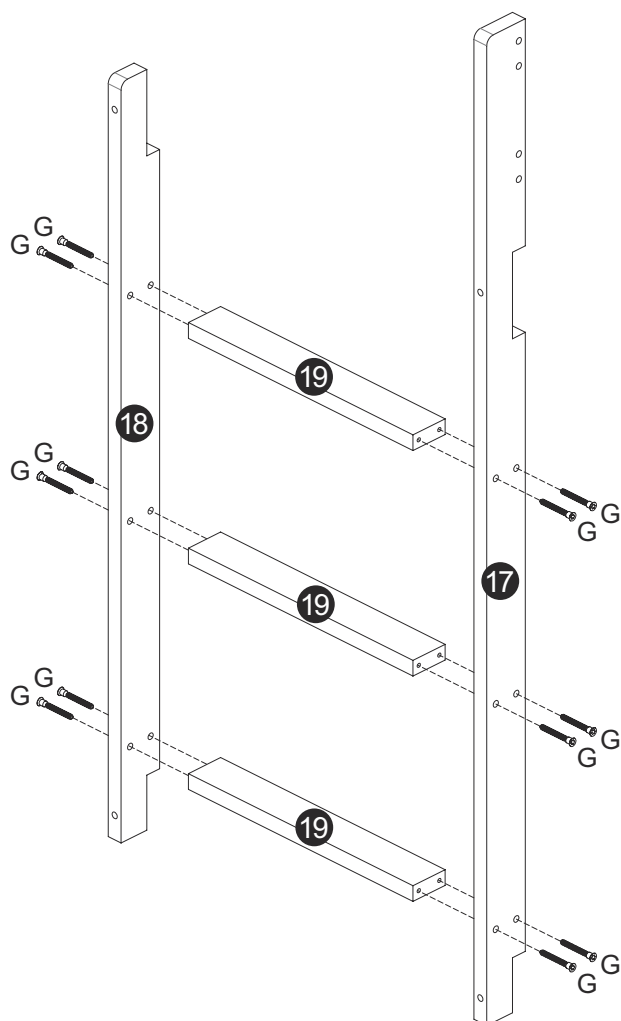


Option B

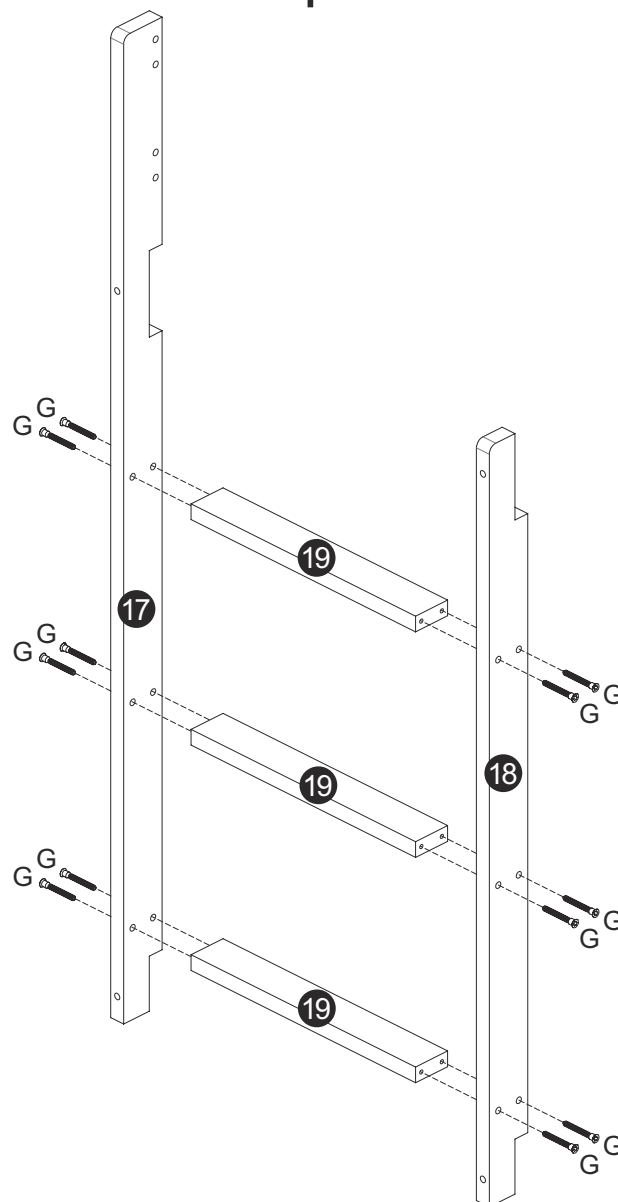


Option A

A x2  M6x90	B x4 	C x2  Φ8x30
L x2  M6x60	M x4  M6x50	N x4 

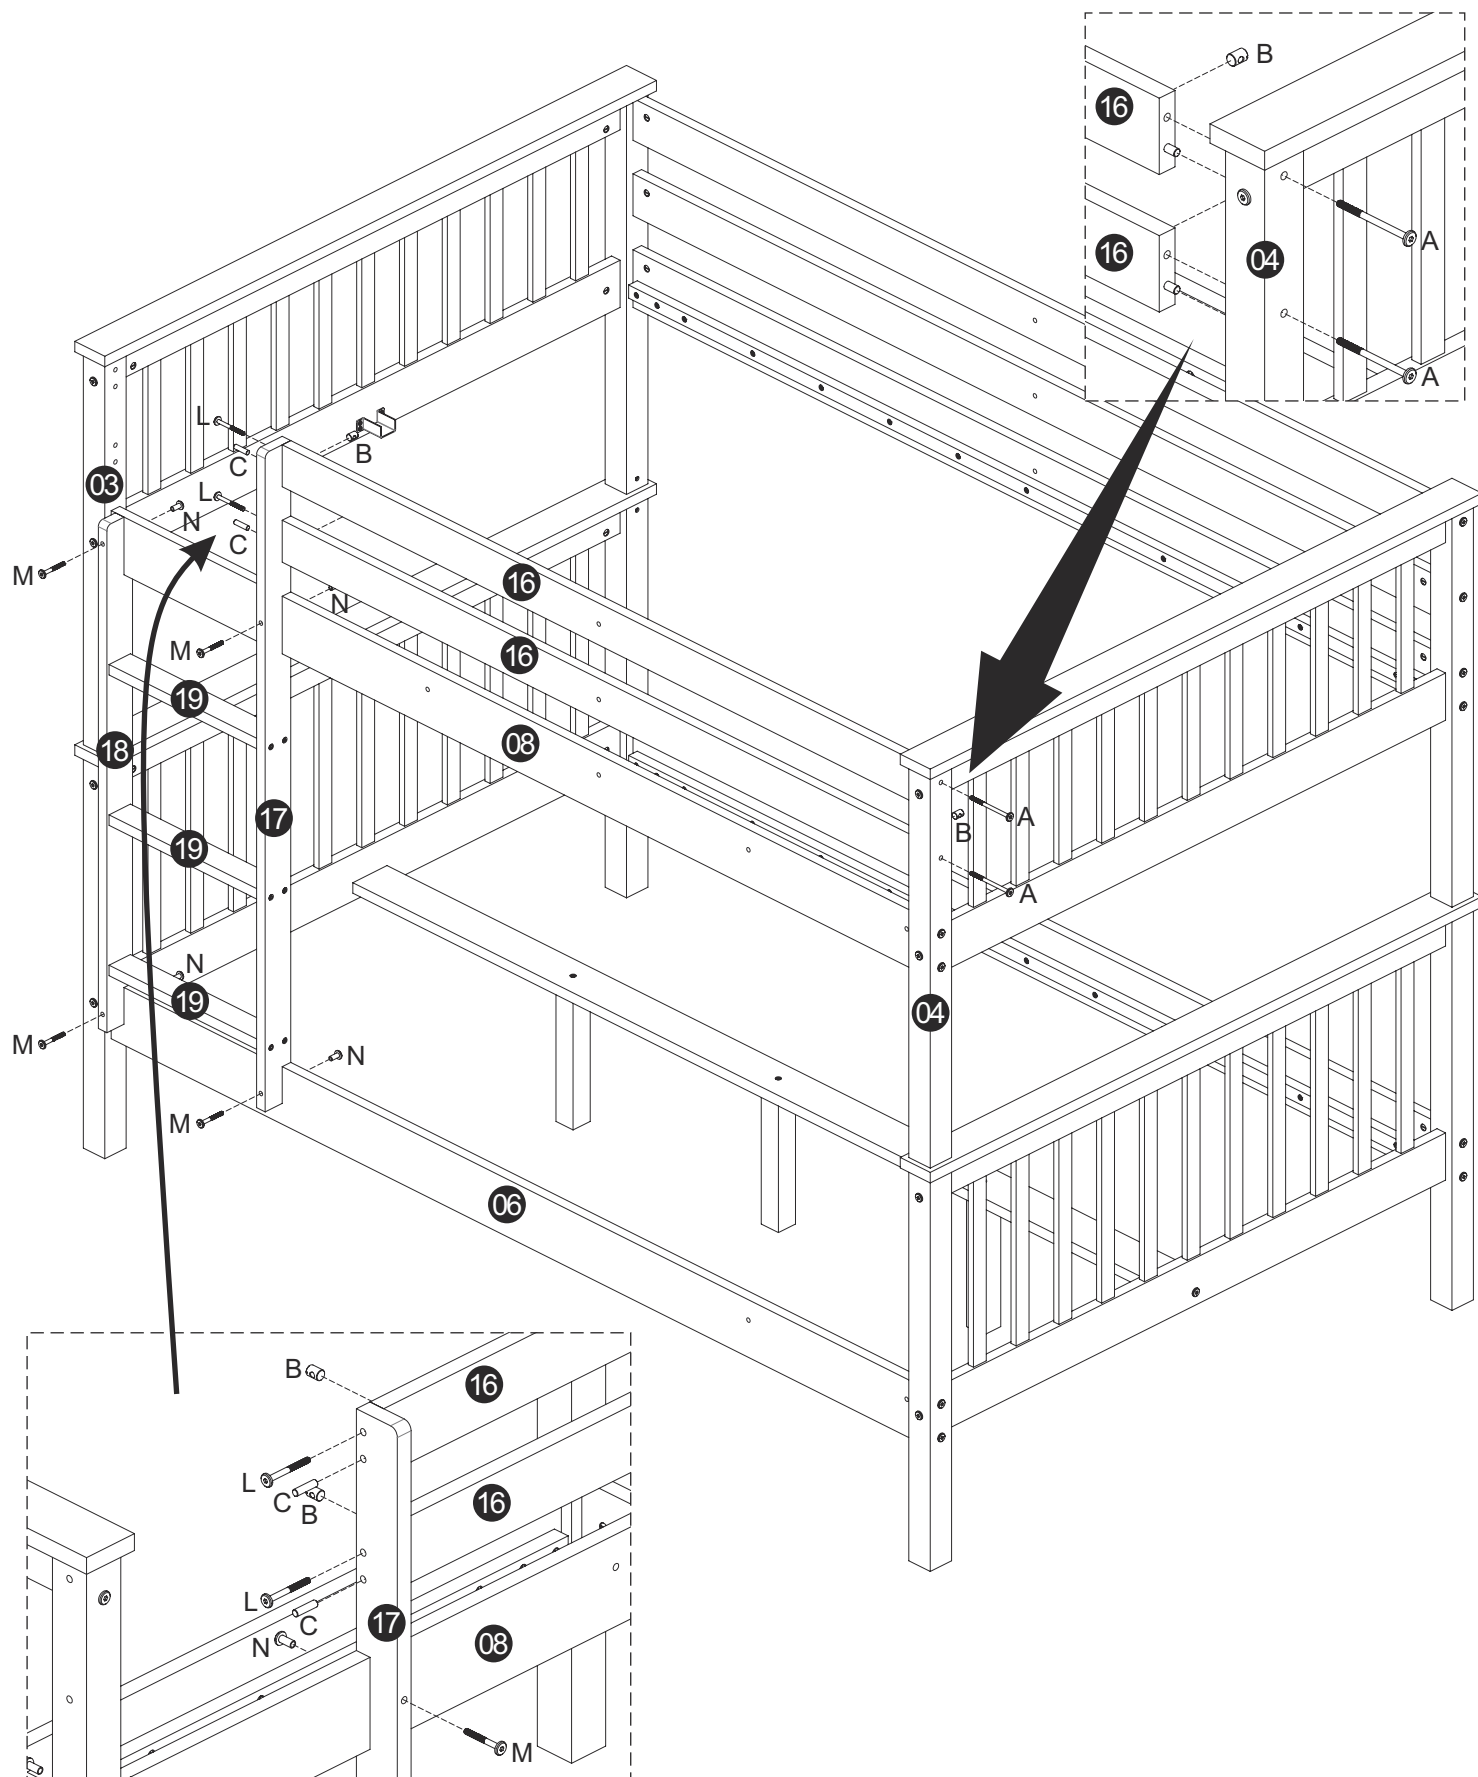

Option B

A x2  M6x90	B x4 	C x2  Φ8x30
L x2  M6x60	M x4  M6x50	N x4 

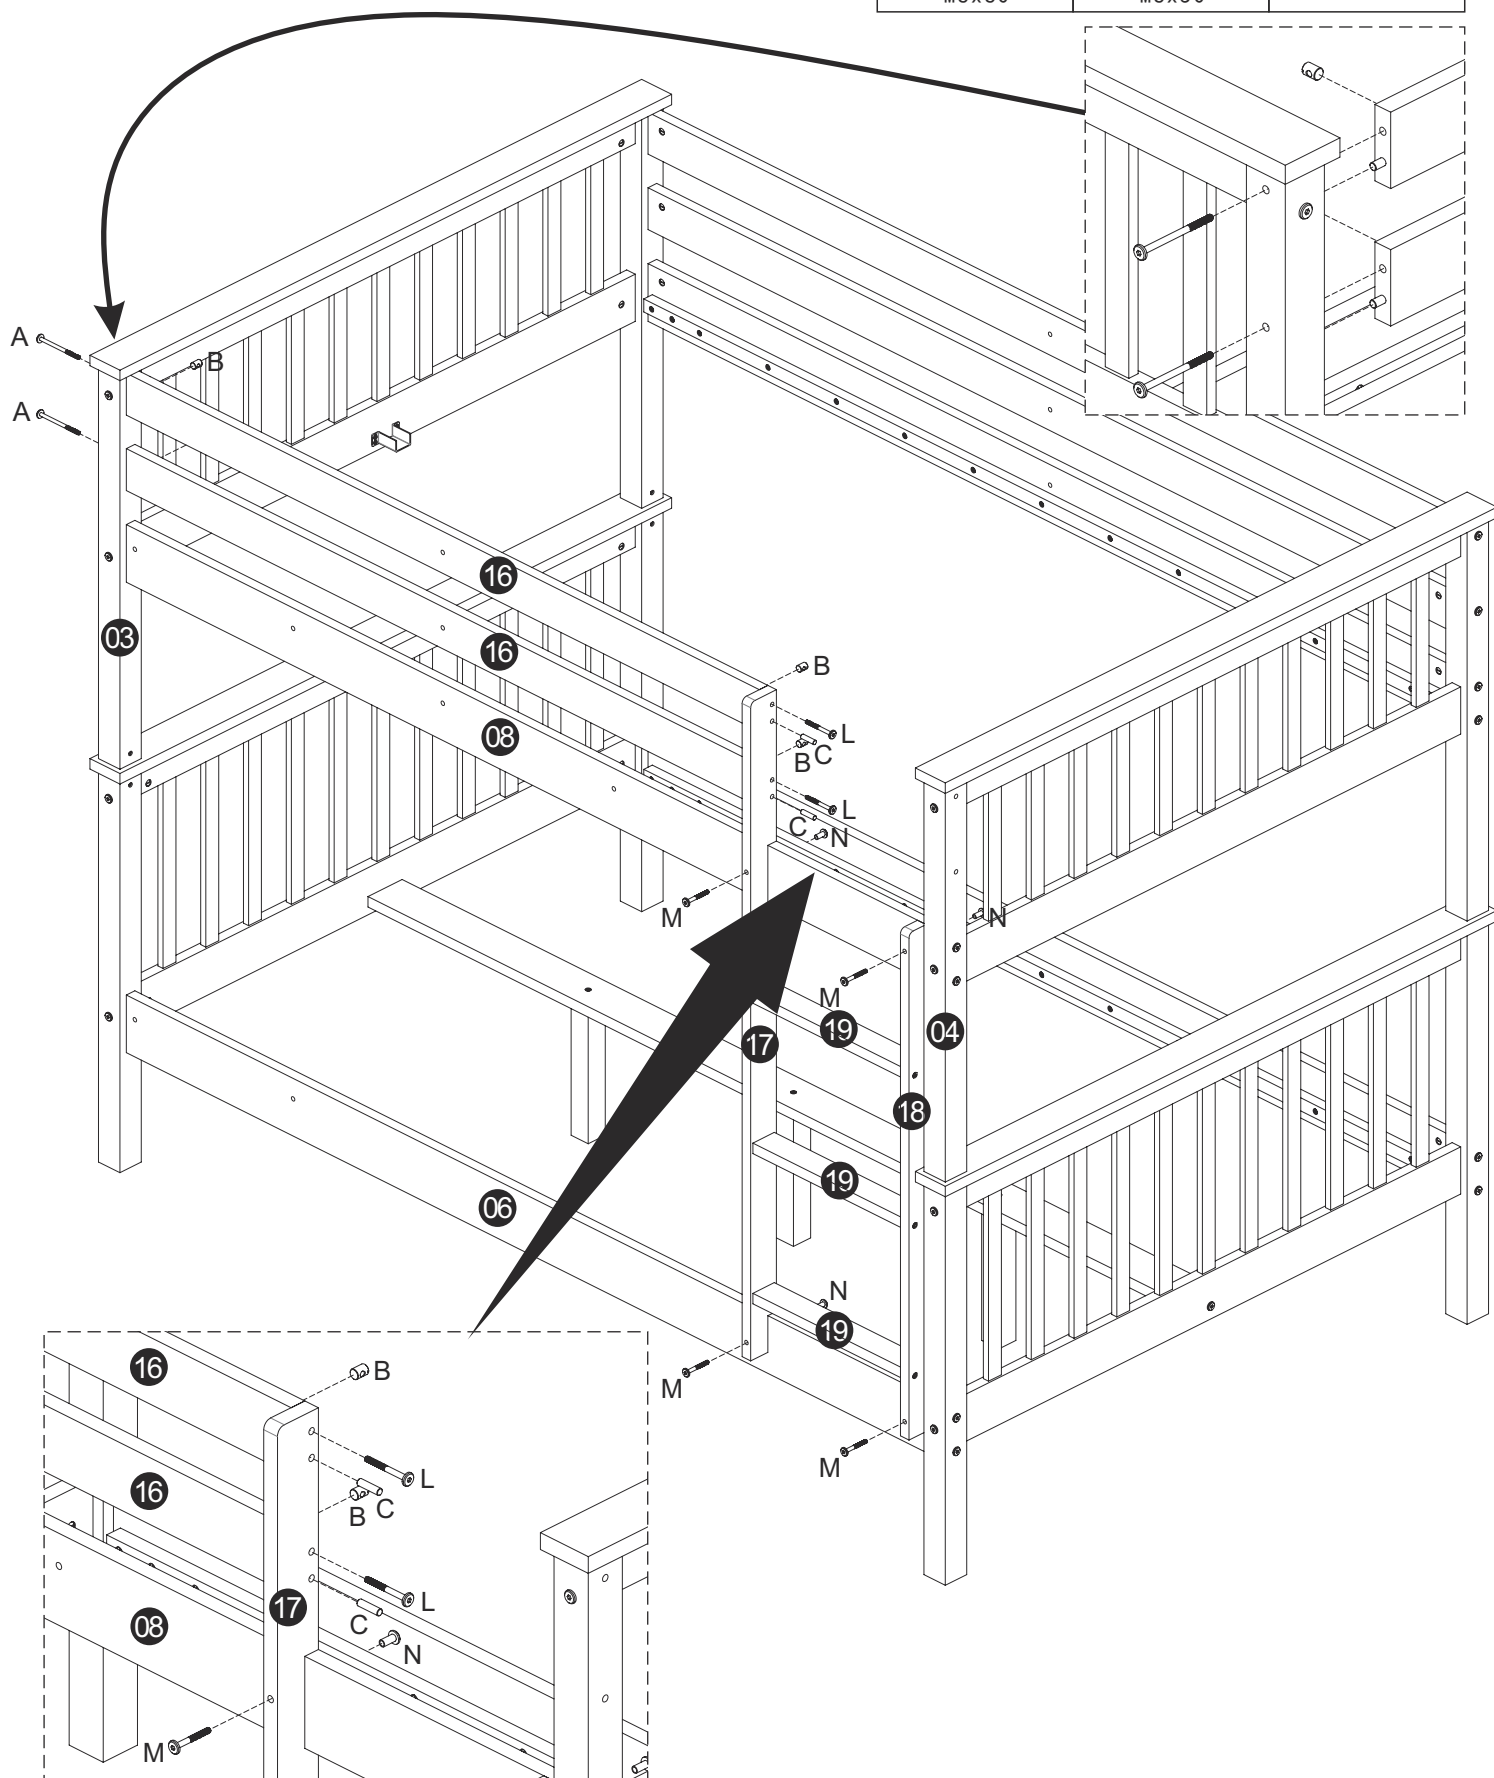


09



N x6




P x6



M6x30

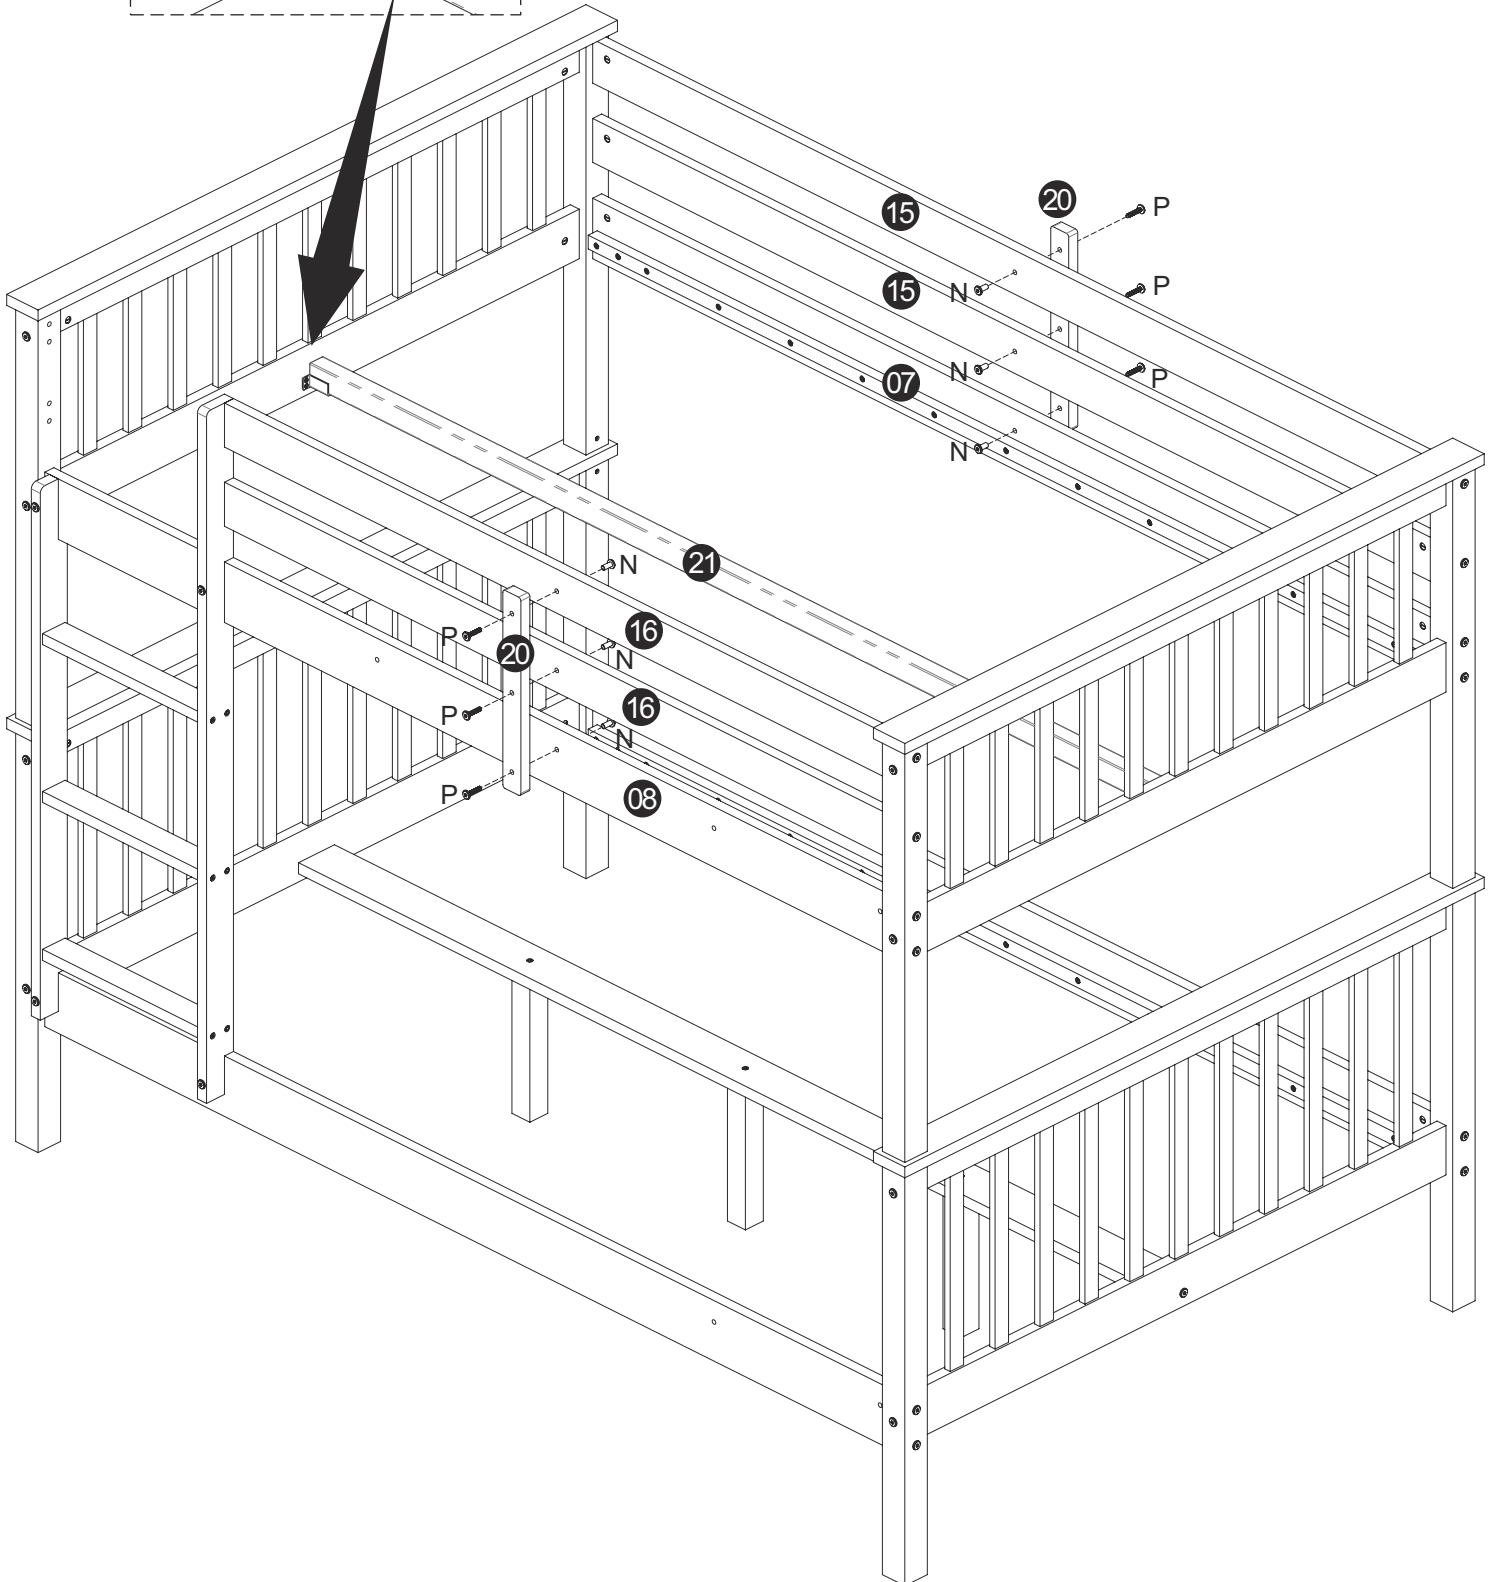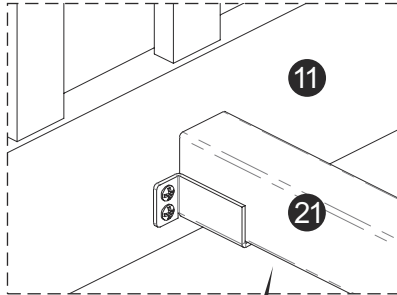

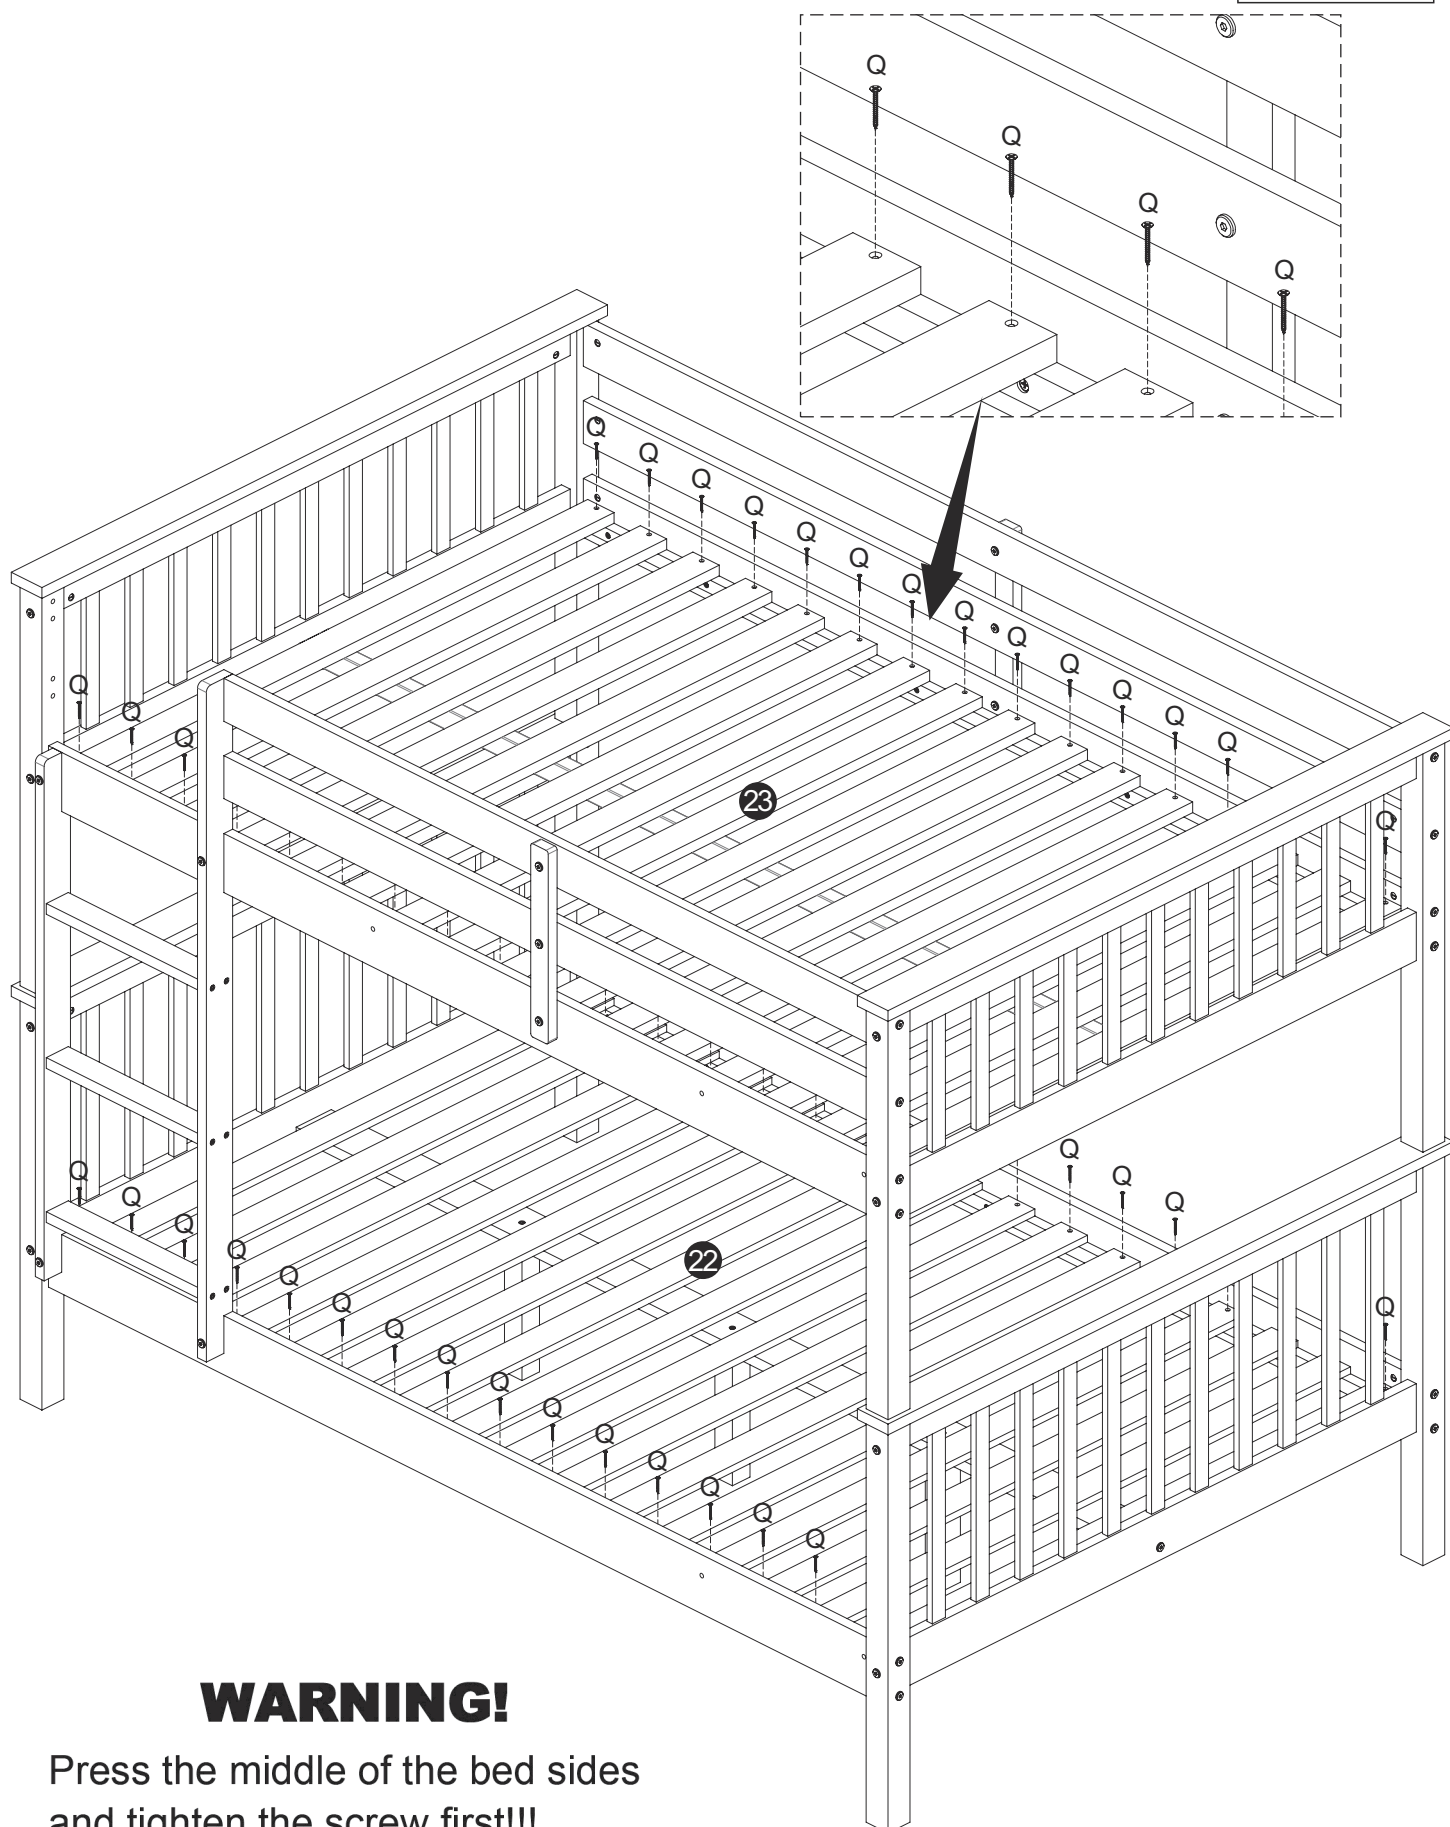

WARNING!

Press the middle of the bed sides
and tighten the screw first!!!

