

ASSEMBLY INSTRUCTIONS


1/3

MODEL : CK 6206
PRODUCT SIZE : 1220mm x 1930mm


Thank you for purchasing this product. Before starting assembly we suggest you spend a short time reading through this leaflet, then follow the simple step by step guide.
Two persons are needed to assemble this product.



* Approximately 30 Min

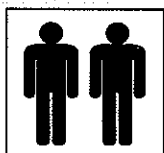

* 2 People Required

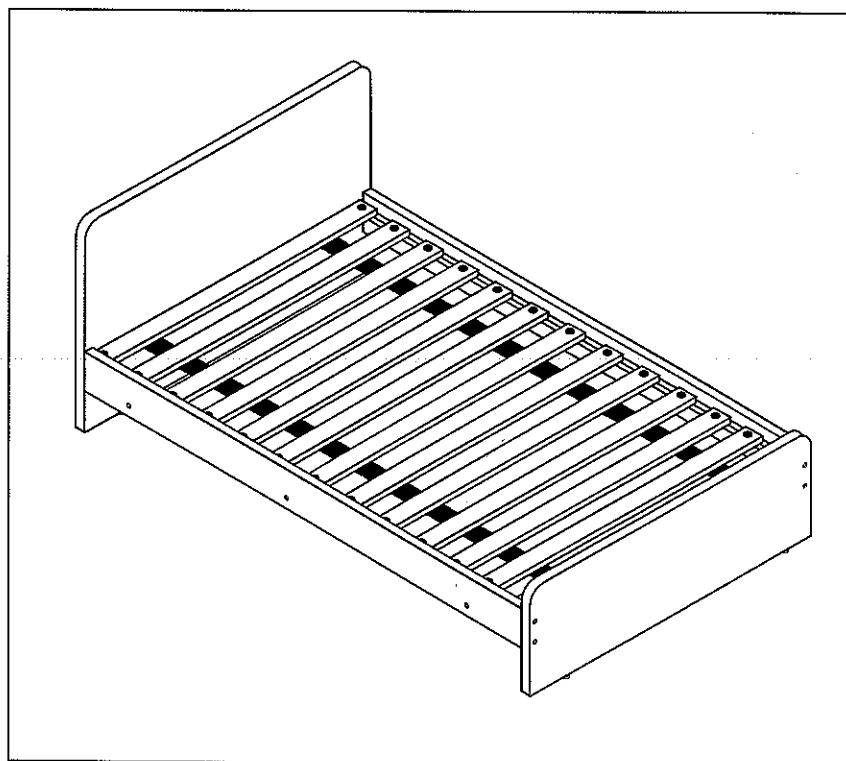


Ensure that you check regularly that all bolt are securely fastened and all components are in place.

If spare parts are required, contact your dealer. Do not use substitute part.

This instructions should be kept in a safe place for future reference.

Tools Not Use

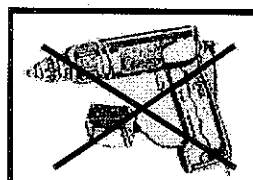

DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT. USE OF POWER TOOLS WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.



DO NOT USE HAMMER

Tools Required For Assembly



PARTS LIST


2/3

Model: CK 6206

Carton 1 of 2

FITTING LIST

No.	Part Name	Pcs			
02	HEADBOARD PANEL	1	(A)	M6 x 50mm Allen Bolt	8
03	FOOTBOARD PANEL	1	(B)	M6 x 35mm Allen Bolt	10
04	LVL BASE	13	(C)	M6 x 25mm Allen Bolt	26
	FITTING LIST		(D)	M6 JCN Nut	6
			(E)	M6 x 13mm Baller	8
			(F)	M6 Allen Wrench	2
Carton 2 of 2					
01	SIDE PANEL LEFT & RIGHT	2			
05	METAL SUPPORT	2			

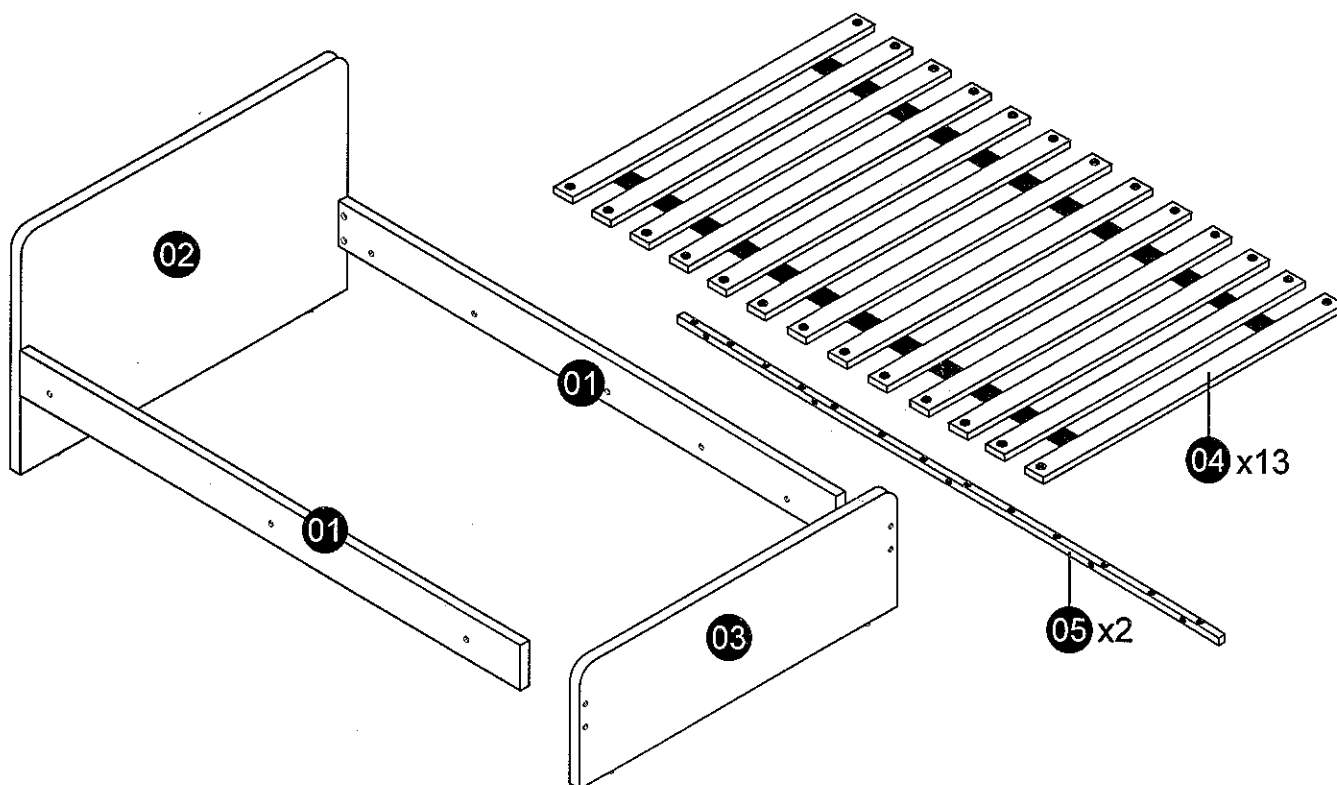


GUIDE TO ASSEMBLY

3
3

Model: CK 6206

STEP 1

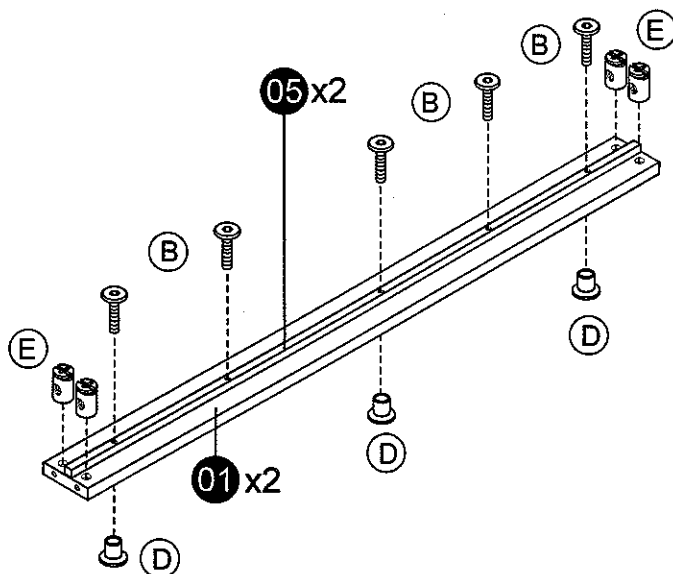

E x 8





B x 10



D x 6


STEP 2

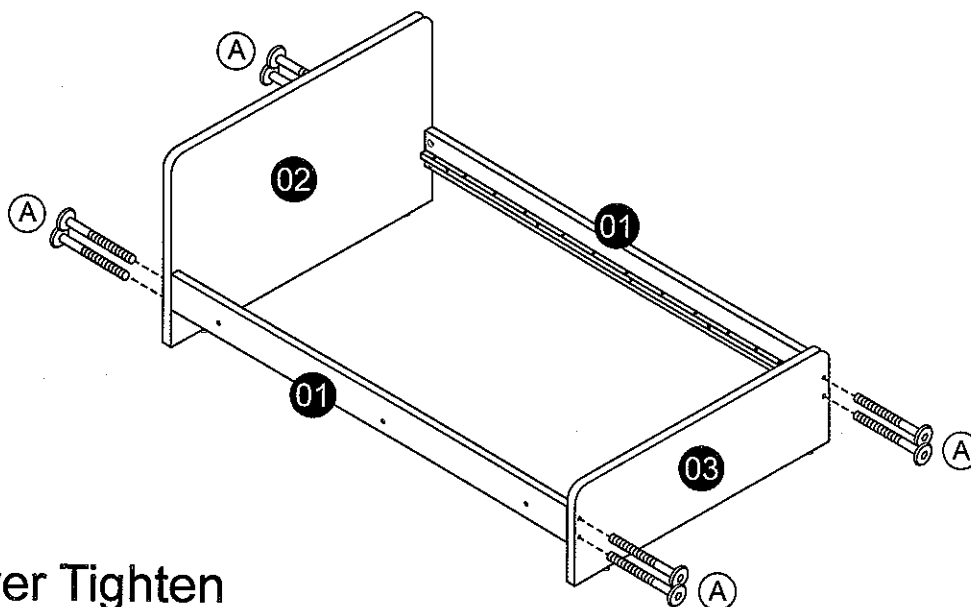

A x 8

Do Not Over Tighten

STEP 3

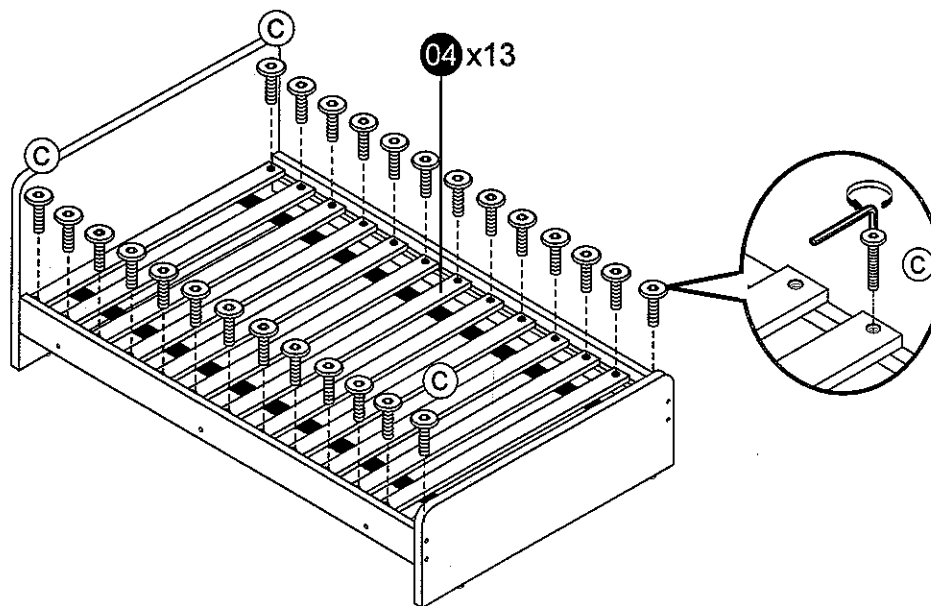

C x 26