



Scout Tree Bed

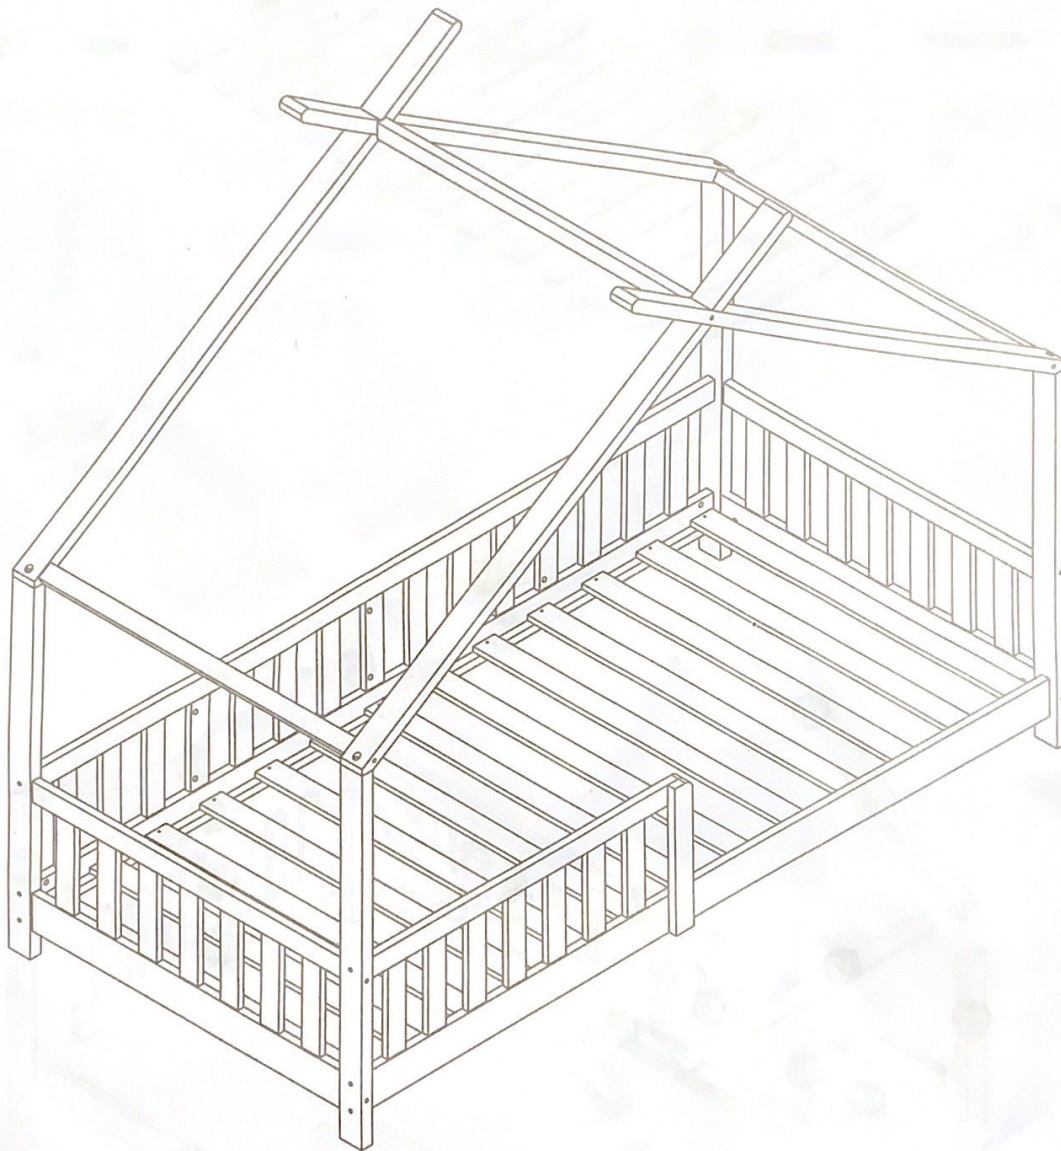


READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUTING YOUR PIECE OF FURNITURE. GROUP AND CHECK THE HARDWARE FITTINGS. GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE

NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME. KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE IN THE EVENT OF QUERY.

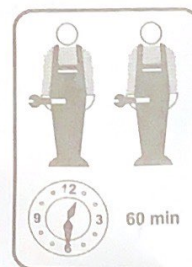


EXPLODED VIEW

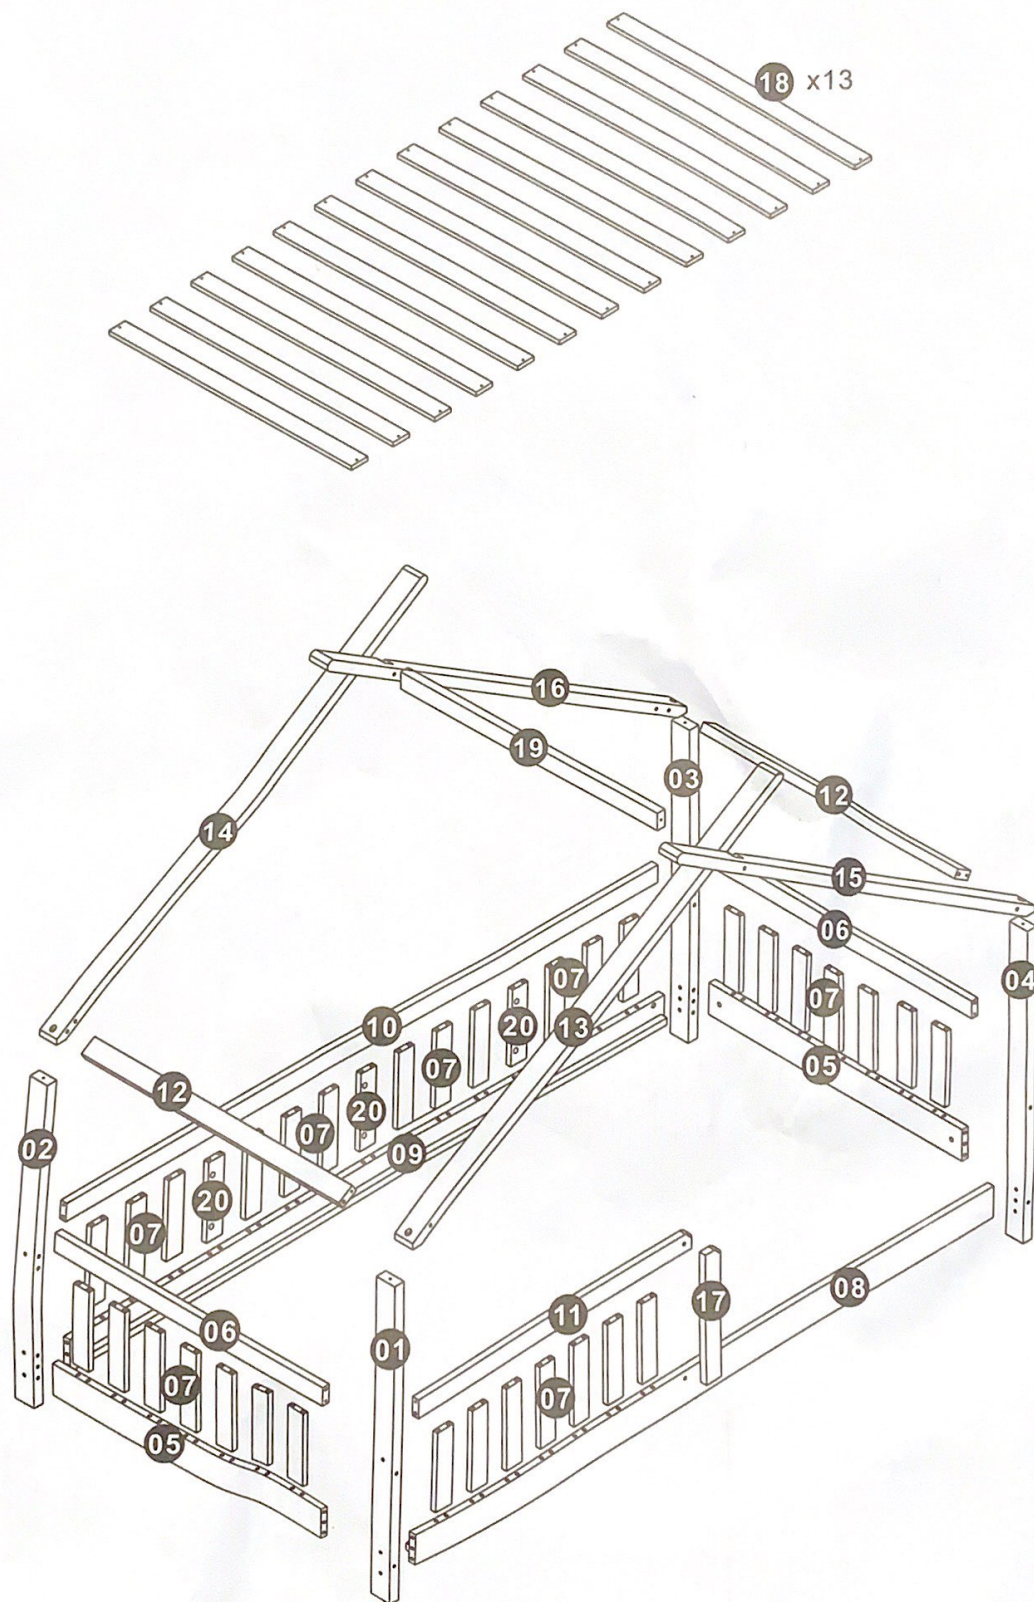


HARDWARE

A x8  M6x70mm	B x12 	C x167  Ø8 x30mm	D x7  Ø6 x70mm	E x26  Ø4 x30mm
F x1 	G x10  Ø6 x100mm	H x4  M6 x100mm	I x2  M6x30mm	J x6 
K x6 				



TOOLS



Ruler - Use this ruler to help correctly identify the screws




01


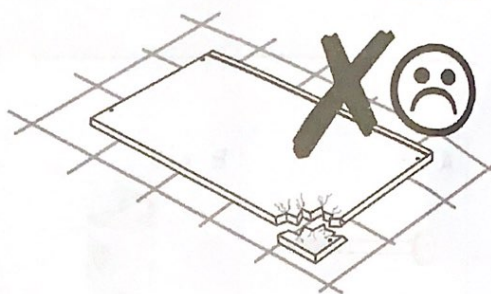
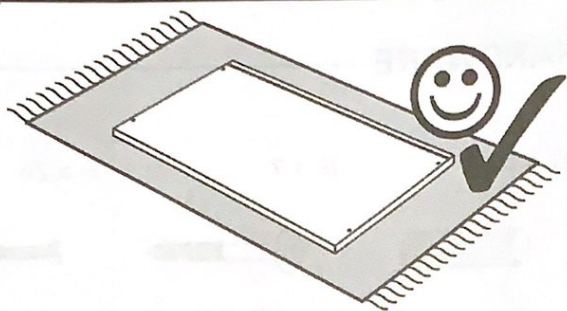


C x167




Ø8 x30mm

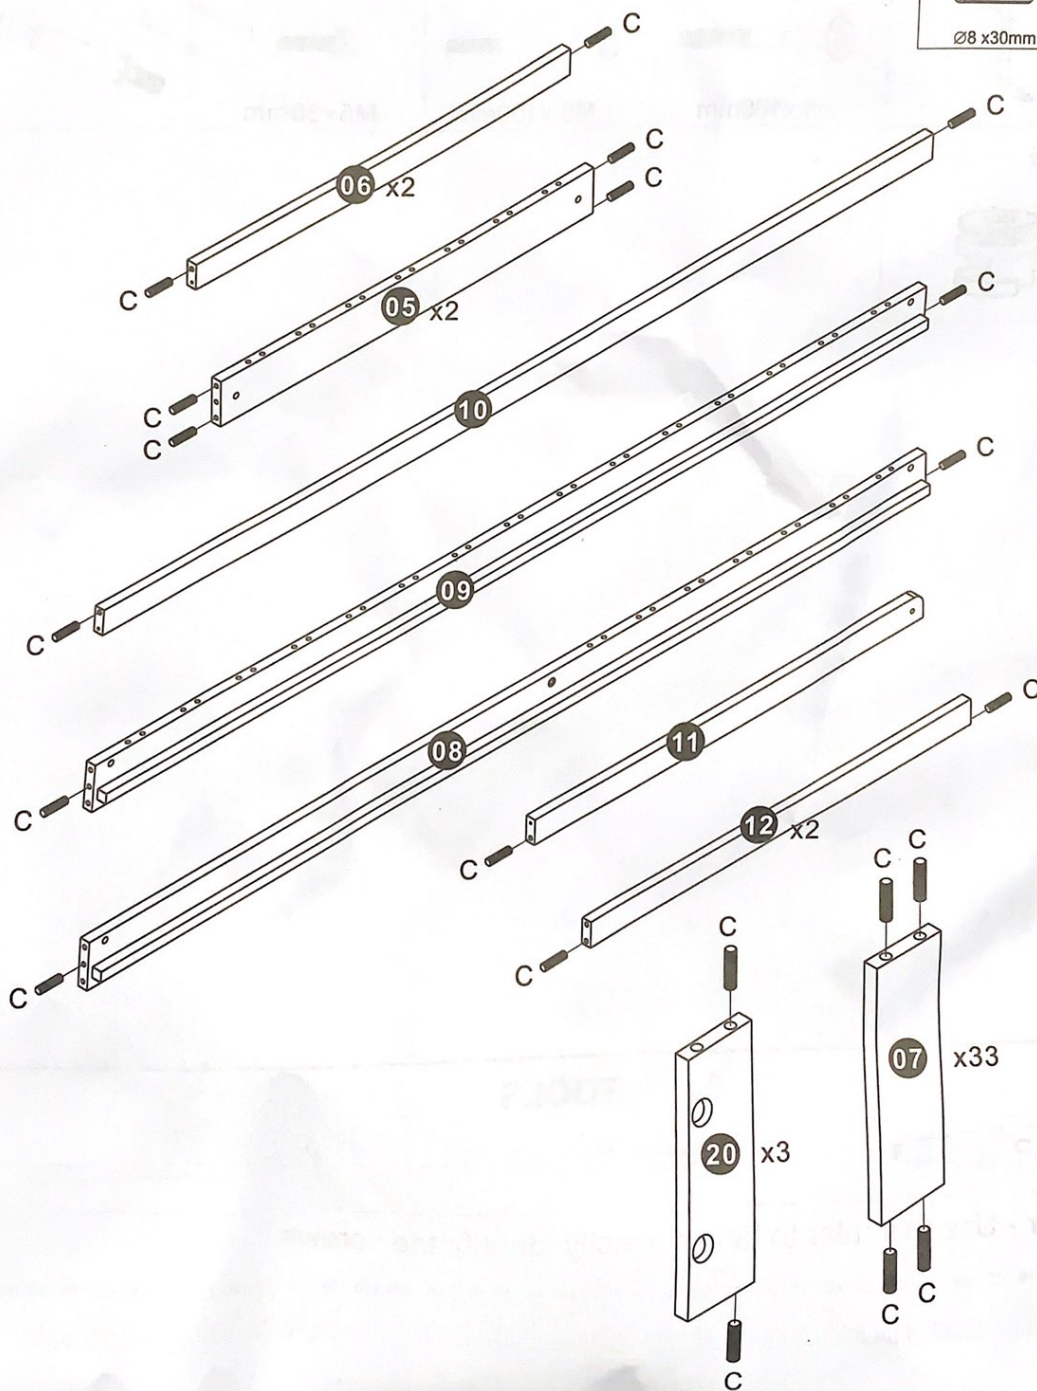

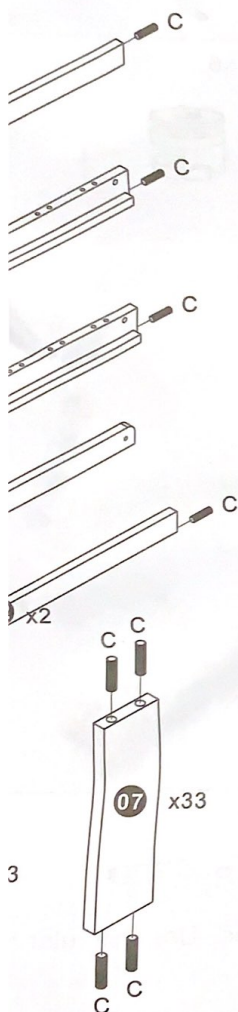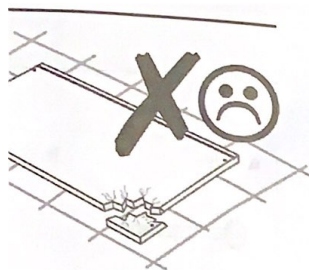



P.:04

02

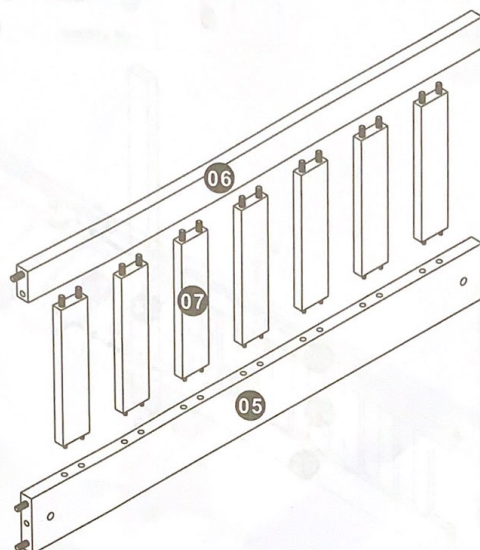

2 x

03

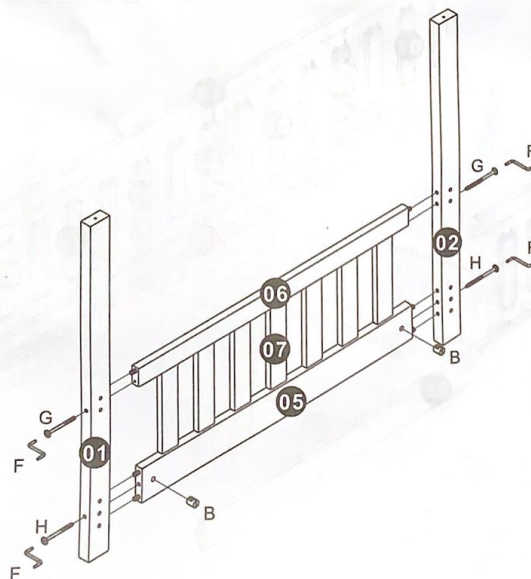

P.:05

04

B x 2



G x 2




Ø6 x100mm

H x 2



M6 x100mm

F x1

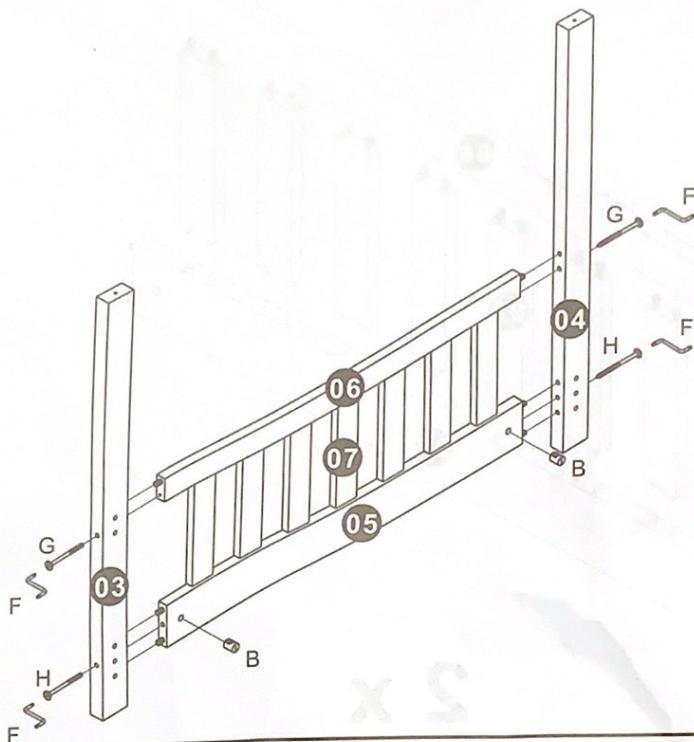


05



J x 6





K x 6

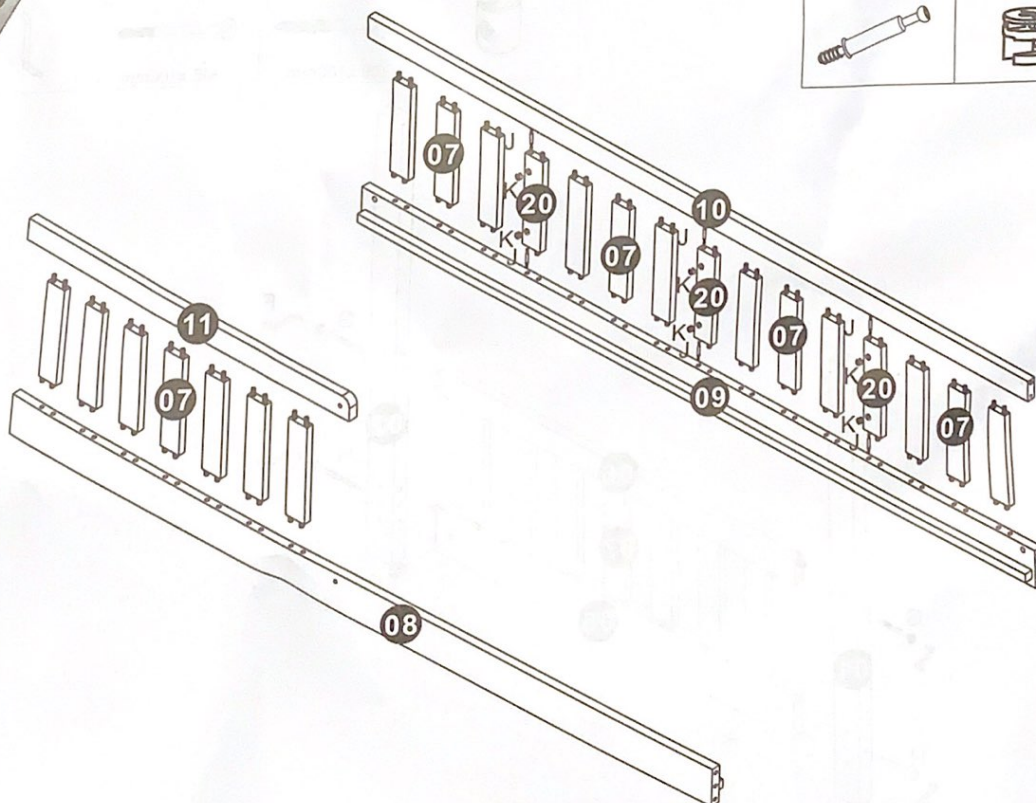

06

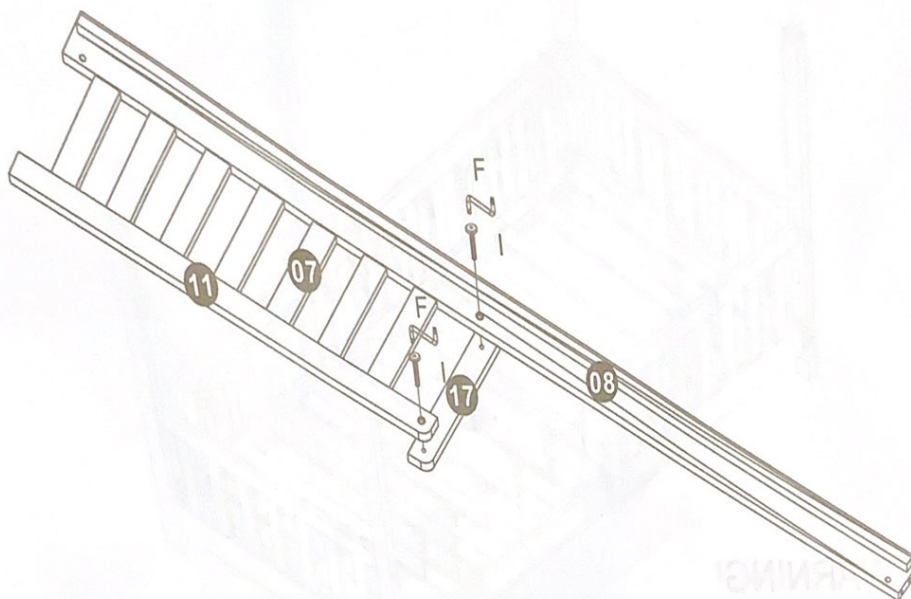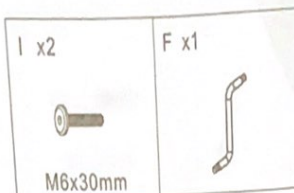

07

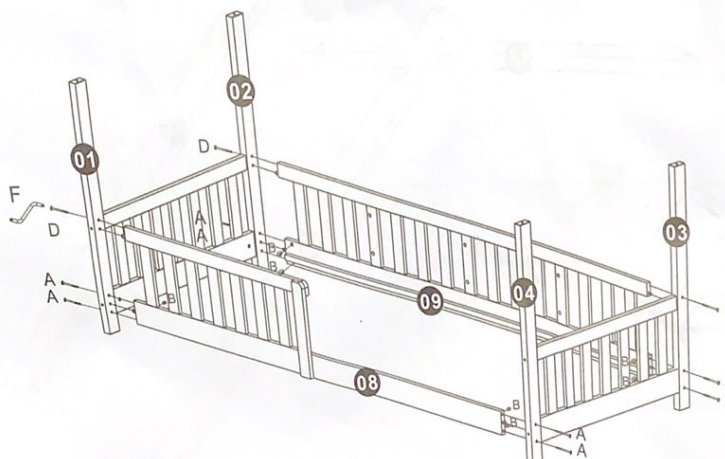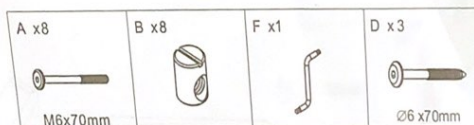

08

E x 26




Ø4 x30mm



WARNING!




Press the middle of the bed sides
and tighten the screw first!!!

09

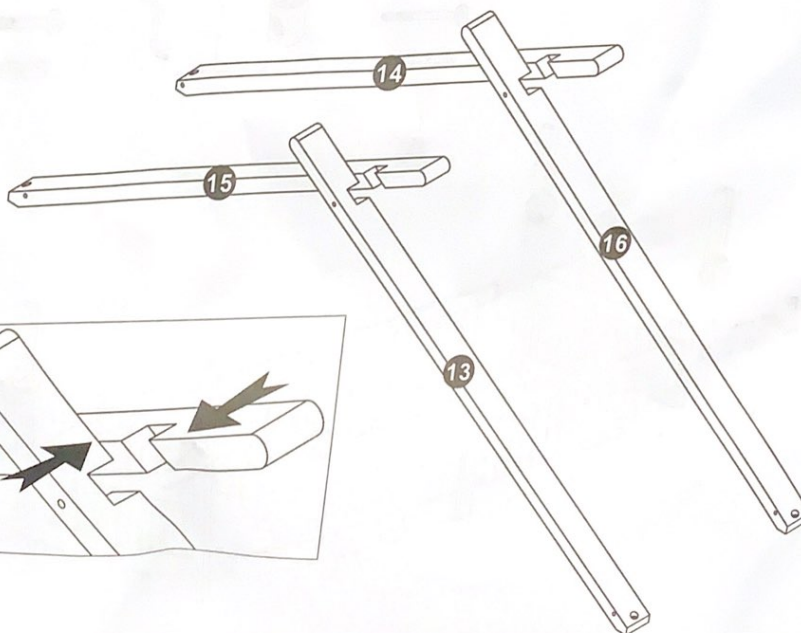



11



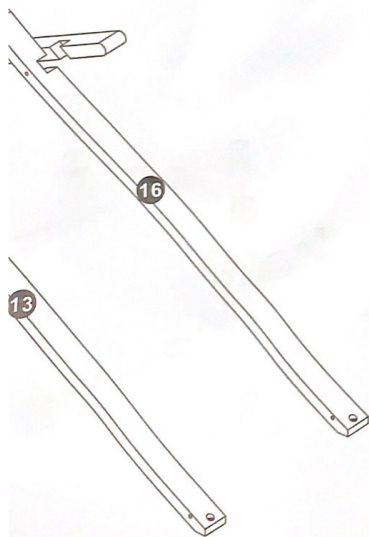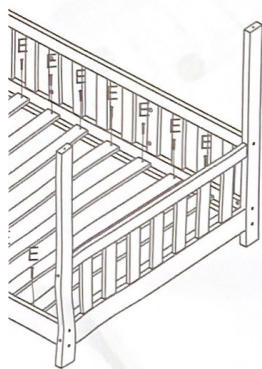



P.:08

10

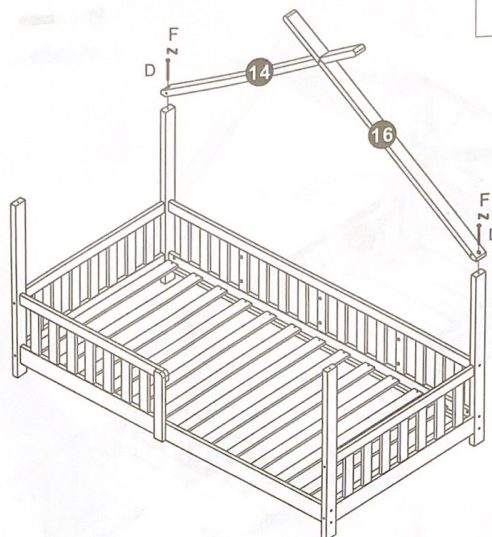



11

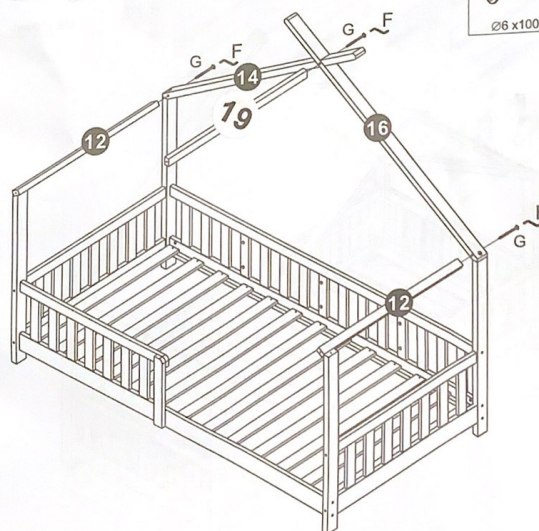




P.:09

12

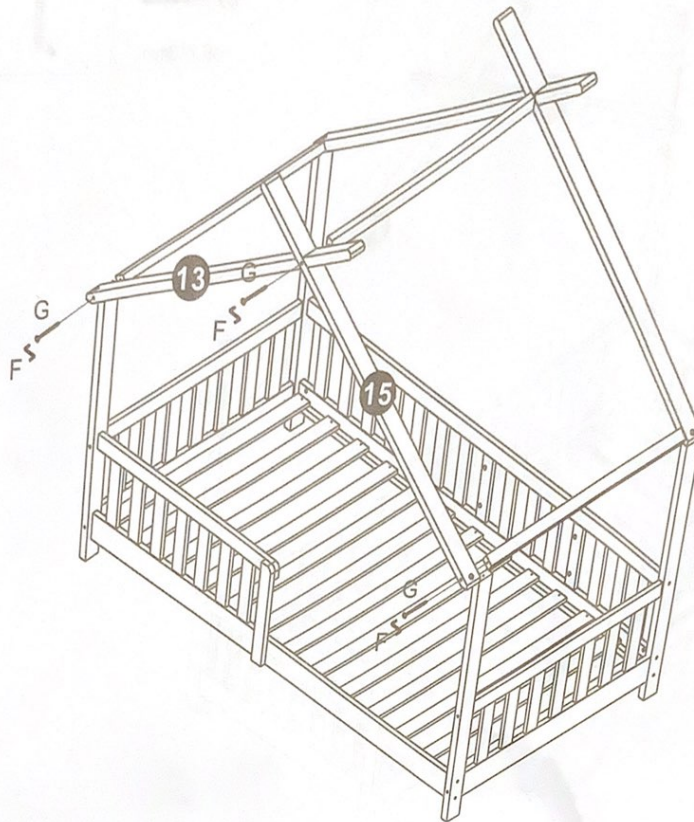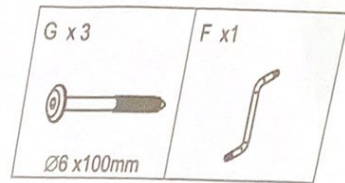

13

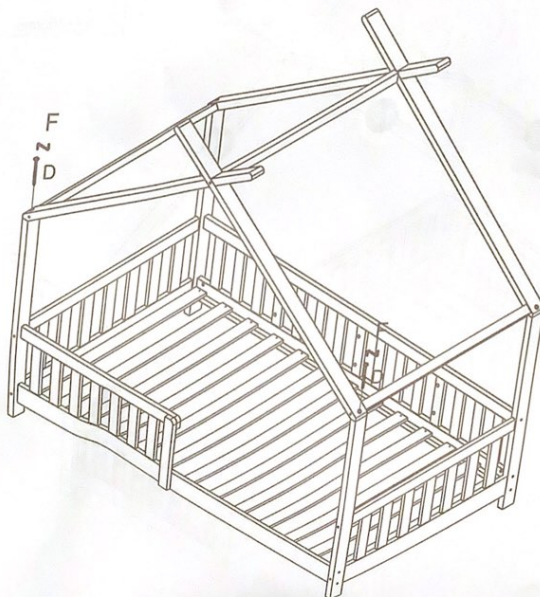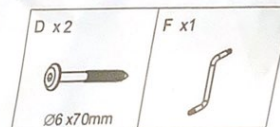



14

