

AVES / 6FT / SUPER ASSEMBLY INSTRUCTIONS

PLEASE DO NOT USE ELECTRICAL ITEMS IN THE STORAGE COMPARTMENTS AREA,
WHEN THE FABRIC GAP FILLERS ARE IN PLACE.


1. PLEASE .READ THESE INSTRUCTIONS CAREFULLY
2. DO NOT THROW AWAY PACKAGING MATERIALS UNTIL ASSEMBLY IS COMPLETE.
3. ASSEMBLE THIS ITEM ON A SOFT RUG AND SMOOTH SURFACE,SUCH AS A RUG OR CARPET,TO PROTECT THE FINISH.
4. TWO PEOPLE ARE REQUIRED TO ASSEMBLE THIS PRODUCT.
5. ONLY TIGHTEN THE SCREWS WHEN THE BED IS FULLY ASSEMBLED.
- 6.WHEN THE BED IS ASSEMBLED AND READY TO USE FOR THE FIRST TIME AND THE FRAME IS IN ITS UPRIGHT POSITION,YOU MAY HAVE TO PULL DOWN FAIRLY FIRM ON THE FRAME TO RELEASE THE GAS IN THE ARMS.
7. IF ANY OF THE BED PARTS ARE MISSING,PLEASE CONTACT YOUR RETAILER AS SOON AS POSSIBLE AND QUOTE THE MISSING PAPT NUMBER ALONG WITH YOUR FULL POSTAL ADDRESS.THIS WILL ENSURE THAT THE MISSING PART IS DISPATCHED TO YOU SPEEDILY.
8. IN THE EVENT OF ANY COURIER DAMAGE OR FAULT THAT IS SPOTTED ON OPENING THE BOXES,IT IS ESSENTIAL THAT ALL THE COMPONENTS FROM,THE AFFECTED BOX ARE PACKED BACK IN THE ORIGINAL BOX AND SAFELY SECURED. PLEASE SEND PHOTOGRAPHS OF THE DAMAGE/FAULT TO YOUR RETAILER, QUOTING THE BED SIZE AND COLOUR SO THAT THE MATTER CAN BE QUICKLY RESOLVED. THIS PROCESS USUALLY TAKES APPROXIMATELY 3-4 WORKING DAYS.

HARDWARE LIST

(A) Bolt M8 x 25mm - 2pcs



(B) Bolt M8 x 30mm - 28pcs



(C) Bolt M8 x 40mm - 8pcs



(D) Bolt M8 x 45mm - 6pcs



(E) NUT M8 x 13mm - 6pcs



(F) 45mm M4 screw - 4pcs



(G) Spring Washer M8 - 11pcs



(H) 50mm M5 screw (Silver) - 11pcs




(I) Flat Washer M6X16mm - 4pcs



(J) 15mm M4 bolt - 4pcs



(K) Spanner - 1pc



(L) Allen Key M5 - 1pc



(M) Allen Key M4 - 1pc



(N) Double Plastic Cap x 60pcs




(O) Double Plastic Cap x 15pcs



(P) Mattress Stopper - 2pcs




(Q) Metal Corner Plate - 4pcs




PART LIST


(1) Headboard x 1pc

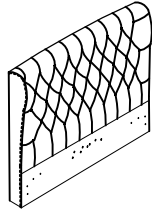


(2) Footboard x 1pc

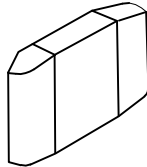


(3) Side Rail x 2pcs

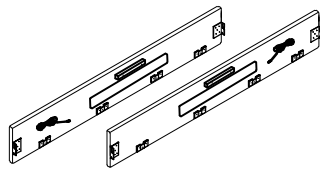


(4) Metal Frame Base x 1pc

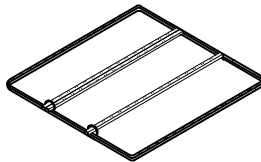


(5) Horizontal Support Bar x 1pc

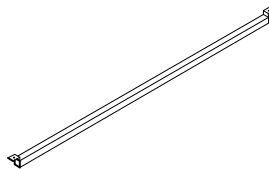

(6) Base Board x 3pcs

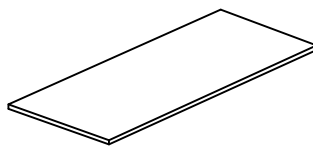


(7) Wooden Support x 4pcs

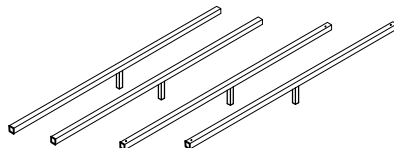


(8) Slats x 45pcs




(9) Gas lift parts x 2pcs

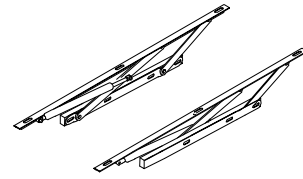


(10) Bottom Board of Drawer x 1pc

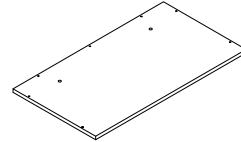


(11) Drawer Side Panel x 2pcs

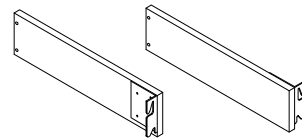


(12) Back Panel of Drawer x 1pc

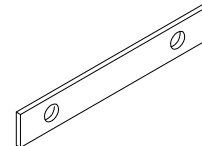


(13) Side rail cover x 2pcs

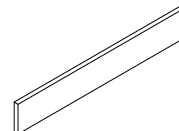



STEP 1

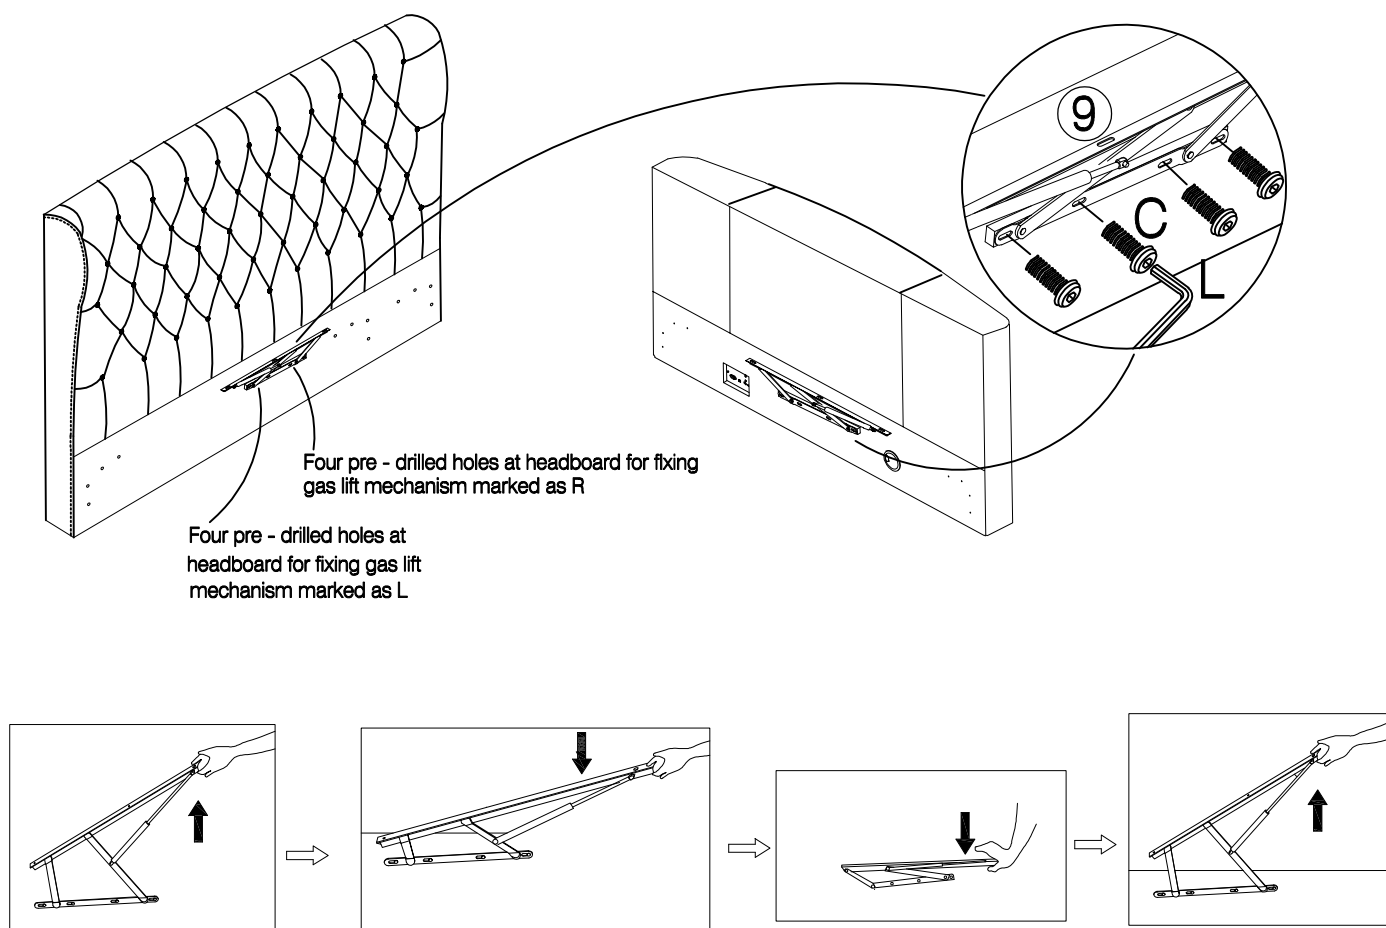


STEP 2

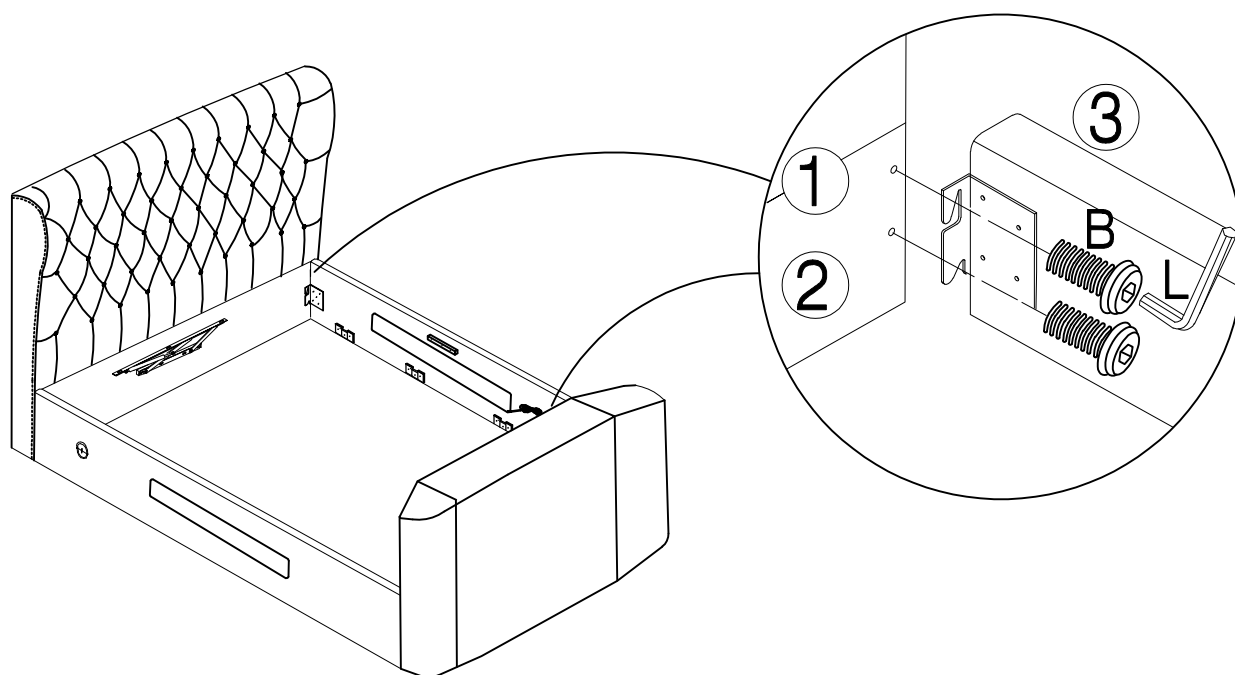


STEP 3

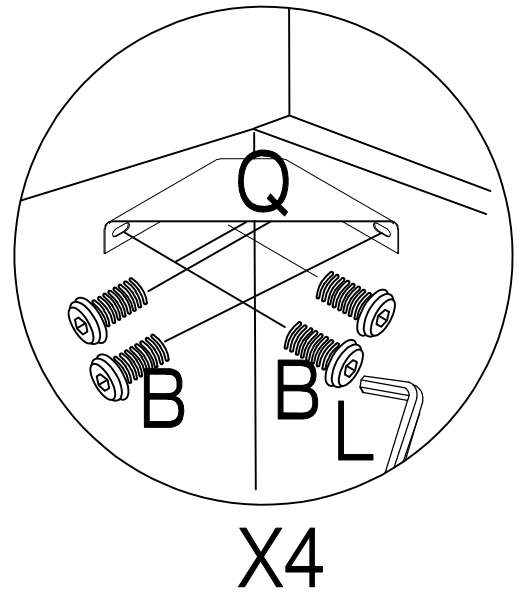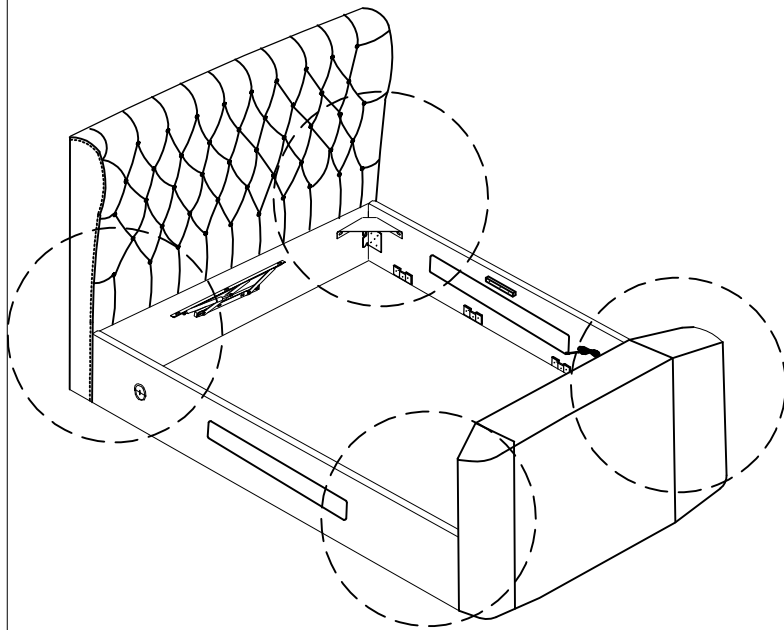


STEP 4

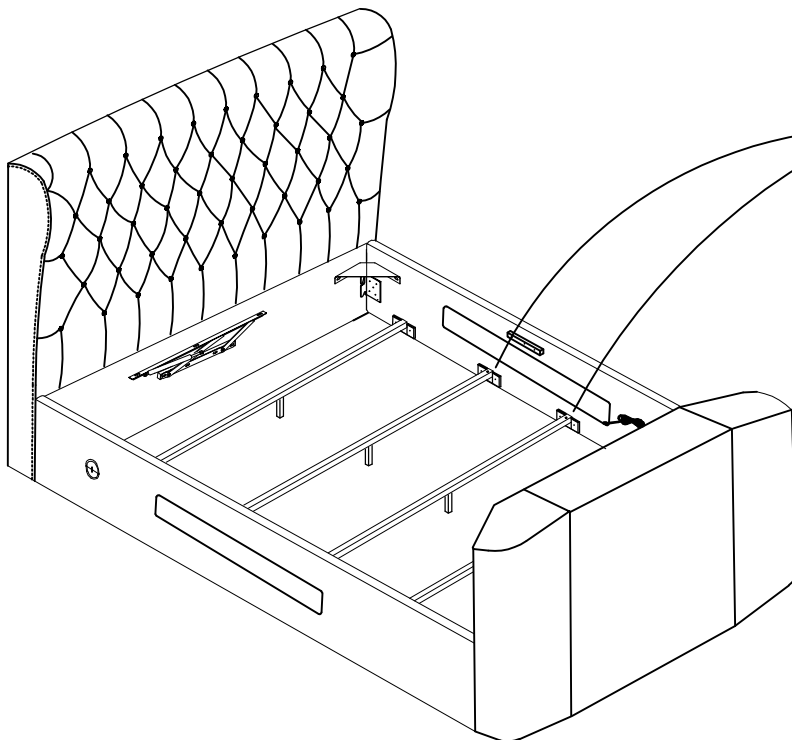


STEP 5

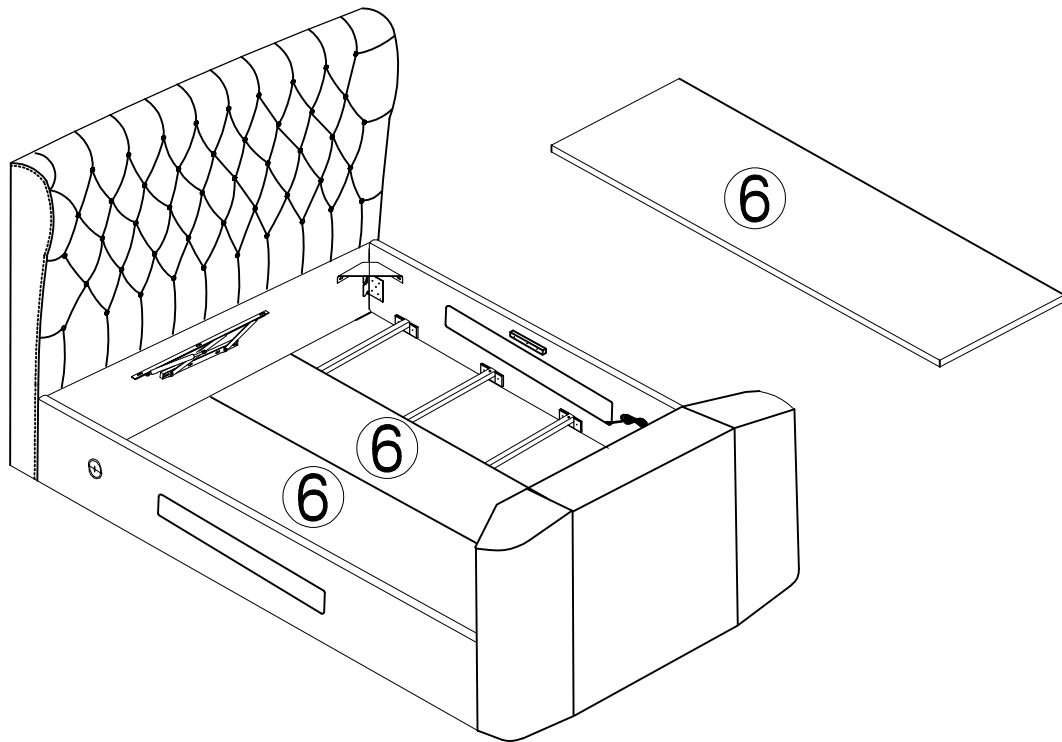


STEP 6

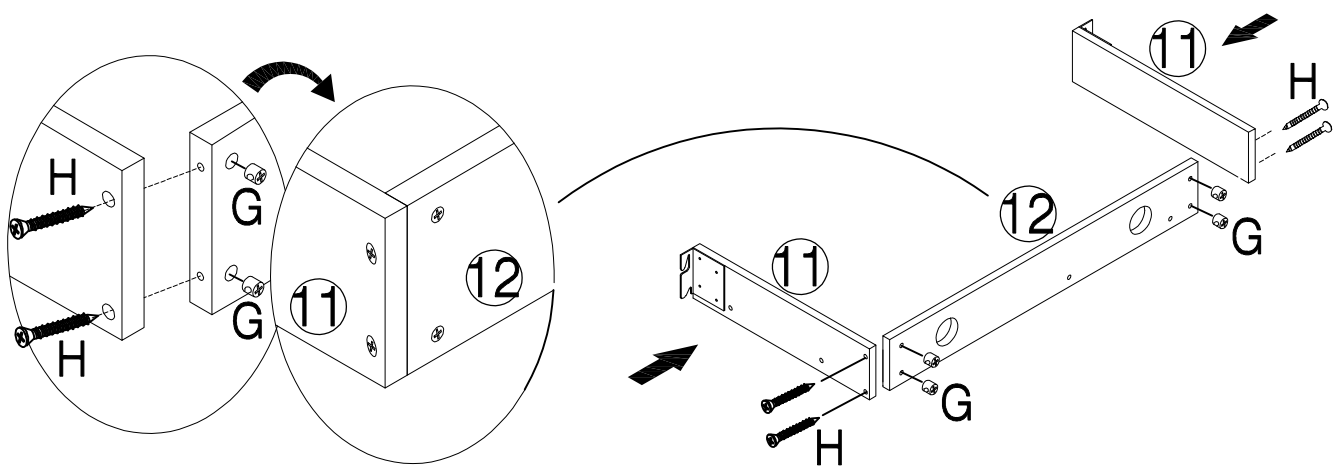


STEP 7

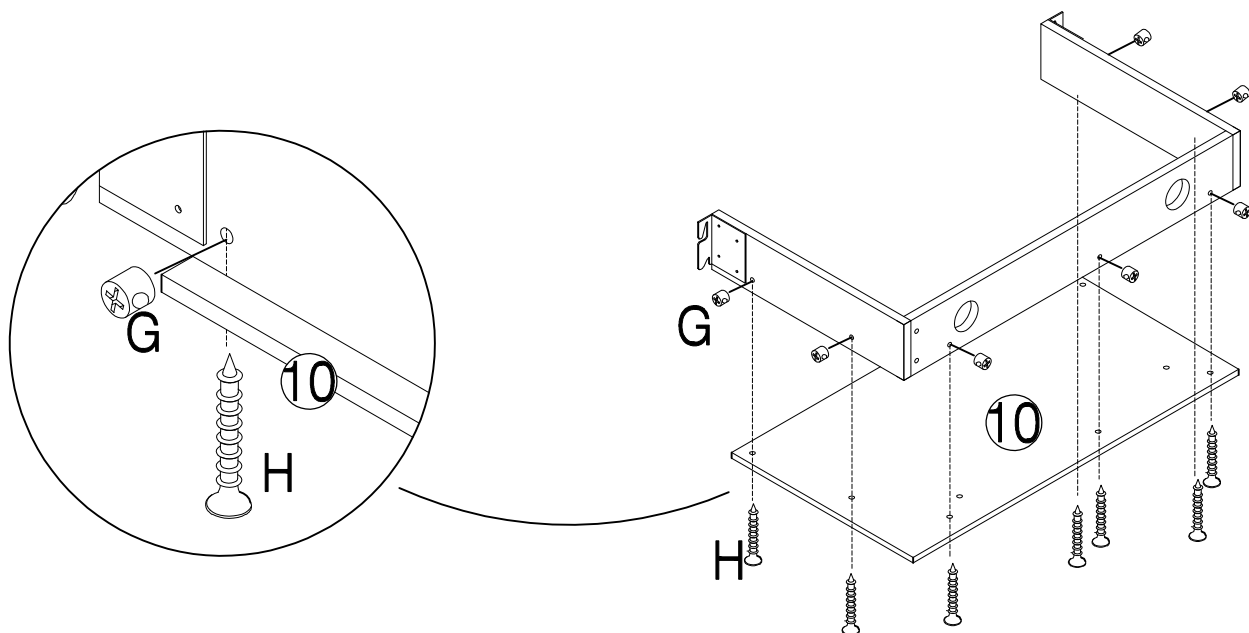

STEP 8

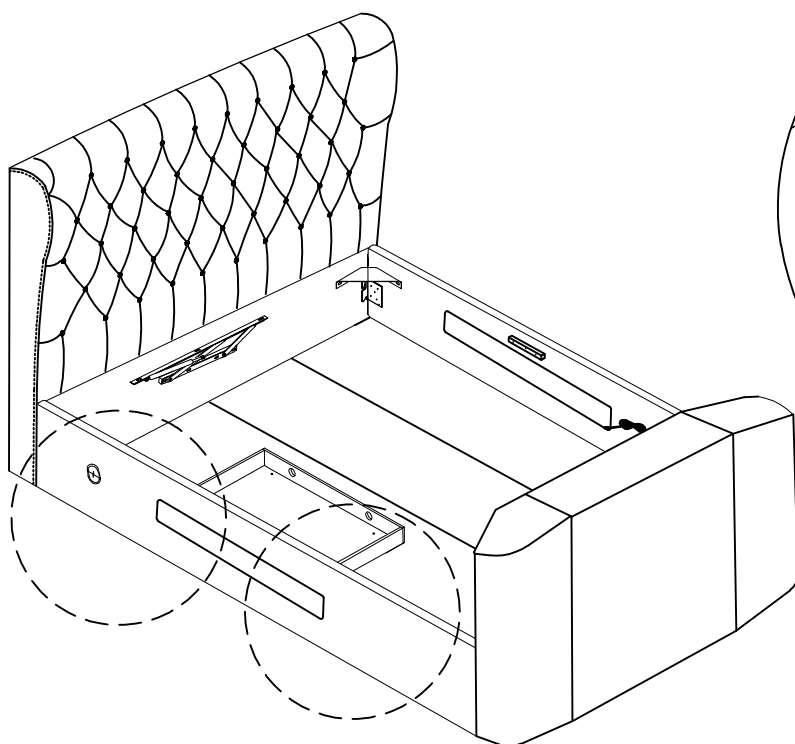


STEP 9

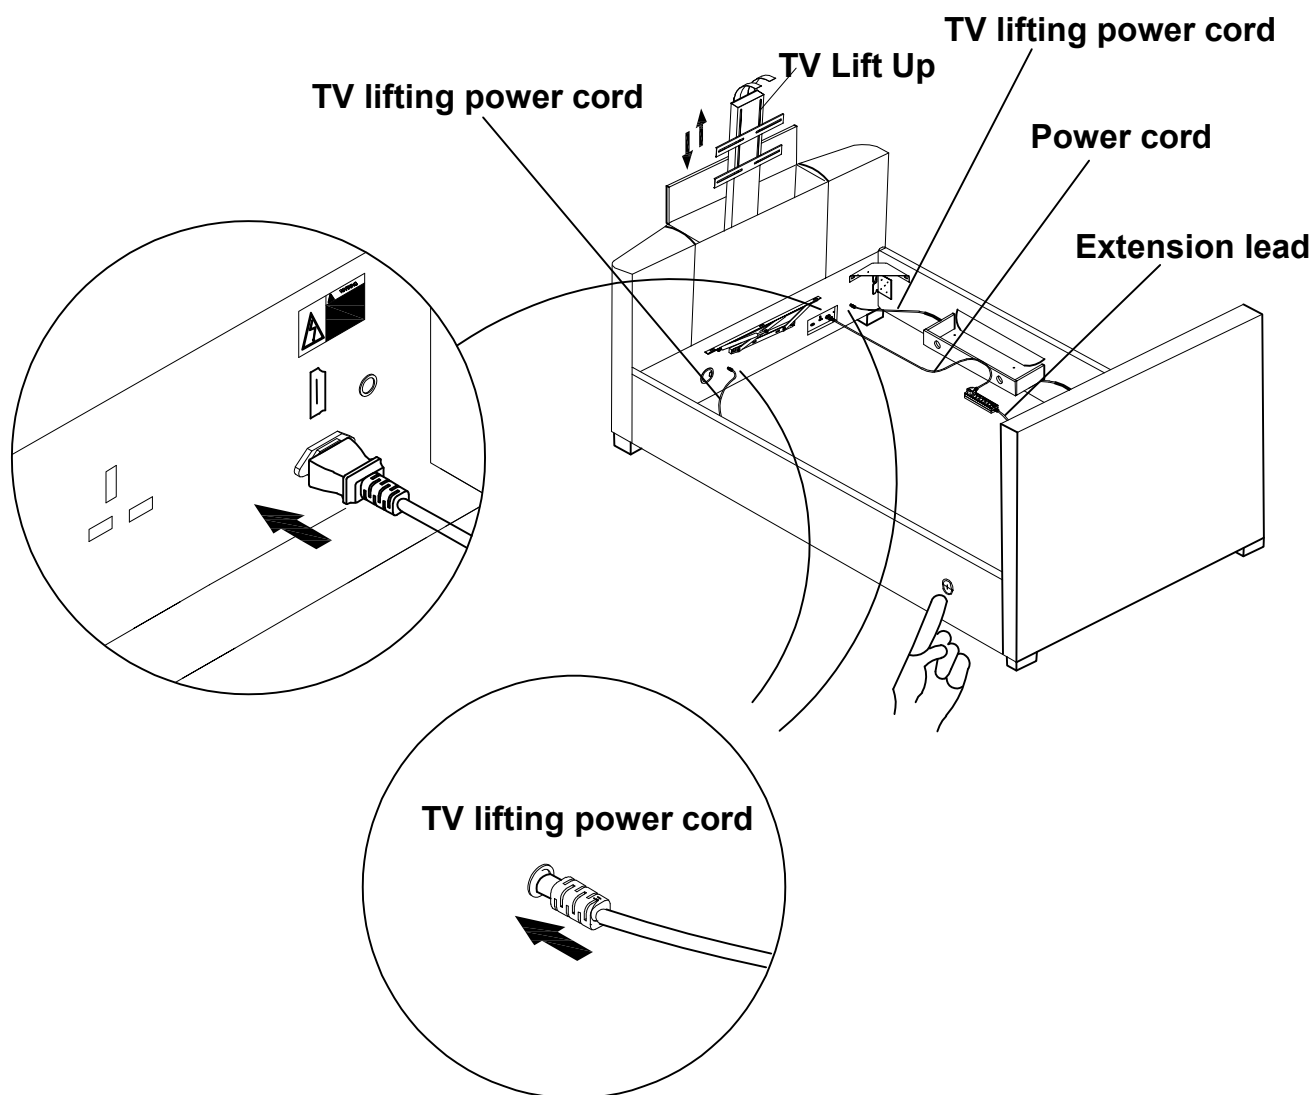

Plug the TV power cable into the socket at the bottom of footboard then connect your own media cables as required.


Connect the cables to the television & media equipment making sure the cables are not loose. If necessary use cable ties & cable clips to route cable safely.



When TV is fitted, it is easier to push due to balance of the weight.
When down, power for TV turns off automatically.
When TV is raised, power turns back on automatically

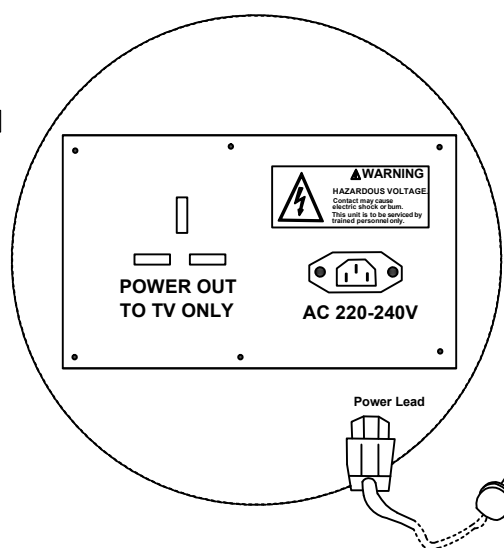

STEP 10



Attach TV using the appropriate screws and adjust the sliding vertical arm to sit neatly on top of the TV.

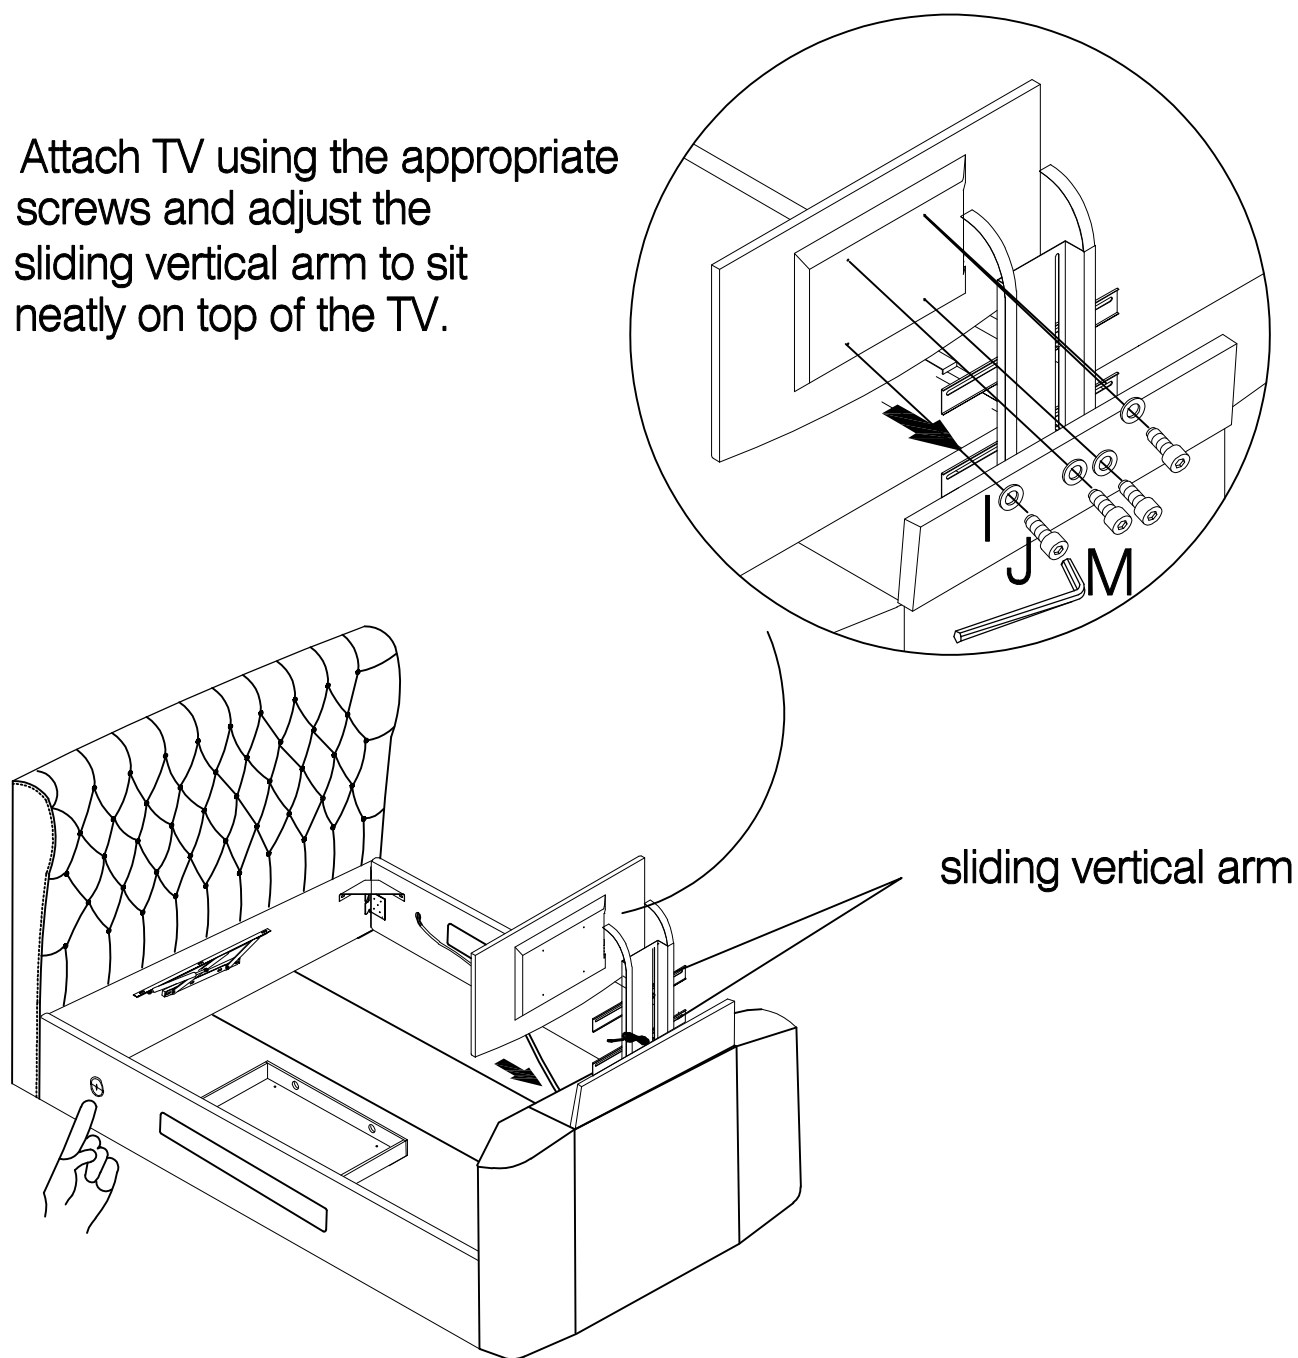

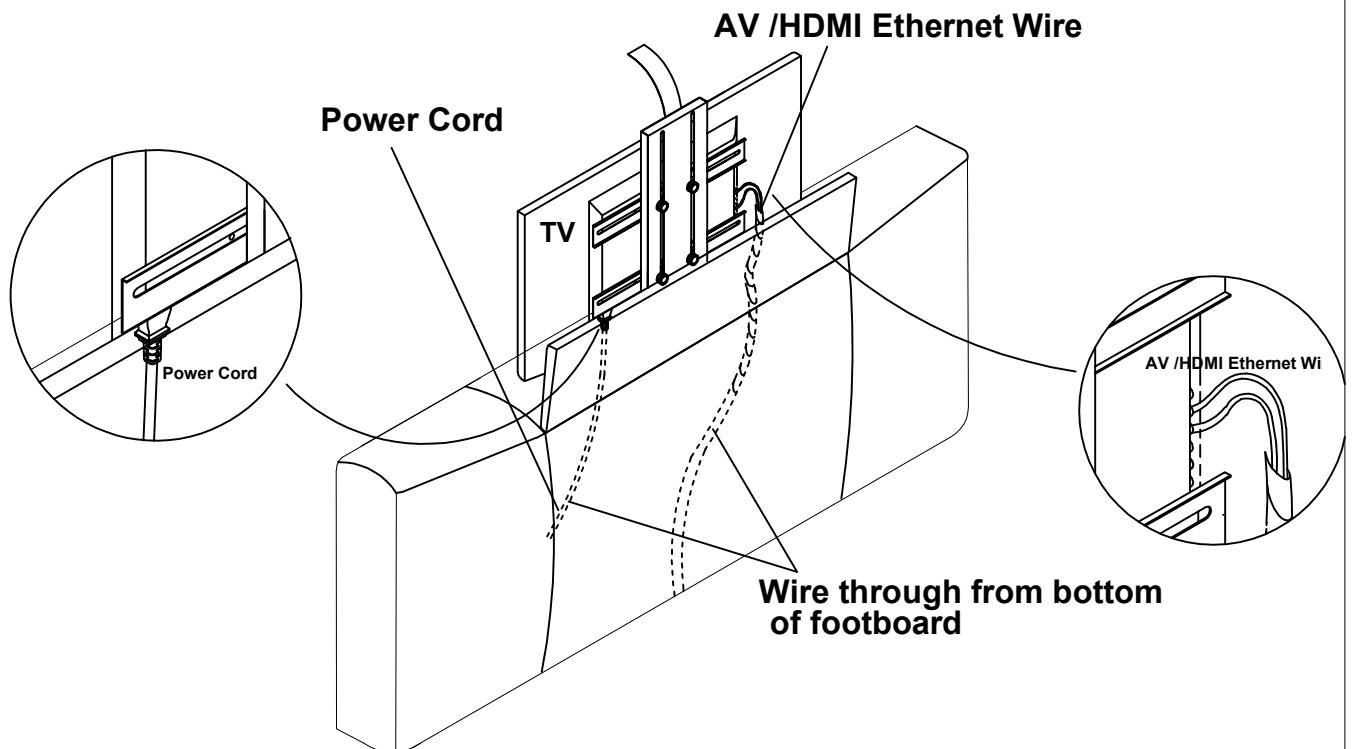
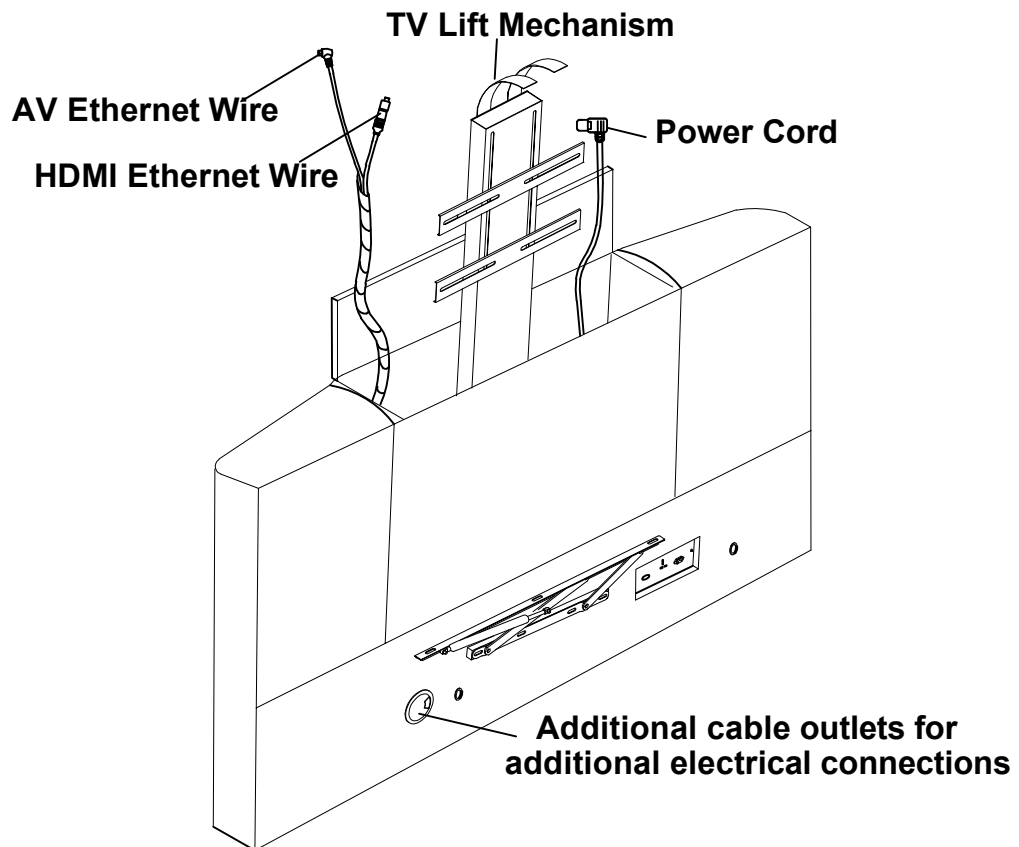


Place the wire cable through the Cable Management Caps to prevent any damage to the wire cable (eg.other power cord) when TV Lift Mechanism is operating.
Make sure the wire cables are long enough to let the TV Lift Mechanism move freely.


STEP 11

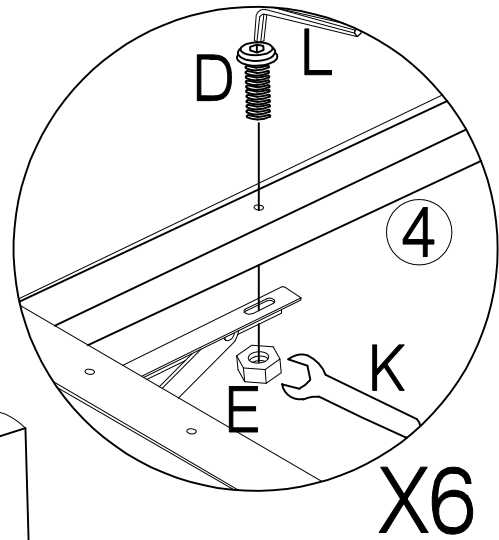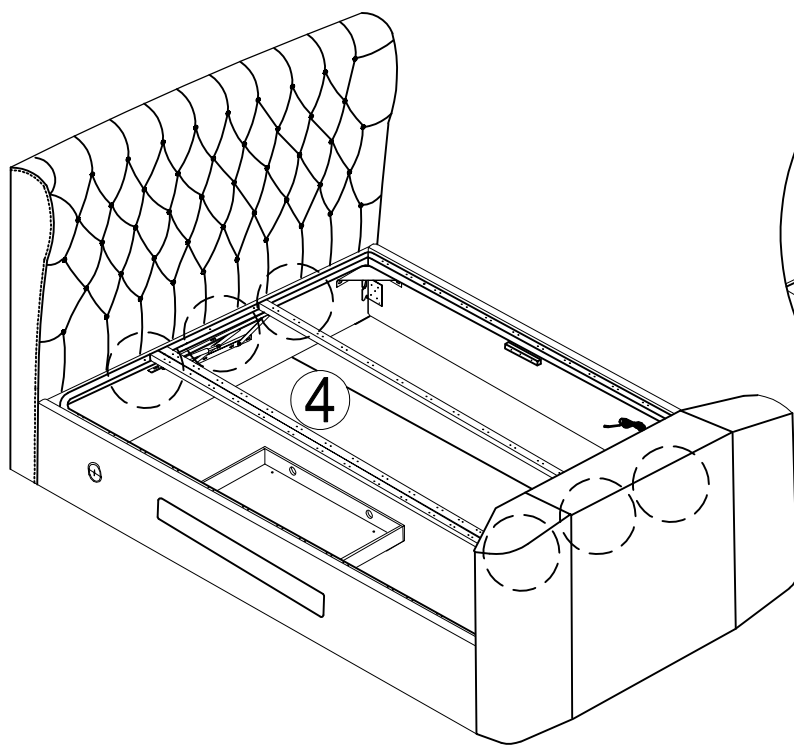

STEP 12

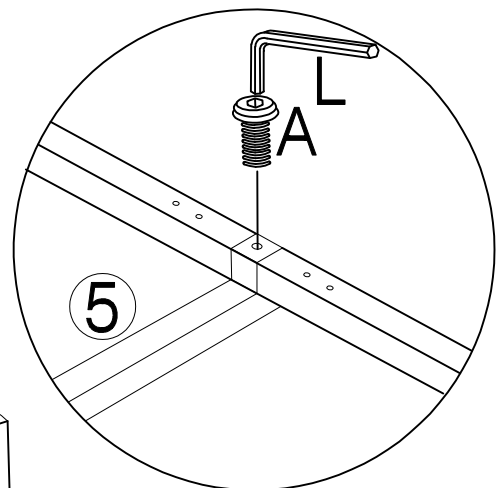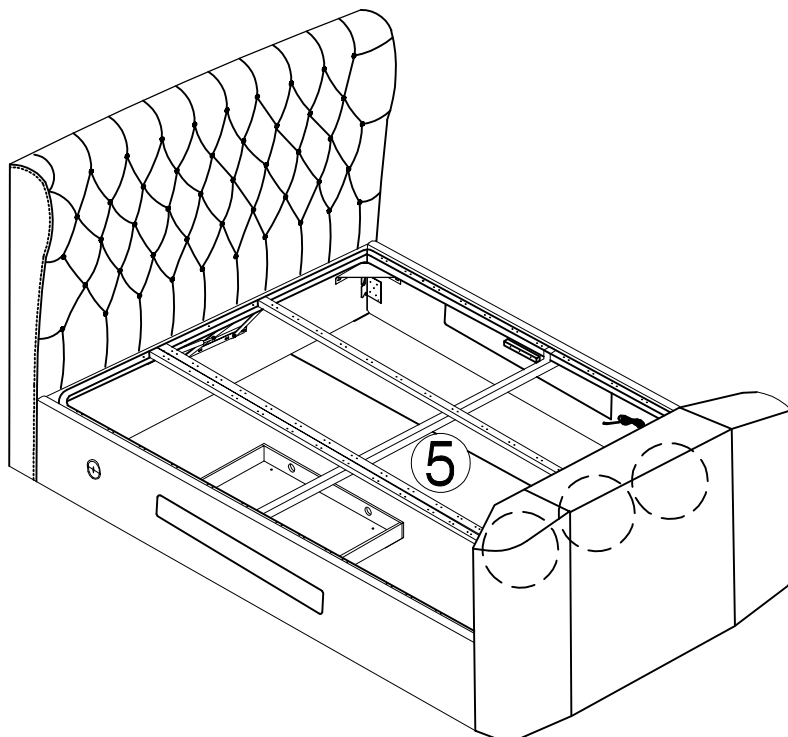

STEP 13

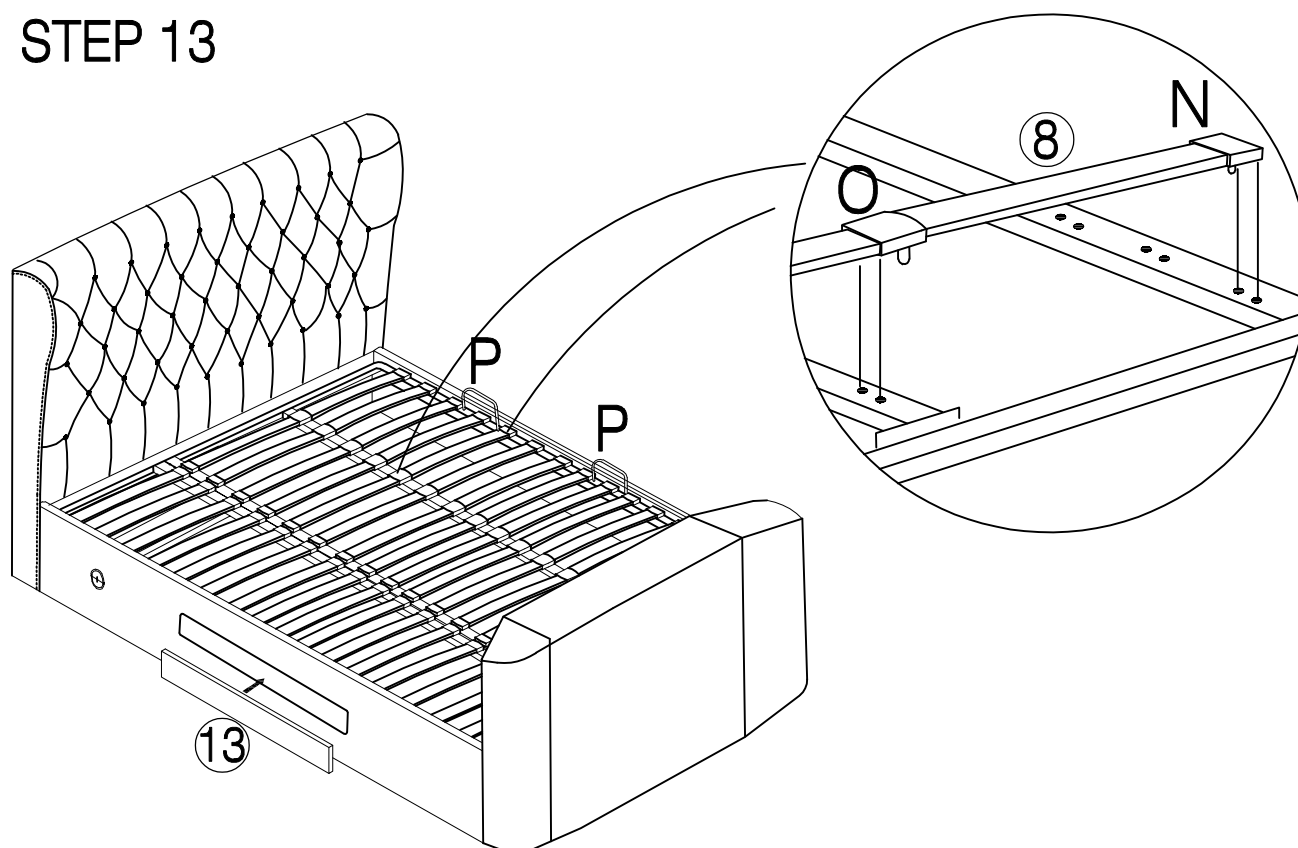

STEP 14

