


ASSEMBLY INSTRUCTIONS

MODEL NAME: BERLIN BED

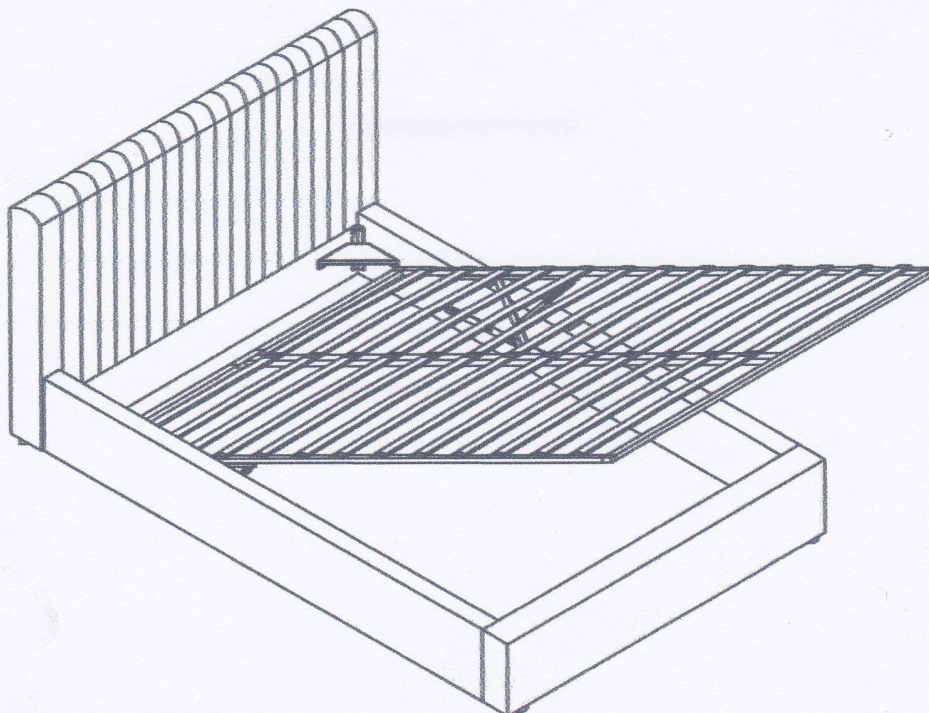

SIZES AVAILABLE:

2020mm×1090mm×890mm 3ft Single

2020mm×1390mm×890mm 4ft Small Double

2020mm×1540mm×890mm 4ft 6 Double

2120mm×1690mm×890mm 5ft King

BEFORE ATTEMPTING TO USE THE HYDRAULIC LIFT ACTION ON THIS BED ,
THE BED MUST BE FULLY ASSEMBLED AND COMPLETE WITH MATTRESS IN PLACE .
IF YOU TRY THE MECHANISM BEFORE THE BED IS FULLY ASSEMBLED,
IT MAY APPEAR STIFF AND REQUIRE MORE FORCE TO OPERATE.

COLOURS: BLACK, BROWN, WHITE

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.
Carefully open the pack supplied and check the contents against the parts and fitting check list.

Do not discard the packaging until after you have assembled the bed fully,
If for any reason this bed needs to be returned it must be in its original packaging.

Please ensure that the packing is disposed of in a safe environmentally friendly way.

CAUTION: There are small components used in the construction of this unit. These loose items should
be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.



2person Build

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled and secured as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly. This is normal with flat pack furniture.
- This product should only be used on firm, level ground.
- Please dismantle for transportation
- Tools not included.

WARNINGS

- This product is intended for a maximum person's weight of 100kg per side. Do not exceed this weight.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.
- Do not use power tools to construct this product, Only use the tools listed
The use of any power tool will invalidate any future claim
- Do not tighten screws until fully assembled.
- Do not over tighten screws or bolts.
- Do not use this product if parts are missing, damaged or worn.
- Do not stand on the product.
- Incorrect installation could lead to injury, take care following instructions


CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.
- If the bed being used is on a wooden or laminate floor. We recommend the use of furniture friction pads. These can be bought from most reputable DIY store.


PLEASE ENSURE ALL COMPONENTS ARE CORRECT BEFORE STARTING TO ASSEMBLE AS WE DO NOT ACCEPT PART ASSEMBLED RETURNS

Please note that some of the parts and components are delivered in the back of the headboard. Unzip and take everything out before assembly, and zip up the back before assembly.


Components

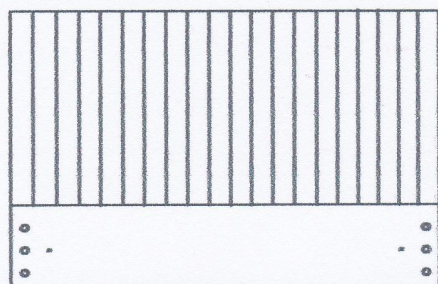


Headboard **1**




Footboard **2**

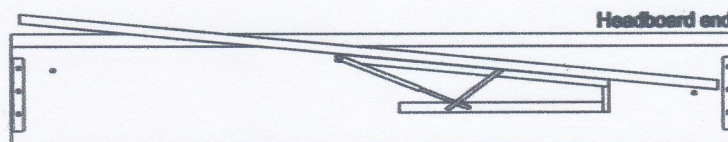

Left side rail **3**

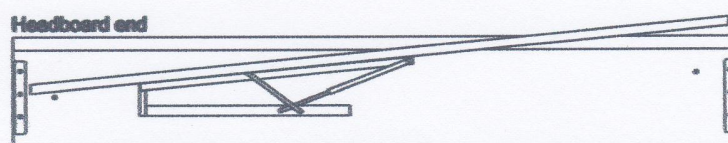

Right side rail **4**



Front / Back frame rail x 2 **5**



Horizontal frame rail x 3 **6**



Centre frame rail x 1 **7**



Plastic bracket sole x 4 **8**



Corner brackets x 4 **9**



Holding block x 1 **10**



Adjustable legs x 4 **11**



Belt x 1 **12**




Bent slat
x 20 (single & double)
x 30 (king) **13**



Side slat cap
x 20 (single & double)
x 30 (king) **14**





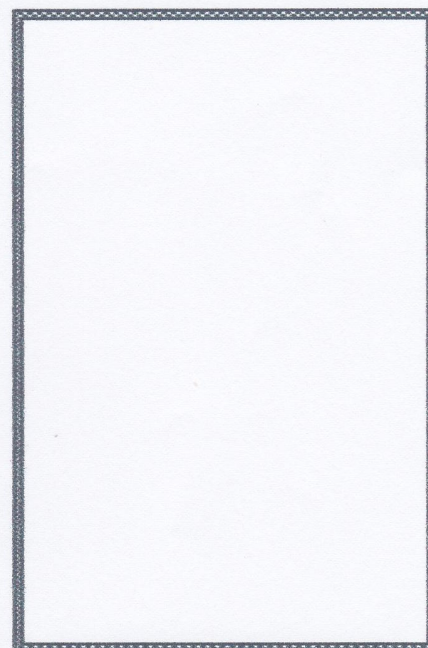




Centre slat cap
x 13 (single & double)
x 15 (king) **15**




Woven fabric x 1 **16**


Components - Fittings

A  25mm M8 Bolt x 12	B  15mm M6 Bolt x 12	C  nut x 2
D  30mm M6 Bolt x 6	E  68mm M6 Bolt x 2	
F  Spring washer x 12	G  Flat washer x 12	

Tools Required (Provided)



5mm Allen key x 1



4mm Allen key x 2



Spanner x 1

Place all parts on a even clean surface such as a carpet or the packing cardboard this will help to protect them against scratching or damage

Please count all parts to ensure they are all there BEFORE starting to Assemble the bed


Assembly Instructions

Step1:

Attaching side rails


A: Position left side rail(3) adjacent to headboard(1) so that the holes in the headboard line up with the bracket on the side rail. Secure in place using 3 bolts(A), spring washers(F) and flat washers(G) using the allen key provided.

A:

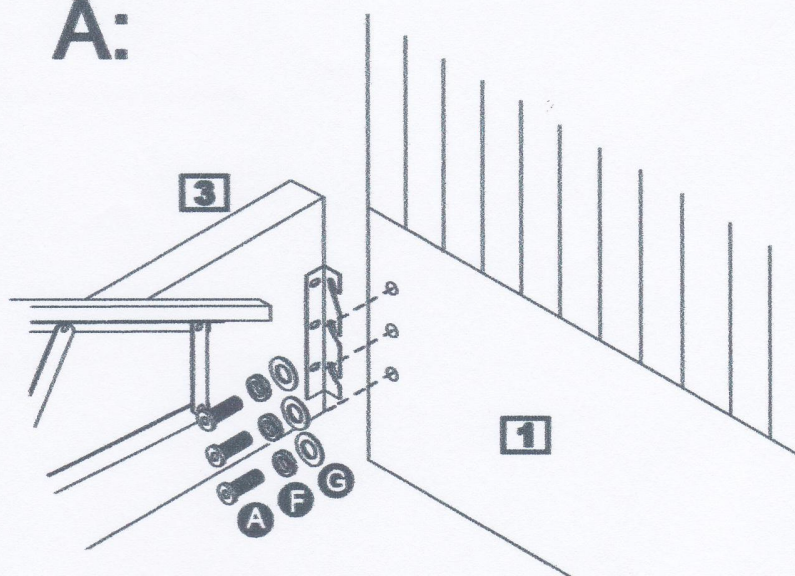

B: Repeat point A for right side rail(4).

B:

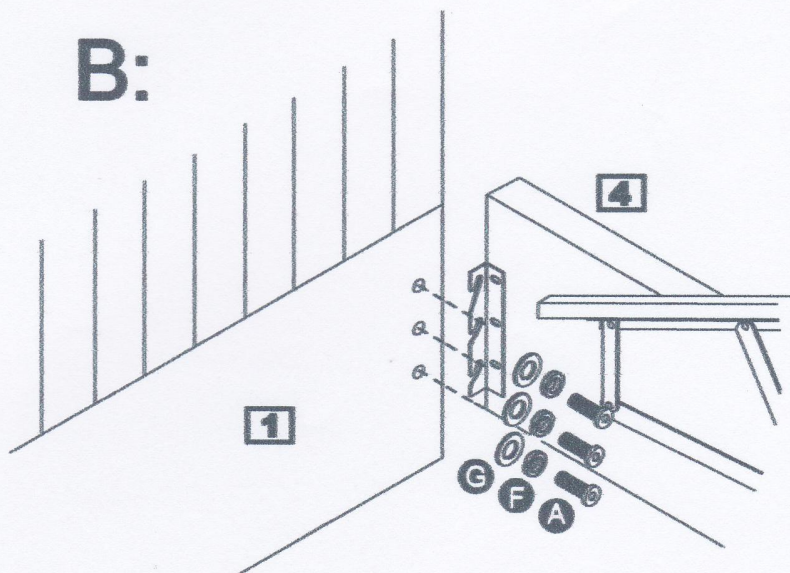


Assembly Instructions


Step2:

Attaching footboard


Place footboard (2) in position at the end of the side rails (3) & (4) so the holes in the footboard line up with the brackets on the side rail.

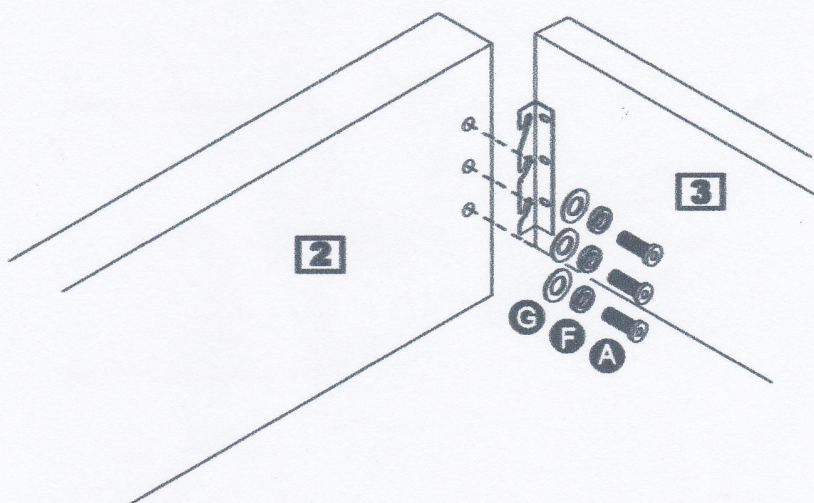

Secure in place using 3 bolts (A), spring washers (F) and flat washers (G) using the allen key provided.

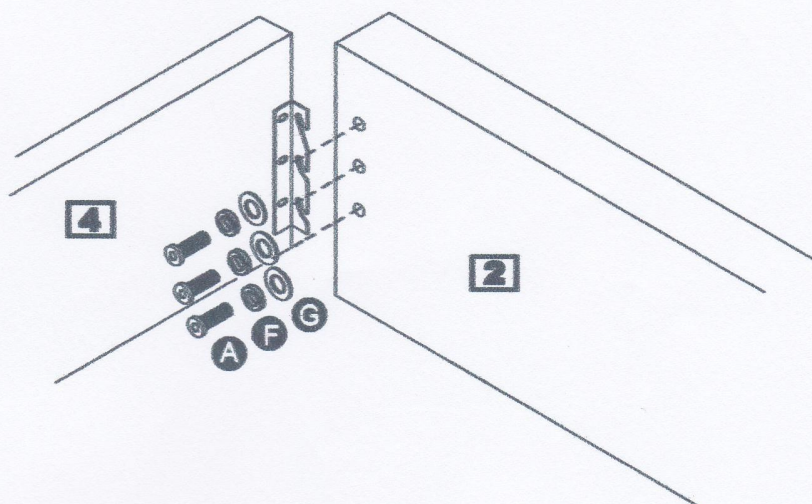

Before tightening the bolts, please ensure the bed frame is square.

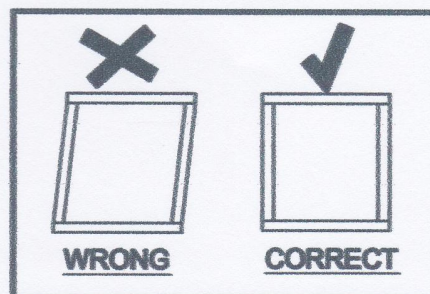


Assembly Instructions

Step3:

Fix corner brackets

Fix corner bracket(9) in position between the left side rail(3) and headboard (1) using bolt(B).


Repeat for other 3 corner brackets in each corner of the bed frame.

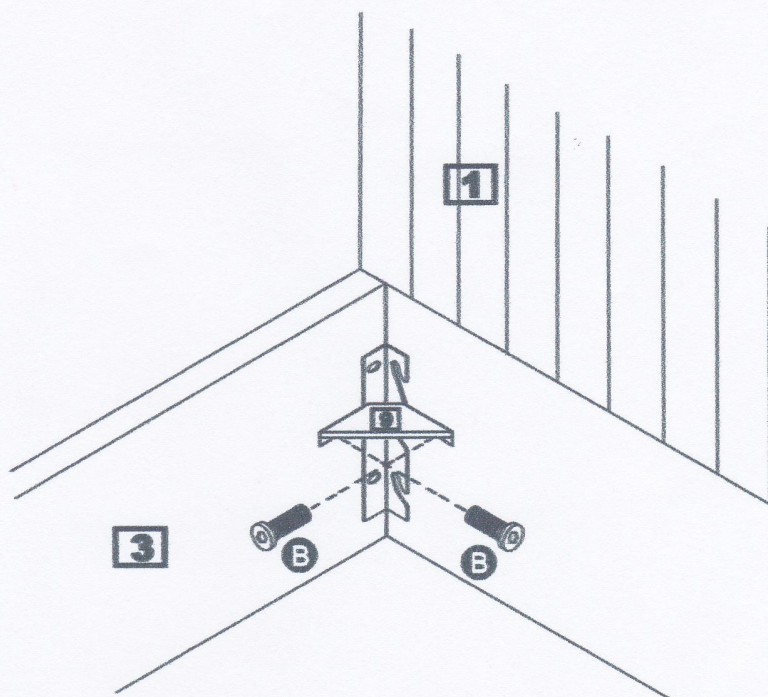

Step4:

Fix holding block

Fix holding block (10) onto footboard (2) using bolt (E) and tighten using allen key.

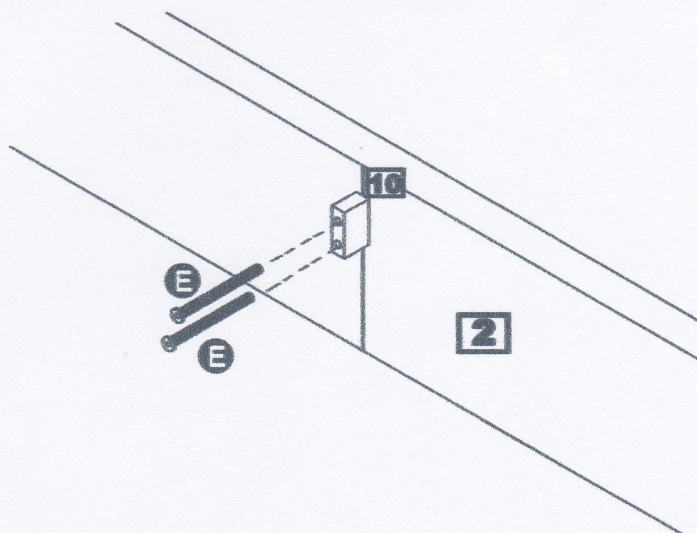

Assembly Instructions


Step5:

Secure hydraulic arms

Before connecting the hydraulic arm, ensure the lifting mechanism is functioning correctly - it should lift up and down freely with adequate clearance on all sides.

Please ensure the hydraulic arm is in the correct position. The thinner section should be attached to the side rail, and the thicker section is connected to the slat frame.

Once you have fitted the hydraulic arms to the bed, the bed will remain elevated until you complete assembly, once you have completed assembly refer to the front page of the instructions titled 'how to use the bed'

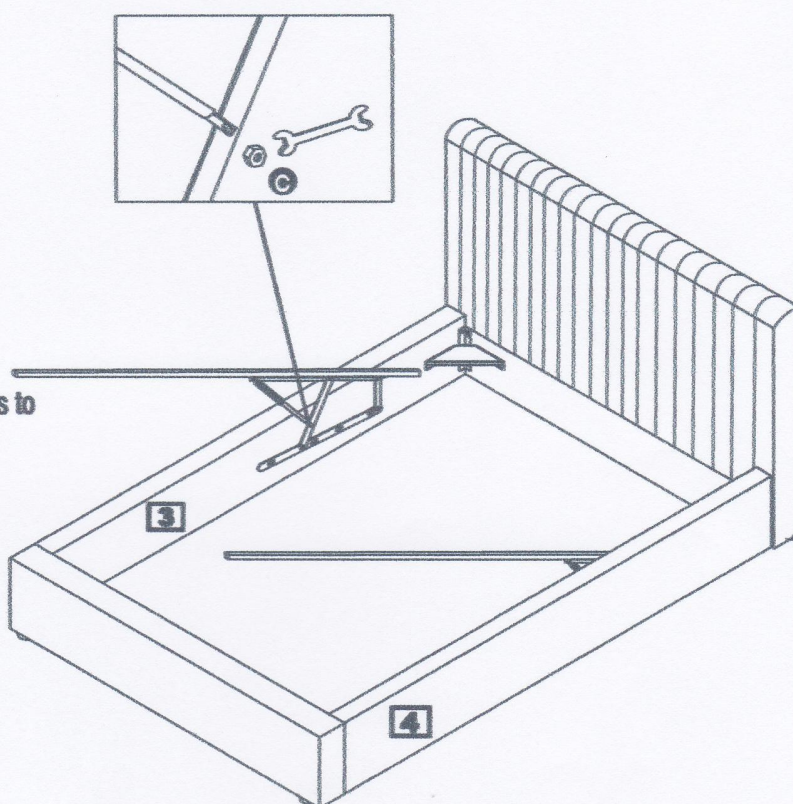

Secure the hydraulic lifting mechanisms on the side rails (3) & (4) into place by using nuts (C) as shown.

Do not overtighten the nuts.

Assembly Instructions


Step6:

Assemble the base

A: Fix the front/back frame rails(5) to the side support rails which are already attached to the lifting mechanism with plastic brackets (8) .

Repeat on all four corners.


B: Fix centre frame rail (7) to front / back frame rails (5) using bolt (B) and tighten with allen key provided.

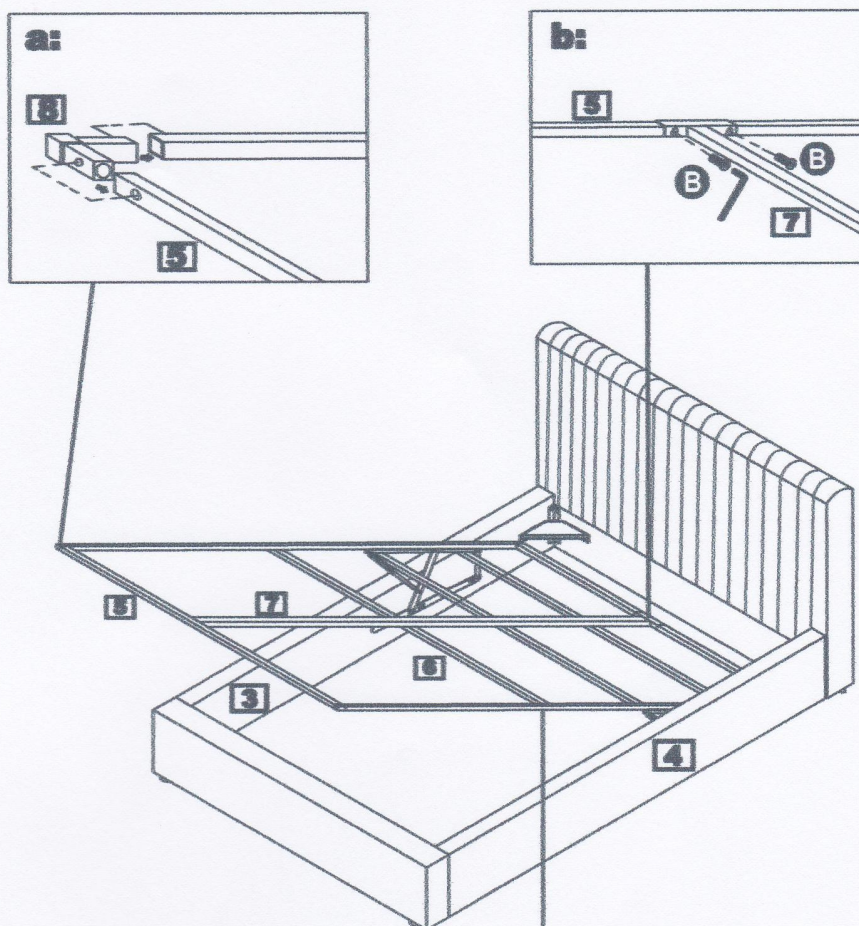

Step7:

Attach the horizontal supports

Fix the horizontal support rails (6) on the bottom of the lifting mechanism rail using bolts (D) with the allen key provided.

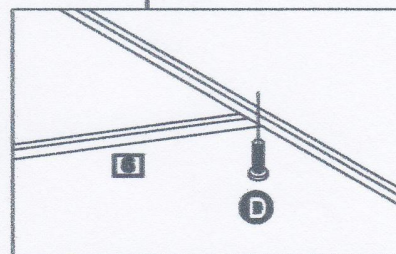


Assembly Instructions

Step 8:

A: Attach woven fabric


Turn bed on its side and attach woven fabric (16) to base.

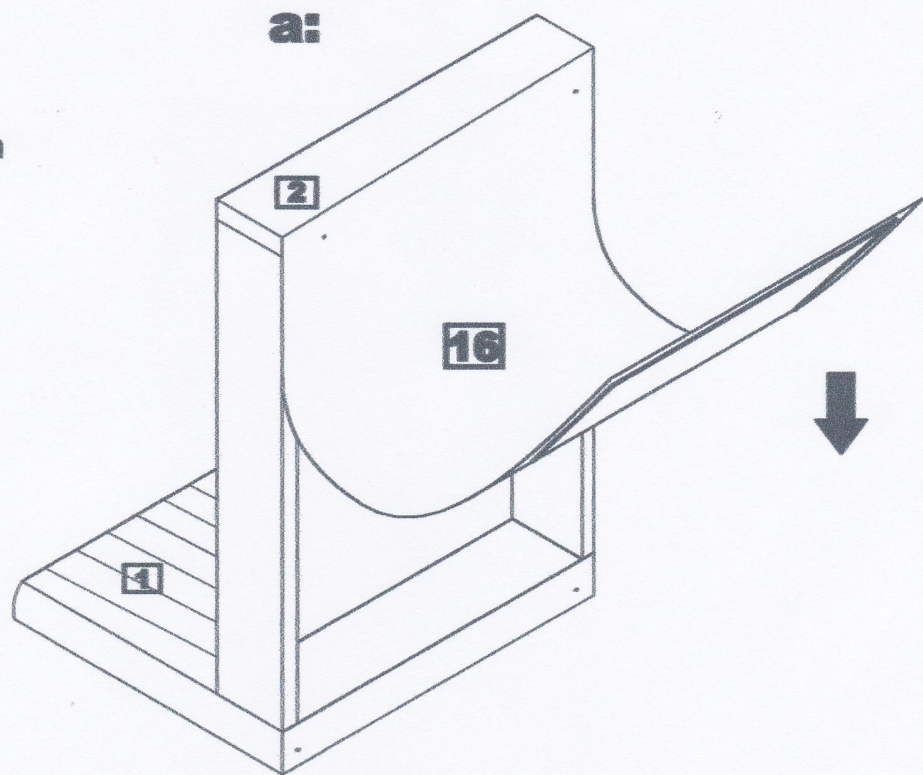

B: Attach adjustable legs

Whilst bed is upside down attach adjustable legs (11) to the base and tighten them.

b:

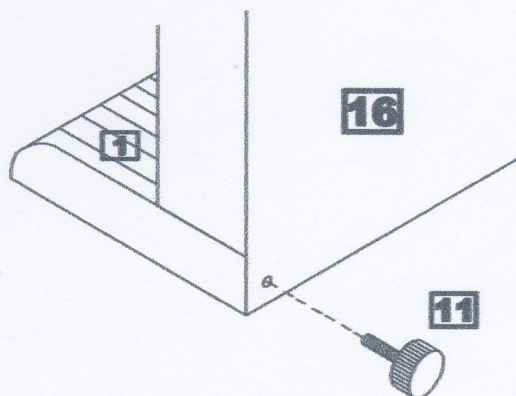


Assembly Instructions

Step9: Assemble slats

Attach centre slat caps (15) and side slat caps (14) to each slat (13) as shown.

Attach the slats to the slat frame by firmly pushing into place on the slat frame.

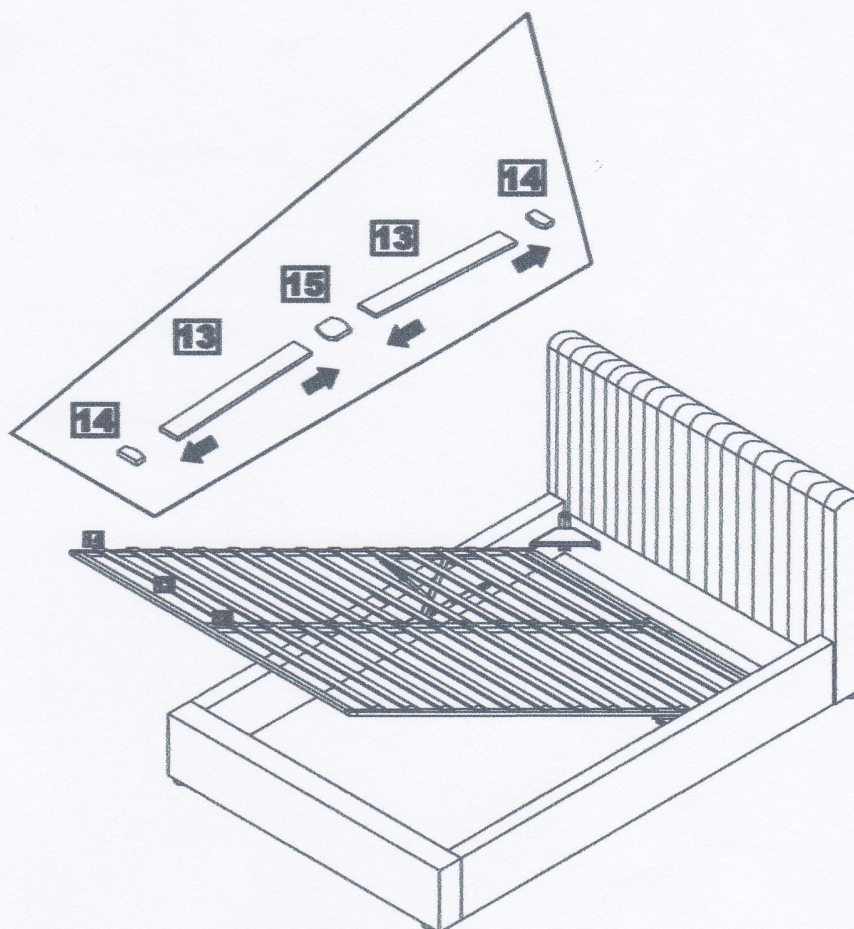

Step10:

Attach belt (12) to the metal frame by loop-on method as shown. pull tight after loop-on.

