
Assembly Instructions: Havana 5' Bed With Slats - February, 2017 - IA 5639

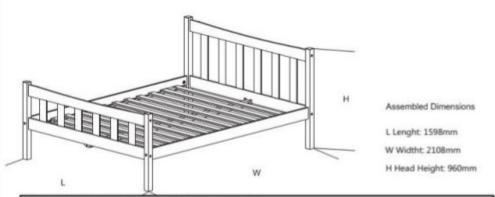

PLEASE NOTE: CHECK ALL PARTS BEFORE ASSEMBLING

ONCE ASSEMBLED THIS ITEM CANNOT BE RETURNED UNDER THE APPROVAL GUARANTEE

THIS PRODUCT IS BUILT VERTICALLY - PLEASE BUILD WHERE IT WILL BE USED.

Follow Me

-FIRST: Check that the assembled product size will fit in its required location. Take into account ceiling height clearance & door frame widths, if the unit is not being assembled close to its final location

- SECOND : Check that you have enough floor area to complete the assembly
- THIRD: Retain your packaging until you have checked that ALL the parts are in the packs.
- FOURTH :Sort out the parts and fittings as shown, assemble product step by step
- It is preferable to rest the product on a soft surface to avoid damage during assembly
- Do not over tighten screws and fittings.
- Re-Tighten all screws and fitting periodically.

Guide Me

Multi-Pack Table COMPONENT Pack NO BOX: 1/2

BOX: 2/2

- FITKIT HEADBOARD
- SIDERAIL
- FOOTBOARD
- CENTRE SUPPORT

Replacement packs cannot be provided without Component pack number and the part number / description

Show Me

No of People to Assemble



Time

TOOLS REQUIRED

Approx Assembly

Preparation Flor Space 2.5 x 2.5m Height 2.1m

Pozi No 2




Recycling- the packaging materials for this product may be recycled through your local recycling centre. When you want to dispose of the product it self, please consider donating it to a local charitable organization, otherwise recycle it through your local recycling centre.

IMPORTANT: READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE

Please refer to the "Hometime" care leaflet enclosed for information regarding the maintenance and use of your product. For Domestic Use Only

Please register this product at www.suntime-spares.co.uk to access the future spare parts requirement. Imported by Transcontinental Group Ltd, Oliver's Place, Eastway, Fulwood, Preston, Lancs. PR2 9WS

If the room you plan to use your new bed in has a laminate or wood floor, we highly recommend you purchase some anti-skid pads to fit to the underside of the feet of the bed. Floors of this nature offer no grip, which over a small period of time can result in the bed fittings & components coming lose or breaking altogether due to them slowly slipping on the floor. These grips will also protect your floor from any marking that may be caused by your furniture slipping in this manner. These pads can be bought from most good DIY shops or superstores and are relatively inexpensive.

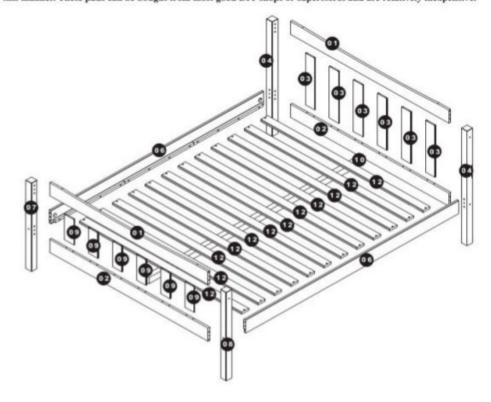

A	10x40	24
В	6x40	48
С	4,000	24
D	√ , sq.	04
Е	7 x 100mm	08
F	1/4 x 90mm	04

G	2	04
н	Allen 4mm	02
1		02
J	(]mmm> 4,5X16	12
к		02

