



# STOCKHOLM 4FT 6IN DOUBLE BED ASSEMBLY INSTRUCTIONS

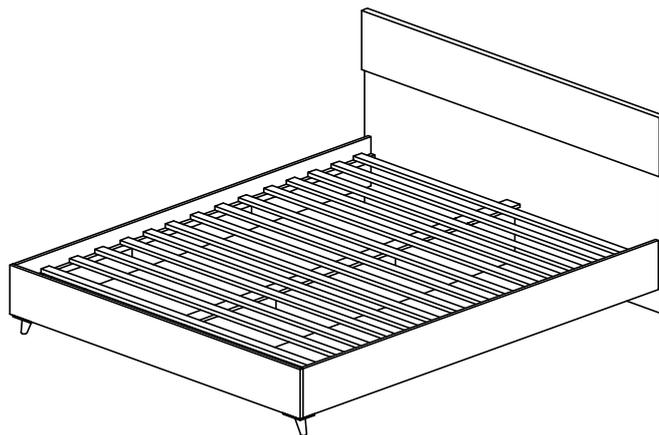


## IMPORTANT PLEASE READ BEFORE YOU CONTINUE FURTHER

### WARNING AND INSTRUCTIONS

- PLEASE KEEP THE ORIGINAL PACKAGING UNTIL THE ITEM IS FULLY ASSEMBLED AND IN PLACE. IN THE UNLIKELY EVENT YOU NEED TO RETURN YOUR PRODUCT. IT MUST BE RETURNED IN ITS ORIGINAL PACKAGING TO AVOID FURTHER DAMAGE. FAILURE TO COMPLY TO THESE PROCEDURES, NO RETURNS WILL BE ACCEPTED.
- IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
- DUE TO THE SIZE OF THIS PRODUCT WE RECOMMEND THAT IT IS ASSEMBLED IN THE ROOM INTENDED FOR USE.
- WHEN YOU ARE READY TO START, MAKE SURE THAT YOU HAVE THE RIGHT TOOLS, PLENTY OF SPACE AND A CLEAN, DRY AREA FOR ASSEMBLY.
- UNWRAP ALL PACKAGING MATERIALS AND PLACE THE COMPONENTS ON TOP OF THE CARTON BOX OR ON A CLEAN FLOOR TO PREVENT IT FROM SCRATCHING.
- CHECK THE PACK AND MAKE SURE YOU HAVE ALL THE PARTS LISTED.
- ENSURE THAT THIS PRODUCT IS FULLY ASSEMBLED AS ILLUSTRATED BEFORE USE.
- TOOLS NOT INCLUDED.
- CHECK ALL SCREWS OR BOLTS ARE TIGHTENED AND INSPECT REGULARLY.
- THIS PRODUCT SHOULD ONLY BE USED ON FIRM LEVEL GROUND.
- KEEP SMALL PART OUT OF REACH OF CHILDREN.
- MAKE SURE THE LEGS REMAIN IN CONTACT WITH THE GROUND.
- DO NOT USE POWER TOOLS TO CONSTRUCT THIS PRODUCT.
- DO NOT TIGHTEN SCREWS UNTIL FULLY ASSEMBLED.
- DO NOT OVERTIGHTEN SCREWS OR BOLTS.
- DO NOT USE THIS PRODUCT IF PARTS ARE MISSING, DAMAGED OR WORN.
- DO NOT SIT AND STAND ON THE PRODUCT.
- TO CLEAN WIPE WITH A SPONGE AND WARM SOAPY WATER. DO NOT USE SOLVENT BASED CLEANERS OR DETERGENTS AS THEY CAN BLEACH OR DAMAGE THE PRODUCT.
- NEVER USE SCOURERS, ABRASIVES OR CHEMICAL CLEANERS.

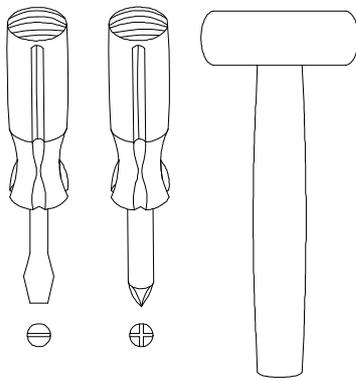


(Tools not provided)

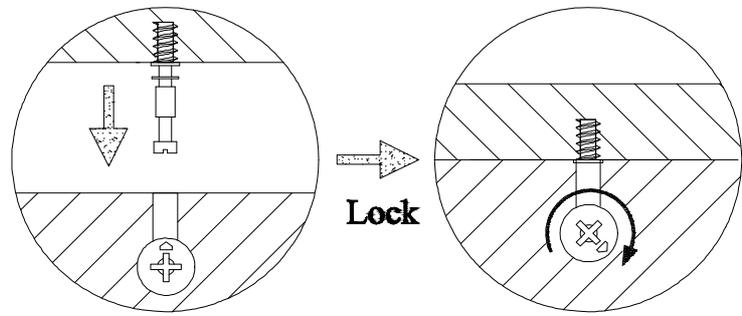

Use a flat blade screwdriver to tighten the cam nuts. A quarter turn clockwise is all that is needed.


## This is how a cam nut works.....

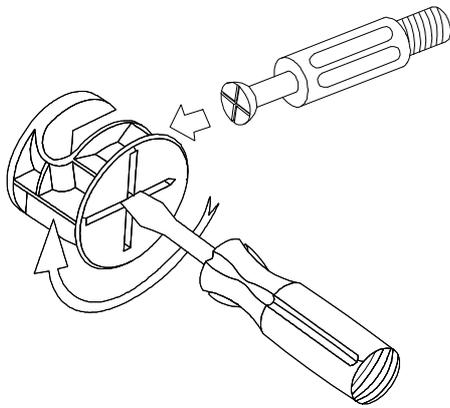

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

## TWO PERSONS REQUIRED TO ASSEMBLE THIS PRODUCT

1. Please check that you have all the parts listed before you start assembling. If you do find that something is missing, do not continue assembly. Please contact your supplier immediately.
2. Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.
3. Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.

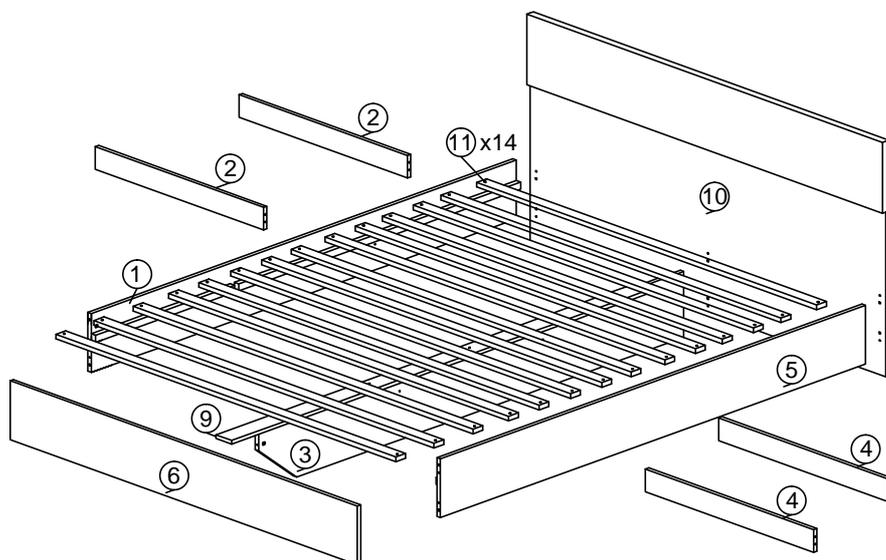

## PARTS LIST

NO.	PARTS						QTY
1	1930	X	248	X	45	1 PC	
2	687	X	96	X	15	2 PCS	
3	1390	X	280	X	15	1 PC	
4	687	X	96	X	15	2 PCS	
5	1930	X	248	X	45	1 PC	
6	1424	X	250	X	15	1 PC	
7	114	X	50	X	50	1 PC	
8	114	X	50	X	50	1 PC	
9	1930	X	70	X	15	1 PC	
10	1460	X	1000	X	30	1 PC	
11	1390	X	65	X	20	14 PCS	

## HARDWARE LIST

NO.	DESCRIPTION		QTY
A		CAM NUT 15MM	22
B		CAM BOLT	22
C		CAM CAP	28
D		WOOD DOWEL 8 X 25	10
E		CSK CAP WOOD M6 X 50MM	11
F		CB SCREW M3.5 X 16MM	32
G		JCBB BOLT M8 X 40MM	2
H		L KEY (M4)	1
I		L KEY (M5)	1
J		CB SCREW M4 X 38MM	28
K		TAD BRACKET 01	2
L		STICKER (SMALL)	18
M		STICKER (BIG)	2
N		L BRACKET	4

If the room you plan to use your new bed in has **LAMINATE** or **WOOD** flooring, we highly recommend you purchase some anti skid pads to fit to the underside of the feet on the bed.

These are not supplied within this product.


This will prevent movement of the product and prevent damaging the flooring. These are available from all **GOOD HARDWARE STORES**.

**THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.**




# STEP 1

D	 WOOD DOWEL 8 X 25	10
---	---	----

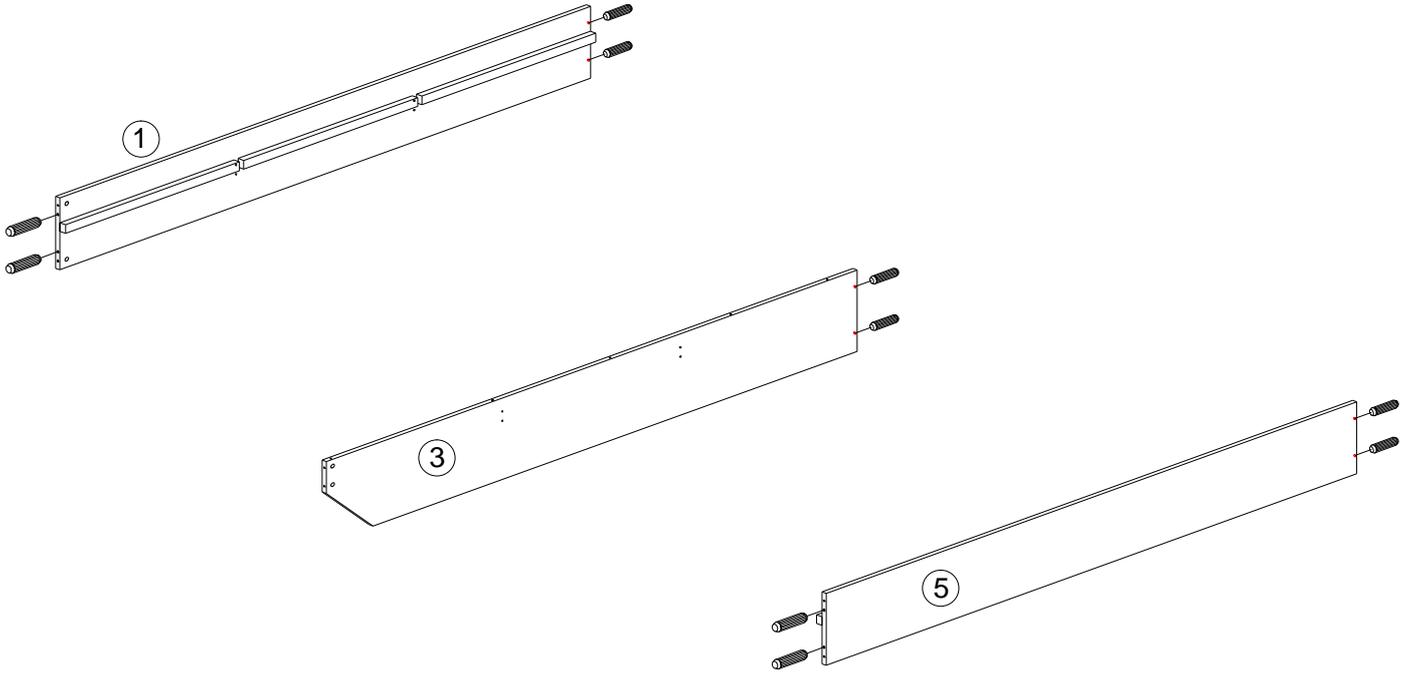

# STEP 2

B	 CAM BOLT	22
---	--	----







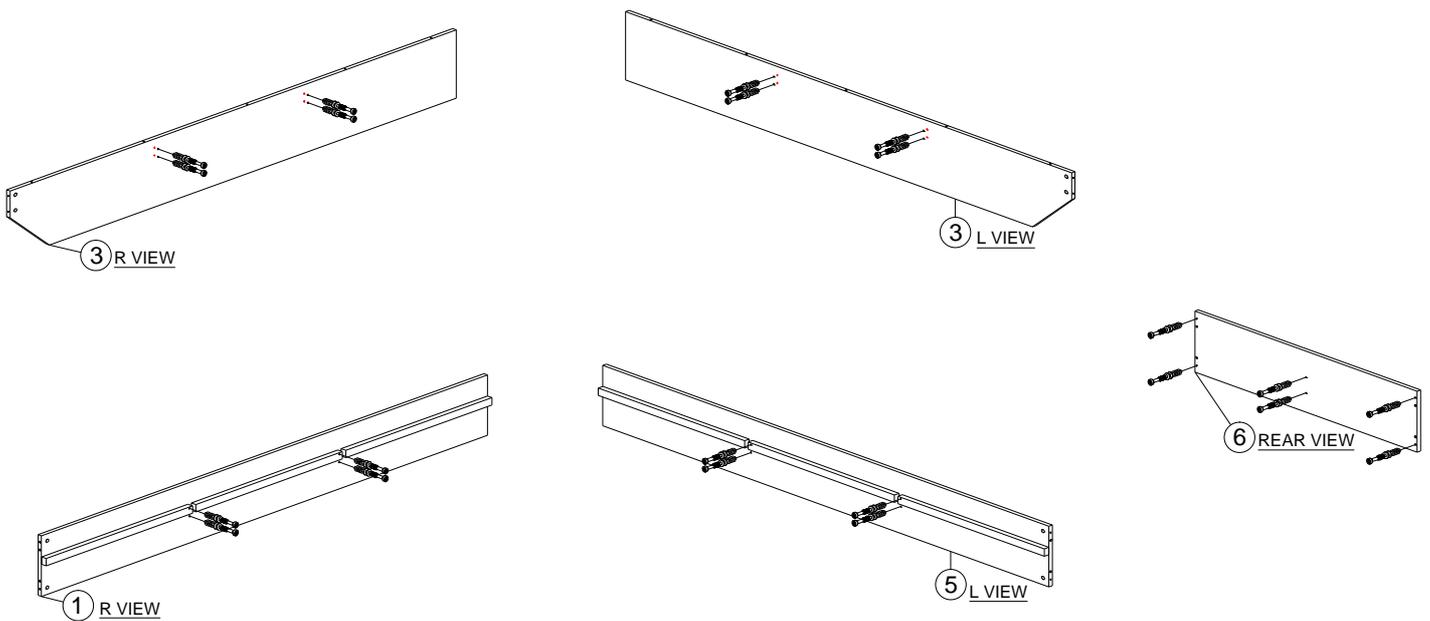


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.





# STEP 3

A	 <b>CAM NUT 15MM</b>	22
---	--	----

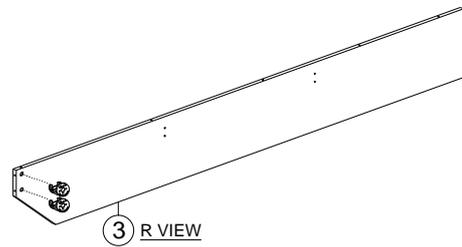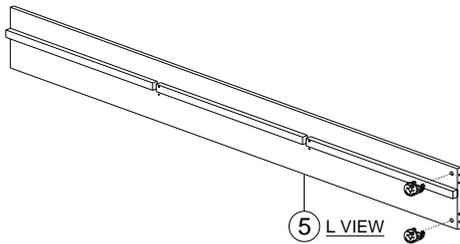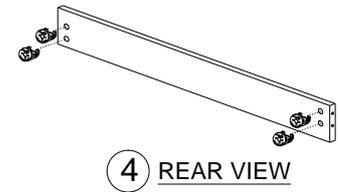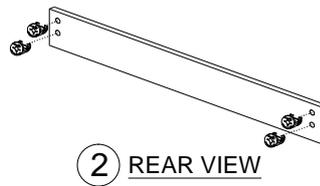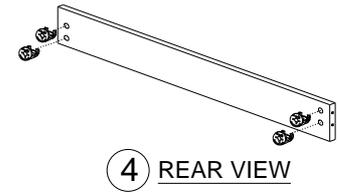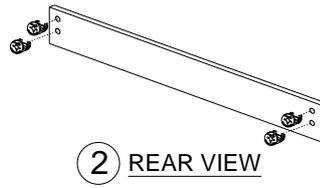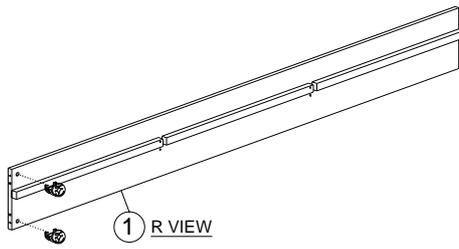

# STEP 4

G	 <b>JCBB BOLT M8 X 40MM</b>	2
K	 <b>TAD BRACKET 01</b>	2
M	 <b>STICKER (BIG)</b>	2



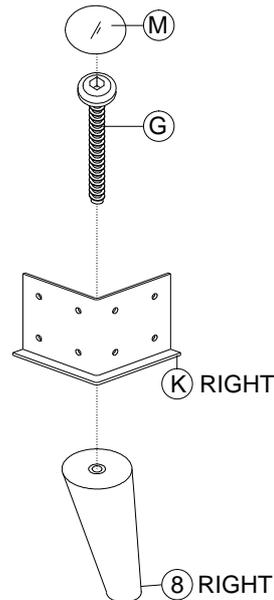
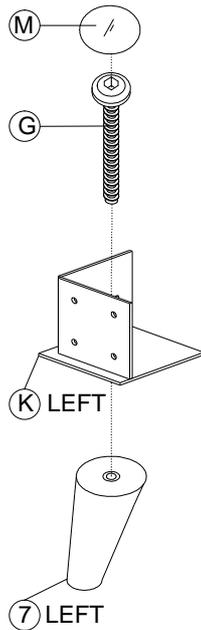


**THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.**







# STEP 5

C	⑥	CAM CAP	8
---	---	---------	---

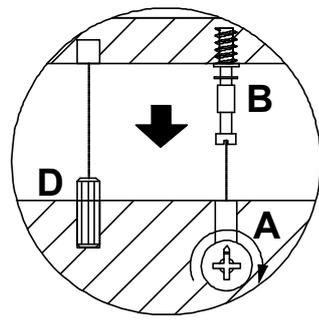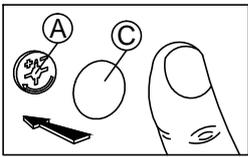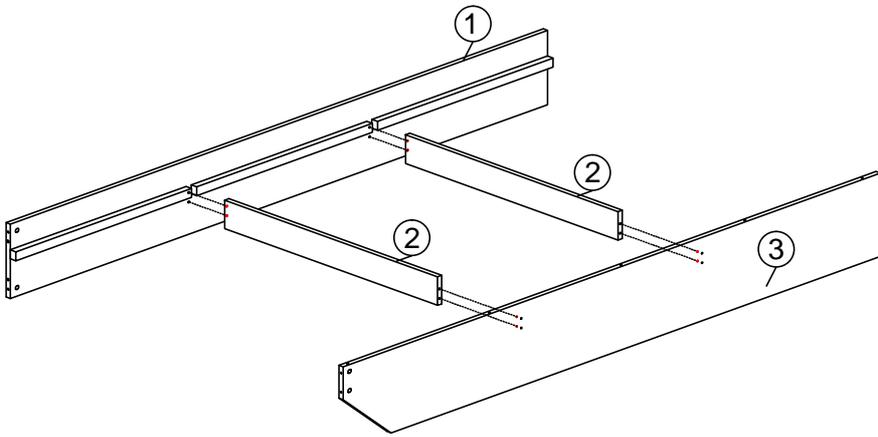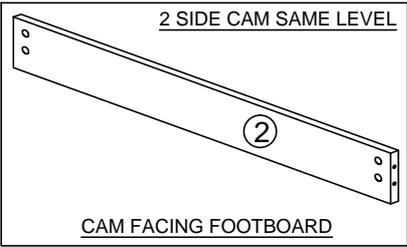

# STEP 6

C	⑥	CAM CAP	8
---	---	---------	---

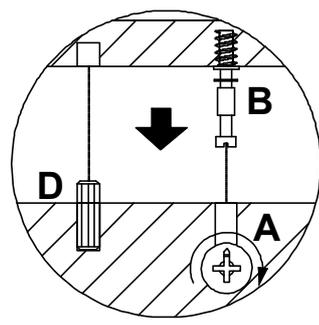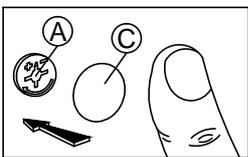
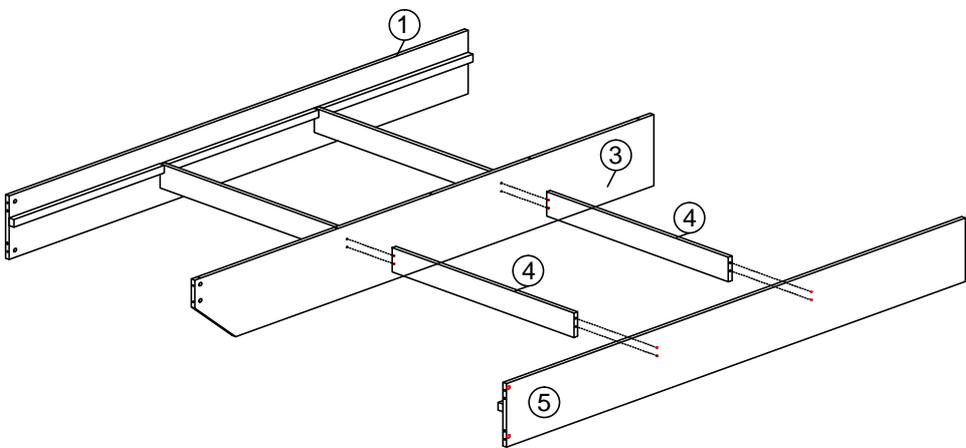
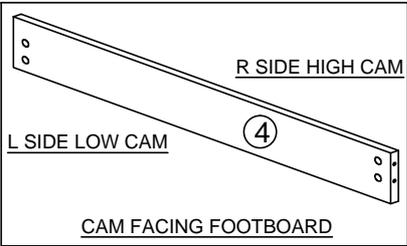


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.





# STEP 7

C		CAM CAP	6
---	---	---------	---

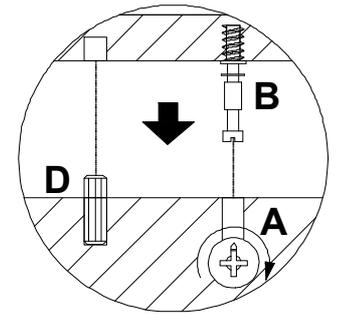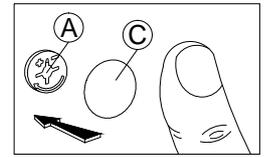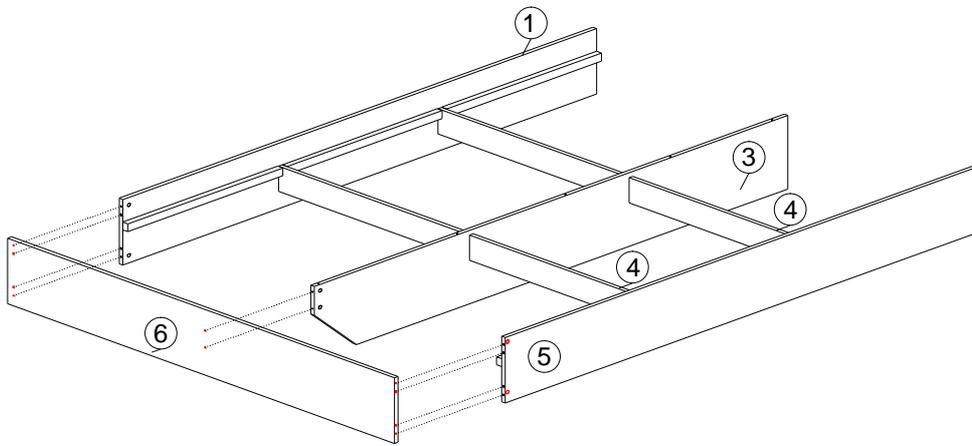

# STEP 8


F		CB SCREW M3.5 X 16MM	16
K		TAD BRACKET 01	2

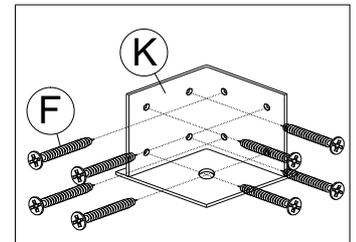
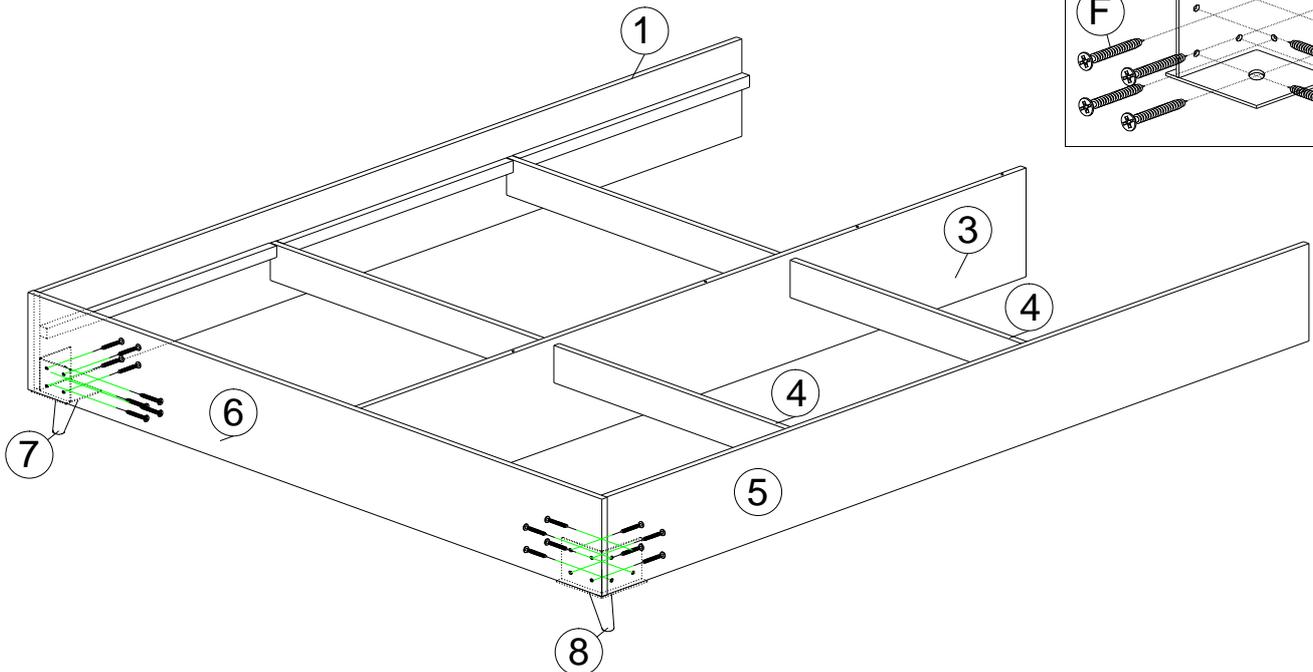


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.





## STEP 9

E	 CSK CAP WOOD M6 X 50MM	6
C	 CAM CAP	6

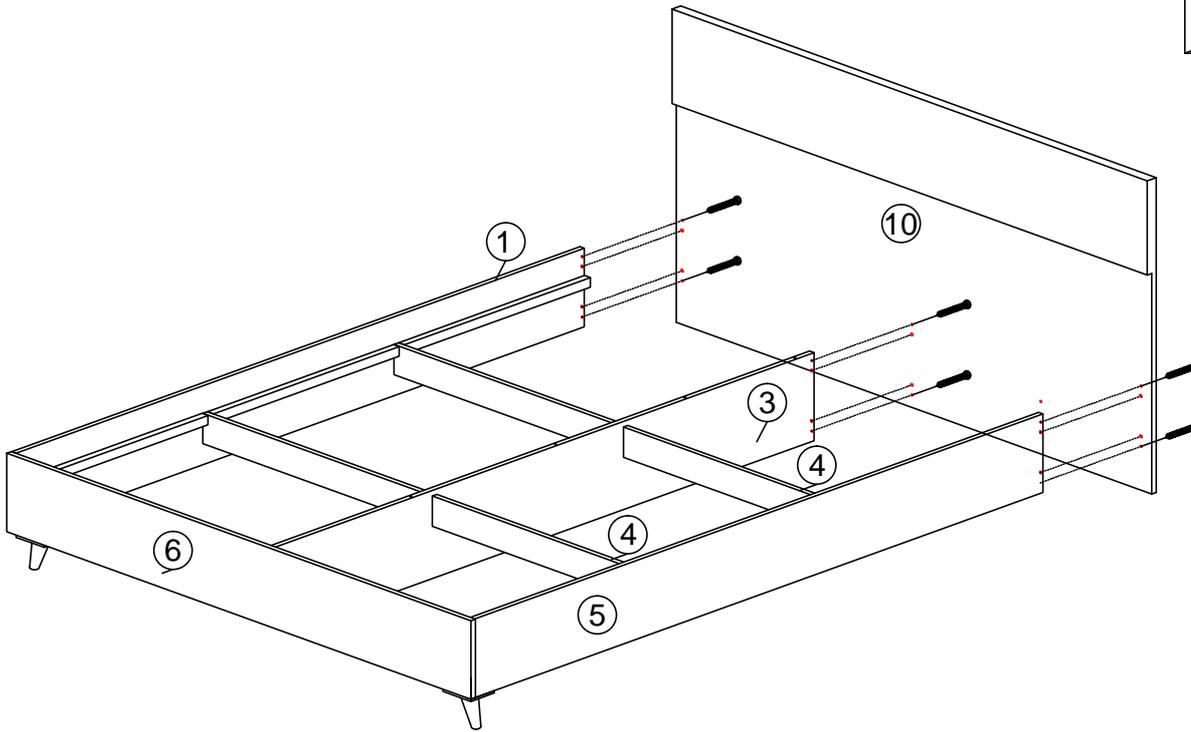

## STEP 10


E	 CSK CAP WOOD M6 X 50MM	5
F	 CB SCREW M3.5x16MM	16
N	 L BRACKET	4

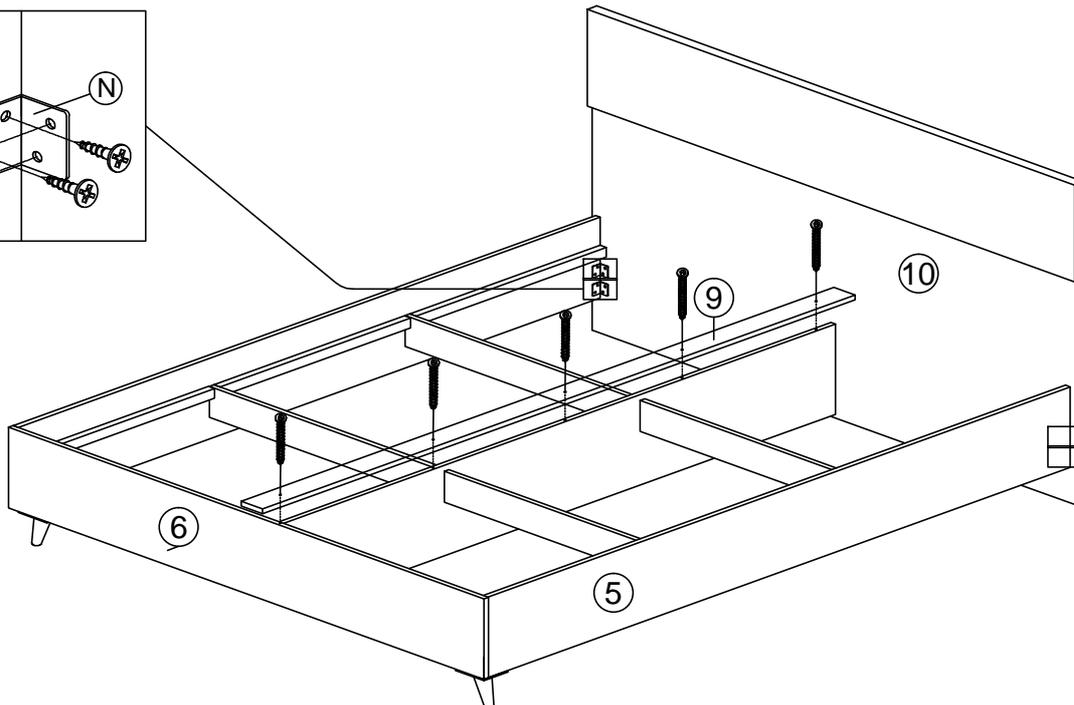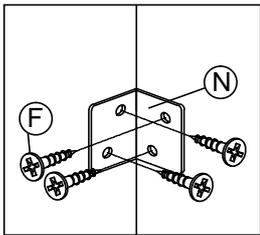


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.





# STEP 11

J		CB SCREW M4 X 38MM	28
---	---	--------------------	----

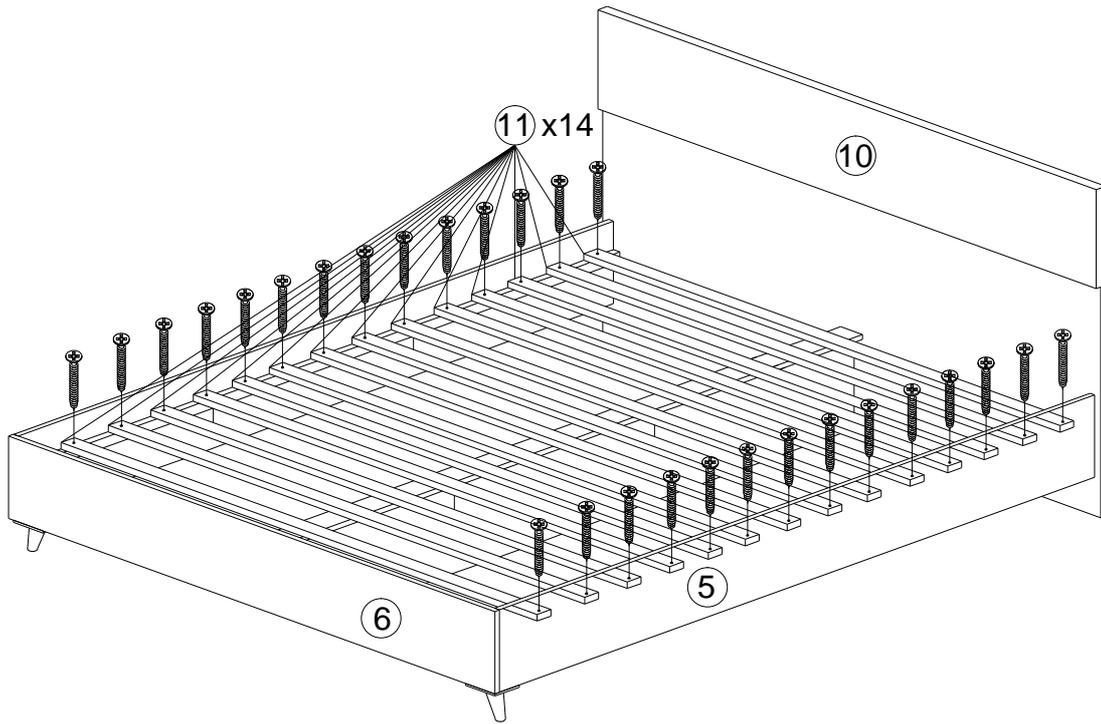

# STEP 12


L		STICKER (SMALL)	18
---	---	-----------------	----

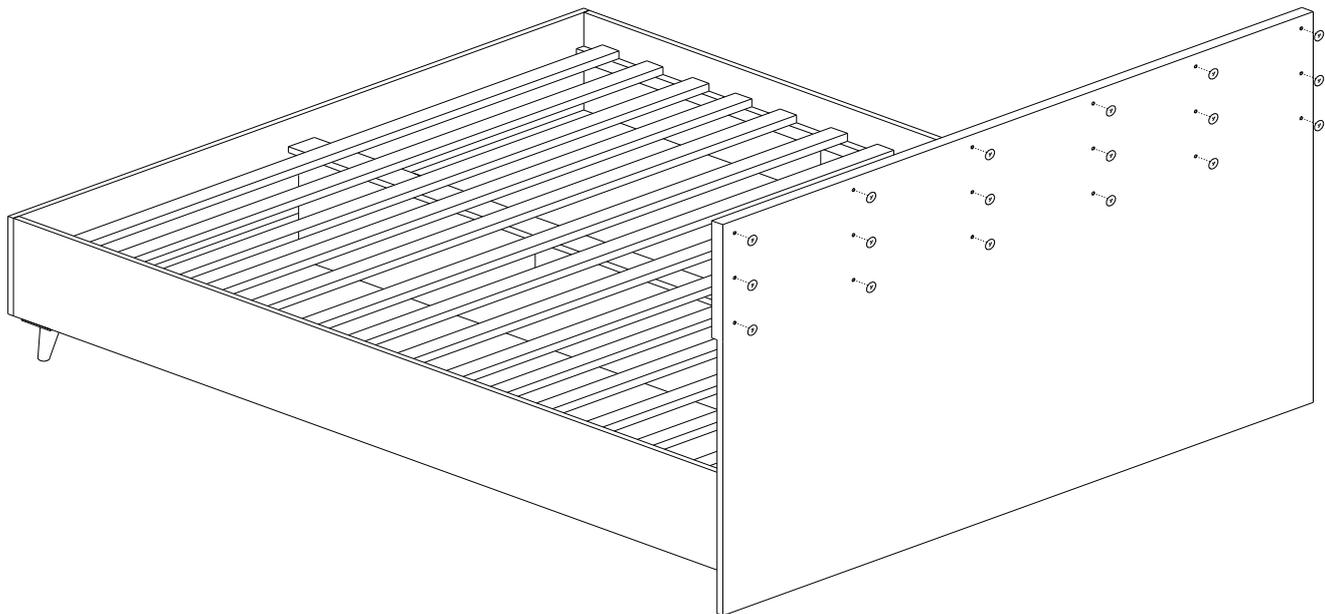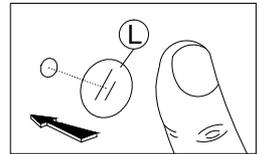

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.



**COMPLETED**

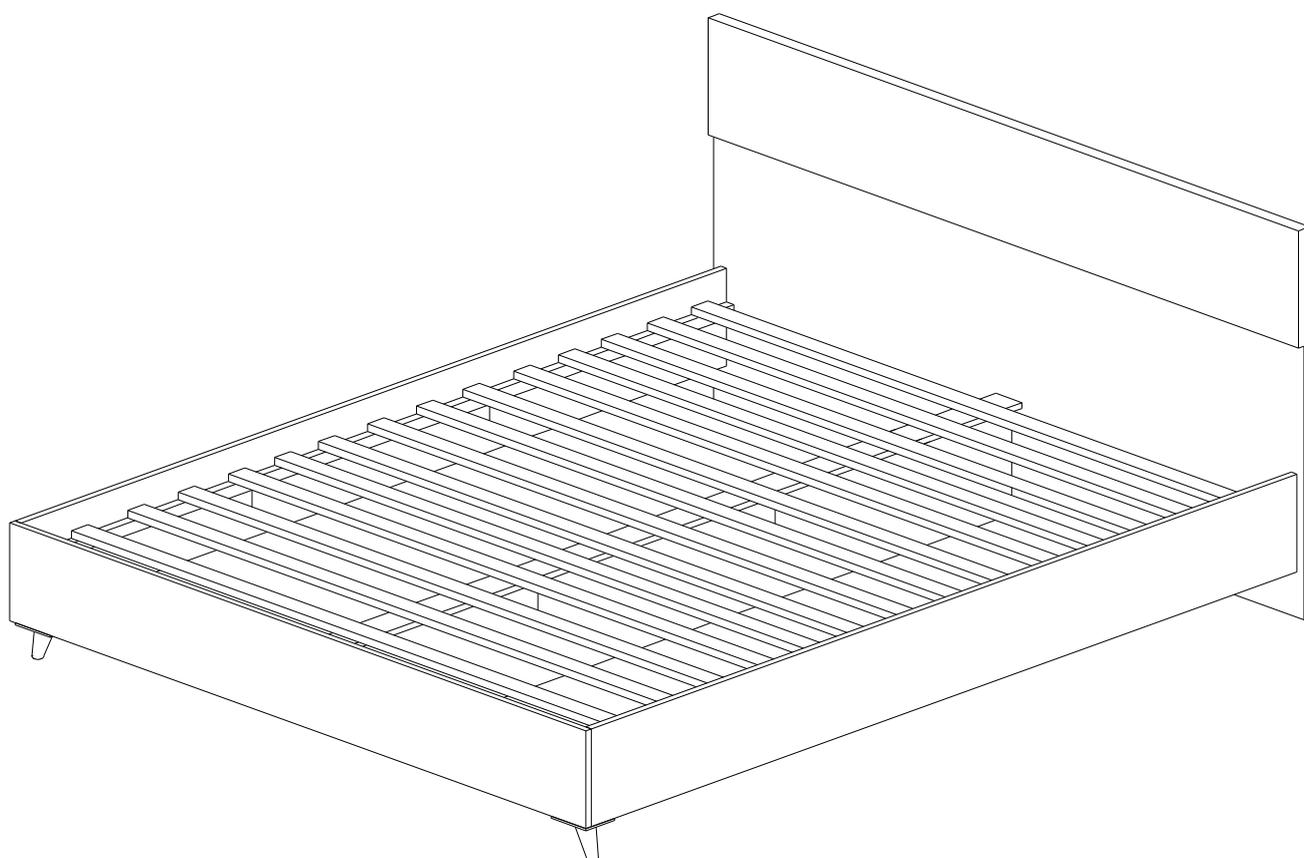

**THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.**

