


5278296COMUK STORAGE CABINET

Date of Purchase: ____/____/____
Lot Number: _____

B345278296COMUK01

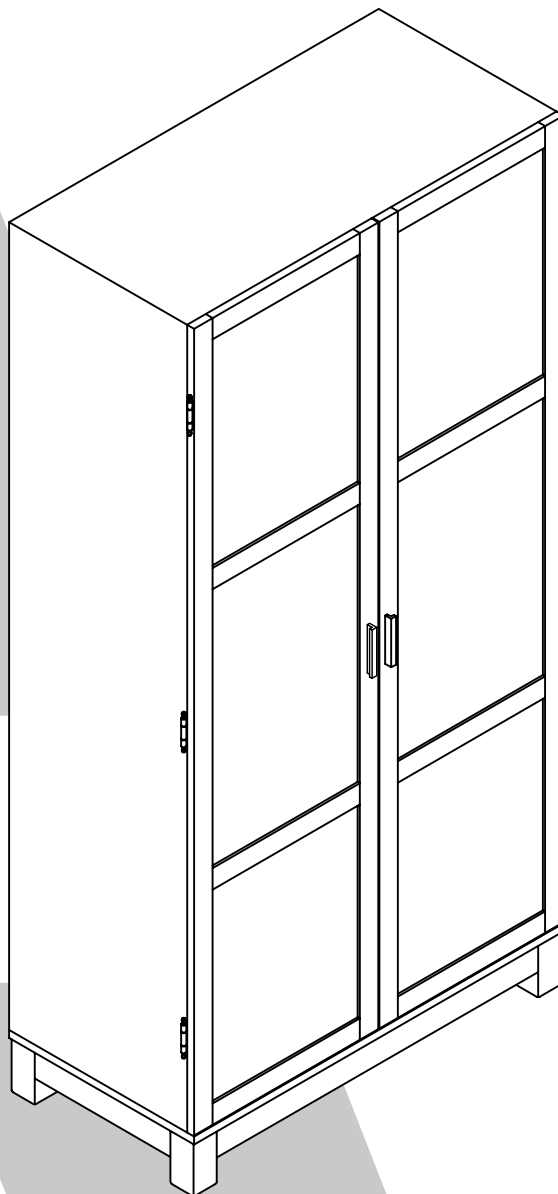

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Do Not Return This Product!

Contact our customer service team for help first


Call: 01942 524100

email: cseurope@dorel.com



WARNING


- Unit can tip over causing severe injury or death.
- Anchor unit to stud in wall (if instructed to)
- Do not allow children climb on unit
- Put heavy items on lower shelves or drawers

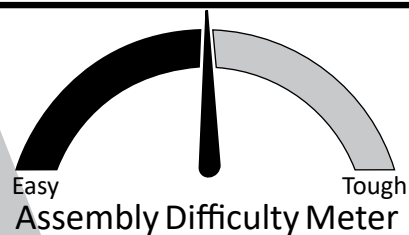

Contact Us!

Do NOT return this product!

Contact our friendly customer service team first for help

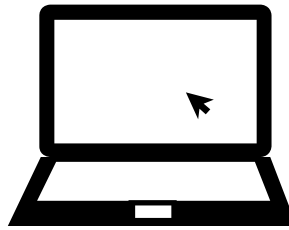

cseurope@dorel.com


Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**


ESTIMATED ASSEMBLY TIME: **1 HOUR**

- Open your item in the area you plan to keep it for less heavy lifting
- Identify, sort and count the parts before attempting assembly
- Compression dowels are tapped in with a hammer
- Slides are labeled with a R (right) and L (left) for proper placement
- Make sure to always face the point on the top of the Cam Lock towards the outer edge
- Use all the nails provided for the back panel and spread them out equally
- Back Panel must be used to make sure your unit is sturdy
- Do NOT use harsh chemicals or abrasive cleaners on this item
- Never push, pull, or drag your furniture



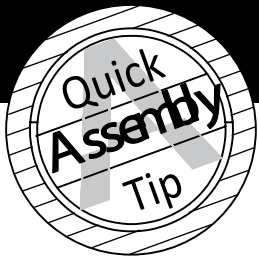





Before You Start

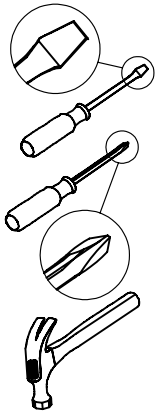

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

Cam Lock Fastening System


This Cam Lock Fastening System will be used throughout the assembly process.

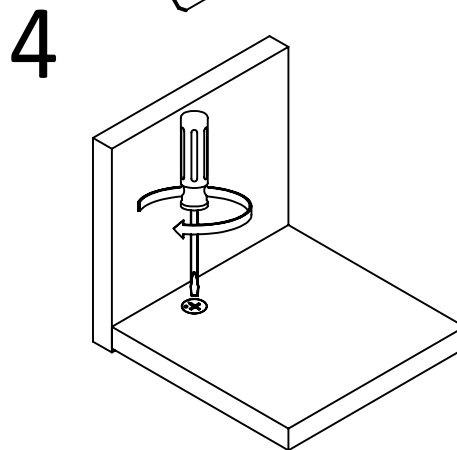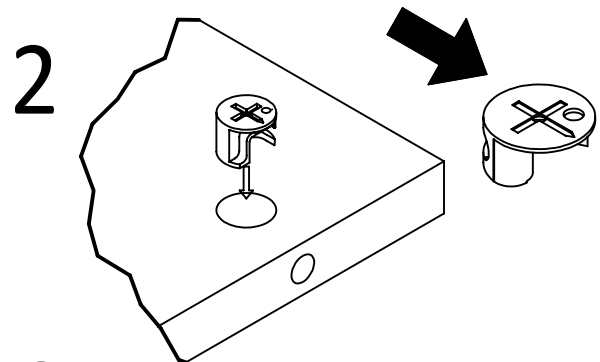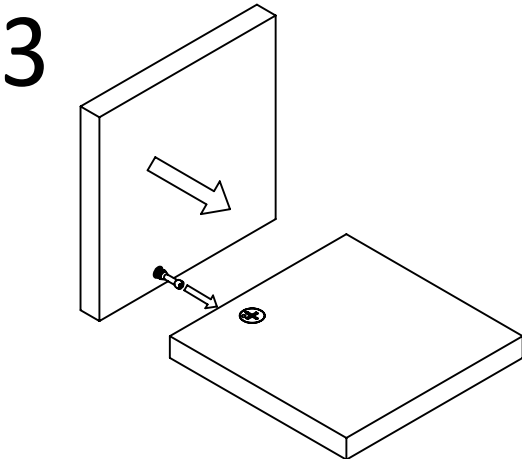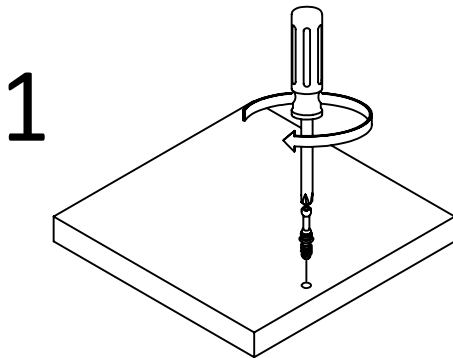

Board Identification


Not actual size

1

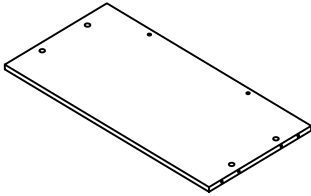


x1
T5278196011UD
TOP PANEL

2

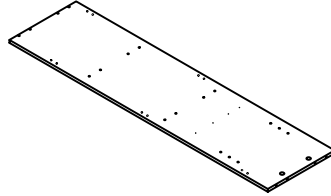


x1
T5278196021UD
LEFT SIDE PANEL

3

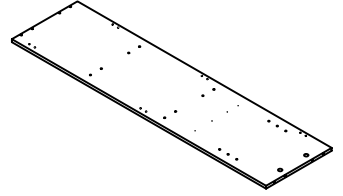


x1
T5278196031UD
RIGHT SIDE PANEL

4

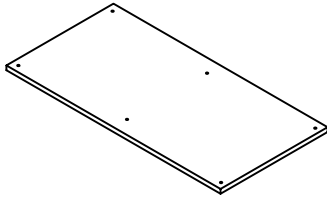


x1
T5278196040UD
BOTTOM PANEL

5

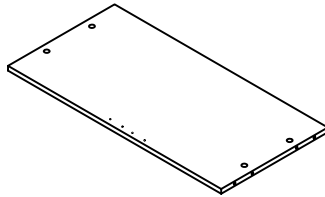


x1
T5278196051UD
FIXED SHELF

6

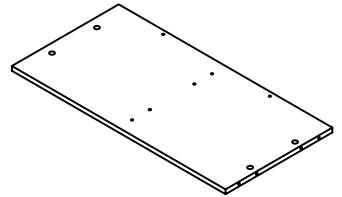


x1
T5278196061UD
FIXED SHELF

7

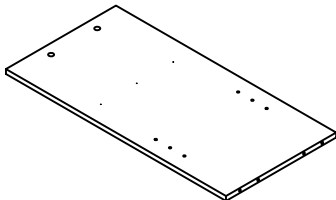


x1
T5278196070UD
MIDDLE PARTITION

8

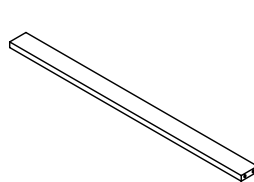

x1
T5278196080UD
TOP APRON

9

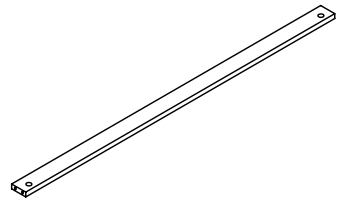


x2
T5278196090UD
LONG LOWER RAIL

Board Identification

Not actual size

10




x2
T5278196100UD
SHORT LOWER RAIL

11




x4
T5278196110UD
FOOT

12

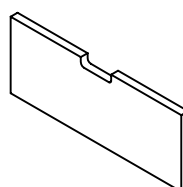


x2
T5278196120UD
DRAWER FRONT

13




x2
T5278196130UD
LEFT DRAWER SIDE

14




x2
T5278196140UD
RIGHT DRAWER SIDE

15

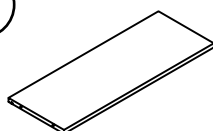


x2
T5278196150UD
DRAWER BACK

16

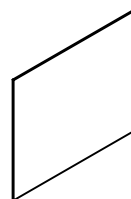


x2
T5278196160UD
DRAWER BOTTOM

17

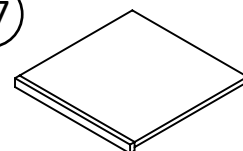


x2
T5278196170UD
ADJUSTABLE SHELF

18

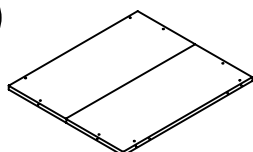


x1
T5278196181UD
UPPER BACK PANEL

19

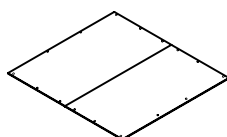


x1
T5278196191UD
LOWER BACK PANEL

20

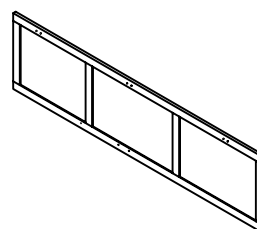

x1
T5278196200UD
LEFT DOOR

21

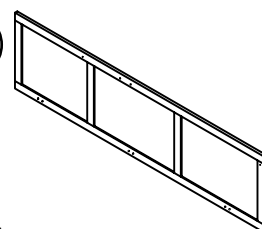


x1
T5278196210UD
RIGHT DOOR


Hardware Bag Reference Number:
25278196COM0

Part List

Actual Size




x38
TUD0001
Cam Bolt
M6 X 23




x38
TUD0002
Cam Lock
15-12



x40
TUD0004
DOWEL
M8 X 25



x14
TUD0009
CBS 4 x 38

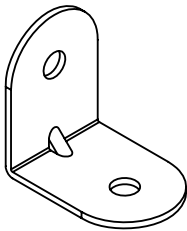


x2
TUD0020
L-BRACKET




x24
TUD0011
PH SCREW
M4 X 12



x20
TUD0034
PH SCREW
M3.5 X 12



x4
TUD0010
PH SCREW
M4 X 18




x32
TUD0008
CBS SCREW
M3.5 X 16


Hardware Bag Reference Number:
25278196COM0

Part List


Not Actual Size

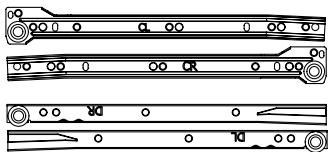


x2 SETS
TUD0017
DRAWER SLIDE 14"




x6
TUD0046
HINGES




x2
TUD0012
HANDLE



x8
TUD0035
SHELF SUPPORT








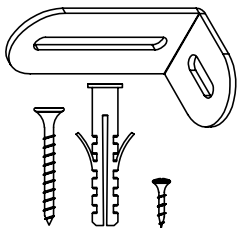


x1 set
TUD0021
ANTI TIPPING KIT

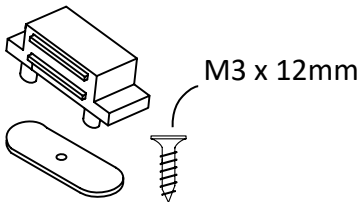


x4 SETS
TUD0031
MAGNETIC
CATCH

Step 1

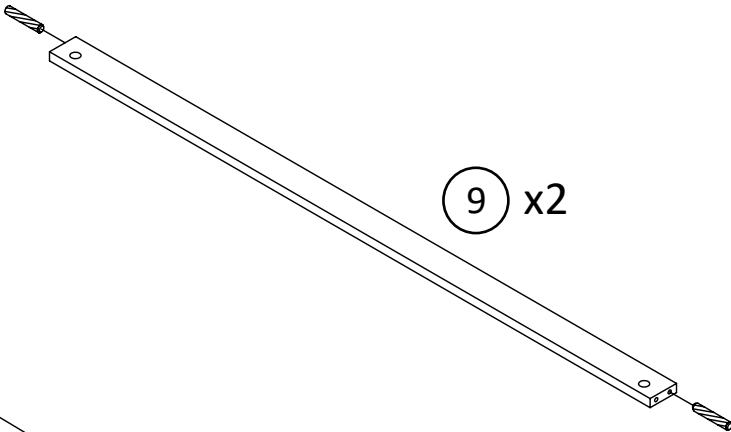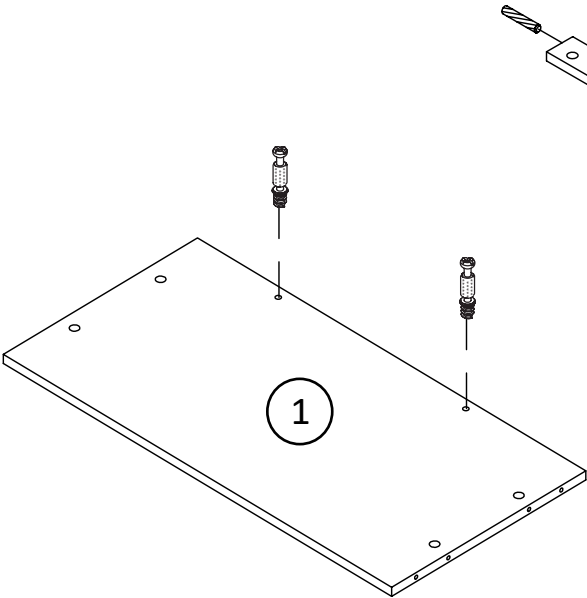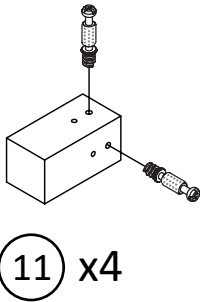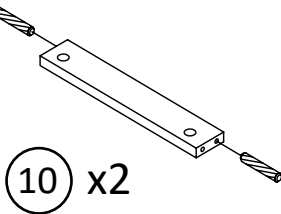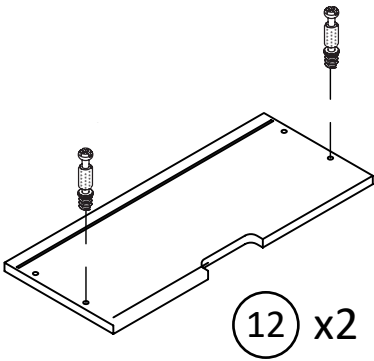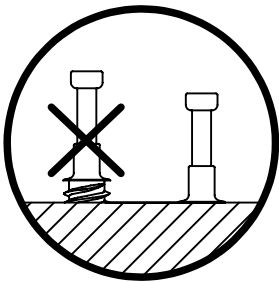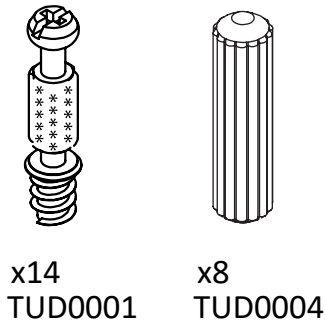
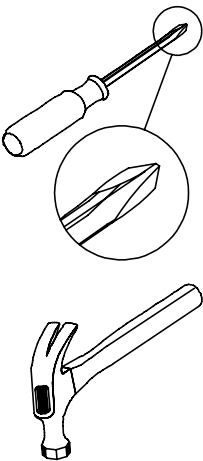


* raw edges are shaded

Step 2

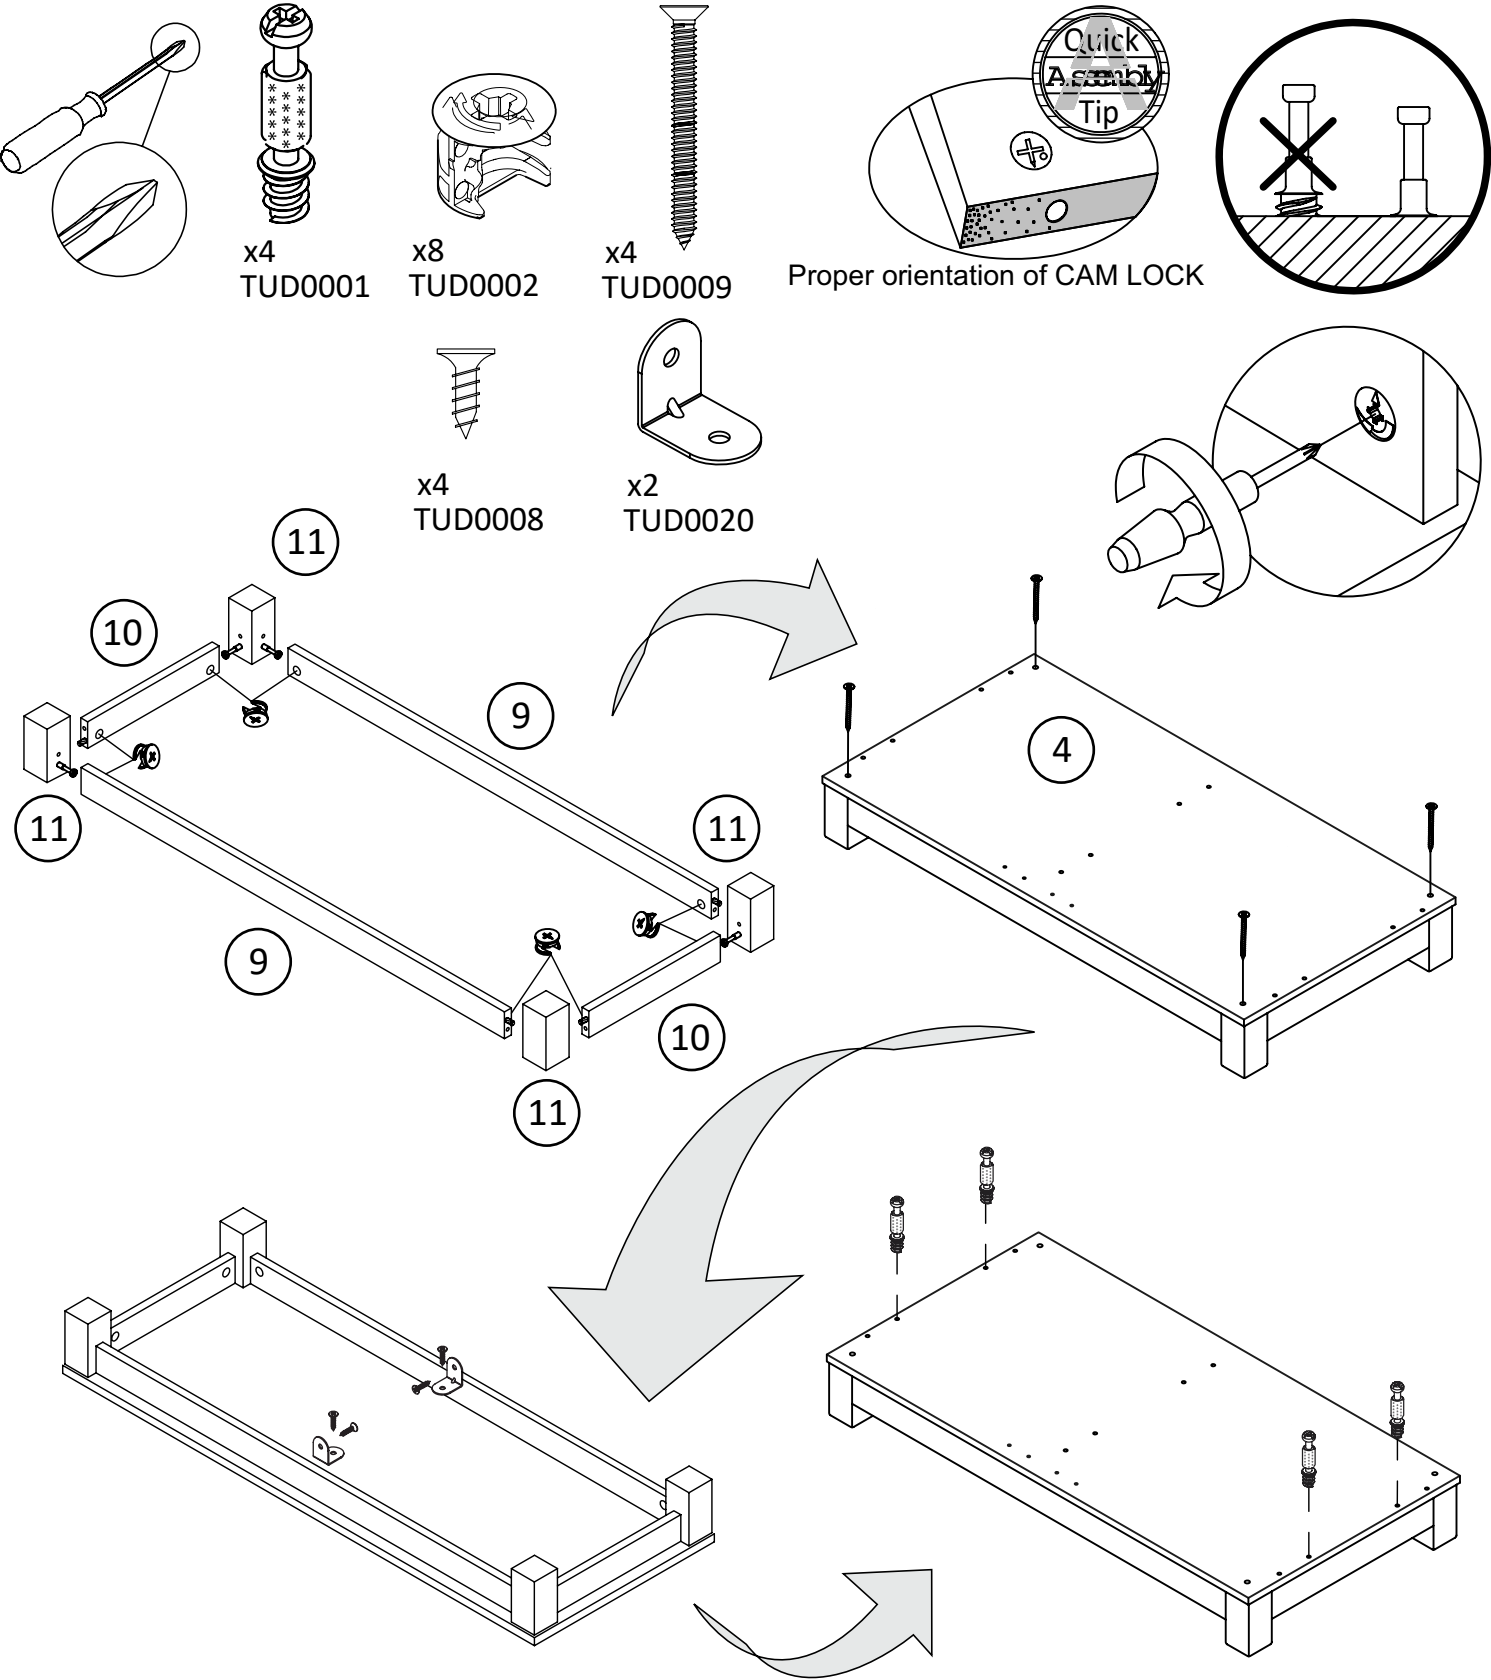


Step 3

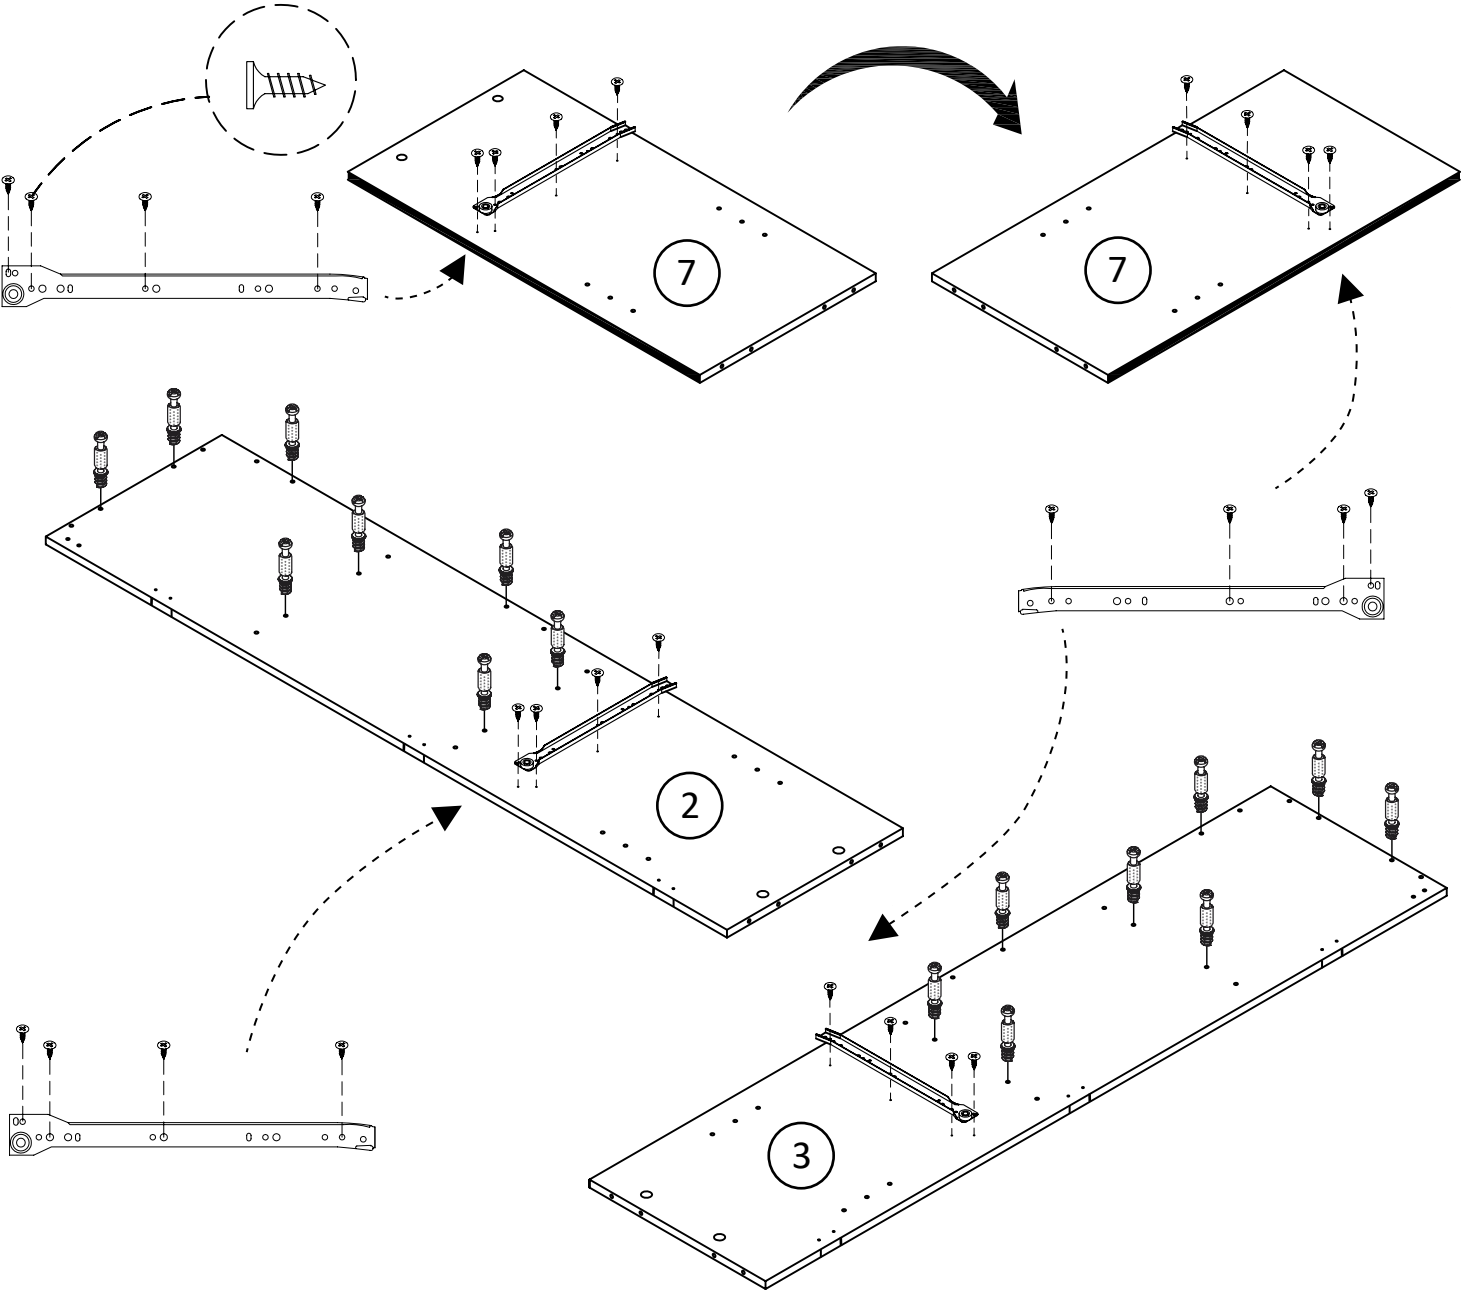
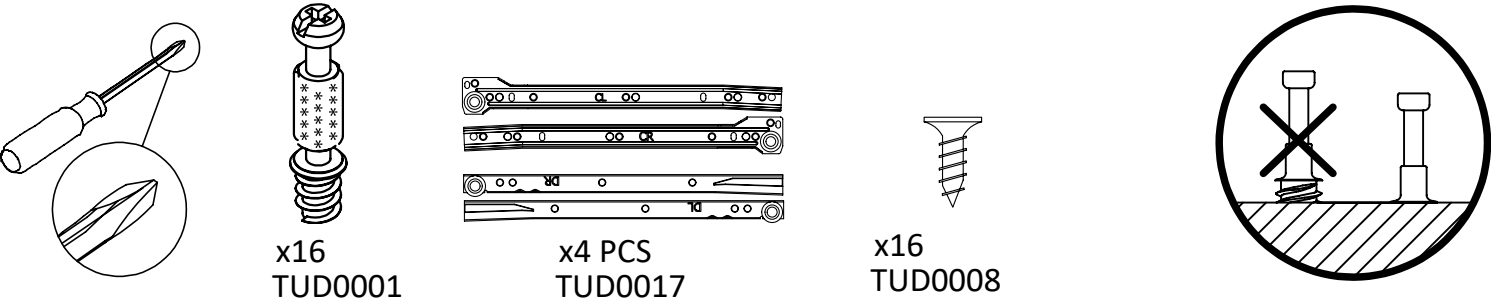


* raw edges are shaded


Step 4

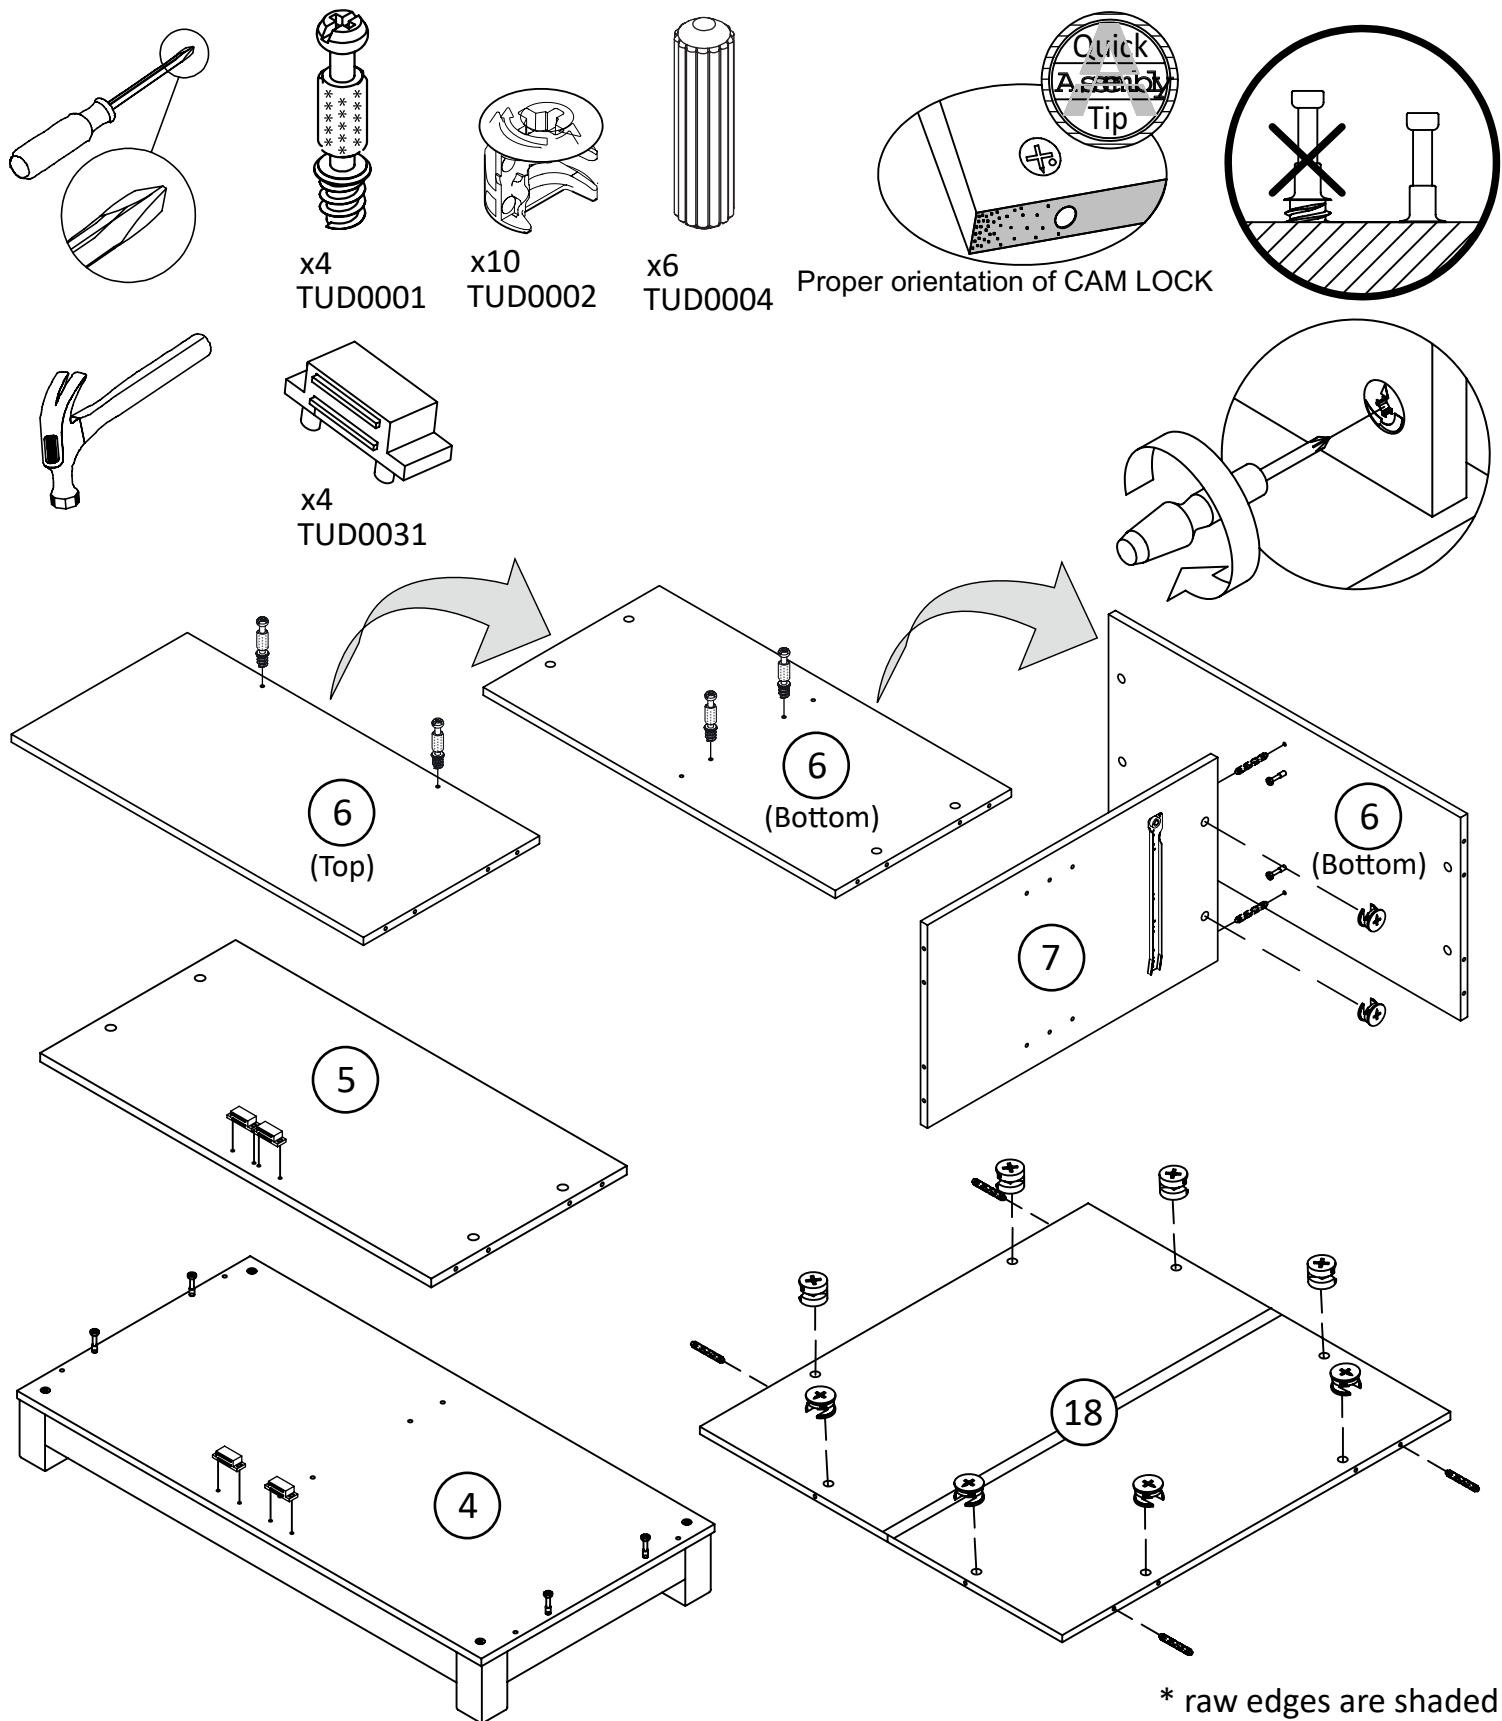

Step 5

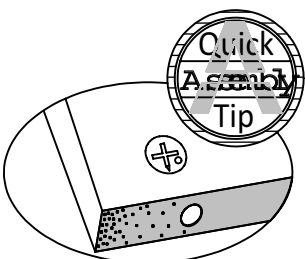
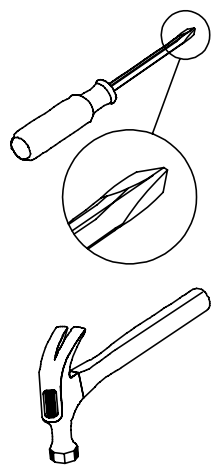


Proper orientation of CAM LOCK

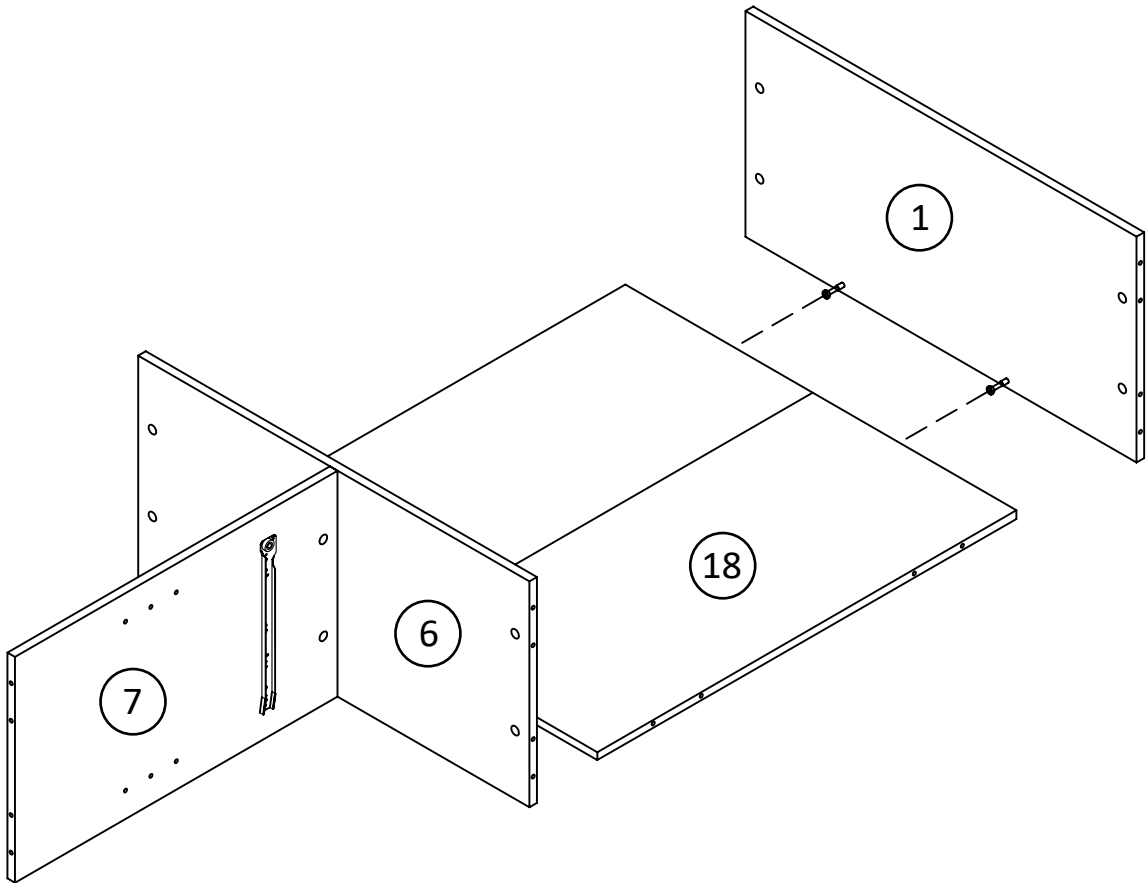


* raw edges are shaded


Step 6

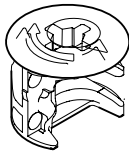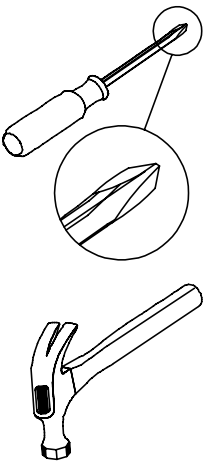



x6
TUD0002



x8
TUD0004


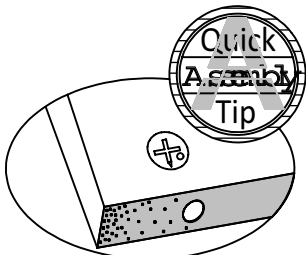


Proper orientation of CAM LOCK

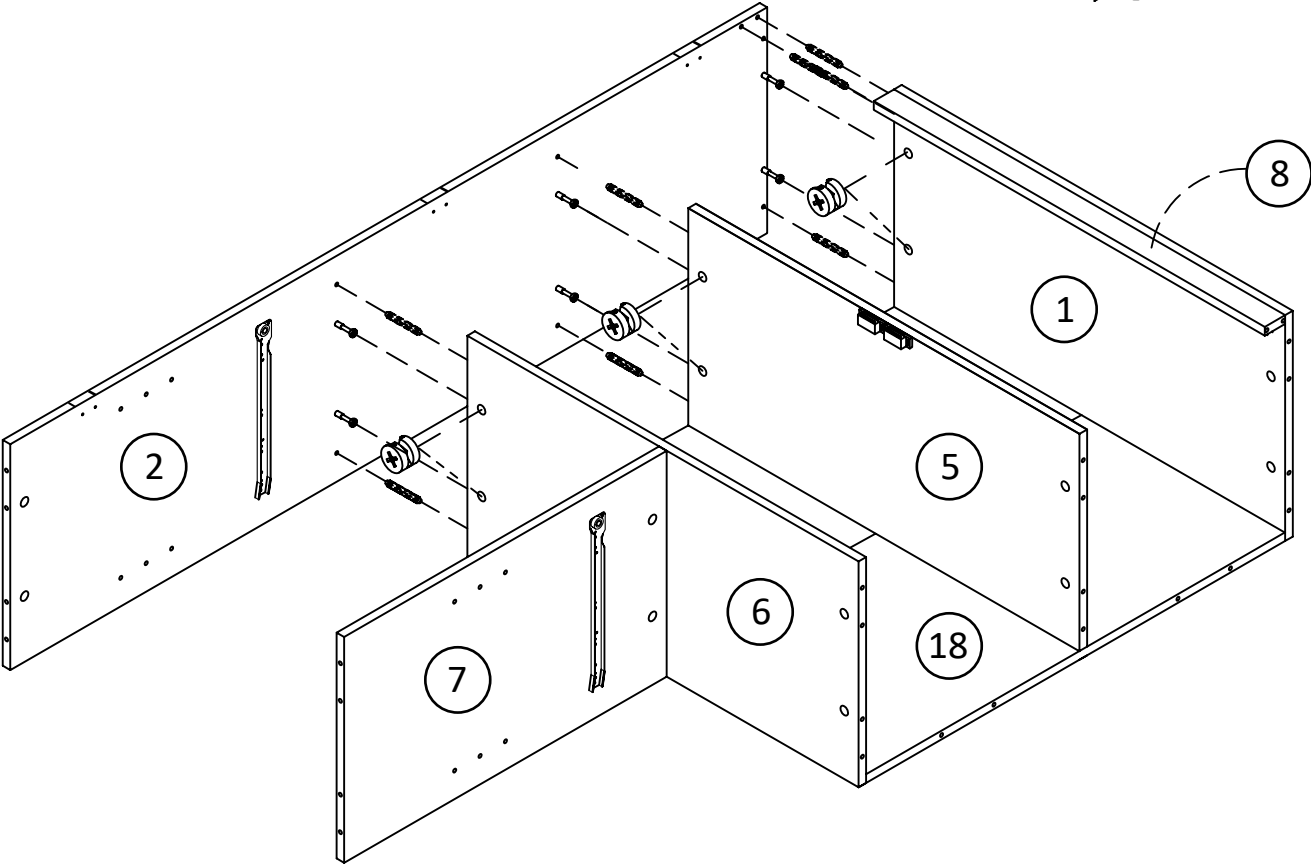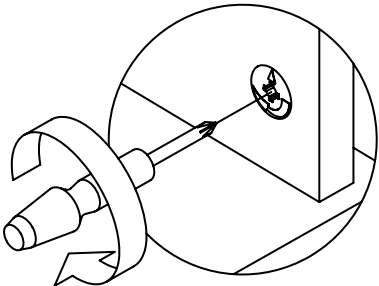


* raw edges are shaded


Step 7

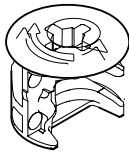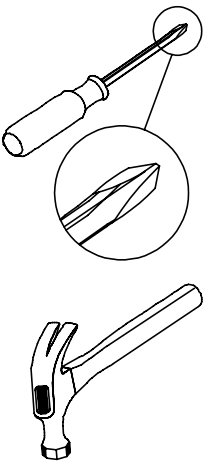



x6
TUD0002



x8
TUD0004


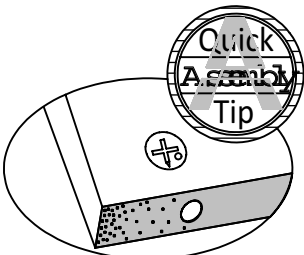


Proper orientation of CAM LOCK

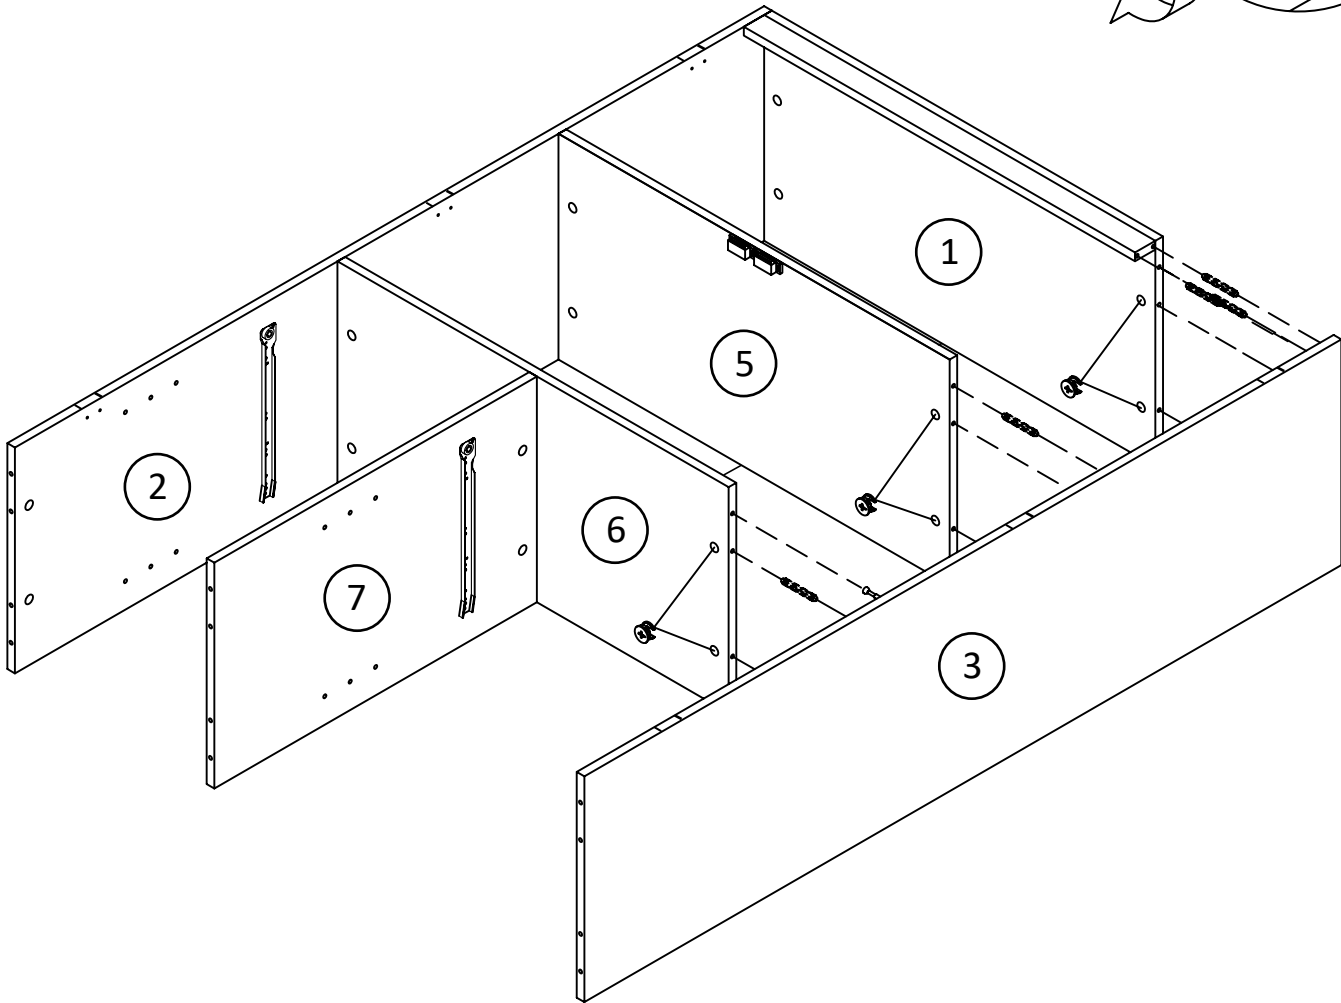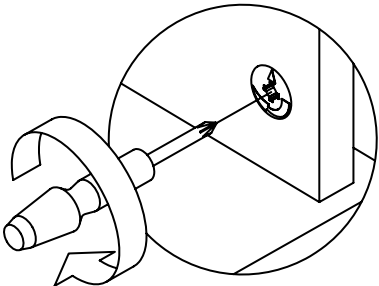

* raw edges are shaded


Step 8

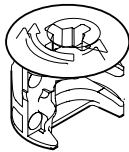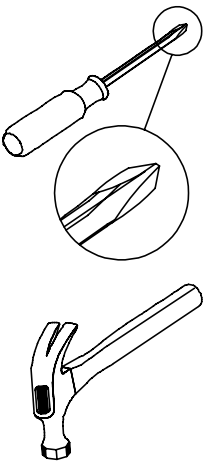


x4
TUD0002





x6
TUD0004



x2
TUD0009

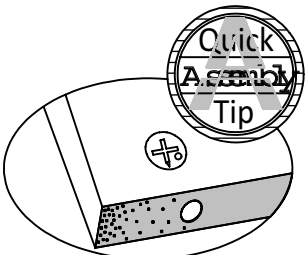


Proper orientation of CAM LOCK

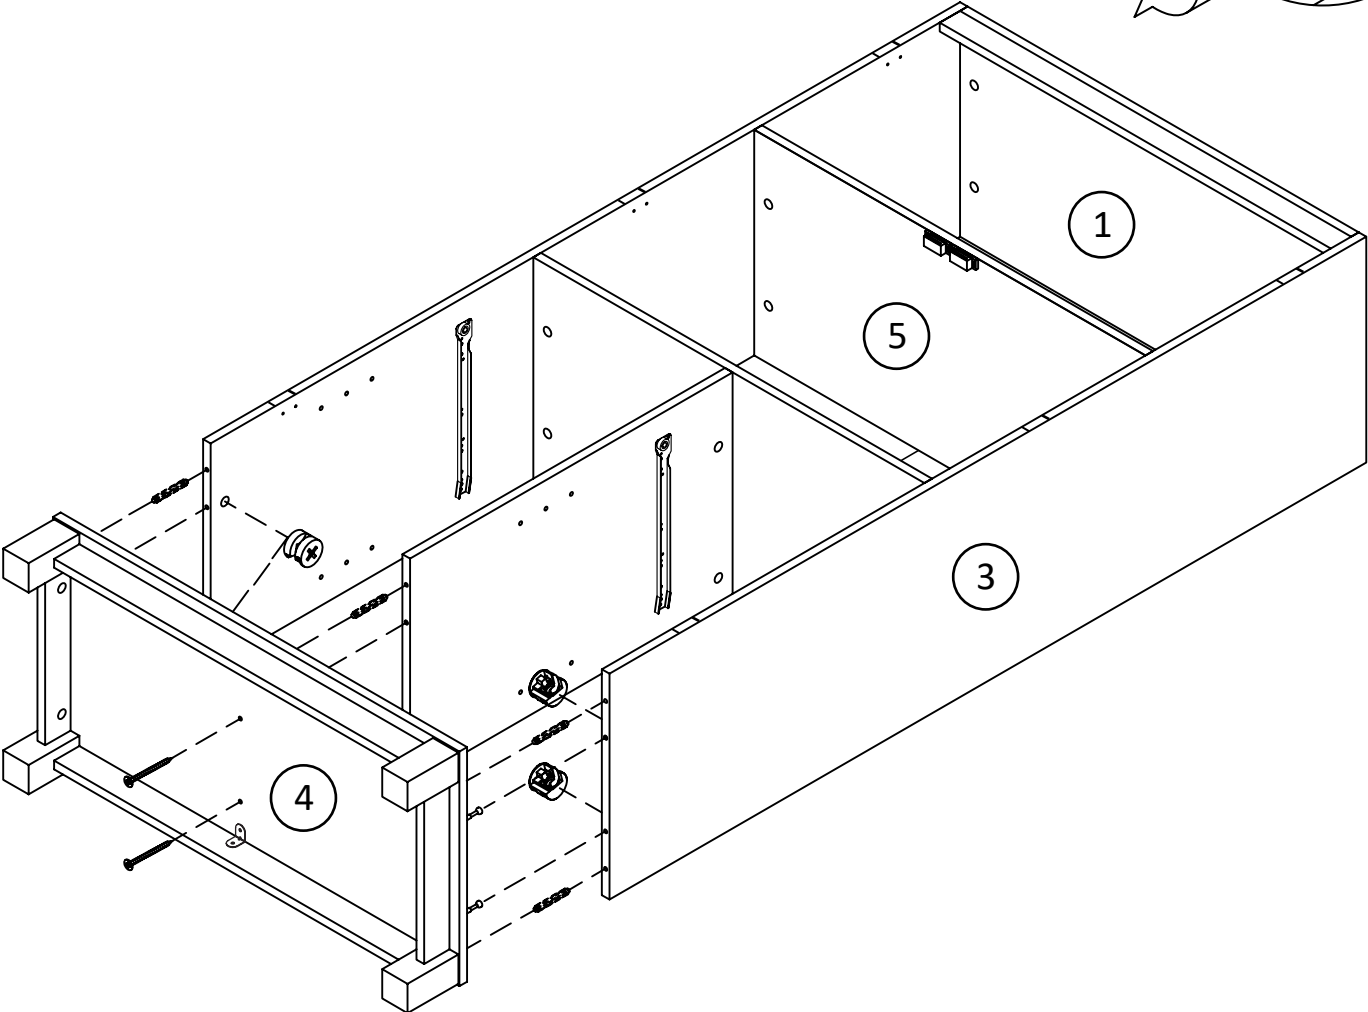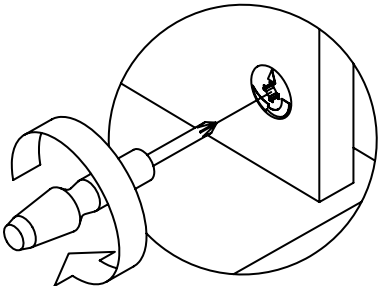

* raw edges are shaded



Step 9

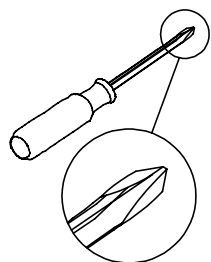

x20
TUD0034

▲ WARNING


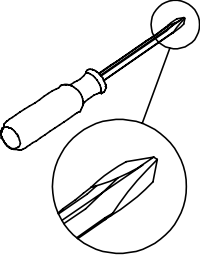
Please make sure that the backs are attached securely. All screws must be driven into the parts straight and tightened firmly. Failure to do so could cause instability, product collapse, and / or serious injury.

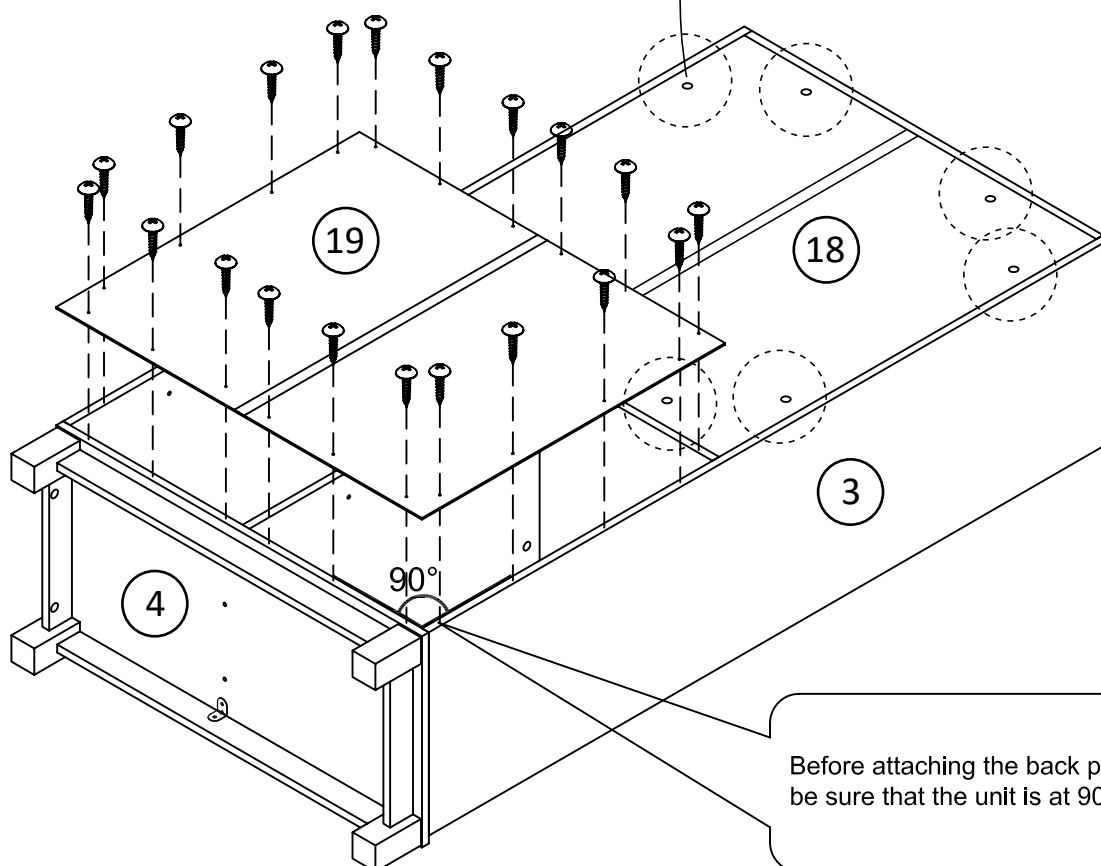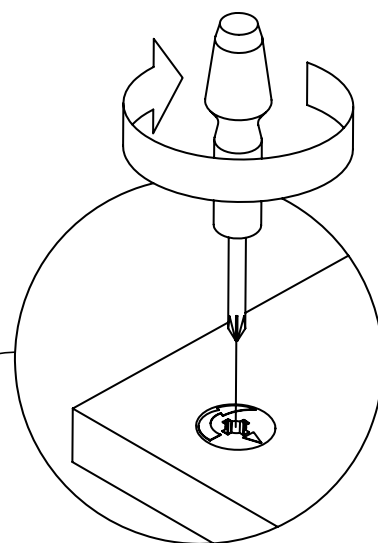


Before attaching the back panel,
be sure that the unit is at 90°.

* raw edges are shaded


Step 10




x4
TUD0004

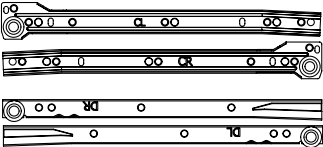

x4 PCS
TUD0017




x12
TUD0008

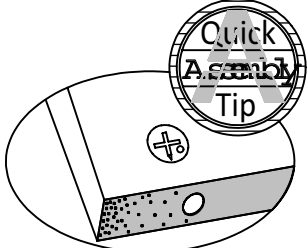


Quick
Assembly
Tip


Proper orientation of CAM LOCK




x8
TUD0009

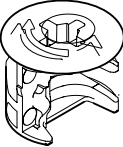

x4
TUD0002

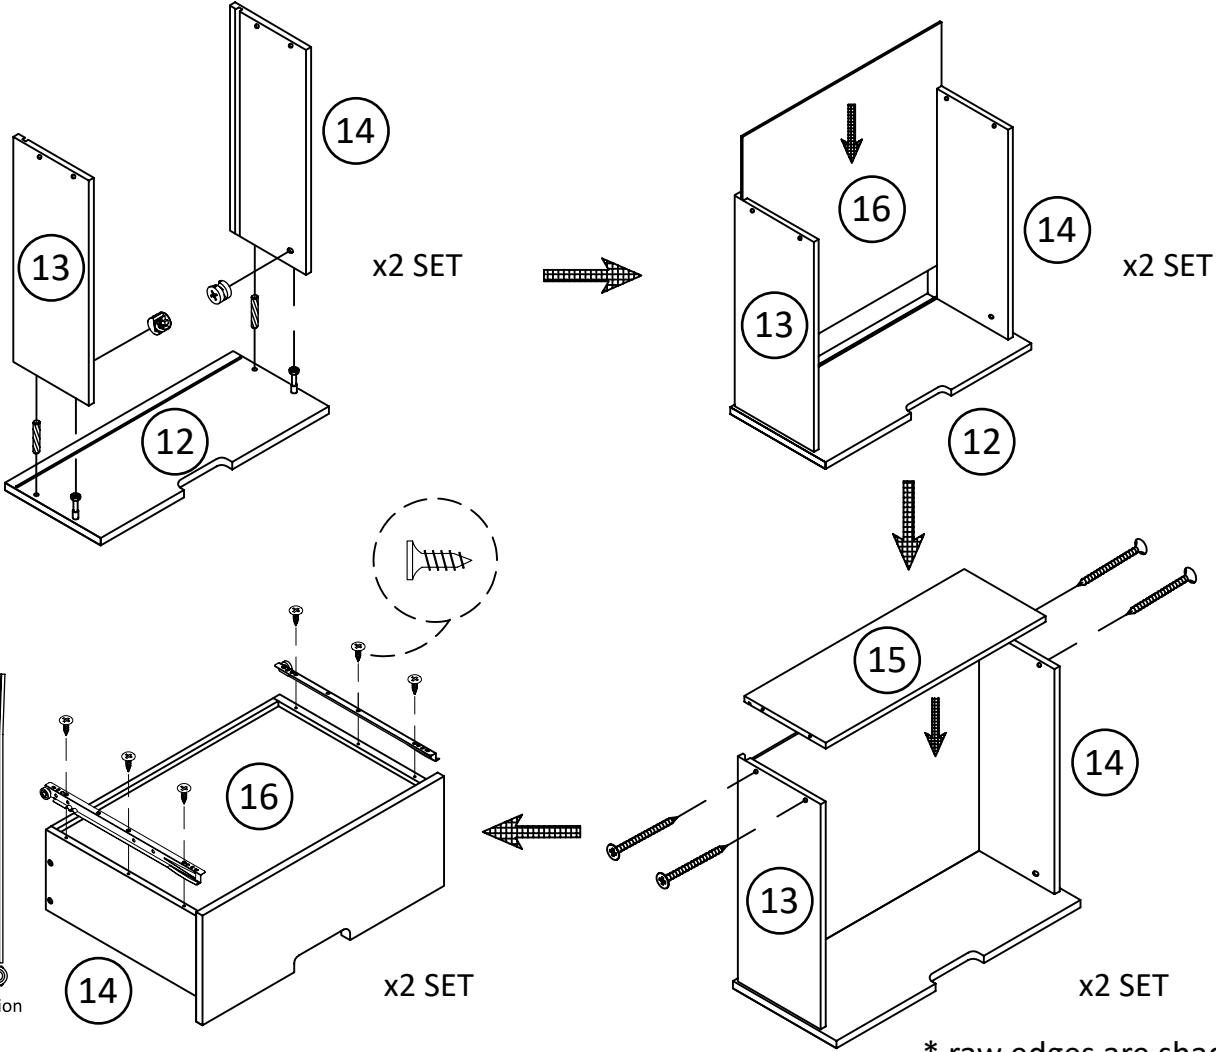


Step 11





x8
TUD0035






OPTION 1

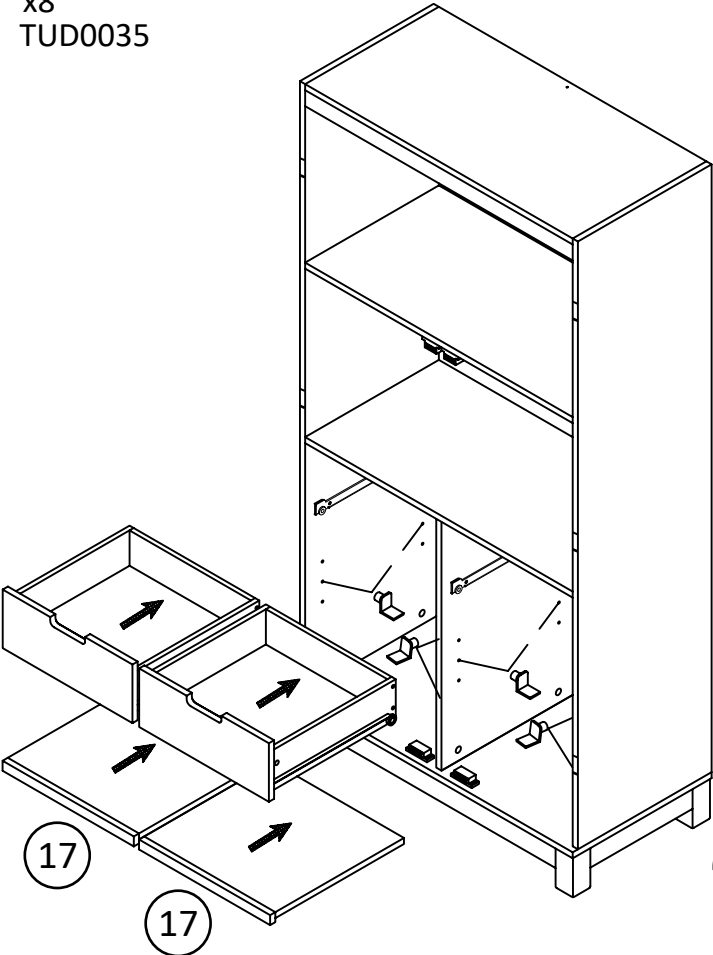



OPTION 2

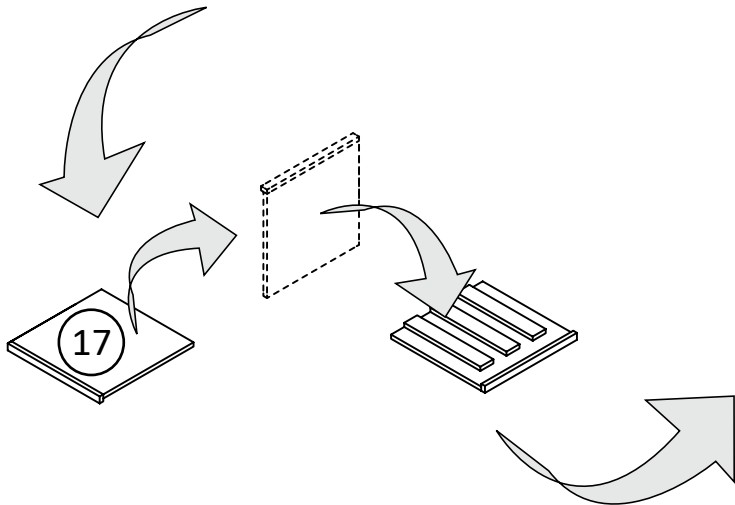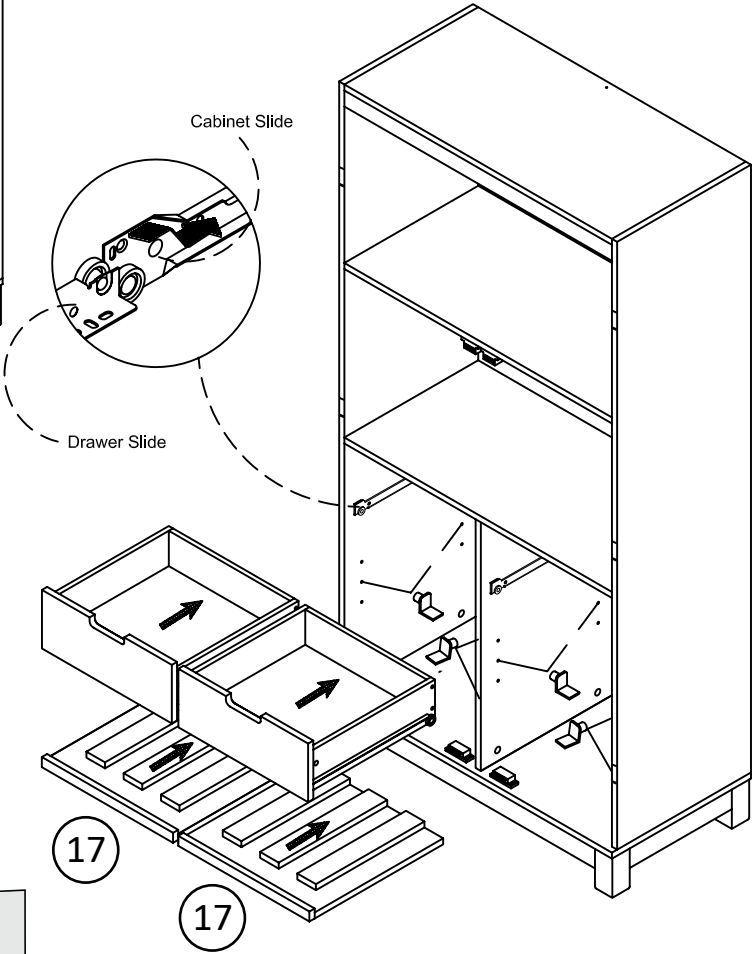


* raw edges are shaded



Step 13

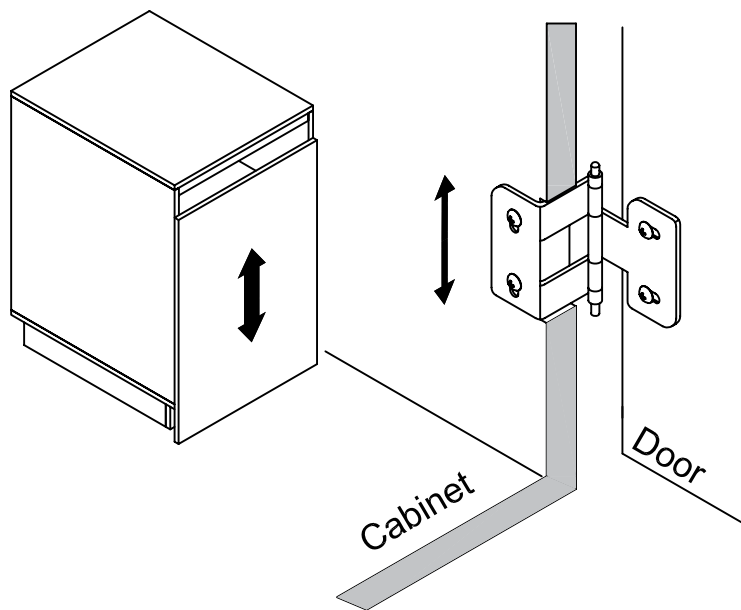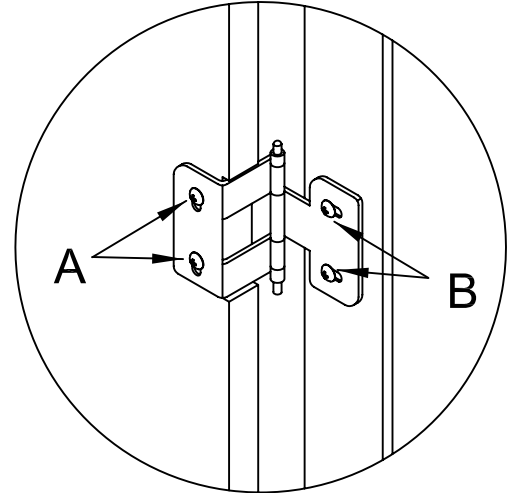


To adjust the vertical height.
Loosen screw "A" and adjust door.
Tighten screw "A".

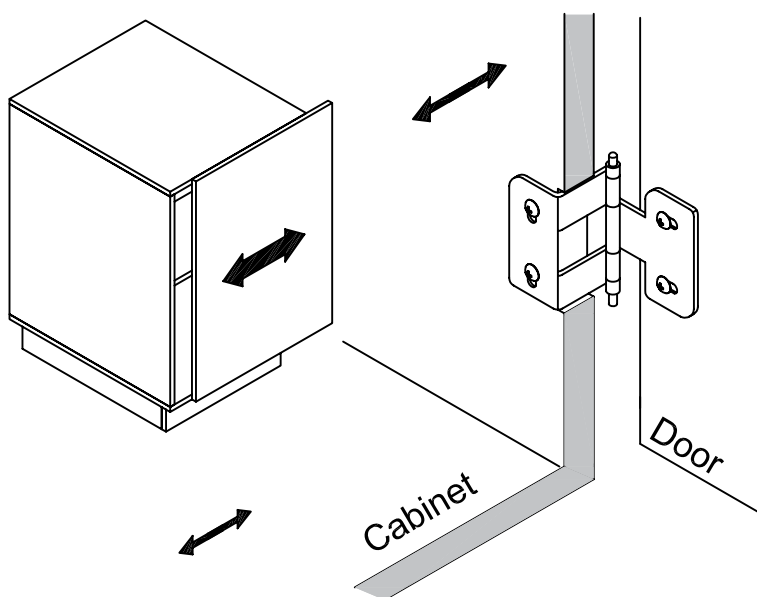

To adjust side ways.
Loosen screw "B" and adjust door.
Tighten screw "B".



* raw edges are shaded

Step 14

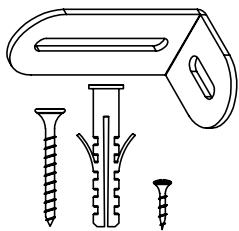

x1 set
TUD0021

Drill a 3/16" (5 mm) diameter hole in the wall. Tap the wall anchor (20) into the hole until it is flush.

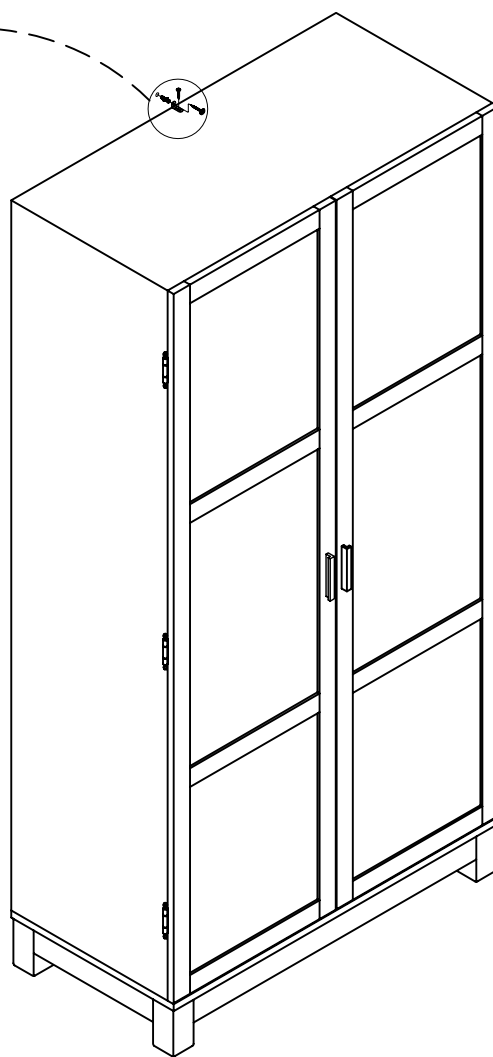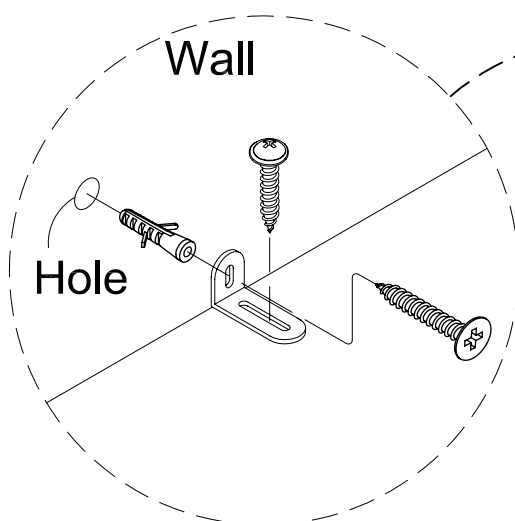


⚠ Warning

This unit must be anchored to a stud or wall, as shown. Failure to do so could cause severe injury.

* raw edges are shaded

Maximum Loads

This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

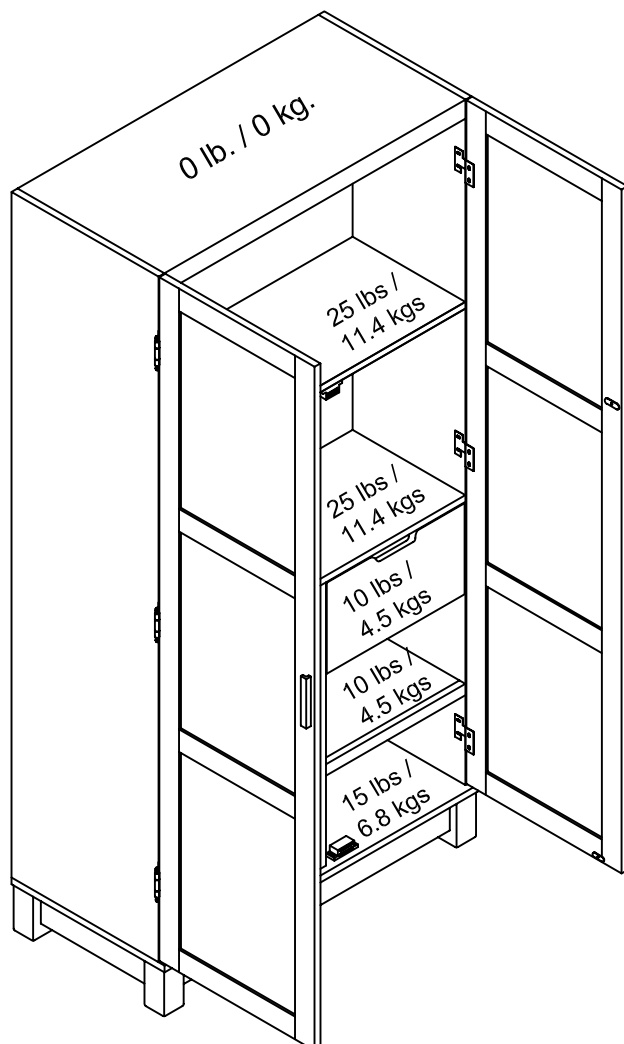

Warning: Risk of serious injury to person - do not place a television on this furniture. This furniture is not approved for use with a television.
