


5072196PCOMUK-Black

5072096UK-White

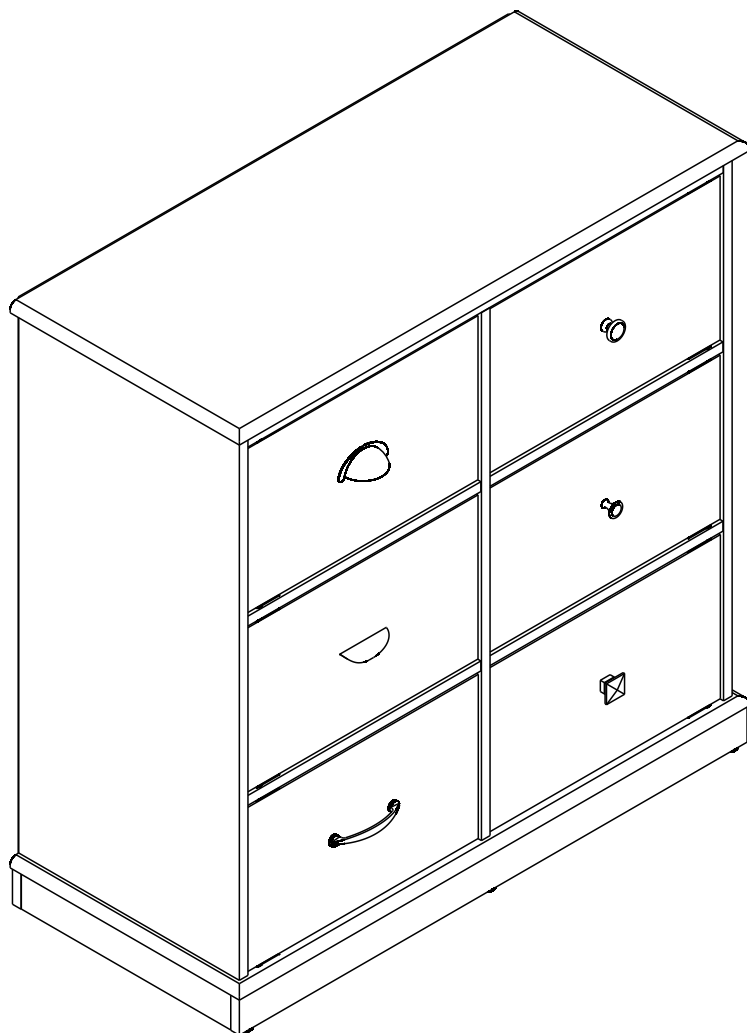

PLACE LABEL
Q16714-SK
HERE

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Recommended # of people needed for assembly:2



01942 524100



CSEurope@dorel.com



Dorel Home Furnishings Europe Ltd. Building 4, Imperial Place
Maxwell Road, Borehamwood WD6 1JN, United Kingdom


B345072096UK01

Before starting


- ❑ Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- ❑ Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
- ❑ Work in spacious area, preferably on a carpet, near the place the unit will be used.
- ❑ Have the following tools close at hand.
- ❑ Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.

HELPFUL HINTS


- Identify, sort and count the parts before attempting assembly.
- Call our toll free number if you need assistance identifying parts.
- Compression dowels are tapped in with a hammer.
- Slides have lips only on the right side.
- Cam locks that are properly fastened on a horizontal board will face toward the center of the unit, on a vertical board the point on the lock will face the bottom.
- Back panels provide stability and support. Use all the nails provided.
- When tapping nails into a board, be sure there are equal margins on all sides to square the unit.
- Units without the back panel installed may collapse.
- Clean the product with your favorite furniture polish and a soft cloth. DO NOT USE harsh chemicals or abrasive cleaners.
- Move your new furniture carefully, with two people lift and carry the unit to it's new location.
- Never push, drag or scoot your furniture (especially on carpet).
- Your furniture can be disassembled and reassembled to move.
- Additional parts are available for a nominal fee.

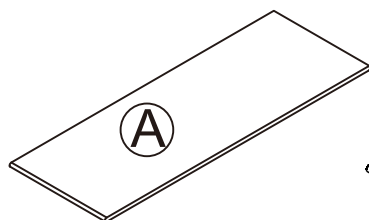


Top shelf

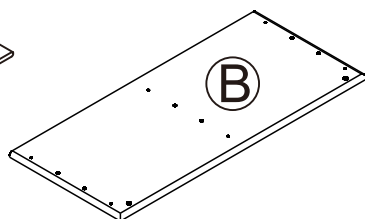


Bottom shelf

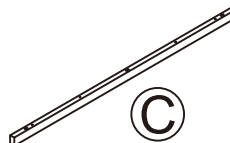


Top shelf apron

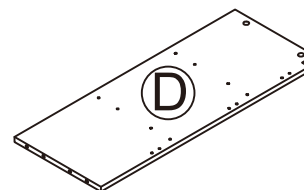


Partition panel

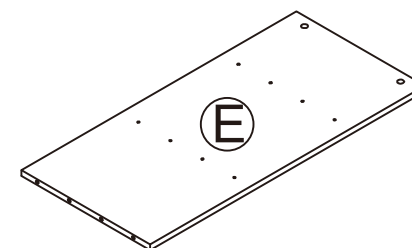


Left side panel

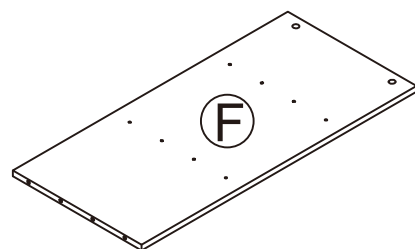


Right side panel

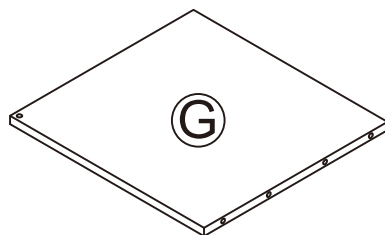


Left fixed shelf (2)

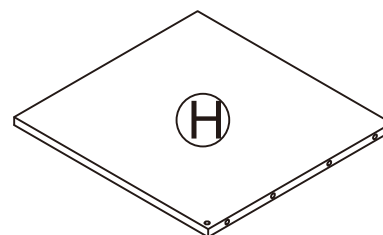


Right fixed shelf (2)

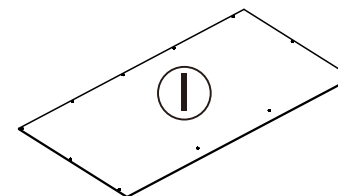


Back panel (2)

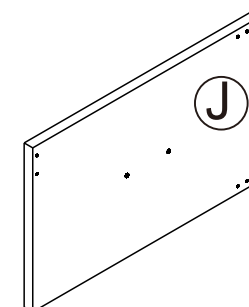


Upper left door

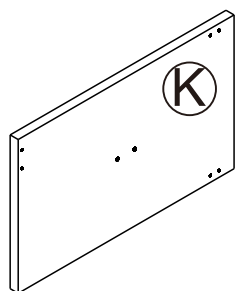


Middle left door

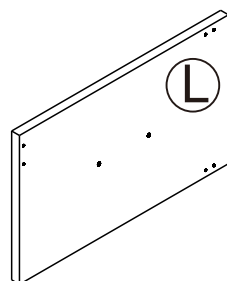


Lower left door

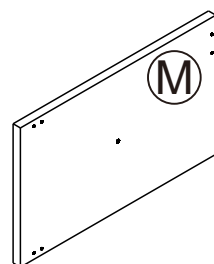


Upper right door

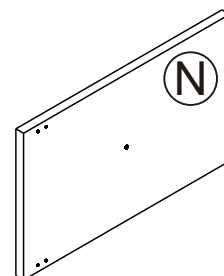

Middle right door

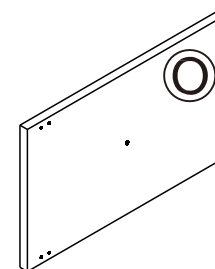


Lower right door

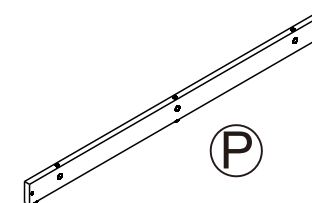

Front and back base panel(2)

PARTS

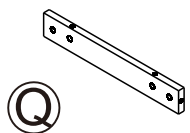

Side panel(2)




Ø 6.5x35.3 mm

①

x 36

Cam bolt




Ø 11x10.2 mm

②

x 36

Cam lock



Ø 8x30 mm

③

x 23

Wooden dowel



Ø 3x14 mm

④

x 34

Screw



Ø 4x35 mm

⑤

x 4

Screw




Ø 4x45 mm

⑥

x 6

Screw




45.8x16x14 mm

⑦

x 6


Magic catch



⑧

x 6

Magic catch plate




40x15.5x17.5 mm

⑨

x 6

Hinge

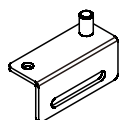

40x15.5x17.5 mm

⑩

x 6

Hinge



⑪

x 22

Cover cap




Ø 8x50 mm

⑫

x 4

Wooden dowel

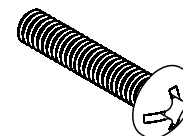


Ø 5/32"x19 mm

⑬

x 7

Screw



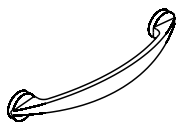





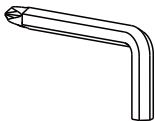


Ø 5/32"x12 mm


⑭

x 2





Screw

| | | |
|---|---|---|
|  <div> <div>15</div> <div>x 1</div> </div> |  <div> <div>16</div> <div>x 1</div> </div> |  <div> <div>17</div> <div>x 1</div> </div> |
|  <div> <div>18</div> <div>x 1</div> </div> |  <div> <div>19</div> <div>x 1</div> </div> |  <div> <div>20</div> <div>x 1</div> </div> |
|  <div> <div>21</div> <div> <div>Ø3x10 mm</div> <div>x 24</div> </div> </div> |  <div> <div>22</div> <div> <div>Ø3x12 mm</div> <div>x 12</div> </div> </div> |  <div> <div>23</div> <div>x 1</div> </div> |
| <p>Screw</p> | <p>Screw</p> | <p>Allen key</p> |






This illustration shows how the CAM fastener system works.

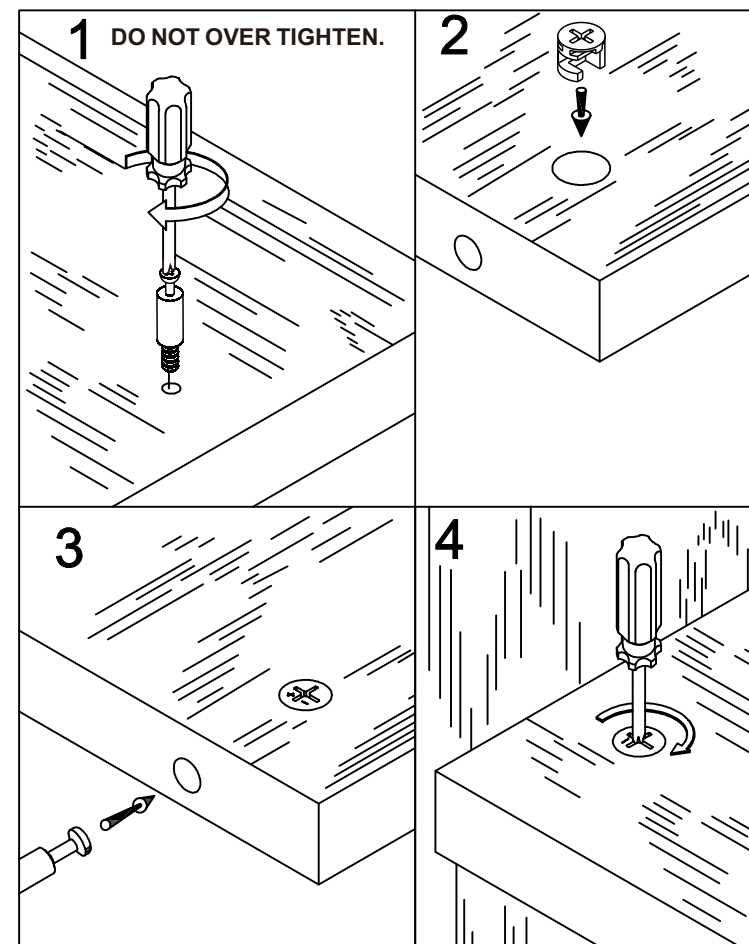






1

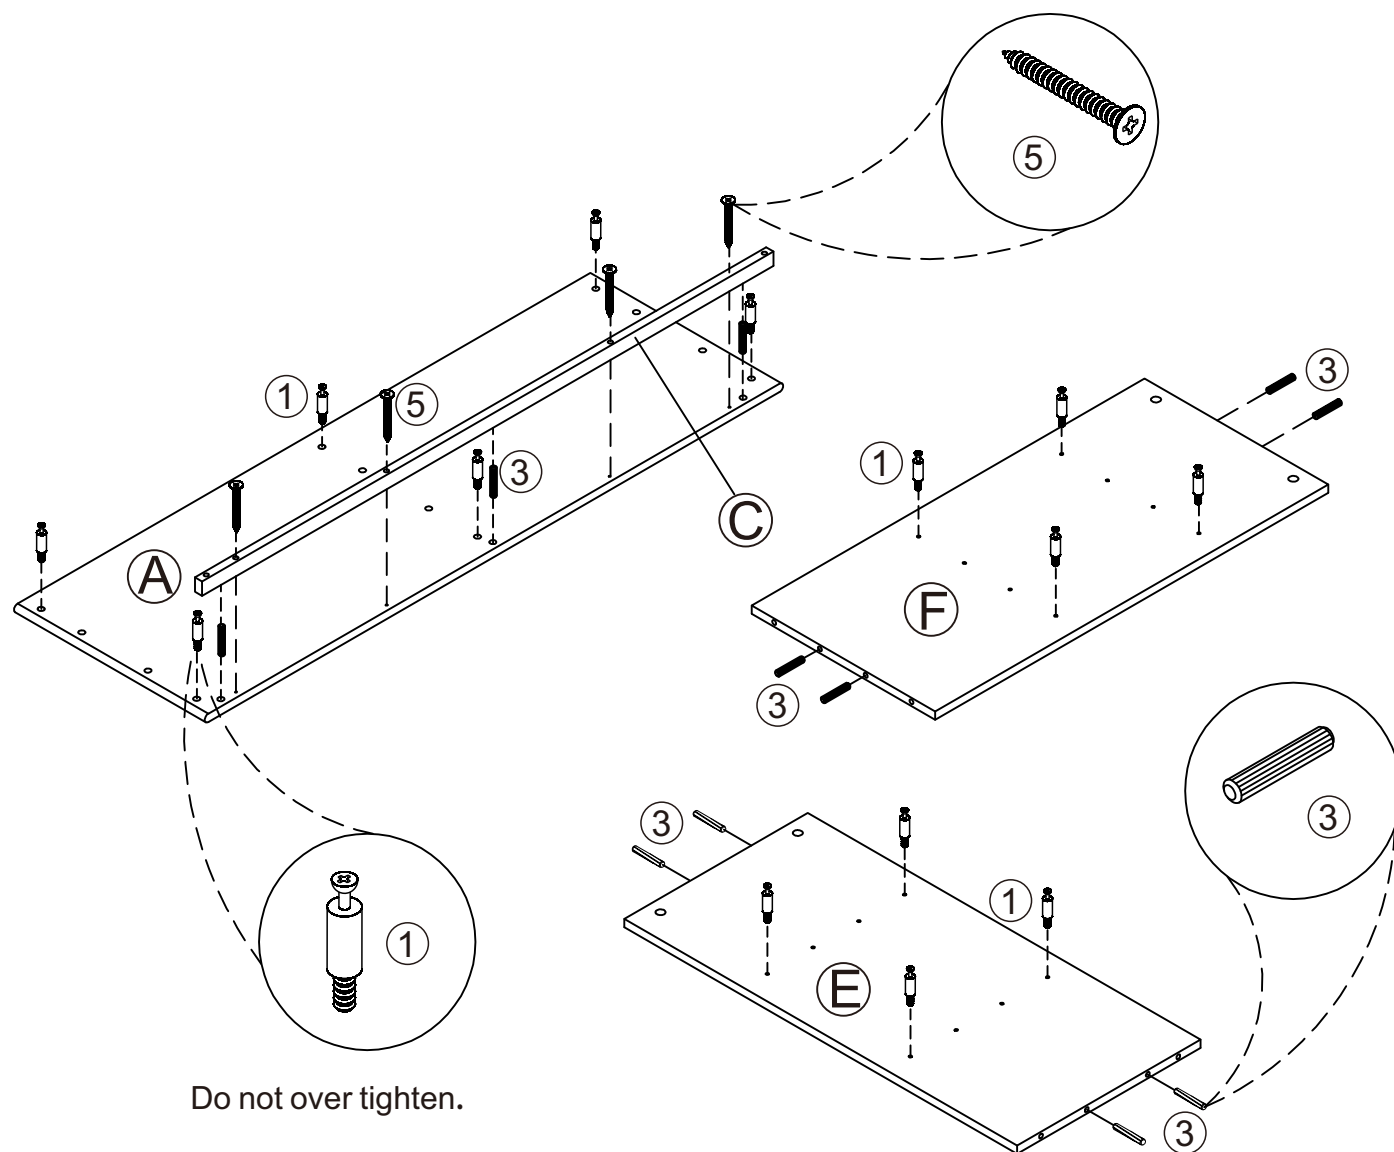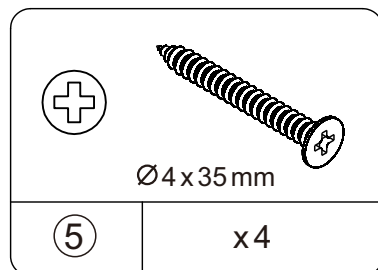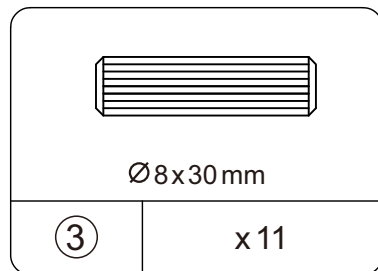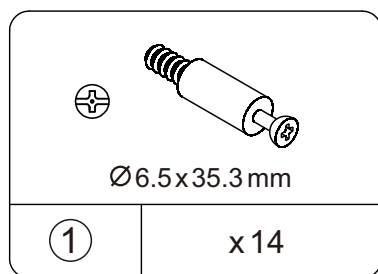






2

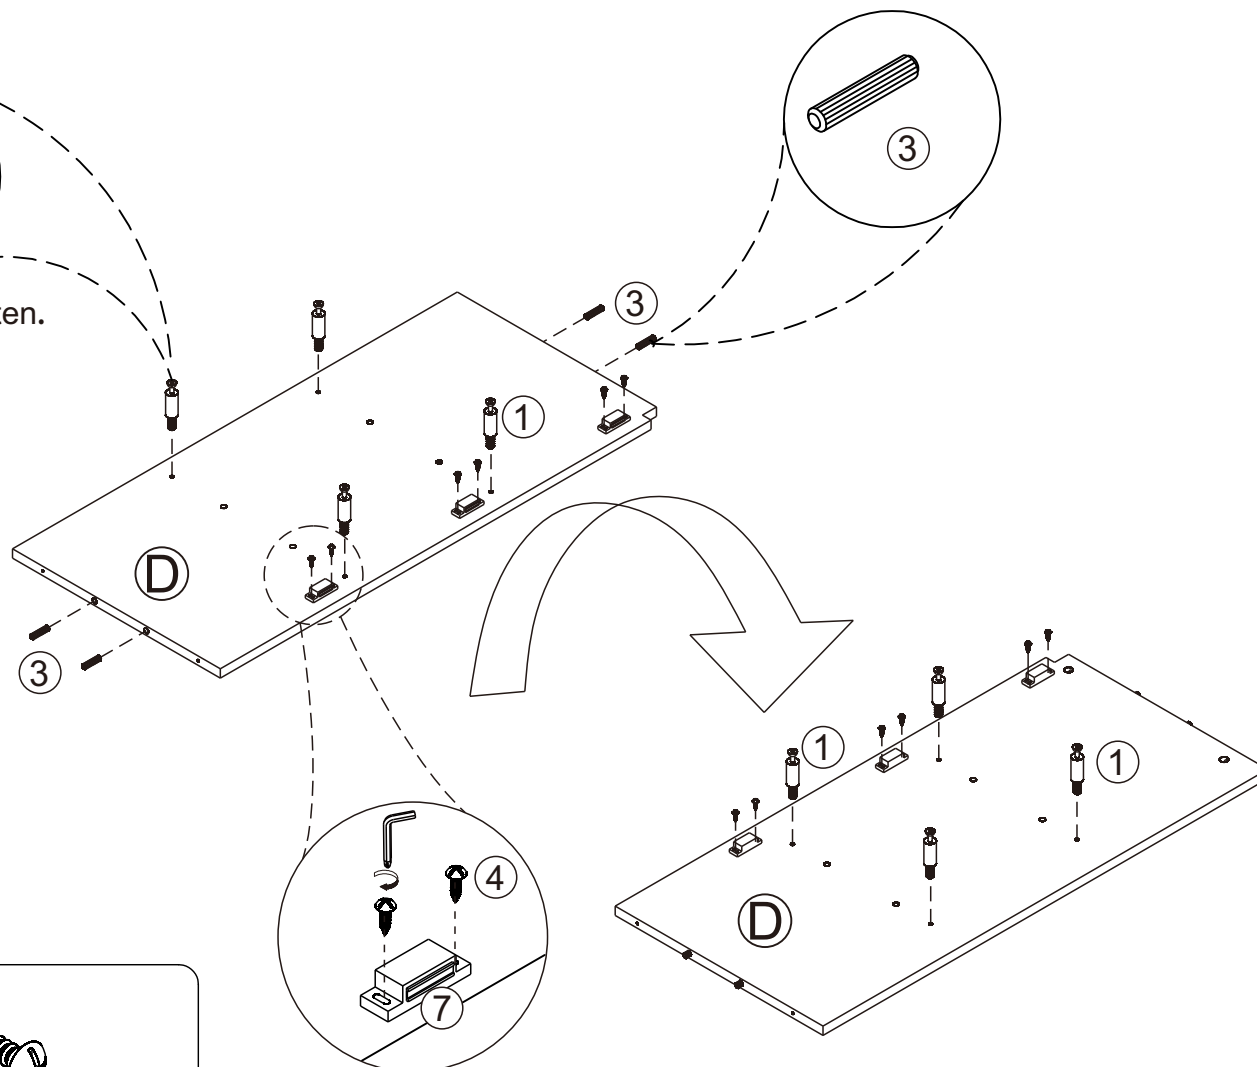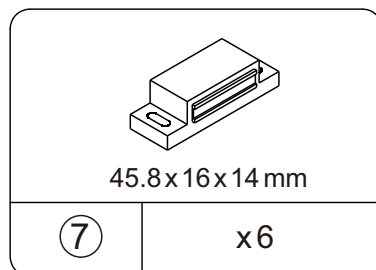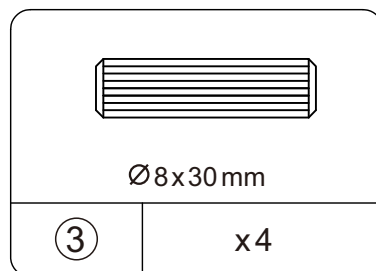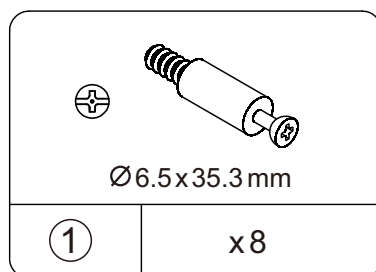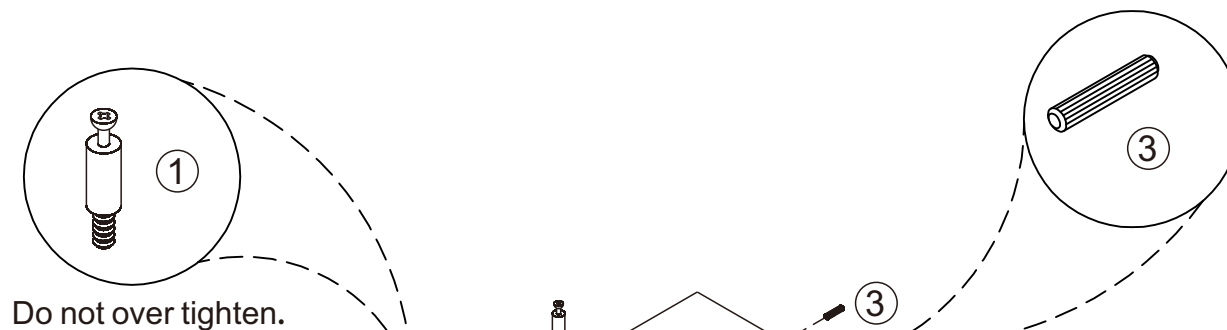

3

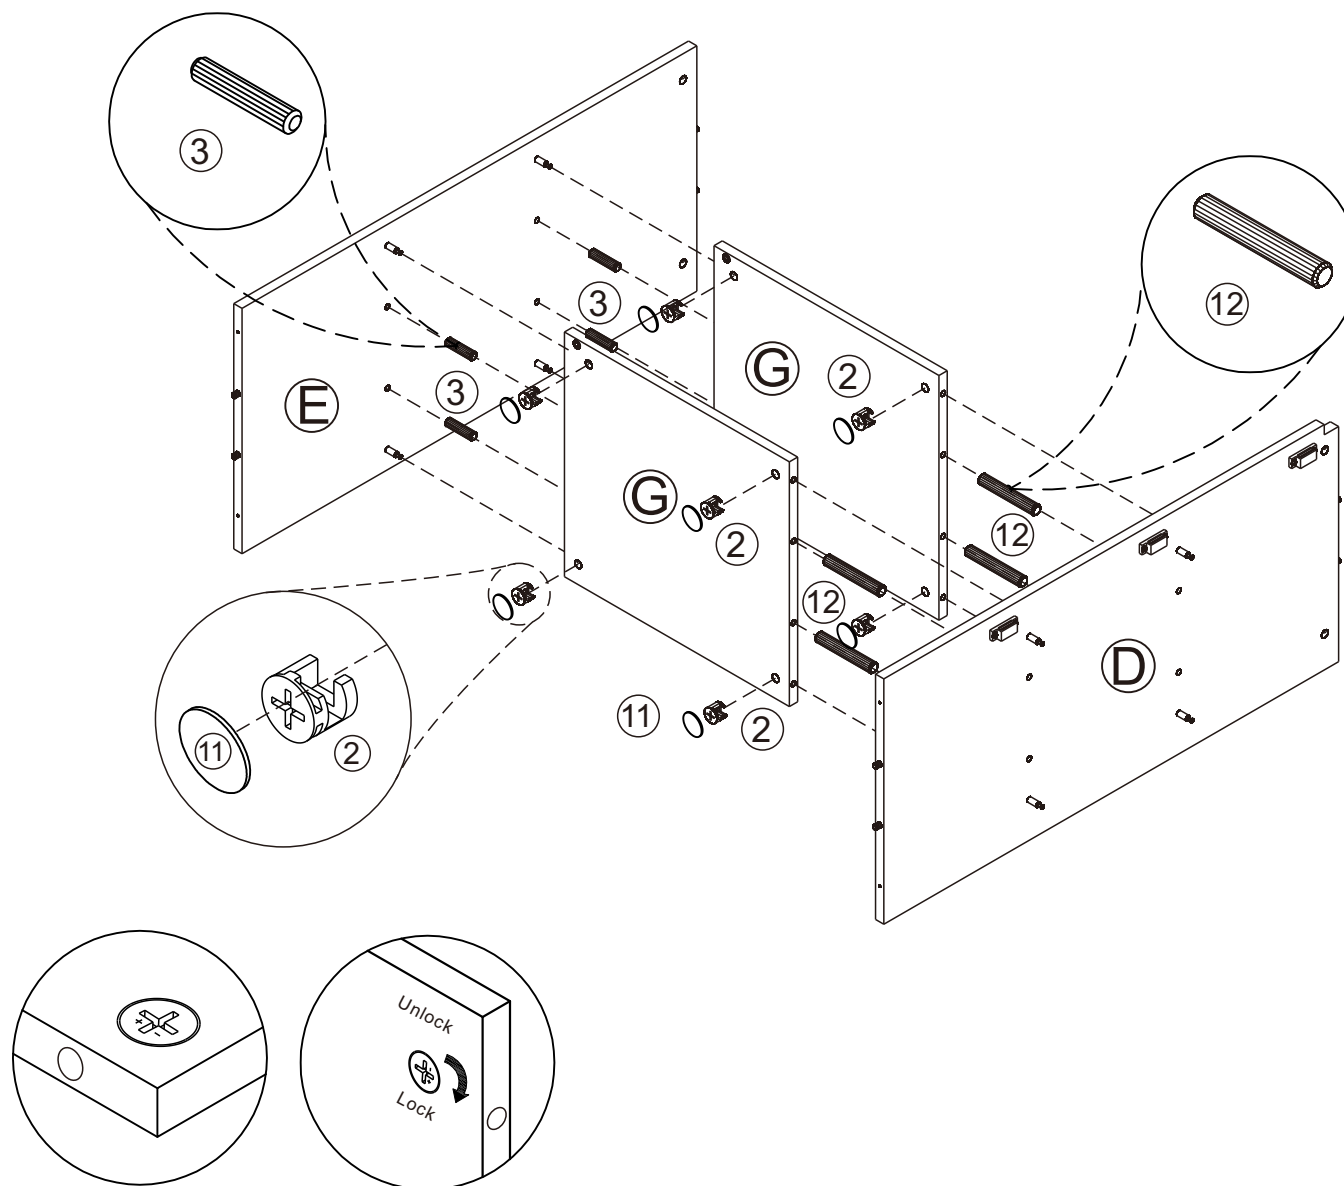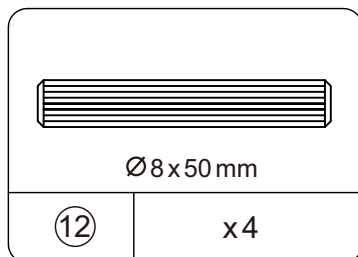
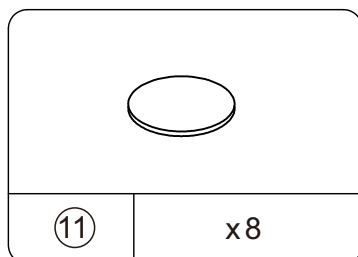
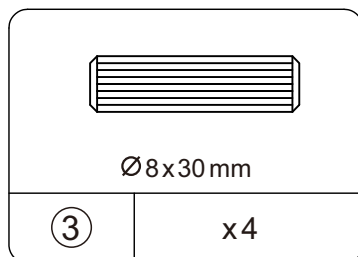
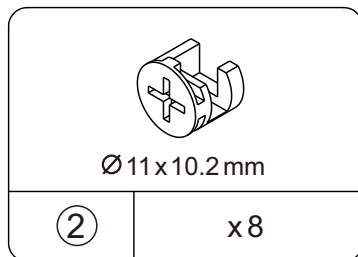


4


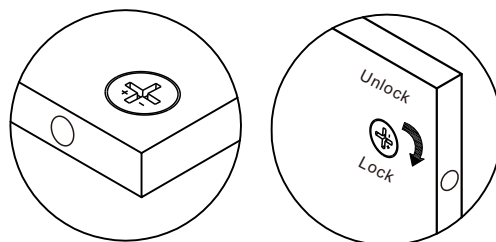
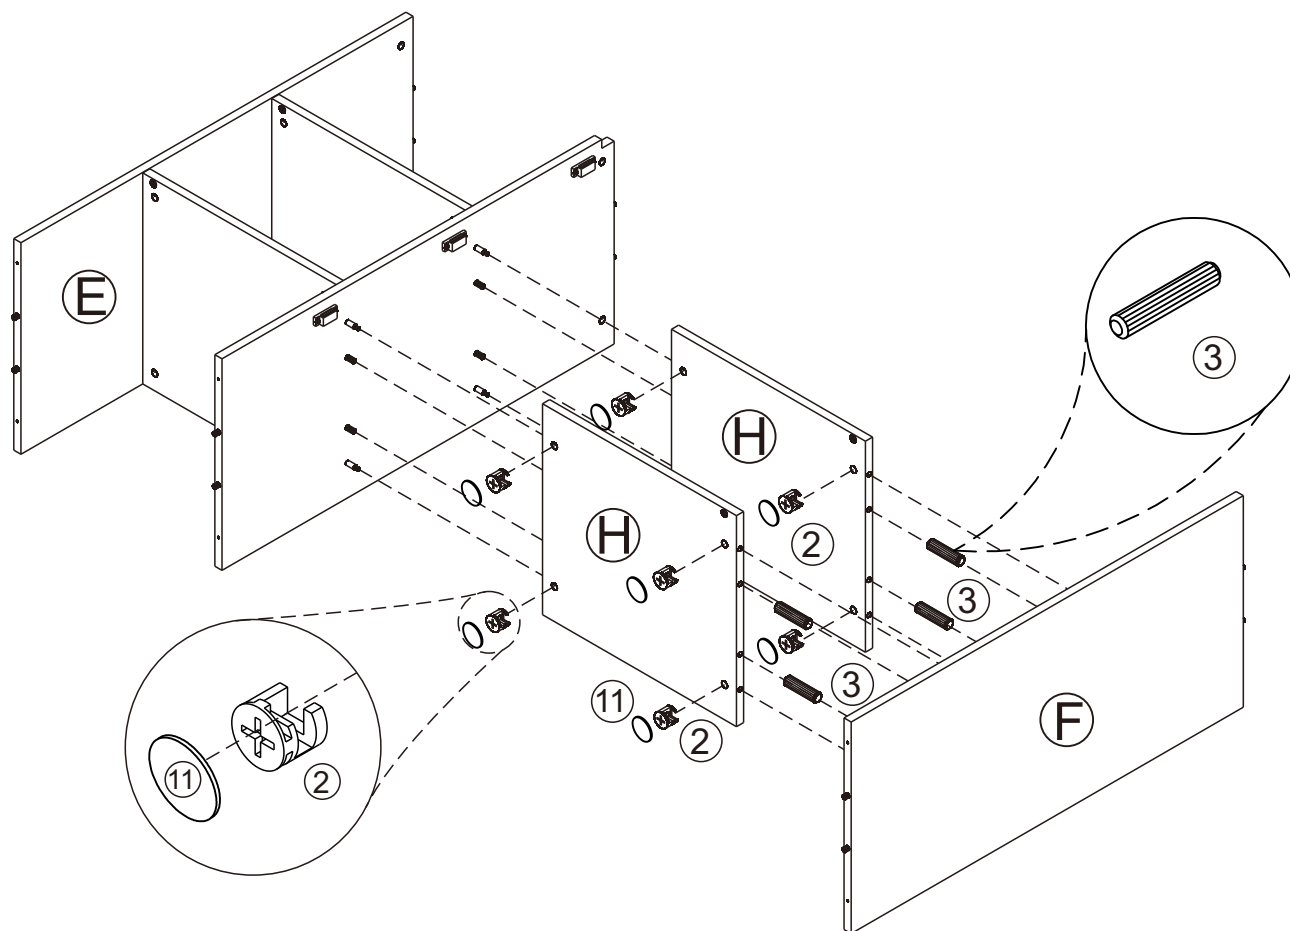
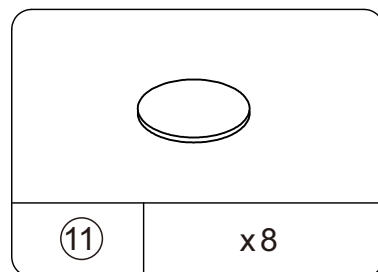
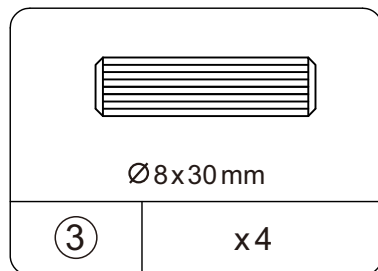
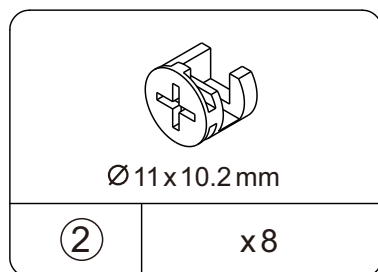


Proper orientation of cam lock.

5


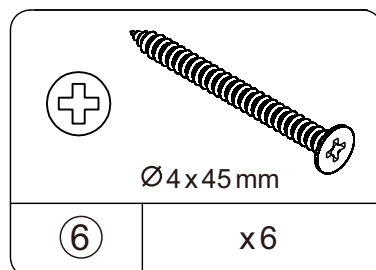
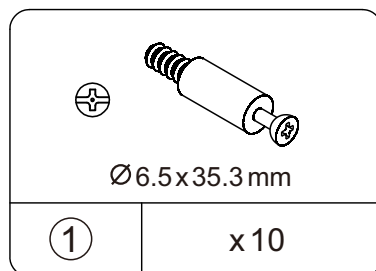
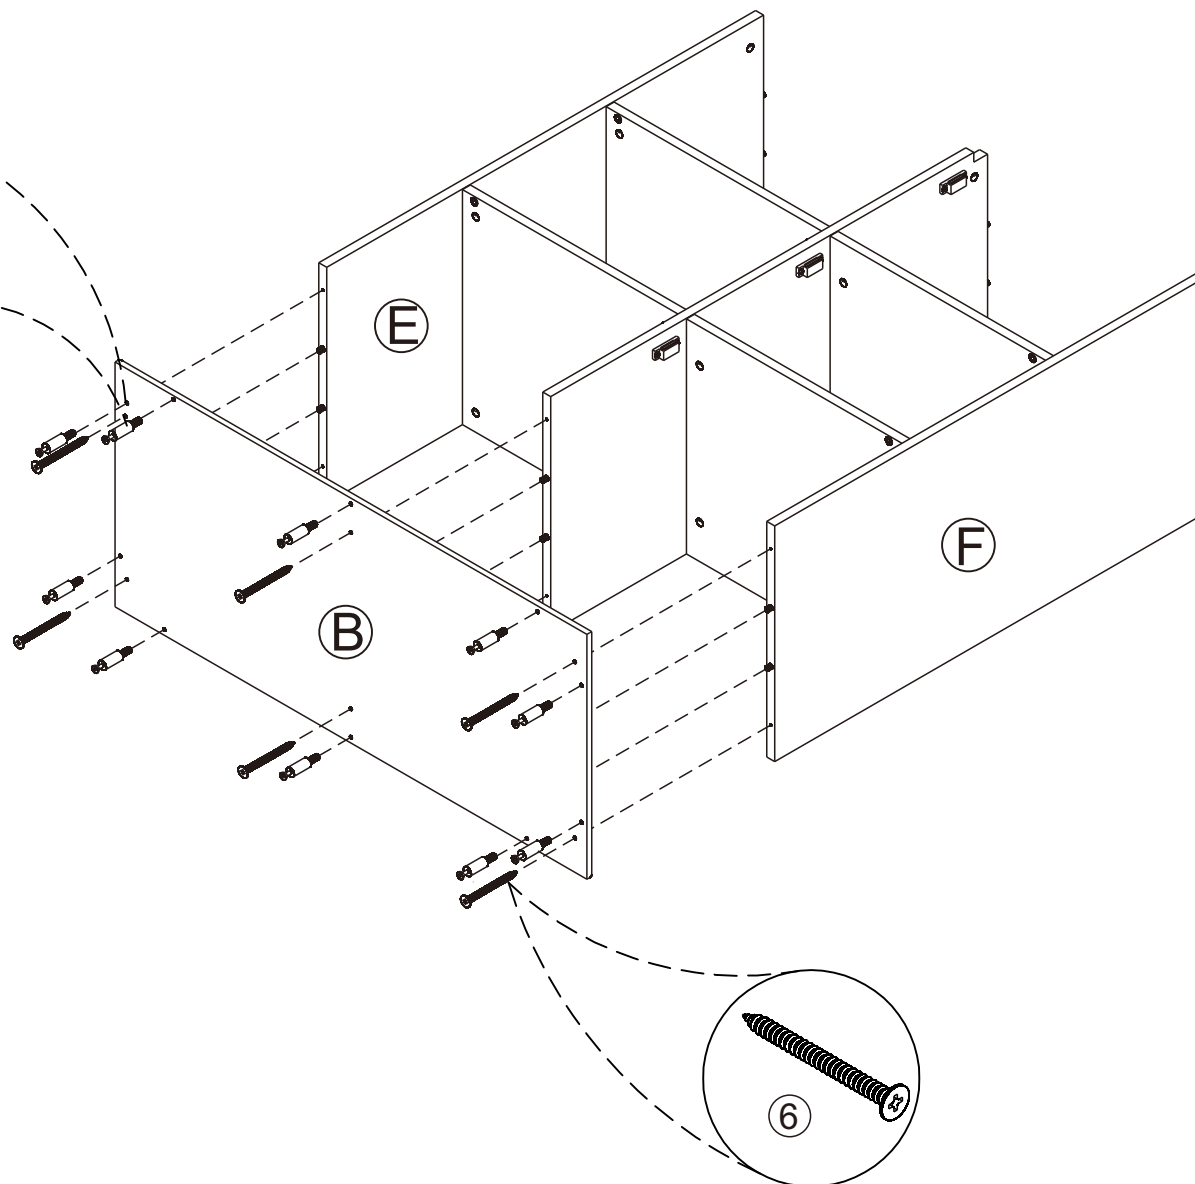
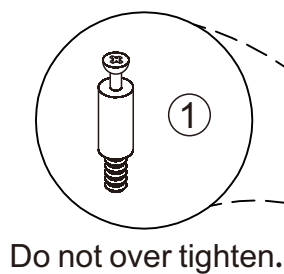


6

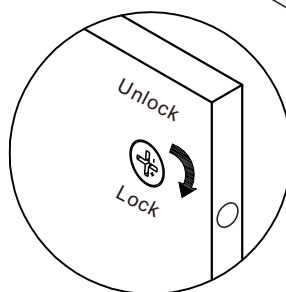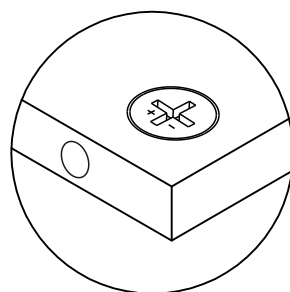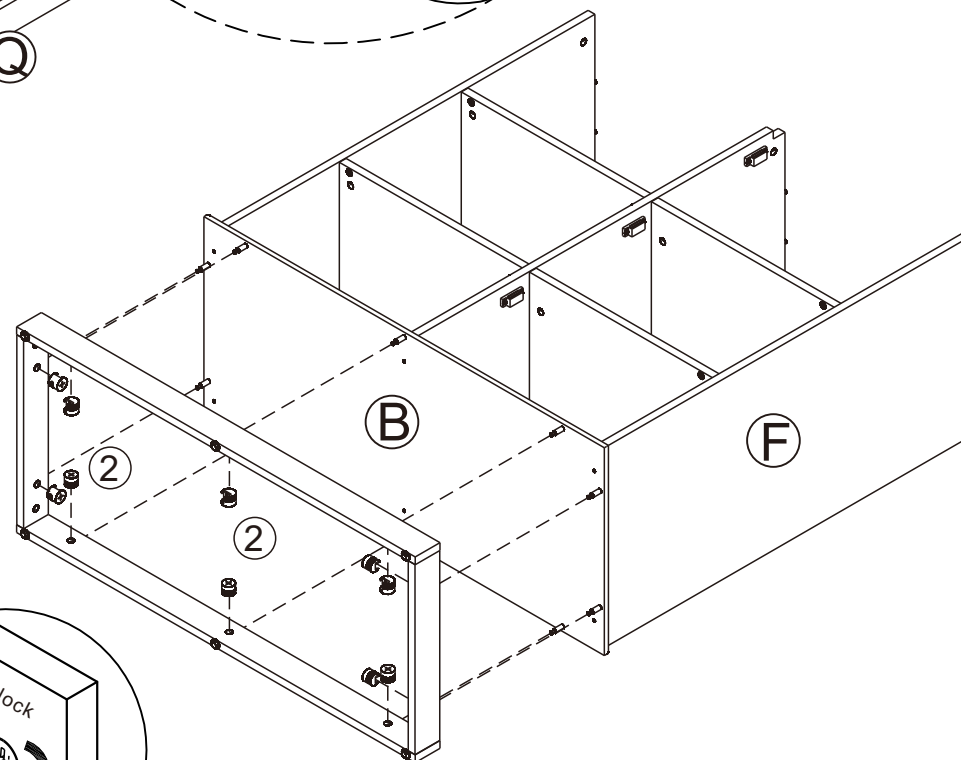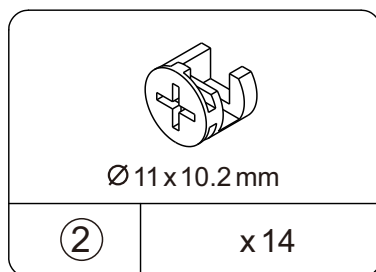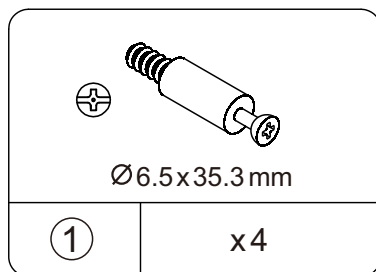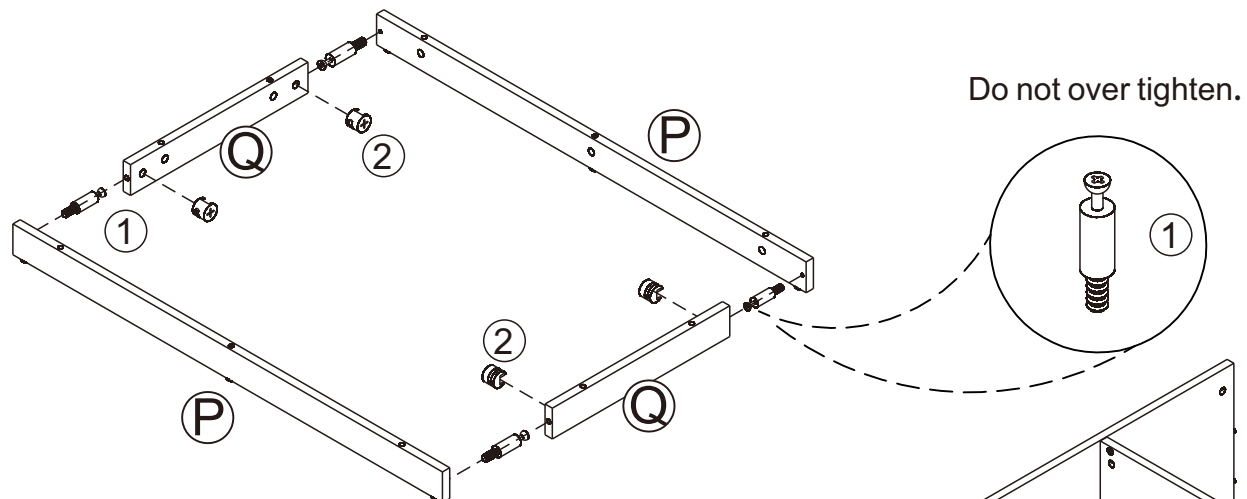


Proper orientation of cam lock.

7

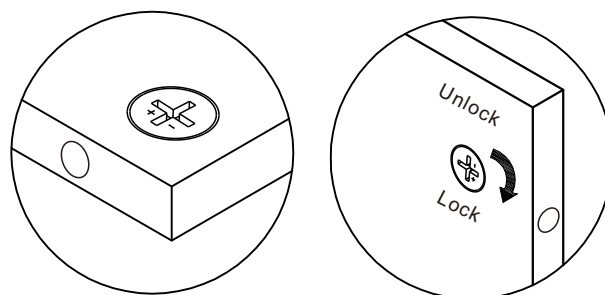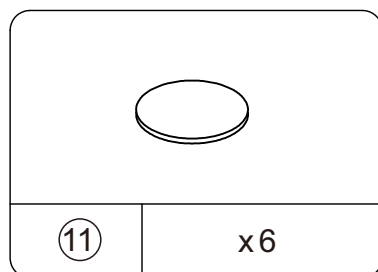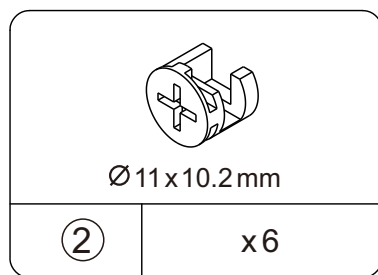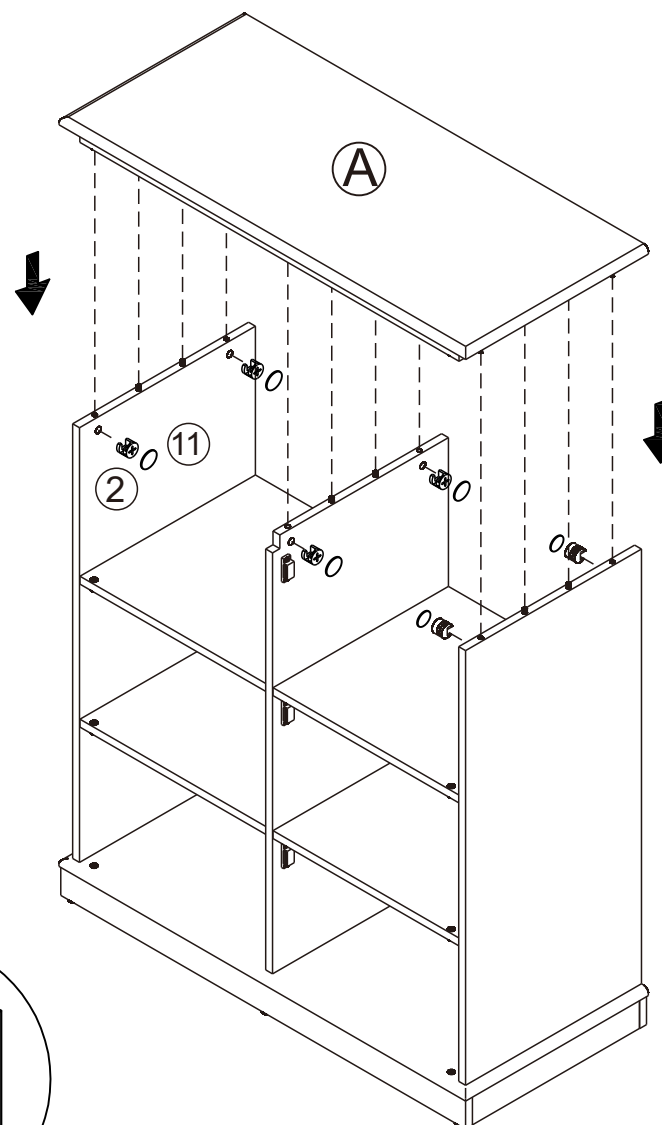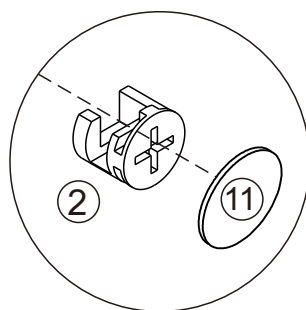

Proper orientation of cam lock.















8

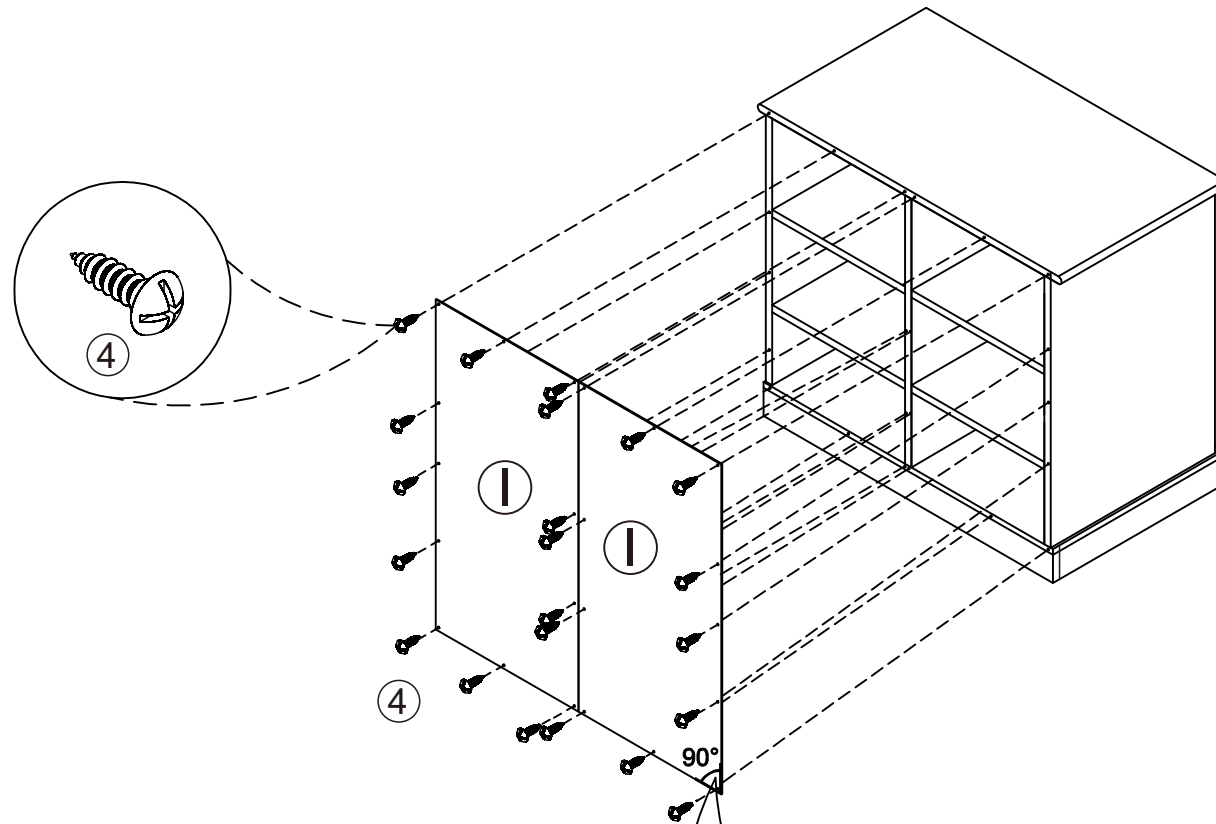





Before attaching the back panel, be sure that the unit is at 90°.

9


The knobs(18,19&20) are interchangeable. You can change them if you prefer.
Please ensure door hinges (9&10) in proper position before you tighten the screws(21).

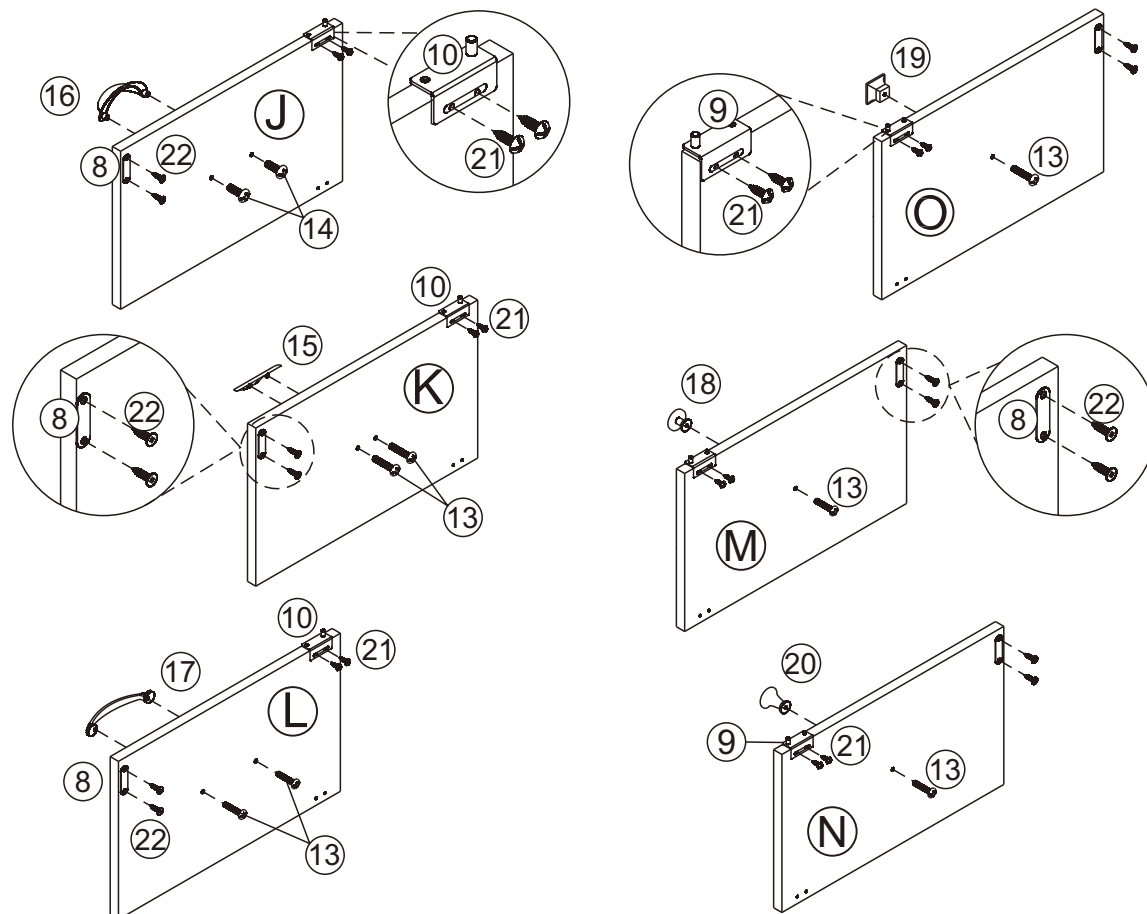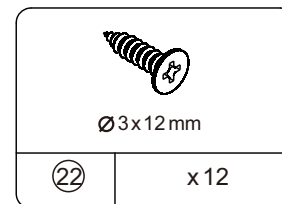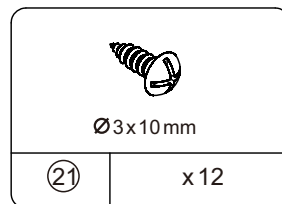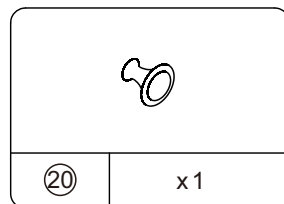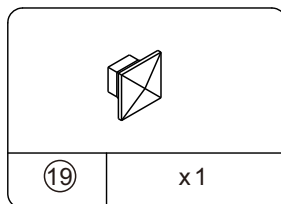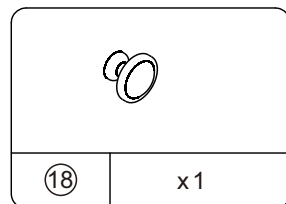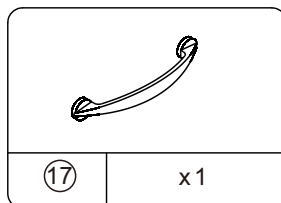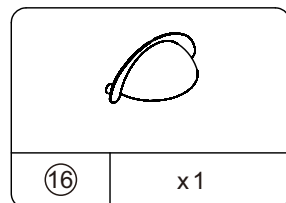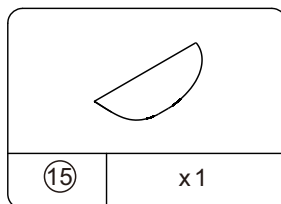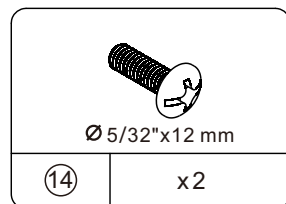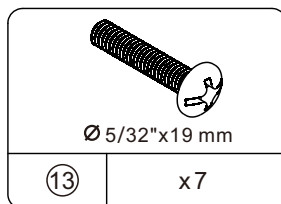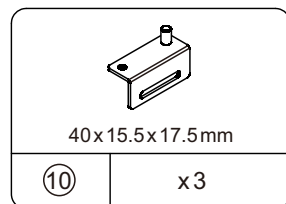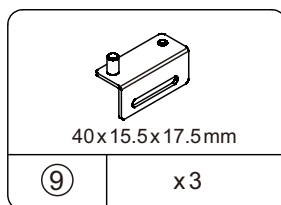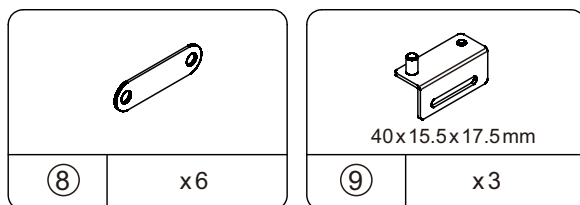

10

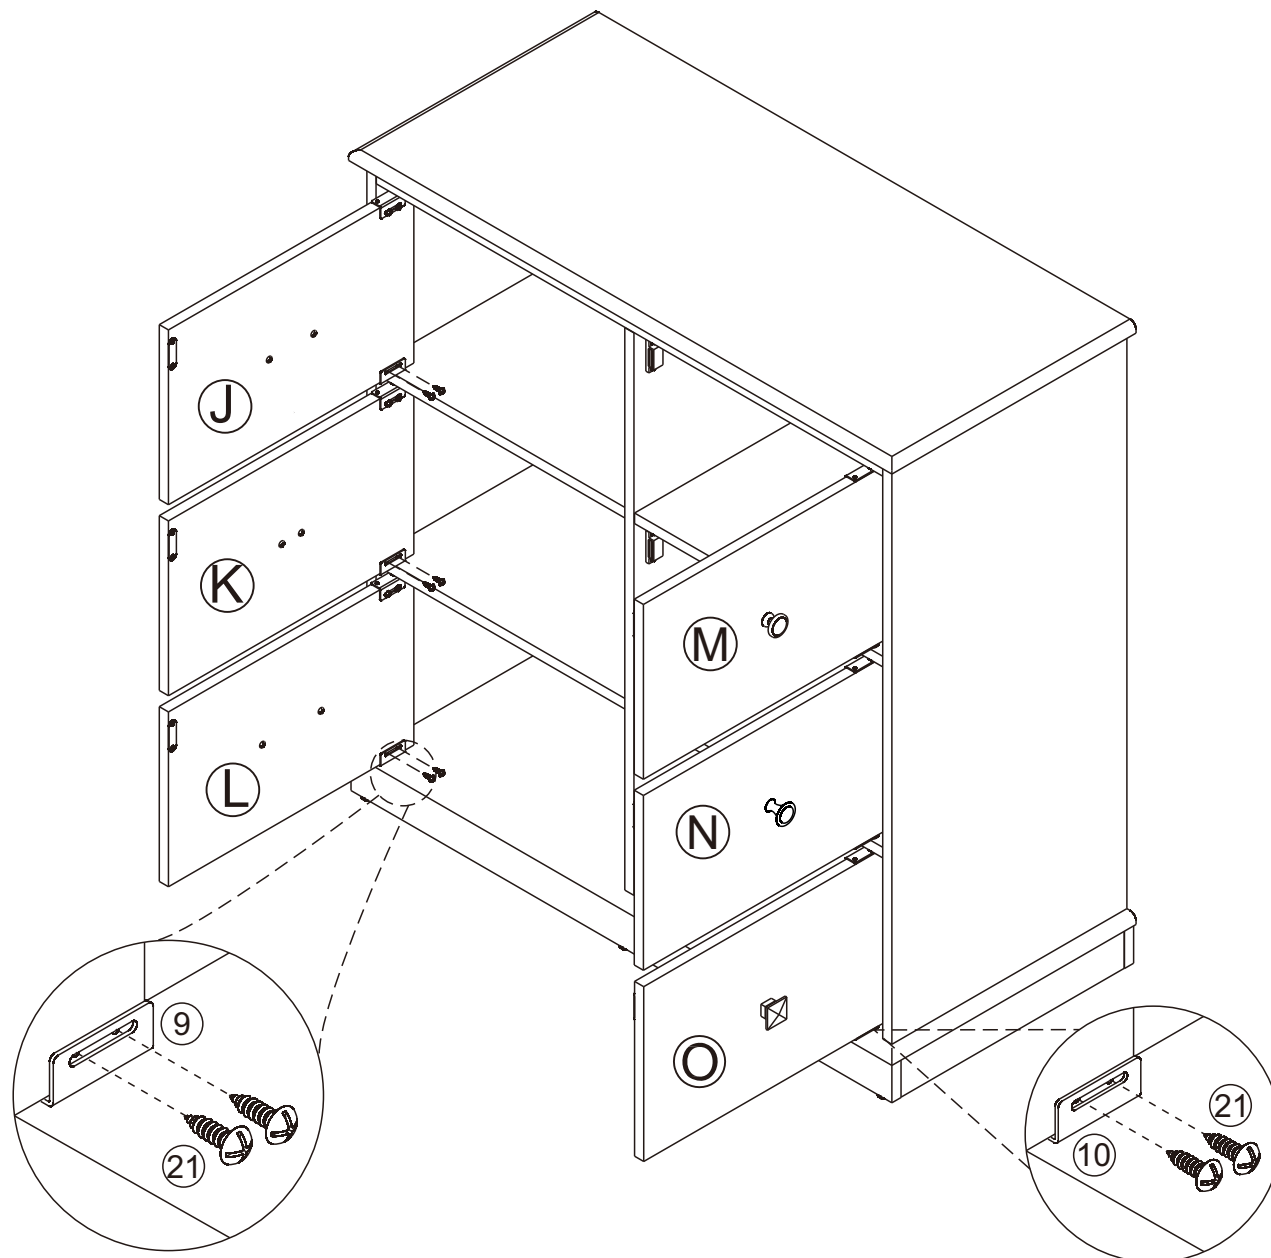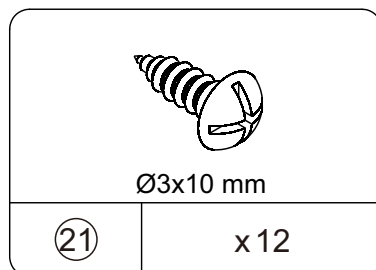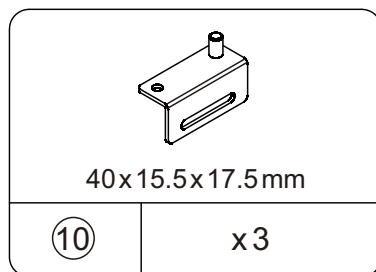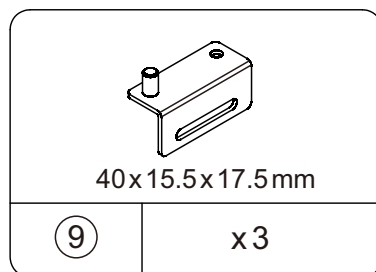

WEIGHT LIMITS:

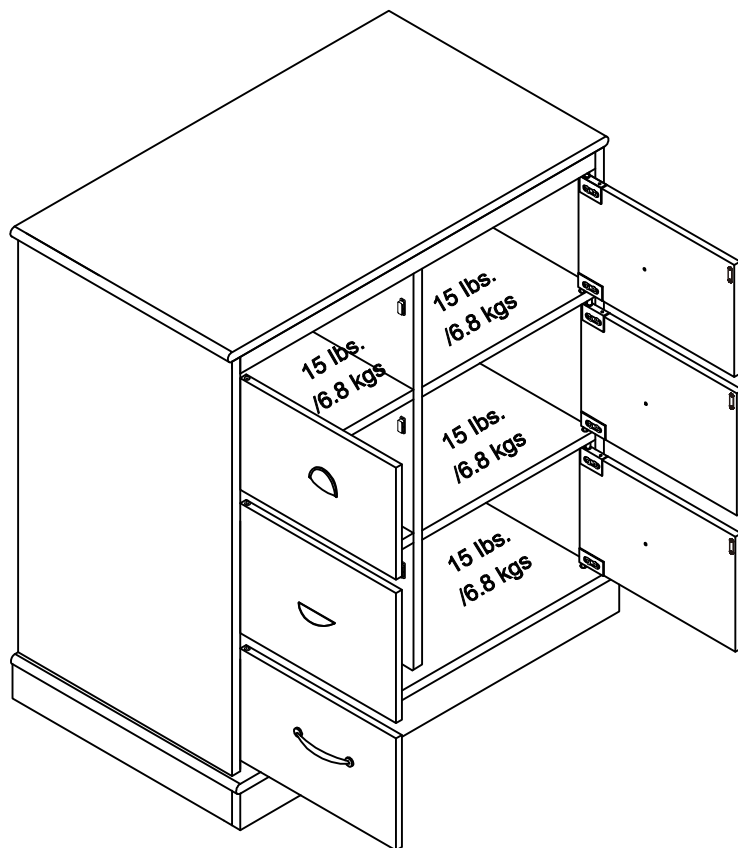

Enjoy Your Furniture

This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

WARNING

Please make sure that all objects are removed before moving the assembled unit.

The unit must be team lifted, not dragged or pushed.

Failure to do so could cause instability, product collapse, and/or serious injury.