








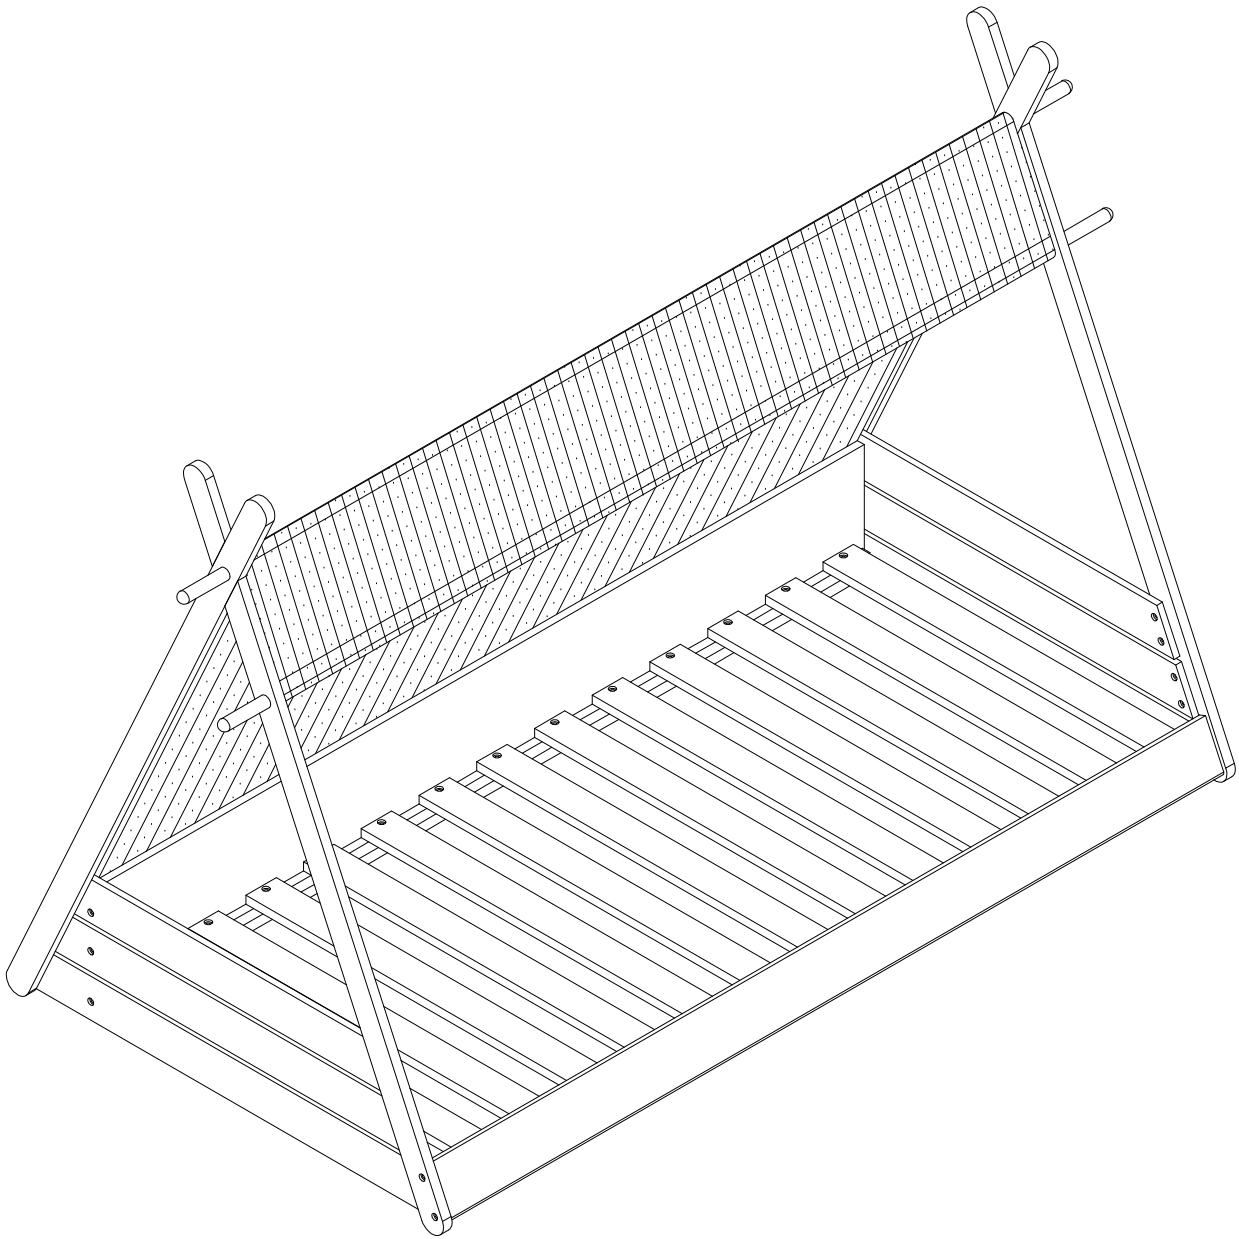








# ASSEMBLY INSTRUCTION

					
Ax1	Bx24 25mm	Cx2 8*30mm	Dx10 60mm	Ex10	Fx4 60mm
			Fits 1900*900mm matttress.		
Gx1 TENT	Hx6 12mm	Ix28 30mm			







STEP 1

	
Ax1	Bx24 25mm

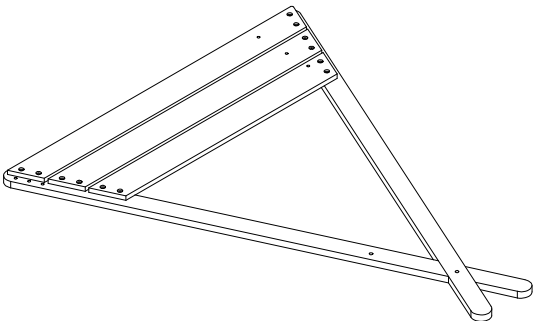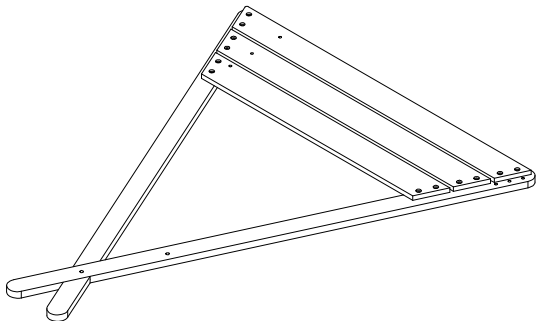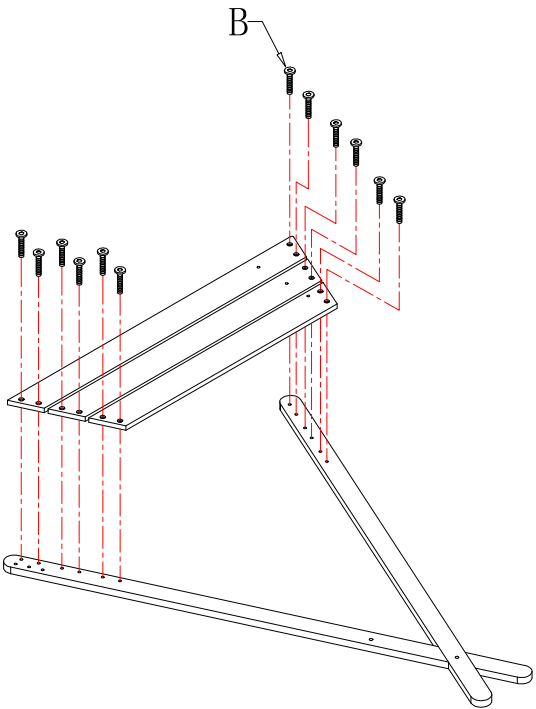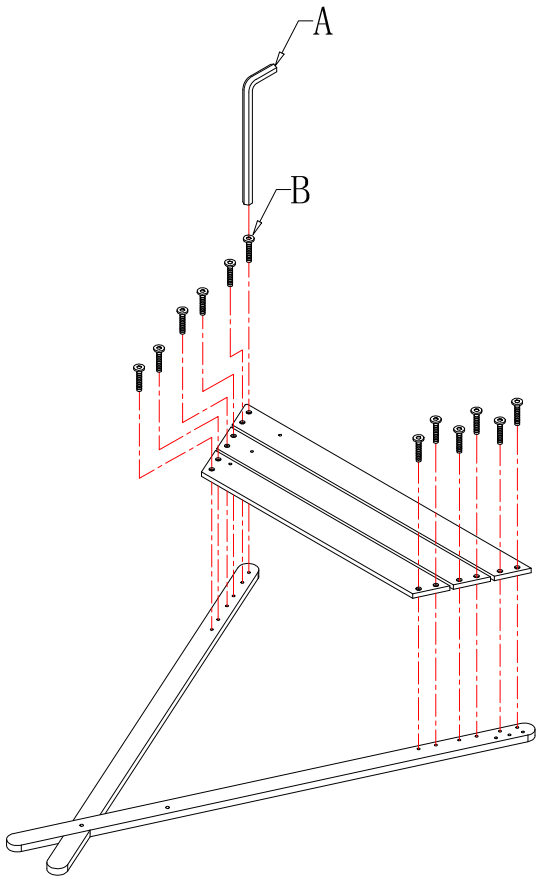



## STEP 2

			
		A	
			
Cx2 8*30mm	Dx10 60mm	Ex10	

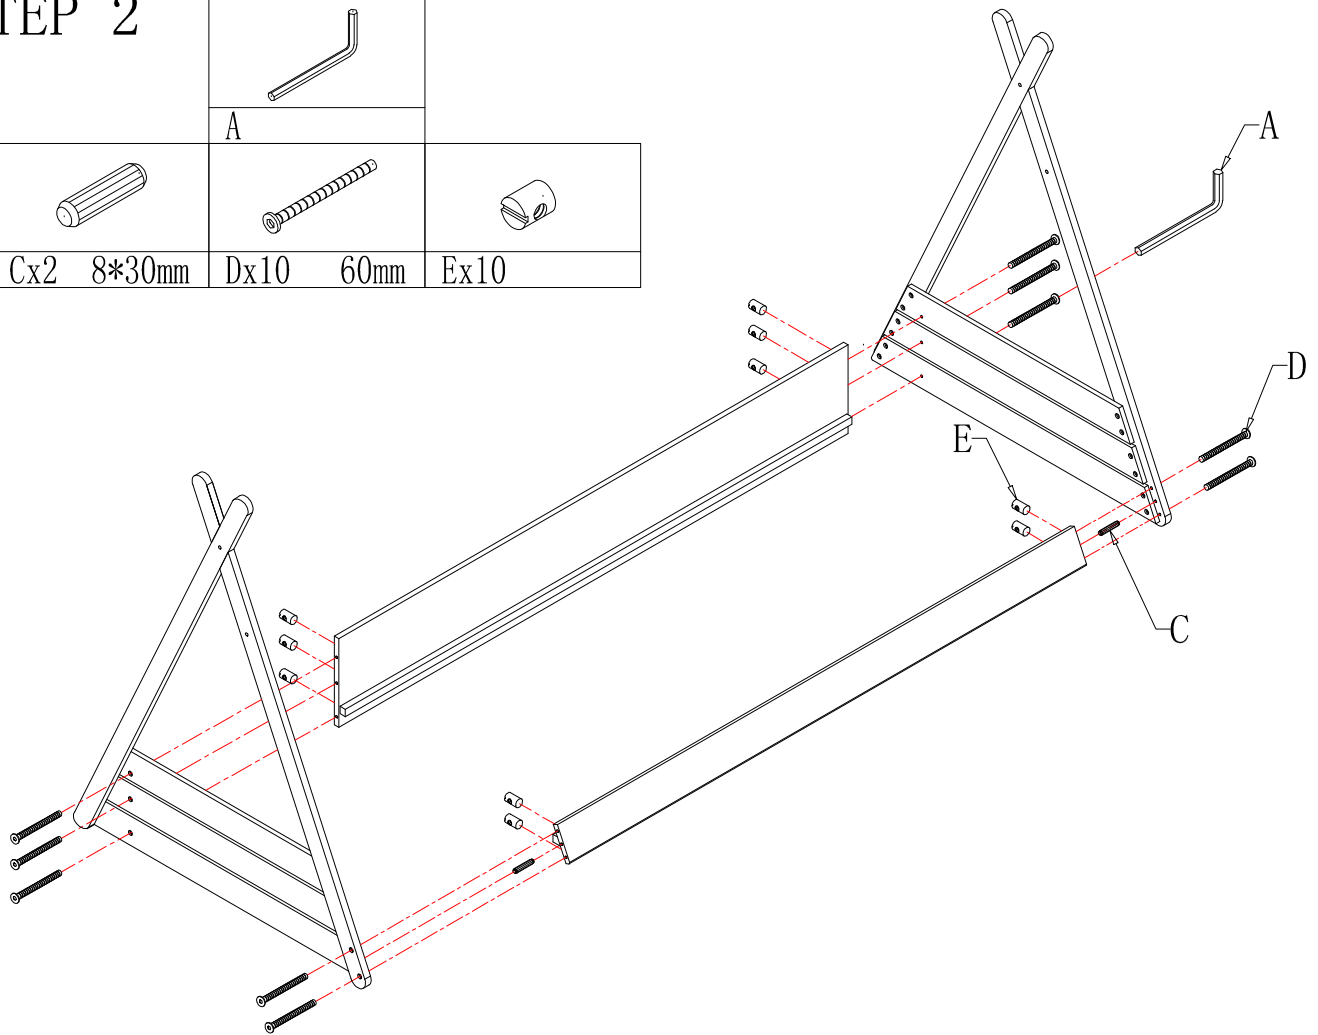



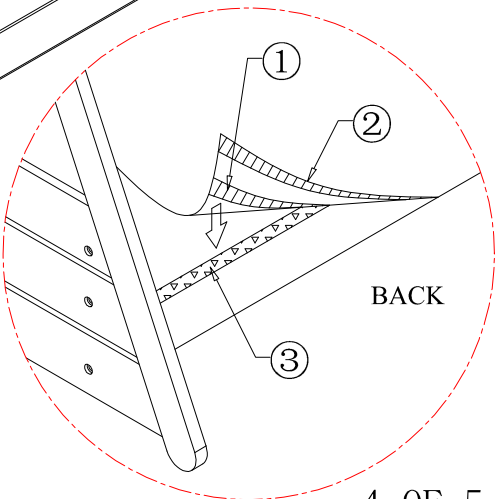
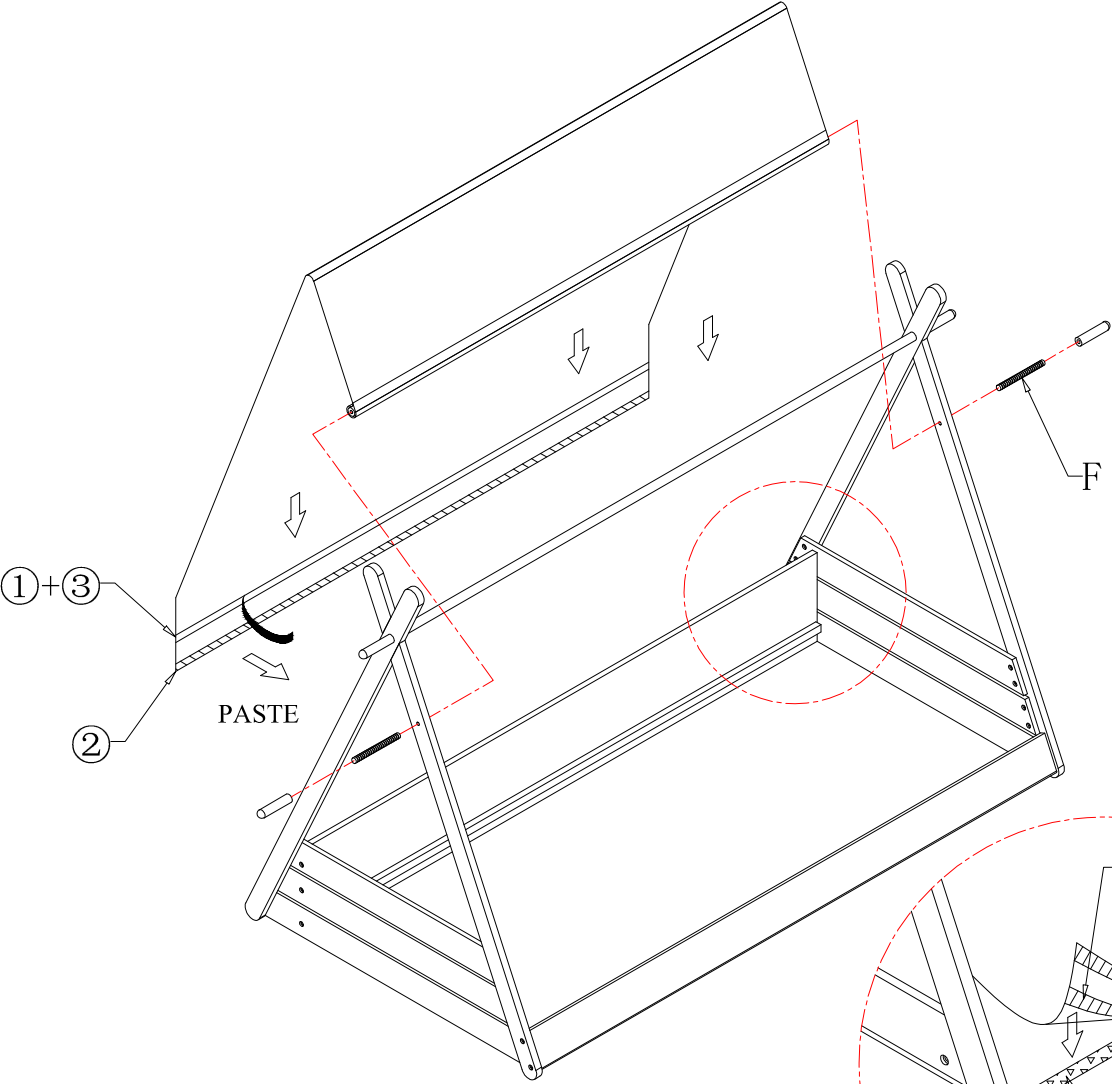
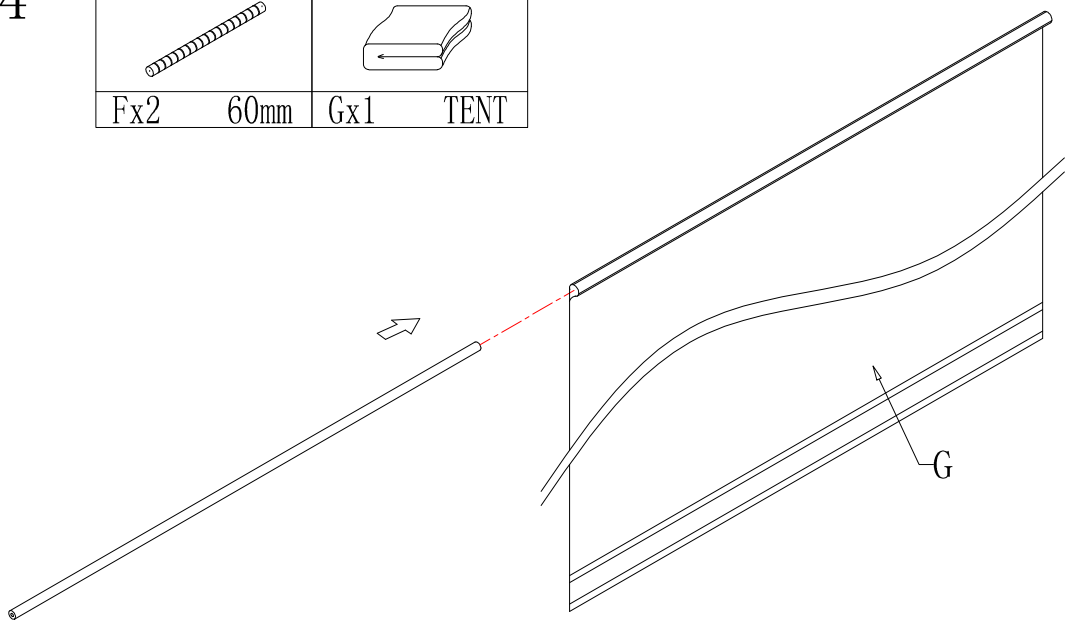
## STEP 3

	
Fx2 60mm	


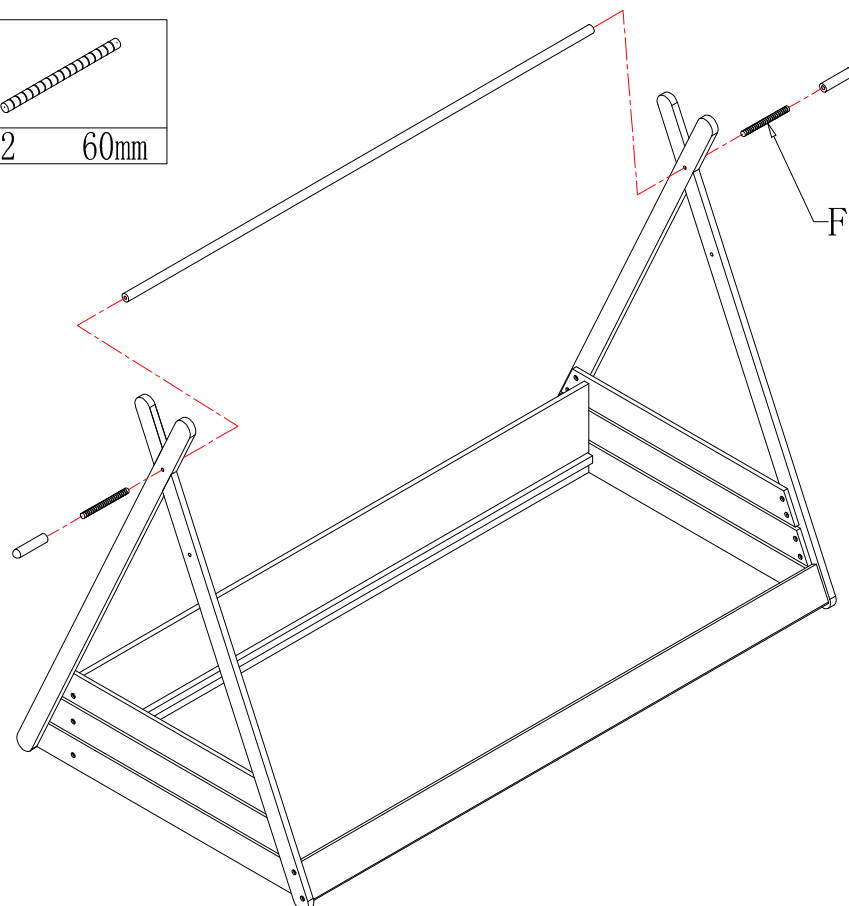


STEP 4

	
Fx2 60mm	Gx1 TENT



## STEP 5

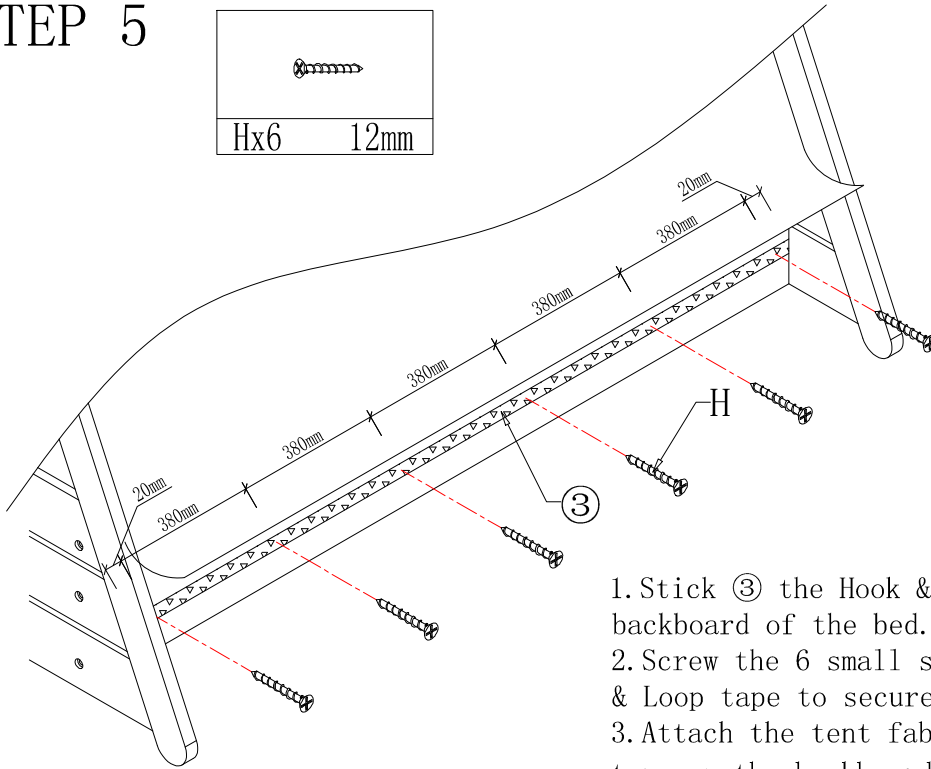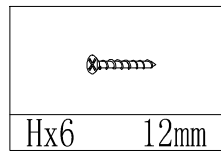


1. Stick ③ the Hook & Loop tape onto the backboard of the bed.
2. Screw the 6 small screws through the Hook & Loop tape to secure it to the backboard.
3. Attach the tent fabric to this Hook & Loop tape on the backboard using ① or ②.

### Attention

It is not advisable to wash this tent material as it may shrink.

## STEP 6

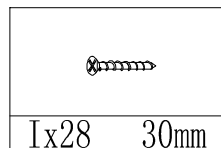

PHILLIPS  
HEAD  
SCREW  
DRIVER

